

Leuze electronic

HCR 6200
QUICK START GUIDE



Leuze electronic



www.leuze.com



User Manual
Manuale utente
Manuel d'utilisateur
Manual de Usuario
Manual do Usuário
Benutzerhandbuch
ユーザーマニュアル
用户手册
사용자 매뉴얼



Configuration Guide
Guida di configurazione
Guide de Configuration
Guía de Configuración
Guia de Configuração
Programmierhandbuch
設定コード表
配置指南
설정 가이드

Included
if Ordered

Inclus si commandé

Incluido si así lo ordena

Incluídos se ordenou


Incluso se ordinato

Inbegriffen, wenn bestellt


注文時に追加

包括着订购

주문시 포함

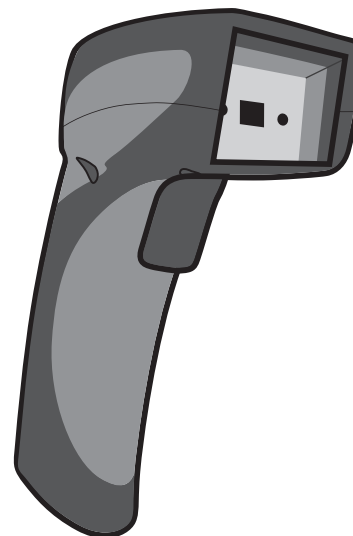


Part-No. 50130487

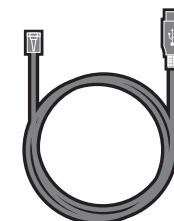


Part-No. 50130489

USB Cable
Cavo USB
Câble d'USB
Cable USB
Cabo USB
USB-Kabel
USB ケーブル
USB 线缆
USB 케이블

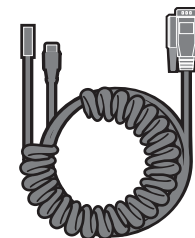

Part-No. 50130488

RS232 Cable
Câble de RS232
Cable rs232
Cabo RS232
RS232-Kabel
RS232 ケーブル
RS232 线缆
RS232 케이블

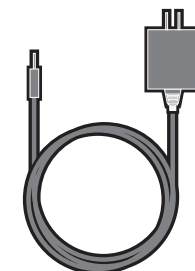


Part-No. 50130490

Power Supply
Alimentazione elettrica di rete
Alimentation électrique
Fuente de alimentación
Fonte de alimentação
Netzteil
ACアダプタ
充电电源
Power Supply




Part-No. 50130491

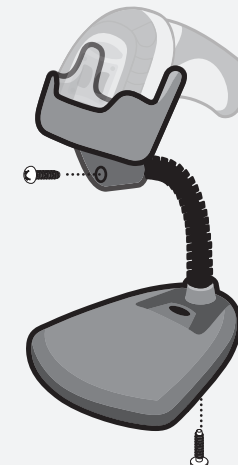

Set Up

Installation
Instalación
Instalação
Impostazione


Einrichten
設定
設置
설치

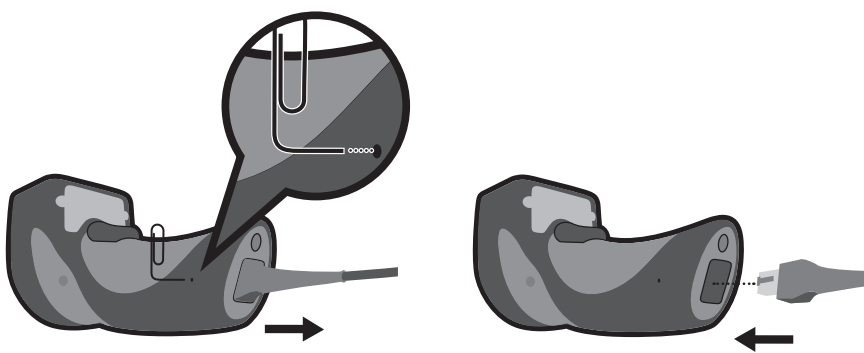

Power On

Allumer
Encender
Ligar
Accensione


Einschalten
電源オン
電源开启
Power on

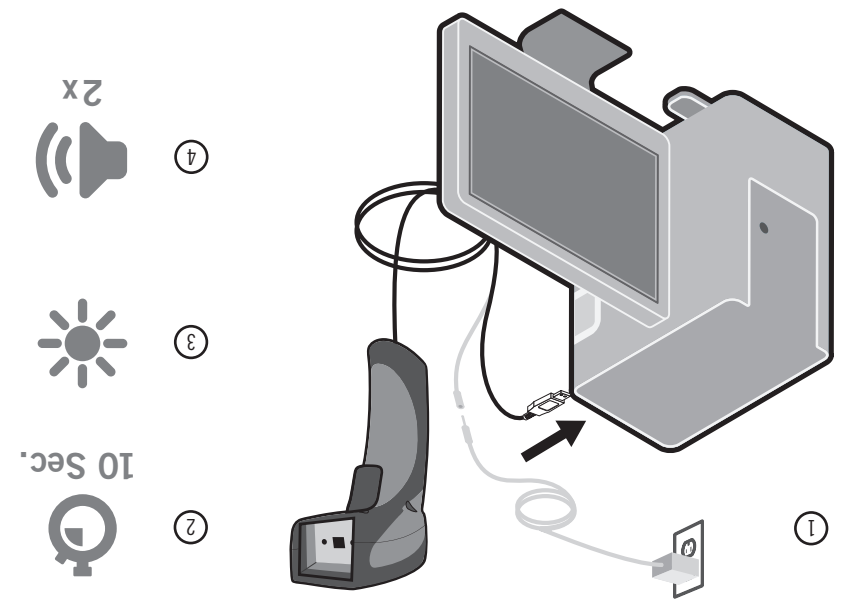

Scanning

Lecture
Escaneo
Leitura
Scansione

Scannen
スキャン
扫描中
스캐닝

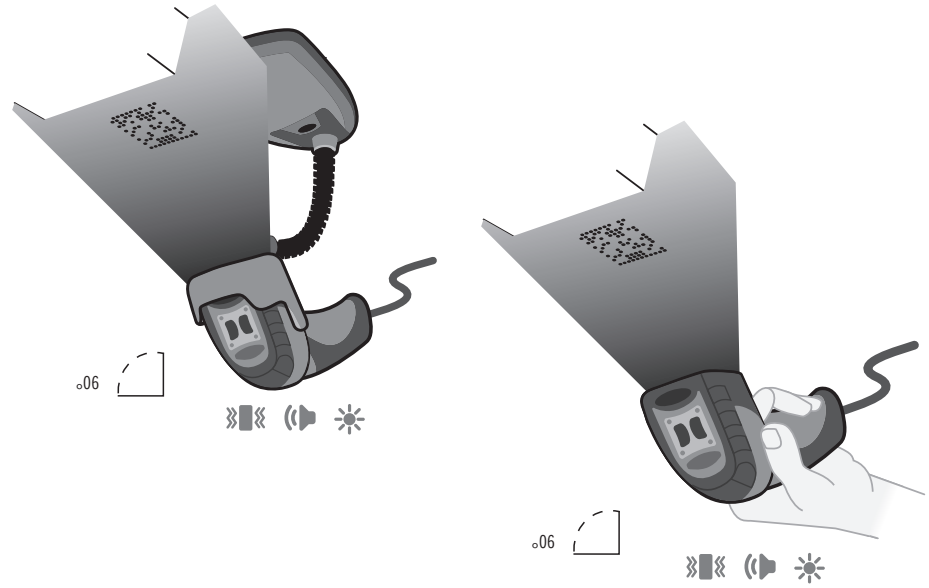

Configure

Configurer
Configuração
Configura

Program
프로그램
规划
프로그램

