

Translation of original operating instructions

BCL 504*i*

Bar code readers



© 2024

Leuze electronic GmbH + Co. KG

In der Braike 1

D-73277 Owen / Germany

Phone: +49 7021 573-0

Fax: +49 7021 573-199

<http://www.leuze.com>

info@leuze.de

The main menus

BCL504i SF 102
Leuze electronic
GmbH & Co. KG
SW: V 1.8.0 HW:3
SN: 1009A009815 001



IO1 IO2 IO3
IO4 ATT ERR
12345678



Parameter
Parameter handling
Decoder table
Digital SWIO
PROFIBUS



Language selection
o Deutsch
o English
o Español
o Français
o Italiano



Service
Diagnosis
Status messages



Actions
o Start decoding
o Start alignment
o Start auto setup
o Start teach-in

Device buttons:

- Navigate upward/sideways
- Navigate downward/sideways
- ESCAPE**
leave
- ENTER**
confirm

Input of values

12|
<-|0123456789 save
Default ----- Unit
126 | |

- + Delete character
- ... + Enter digit
- save + Save input

Device information - main menu

Information about

- Device type
- Software version
- Hardware version
- Serial number

Main menu Bar code reading window

Visualization of the read bar code information.

See "Indicators in the display" on page 20.

Parameter - main menu

Parameterization of the bar code reader.

See "Parameter menu" on page 43.

Language selection - main menu

Selection of the display language.

See "Language selection menu" on page 47.

Service - main menu

Scanner diagnostics and status messages.

See "Service menu" on page 48.

Main menu Actions

Various functions for scanner configuration and manual operation.

See "Actions menu" on page 48.

PWR LED

Off	Device OFF
Flashes green	Device ok, initialization phase
Green, continuous light	Device ok
Orange, continuous light	Service mode
Flashes red	Device ok, warning set
Red, continuous light	Device error

NET LED

Off	No supply voltage
Flashes green	Initialization
Green, continuous light	Operation ok
Flashes orange	Timeout
Flashes red	Communication error
Red, continuous light	Network error

1	General information	12
1.1	Explanation of symbols	12
1.2	Declaration of Conformity	12
2	Safety	13
2.1	Intended use	13
2.2	Foreseeable misuse	13
2.3	Competent persons	13
2.4	Exemption of liability	14
2.5	Laser safety notices	14
3	Device description	16
3.1	Device overview	16
3.2	Performance characteristics	16
3.3	Device construction	18
3.4	Connection technology	19
3.5	Display elements	19
3.5.1	Structure of the control panel	19
3.5.2	Status indicators and operation	20
3.5.3	LED status indicators	20
3.6	Control buttons	22
3.7	External parameter memory	22
4	Functions	23
4.1	autoReflAct	23
4.2	Reference codes	24
4.3	autoConfig	24
4.4	Heating	25
5	Reading techniques	26
5.1	Line scanner (single line)	26
5.2	Line scanner with oscillating mirror	27
5.3	Omnidirectional reading	28
6	Mounting	29
6.1	Device arrangement	29
6.1.1	Selecting a mounting location	29
6.1.2	Avoiding total reflection – Line scanner	29
6.1.3	Avoiding total reflection – oscillating-mirror scanner	30
6.1.4	Mounting location	31
6.1.5	Devices with integrated heating	31
6.1.6	Possible read angles between device and bar code	31
6.2	Installing the external parameter memory	32
7	Electrical connection	33
7.1	Safety notices for the electrical connection	33
7.2	Electrical connection of the device	34
7.2.1	PWR – Voltage supply and switching inputs/outputs 3 and 4	35
7.2.2	SERVICE – USB interface (type A)	37
7.2.3	SW IN/OUT – Switching input/switching output	38
7.2.4	HOST / BUS IN	40
7.2.5	BUS OUT	41

7.3	Terminating the PROFIBUS	41
7.4	Cable lengths and shielding	41
8	Menu description	42
8.1	The main menus	42
8.2	Parameter menu	43
8.3	Language selection menu	47
8.4	Service menu	48
8.5	Actions menu	48
8.6	Operation	50
9	Starting up the device – Leuze webConfig tool	52
9.1	Connecting the SERVICE USB interface	52
9.2	Installing the required software	52
9.2.1	System requirements	52
9.2.2	Installing the USB driver	52
9.3	Starting the webConfig tool	53
9.4	Short description of the webConfig tool	54
9.4.1	Module overview in the Configuration menu	54
10	Starting up the device - Configuration	56
10.1	General information on the PROFIBUS implementation	56
10.1.1	Communication profile	56
10.1.2	Bus-access protocol	56
10.1.3	Device types	57
10.1.4	Extended DP functions	57
10.1.5	Automatic baud rate detection	57
10.2	Measures to be performed prior to the initial commissioning	57
10.3	Address setting	58
10.3.1	Setting the device address on the display	58
10.4	Commissioning via the PROFIBUS	59
10.4.1	General information	59
10.4.2	Preparing the control for consistent data transmission	59
10.4.3	General information on the GSD file	59
10.4.4	Permanently defined parameters/device parameters	60
10.5	Overview of the project modules	63
10.6	Decoder modules	65
10.6.1	Modules 1-4 – Code table extensions 1 to 4	65
10.6.2	Module 5 – Code type features (symbology)	66
10.6.3	Module 7 – Code reconstruction technology	67
10.7	Control modules	68
10.7.1	Module 10 – Activations	68
10.7.2	Module 11 – Reading gate control	69
10.7.3	Module 12 – Multi-label	70
10.7.4	Module 13 – Fragmented read result	71
10.7.5	Module 14 – Interlinked read result	72
10.8	Result format	72
10.8.1	Module 20 – Decoder state	72
10.8.2	Modules 21-27 – Decoding result	73
10.8.3	Module 30 – Data formatting	75
10.8.4	Module 31 – Reading gate number	75
10.8.5	Module 32 – Reading gate time	76
10.8.6	Module 33 – Code position	76
10.8.7	Module 34 – Reading reliability (equal scans)	77
10.8.8	Module 35 – Bar code length	77

10.8.9	Module 36 – Scans with information	77
10.8.10	Module 37 – Decoding quality	78
10.8.11	Module 38 – Code direction	78
10.8.12	Module 39 – Number of digits	79
10.8.13	Module 40 – Code type	79
10.8.14	Module 41 – Code position in the swivel range	80
10.9	Data Processing	80
10.9.1	Module 50 – Characteristics filter	80
10.9.2	Module 51 – Data filtering	81
10.10	Identifier	82
10.10.1	Module 52 – Segmentation according to the EAN process	82
10.10.2	Module 53 – Segmentation via fixed positions	83
10.10.3	Module 54 – Segmentation according to identifier and separator	84
10.10.4	Module 55 – String handling parameters	85
10.11	Device functions	86
10.11.1	Module 60 – Device status	86
10.11.2	Module 61 – Laser control	87
10.11.3	Module 62 – Display	87
10.11.4	Module 63 – Alignment	88
10.11.5	Module 64 – Oscillating mirror	89
10.11.6	Module 65 – Deflecting mirror	89
10.12	Switching inputs/ outputs SWIO 1 ... 4	90
10.12.1	Parameters for operating as an output	90
10.12.2	Parameters for operating as an input	91
10.12.3	Switch-on and switch-off functions for operation as an output	93
10.12.4	Input functions for operation as an input	93
10.12.5	Module 70 – Switching input/output SWIO1	93
10.12.6	Module 71 – Switching input/output SWIO2	95
10.12.7	Module 72 – Switching input/output SWIO3	96
10.12.8	Module 73 – Switching input/output SWIO4	97
10.12.9	Module 74 – SWIO status and control	98
10.13	Data output	100
10.13.1	Module 80 – Sorting	100
10.14	Reference code comparison	101
10.14.1	Module 81 – Reference code comparator 1	101
10.14.2	Module 82 – Reference code comparator 2	102
10.14.3	Module 83 – Reference code comparison pattern 1	103
10.14.4	Module 84 – Reference code comparison pattern 2	104
10.15	Special functions	105
10.15.1	Module 90 – Status and control	105
10.15.2	Module 91 – AutoRefIAct (automatic reflector activation)	106
10.15.3	Module 92 – AutoControl	107
10.16	Example configuration: Indirect activation via the PLC	108
10.16.1	Task	108
10.16.2	Procedure	108
10.17	Example configuration: Direct activation via the switching input	109
10.17.1	Task	109
10.17.2	Procedure	109
11	Online commands	111
11.1	Overview of commands and parameters	111
11.1.1	General online commands	111
11.1.2	Online commands for system control	114
11.1.3	Online commands for configuring the switching inputs/outputs	115
11.1.4	Online commands for the parameter set operations	116

12	Care, maintenance and disposal	121
12.1	Cleaning	121
12.2	Repairs, servicing	121
12.3	Disposing	121
13	Diagnostics and troubleshooting	122
13.1	General causes of errors	122
13.2	Interface errors	122
14	Support	123
15	Technical data	124
15.1	General specifications of the bar code readers	124
15.1.1	Line scanner	124
15.1.2	Oscillating-mirror scanner	126
15.2	Heating models of the bar code readers	126
15.2.1	Line scanner with heater	127
15.2.2	Oscillating-mirror scanner with heating	128
15.3	Dimensioned drawings	129
15.3.1	Line scanner with / without heating	129
15.3.2	Oscillating-mirror scanner with/without heating	130
15.4	Dimensioned drawings: Accessories	131
15.5	Reading field curves / optical data	132
15.6	Reading field curves	133
15.6.1	High Density (N) - optics: BCL 504/SN 102	134
15.6.2	High Density (N) - optics: BCL 504/ON 100	135
15.6.3	Medium Density (M) - optics: BCL 504/SM 102	136
15.6.4	Medium Density (M) - optics: BCL 504/OM 100	137
15.6.5	Low Density (F) - optics: BCL 504/SF 102	138
15.6.6	Low Density (F) - optics: BCL 504/OF 100	139
15.6.7	Ultra Low Density (L) - optics: BCL 504/SL 102	140
15.6.8	Ultra Low Density (L) - optics: BCL 504/OL 100	141
15.7	Reading field curves for heating devices	142
15.7.1	High Density (N) - optics: BCL 504/SN 102 H	142
15.7.2	High Density (N) - optics: BCL 504/ON 100 H	143
15.7.3	Medium Density (M) - optics: BCL 504/SM 102 H	144
15.7.4	Medium Density (M) - optics: BCL 504/OM 100 H	145
15.7.5	Low Density (F) - optics: BCL 504/SF 102 H	146
15.7.6	Low Density (F) - optics: BCL 504/OF 100 H	147
15.7.7	Ultra Low Density (L) - optics: BCL 504/SL 102 H	148
15.7.8	Ultra Low Density (L) - optics: BCL 504/OL 100 H	149
16	Order guide and accessories	150
16.1	Part number code	150
16.2	Overview of BCL 504/types	150
16.3	Accessories	151
17	Appendix	152
17.1	ASCII character set	152
17.2	Bar code samples	154
17.2.1	Module 0.3	154
17.2.2	Module 0.5	156

Table 1.1:	Warning symbols and signal words	12
Table 1.2:	Other symbols	12
Figure 2.1:	Attaching stick-on labels with warning notices (top: with oscillating mirror, bottom: line scanners)	15
Figure 3.1:	Line scanner and oscillating-mirror scanner	16
Figure 3.2:	Device construction	18
Figure 3.3:	Location of the electrical connections	19
Figure 3.4:	Structure of the control panel	19
Table 3.1:	Status displays of the switching inputs/outputs	20
Table 3.2:	Status display of the USB interface	20
Figure 4.1:	Possible bar code orientation	23
Figure 4.2:	Reflector arrangement for autoReflAct	24
Figure 5.1:	Deflection principle for the line scanner	26
Figure 5.2:	Deflection principle for the line scanner with oscillating mirror add-on	27
Figure 5.3:	Principle arrangement for omnidirectional reading	28
Figure 6.1:	Total reflection – line scanner	30
Figure 6.2:	Total reflection – oscillating-mirror scanner	30
Figure 6.3:	Reading angle for the line scanner	31
Figure 7.1:	Location of the electrical connections	33
Figure 7.2:	Connections of the device	34
Figure 7.3:	PWR, M12 connector (A-coded)	35
Table 7.1:	Pin assignments - PWR	35
Figure 7.4:	Switching input connection diagram SWIO_3 and SWIO_4	36
Figure 7.5:	Switching output connection diagram SWIO_3 / SWIO_4	36
Figure 7.6:	Service, USB, type A	37
Table 7.2:	Pin assignments of SERVICE – USB interface	37
Figure 7.7:	SW IN/OUT, M12 socket (A-coded)	38
Table 7.3:	Pin assignment SW IN/OUT	38
Figure 7.8:	Switching input connection diagram SWIO_1 and SWIO_2	38
Figure 7.9:	Switching output connection diagram SWIO_1 / SWIO_2	39
Figure 7.10:	HOST/BUS IN – DP IN, M12 socket (B-coded)	40
Table 7.4:	Pin assignment HOST / BUS IN	40
Figure 7.11:	M12 socket (B-coded)	41
Table 7.5:	Pin assignment BUS OUT	41
Table 7.6:	Cable lengths and shielding	41
Table 8.1:	Parameter handling submenu	43
Table 8.2:	Decoder table submenu	43
Table 8.3:	Digital SWIO submenu	45
Table 8.4:	PROFIBUS submenu	47
Table 9.1:	webConfig system requirements	52
Figure 9.1:	The start page of the webConfig tool	53
Figure 9.2:	Module overview in the webConfig tool	54
Table 10.1:	PROFIBUS bus-access processes	56
Table 10.2:	PROFIBUS DP master and slave types	57
Table 10.3:	Services for DPVM1 class 1 and slaves	57
Table 10.4:	Baud rates	57
Figure 10.1:	Connections of the device	58
Table 10.5:	"Common" parameters	60
Table 10.6:	Module overview	63

Table 10.7:	Parameters for modules 1-4	65
Table 10.8:	Parameters for module 5	66
Table 10.9:	Parameters for module 7	67
Table 10.10:	Parameters for module 10	68
Table 10.11:	Output data for module 10	68
Table 10.12:	Parameters for module 11	70
Table 10.13:	Parameters for module 12	71
Table 10.14:	Input data for module 12	71
Table 10.15:	Parameters for module 13	71
Table 10.16:	Input data for module 13	72
Table 10.17:	Parameters for module 14	72
Table 10.18:	Input data for module 20	73
Table 10.19:	Input data for modules 21 ... 27	74
Table 10.20:	Parameters for module 30	75
Table 10.21:	Input data for module 31	76
Table 10.22:	Input data for module 32	76
Table 10.23:	Input data for module 33	76
Table 10.24:	Input data for module 34	77
Table 10.25:	Input data for module 35	77
Table 10.26:	Input data for module 36	78
Table 10.27:	Input data for module 37	78
Table 10.28:	Input data for module 38	78
Table 10.29:	Input data for module 39	79
Table 10.30:	Input data for module 40	79
Table 10.31:	Input data for module 41	80
Table 10.32:	Parameters for module 50	80
Table 10.33:	Parameters for module 51	81
Table 10.34:	Parameters for module 52	82
Table 10.35:	Parameters for module 53	83
Table 10.36:	Parameters for module 54	85
Table 10.37:	Parameters for module 55	86
Table 10.38:	Input data for module 60	86
Table 10.39:	Input data for module 60	87
Table 10.40:	Parameters for module 61	87
Table 10.41:	Parameters for module 62	88
Table 10.42:	Input data for module 63	88
Table 10.43:	Output data for module 63	89
Table 10.44:	Parameters for module 64	89
Table 10.45:	Parameters for module 65	89
Figure 10.2:	Example 1: Switch-on delay > 0 and switch-on time = 0	90
Figure 10.3:	Example 2: Switch-on delay > 0 and switch-on time > 0	90
Figure 10.4:	Example 3: Switch-on delay > 0 Switch-off signal prior to lapsing of the switch-on delay 91	
Figure 10.5:	Switch-on delay in input mode	92
Figure 10.6:	Switch-on time in input mode	92
Figure 10.7:	Switch-off delay in input mode	92
Table 10.46:	Switch-on/switch-off functions	93
Table 10.47:	Input functions	93
Table 10.48:	Parameters for module 70 – Input/Output 1	93

Table 10.49:	Parameters for module 71 – Input/Output 2	95
Table 10.50:	Parameters for module 72 – Input/Output 3	96
Table 10.51:	Parameters for module 73 – Input/Output 4	97
Table 10.52:	Input data for module 74 Input/output status and control	99
Table 10.53:	Output data for module 74 Input/output status and control	99
Table 10.54:	Parameters for module 80	100
Table 10.55:	Parameters for module 81 – Reference code comparison	101
Table 10.56:	Parameters for module 82 – Reference code comparison	102
Table 10.57:	Parameters for module 83 – Reference code comparison pattern	104
Table 10.58:	Parameters for module 84 – Reference code comparison pattern	105
Table 10.59:	Input data for module 90 – Status and control	105
Table 10.60:	Parameters for module 91 – AutoreflAct	106
Table 10.61:	Parameters for module 92 – AutoControl	107
Table 10.62:	Input data for module 92 – AutoControl	107
Table 10.63:	Successful reading	108
Table 10.64:	Unsuccessful reading	109
Table 10.65:	Device parameters for example configuration 2	109
Table 10.66:	Successful reading	110
Table 10.67:	Unsuccessful reading	110
Table 13.1:	General causes of errors	122
Table 13.2:	Interface error	122
Table 15.1:	Technical data of the BCL 504/line scanners without heating	124
Table 15.2:	Technical data of the BCL 504/oscillating-mirror scanners with heating	126
Table 15.3:	Technical data of the BCL 504/line scanners with heating	127
Table 15.4:	Technical data of the BCL 504/oscillating-mirror scanners with heating	128
Figure 15.1:	Dimensioned drawing - line scanner	129
Figure 15.2:	Dimensioned drawing of oscillating-mirror scanner	130
Figure 15.3:	BT 56 mounting device	131
Figure 15.4:	BT 59 mounting device	131
Figure 15.5:	External parameter memory	132
Figure 15.6:	The most important characteristics of a bar code	132
Figure 15.7:	Zero position of the reading distance	133
Table 15.5:	Reading conditions	133
Figure 15.8:	"High Density" reading field curve for line scanner	134
Figure 15.9:	"High Density" reading field curve for oscillating-mirror scanners	135
Figure 15.10:	Lateral "High Density" reading field curve for oscillating-mirror scanners	135
Figure 15.11:	"Medium Density" reading field curve for line scanner	136
Figure 15.12:	"Medium Density" reading field curve for oscillating-mirror scanners	137
Figure 15.13:	Lateral "Medium Density" reading field curve for oscillating-mirror scanners	137
Figure 15.14:	"Low Density" reading field curve for line scanner	138
Figure 15.15:	"Low Density" reading field curve for oscillating-mirror scanners	139
Figure 15.16:	Lateral "Low Density" reading field curve for oscillating-mirror scanners	139
Figure 15.17:	"Ultra Low Density" reading field curve for line scanner	140
Figure 15.18:	"Ultra Low Density" reading field curve for oscillating-mirror scanners	141
Figure 15.19:	Lateral "Ultra Low Density" reading field curve for oscillating-mirror scanners	141
Figure 15.20:	"High Density" reading field curve for line scanner with heating	142
Figure 15.21:	"High Density" reading field curve for oscillating-mirror scanners with heating	143
Figure 15.22:	Lateral "High Density" reading field curve for oscillating-mirror scanners with heating	143
Figure 15.23:	"Medium Density" reading field curve for line scanner with heating	144

Figure 15.24:	"Medium Density" reading field curve for oscillating-mirror scanners with heating	145
Figure 15.25:	Lateral "Medium Density" reading field curve for oscillating-mirror scanners with heating	145
Figure 15.26:	"Low Density" reading field curve for line scanner with heating	146
Figure 15.27:	"Low Density" reading field curve for oscillating-mirror scanners with heating.....	147
Figure 15.28:	Lateral "Low Density" reading field curve for oscillating-mirror scanners with heating	147
Figure 15.29:	"Ultra Low Density" reading field curve for line scanner with heating.....	148
Figure 15.30:	"Ultra Low Density" reading field curve for oscillating-mirror scanners with heating ..	149
Figure 15.31:	Lateral "Ultra Low Density" reading field curve for oscillating-mirror scanners with heating	149
Table 16.1:	Part number code	150
Table 16.2:	Overview of BCL 504/i types	150
Table 16.3:	Accessories – Connectors	151
Table 16.4:	Accessories – Terminating resistor for BCL 504/i	151
Table 16.5:	Accessories – Cables	151
Table 16.6:	Accessories – External parameter memory	151
Table 16.7:	Mounting device accessories	151
Table 16.8:	Accessory - Reflector for AutoReflAct	151
Figure 17.1:	Code type 01: Interleaved 2 of 5	154
Figure 17.2:	Code type 02: Code 39	154
Figure 17.3:	Code type 06: UPC-A	154
Figure 17.4:	Code type 07: EAN 8.....	155
Figure 17.5:	Code type 08: EAN 128.....	155
Figure 17.6:	Code type 10: EAN 13 Add-on	155
Figure 17.7:	Code type 11: Codabar	155
Figure 17.8:	Code 128.....	155
Figure 17.9:	Code type 01: Interleaved 2 of 5	156
Figure 17.10:	Code type 02: Code 39	156
Figure 17.11:	Code type 06: UPC-A	156
Figure 17.12:	Code type 07: EAN 8.....	156
Figure 17.13:	Code type 08: EAN 128.....	156
Figure 17.14:	Code type 10: EAN 13 Add-on	156
Figure 17.15:	Code type 11: Codabar	157
Figure 17.16:	Code 128.....	157

1 General information

1.1 Explanation of symbols

Table 1.1: Warning symbols and signal words







 CAUTION!	
	This symbol precedes text messages which must strictly be observed. Failure to observe the provided instructions could lead to personal injury or damage to equipment.
 ATTENTION, LASER RADIATION – CLASS 1 LASER PRODUCT	
	This symbol warns of possible danger caused by hazardous laser radiation.
NOTE	
	This symbol indicates text passages containing important information.

Table 1.2: Other symbols


	Symbol for action steps Text passages with this symbol instruct you to perform actions.
---	---

1.2 Declaration of Conformity

The bar code readers of the BCL 500/series have been developed and manufactured in accordance with the applicable European standards and directives.

The BCL 500/series is "UL LISTED" according to American and Canadian safety standards and fulfills the requirements of Underwriter Laboratories Inc. (UL).



NOTE	
	The Declaration of Conformity for these devices can be requested from the manufacturer.

The manufacturer of the product, Leuze electronic GmbH & Co KG in D-73277 Owen, possesses a certified quality assurance system in accordance with ISO 9001.

2 Safety

The bar code readers of the BCL 500/ series were developed, manufactured and tested in accordance with the applicable safety standards. They correspond to the state of the art.


2.1 Intended use

The device is designed as a stationary high-speed scanner with integrated decoder for all common bar codes for automatic object detection.

Areas of application

The device is specially designed for the following areas of application:

- Object identification on fast-moving conveyor lines
- Omnidirectional reading


⚠ CAUTION!	
	<p>Comply with conditions and regulations!</p> <p>Observe the locally applicable legal regulations and the rules of the employer's liability insurance association.</p>

2.2 Foreseeable misuse

Any use other than that defined under "Intended use" or which goes beyond that use is considered improper use.

In particular, use of the device is not permitted in the following cases:

- in rooms with explosive atmospheres
- in circuits which are relevant to safety
- for medical purposes

⚠ CAUTION!	
	<p>Do not modify or otherwise interfere with the device!</p> <p>Do not carry out modifications or otherwise interfere with the device.</p> <p>The device must not be tampered with and must not be changed in any way.</p> <p>The device must not be opened. There are no user-serviceable parts inside.</p> <p>Repairs must only be performed by Leuze electronic GmbH + Co. KG.</p>

2.3 Competent persons

Connection, mounting, commissioning and adjustment of the device must only be carried out by competent persons.

Prerequisites for competent persons:

- They have a suitable technical education.
- They are familiar with the rules and regulations for occupational safety and safety at work.
- They are familiar with the technical description of the device.
- They have been instructed by the responsible person on the mounting and operation of the device.

Certified electricians

Electrical work must be carried out by a certified electrician.

Due to their technical training, knowledge and experience as well as their familiarity with relevant standards and regulations, certified electricians are able to perform work on electrical systems and independently detect possible dangers.



In Germany, certified electricians must fulfill the requirements of accident-prevention regulations DGUV V3 (e.g. electrician foreman). In other countries, there are respective regulations that must be observed.


2.4 Exemption of liability

Leuze electronic GmbH + Co. KG is not liable in the following cases:

- The device is not being used properly.
- Reasonably foreseeable misuse is not taken into account.
- Mounting and electrical connection are not properly performed.
- Changes (e.g., constructional) are made to the device.

2.5 Laser safety notices

 ATTENTION, LASER RADIATION – CLASS 1 LASER PRODUCT	
	<p>The device satisfies the requirements of IEC 60825-1:2014 / EN 60825-1:2014+A11:2021 safety regulations for a product of laser class 1 and complies with 21 CFR 1040.10 except for conformance with IEC 60825-1 Ed. 3., as described in Laser Notice No. 56, dated May 8, 2019.</p> <p>↳ Observe the applicable statutory and local laser protection regulations.</p> <p>↳ The device must not be tampered with and must not be changed in any way.</p> <p>There are no user-serviceable parts inside the device.</p> <p>CAUTION! Opening the device may result in hazardous radiation exposure!</p> <p>Repairs must only be performed by Leuze electronic GmbH + Co. KG.</p>

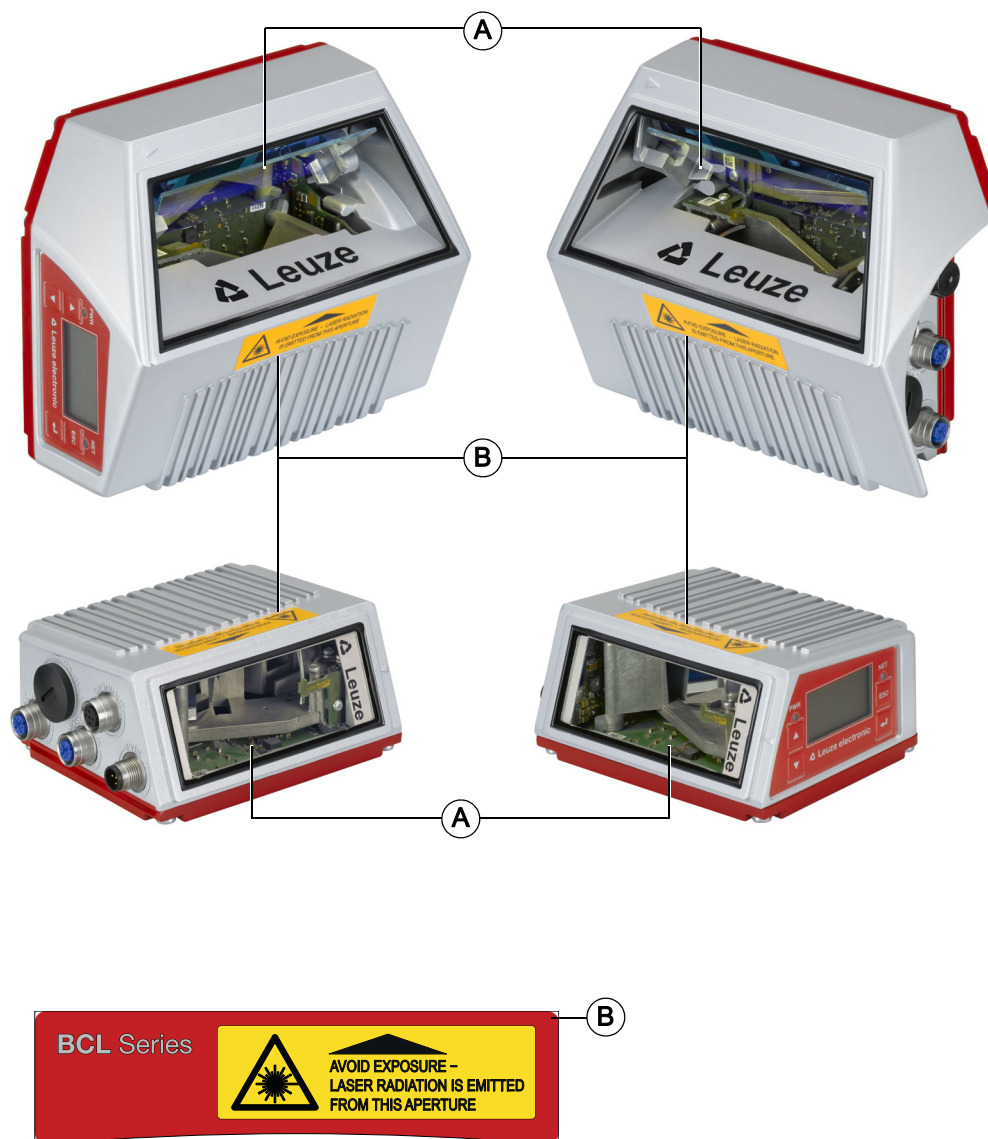

- A Laser aperture
- B Laser warning sign

Figure 2.1: Attaching stick-on labels with warning notices
(top: with oscillating mirror, bottom: line scanners)

3 Device description

3.1 Device overview

Bar code readers of the BCL 500*i* series are high-speed scanners with integrated decoder for all commonly used bar codes, e.g. 2/5 Interleaved, Code 39, Code 128, EAN 8/13 etc., as well as codes from the GS1 DataBar family.

Bar code readers of the BCL 500*i* series are available in various optics models as well as line scanners, line scanners with oscillating mirrors and also optionally as heated models.



Figure 3.1: Line scanner and oscillating-mirror scanner

The extensive options for device configuration via display or software enable adaptation to a multitude of reading tasks. Due to the large reading distance combined with the great depth of field and a very compact construction, the device is ideally suited for package and pallet transportation systems. In general, the bar code readers of the BCL 500*i* series are designed for the conveyor and storage technology market.


The interfaces (**RS 232**, **RS 485** and **RS 422**) integrated in the various device models and the fieldbus systems (**PROFIBUS DP**, **PROFINET-IO**, **Ethernet** and **Ethernet IP**) of the BCL 500*i* series bar code readers offer optimum connection to the superior host system.

3.2 Performance characteristics

- Integrated fieldbus connectivity = *i* -> Plug-and-Play fieldbus coupling and easy networking
- Numerous interface variants facilitate connection to the superior systems
 - RS 232, RS 422 as well as with integrated multiNet plus master
 - RS 485 and multiNet plus slave
- Alternatively, various fieldbus systems, such as
 - PROFIBUS DP
 - PROFINET-IO
 - Ethernet TCP/IP, UDP
 - Ethernet/IP
- Integrated code reconstruction technology (**CRT**) enables the identification of soiled or damaged bar codes
- Maximum depth of field and reading distances from 200 mm to 2400 mm
- Large optical opening angle and, thus, large reading field width
- High scanning rate of 800 / 1200 scans/s for fast reading tasks
- Intuitive, backlit, multi-language display with user-friendly menu navigation
- Integrated **USB 1.1** service interface
- Adjustment of all device parameters with a web browser
- Connection options for an external parameter memory
- Easy alignment and diagnostics functions

- M 12 connections with Ultra-Lock [™] technology
- Four freely programmable switching inputs/outputs for the activation or signaling of states
- Automatic monitoring of the read quality with **autoControl**
- Automatic recognition and setting of the bar code type using **autoConfig**
- Reference code comparison
- Optional heating models to -35 °C
- Heavy-duty housing of degree of protection IP 65

3.3 Device construction

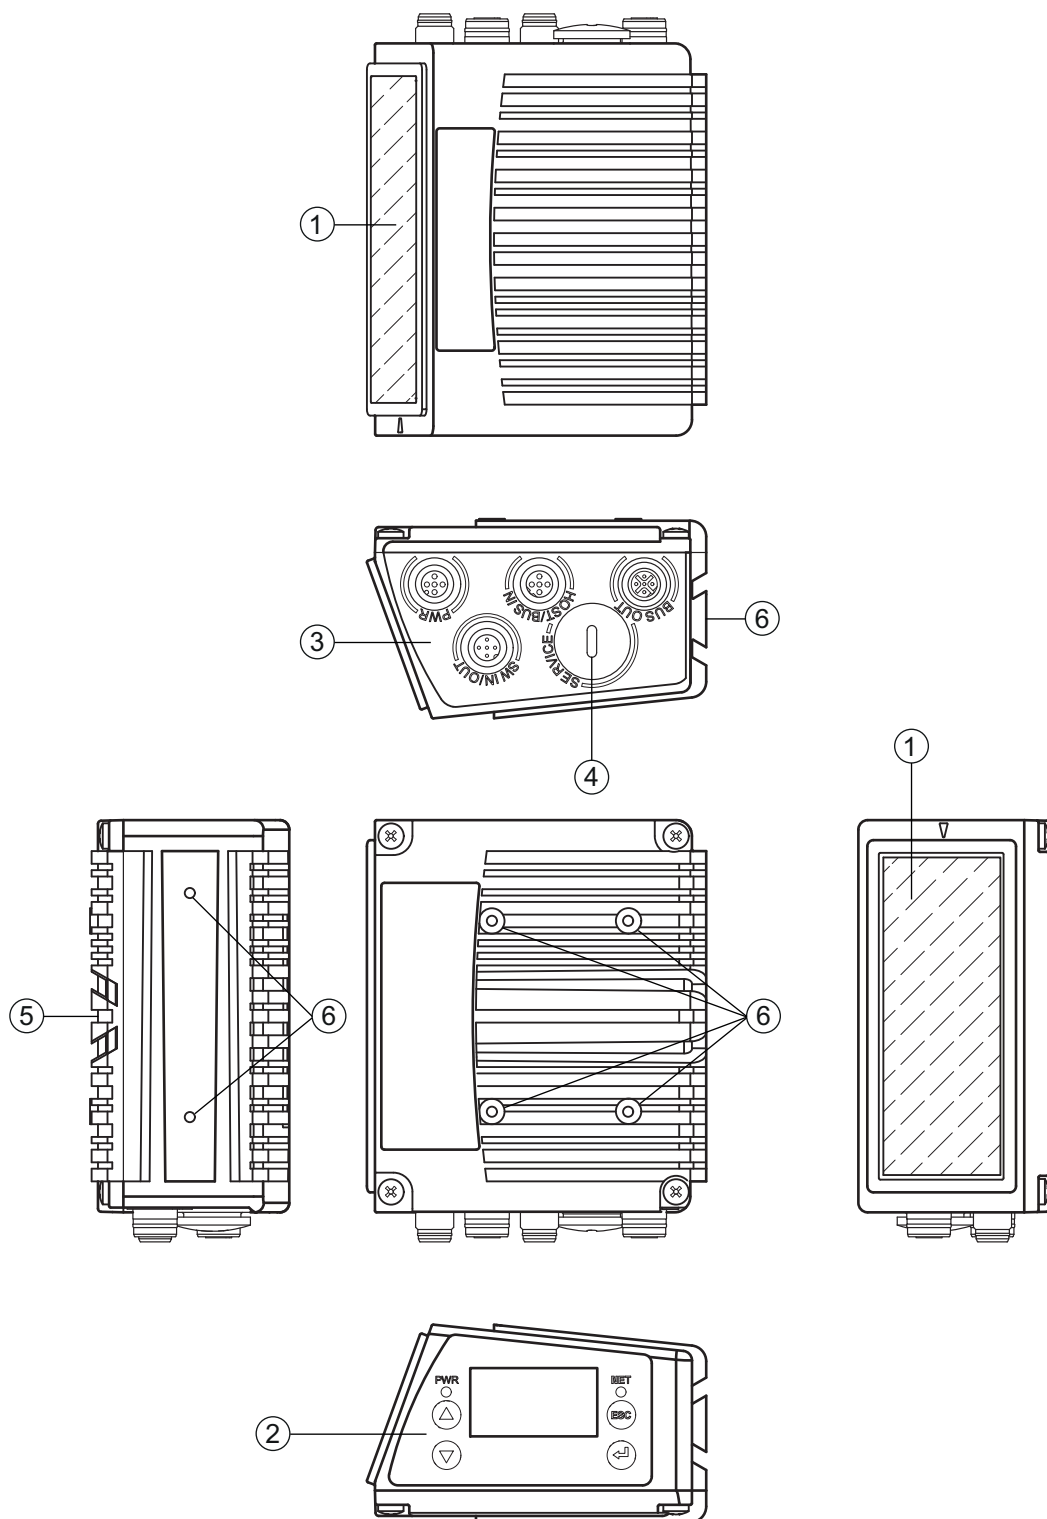

- 1 Reading window
- 2 Control panel with display, LEDs and buttons
- 3 M12 connection technology
- 4 USB interface
- 5 Dovetail mounting
- 6 M4 mounting thread

Figure 3.2: Device construction

3.4 Connection technology

The bar code readers are connected using variously coded M12 connectors. This ensures unique connection assignments.

The additional USB interface is used for configuring the device.

For the locations of the individual device connections, please refer to the device detail shown below.

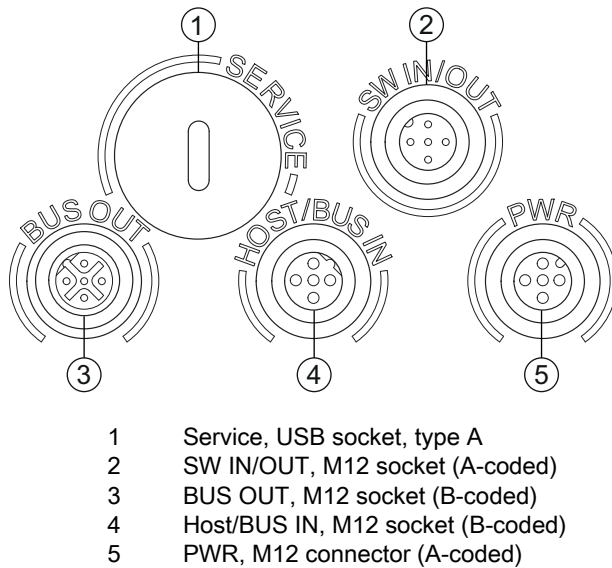


Figure 3.3: Location of the electrical connections

3.5 Display elements

3.5.1 Structure of the control panel

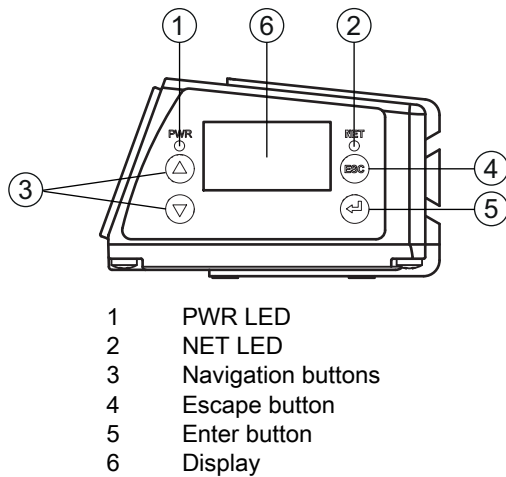


Figure 3.4: Structure of the control panel

3.5.2 Status indicators and operation

Indicators in the display

Table 3.1: Status displays of the switching inputs/outputs

IO1	Switching input or switching output 1 active (function dependent on set parameterization). Default: Switching input with the "Reading gate activation" function
IO2	Switching input or switching output 2 active (function dependent on set parameterization). Default: Input with the "Teach-in" function
IO3	Switching input or switching output 3 active (function dependent on set parameterization). Default: Switching input with the "Reading gate activation" function
IO4	Switching input or switching output 4 active (function dependent on set parameterization). Default: Switching output with the "No read" function
ATT	Warning (Attention)
ERR	Internal device error (Error) -> The device must be sent in for inspection

Bar graph

The read quality is shown on a scale of 0 - 100 %. The quality is evaluated based on the "Equal Scans" of the read result configured in the bar code reader.

Table 3.2: Status display of the USB interface

USB	The device is connected to a PC via the USB interface.
MS	An external parameter memory is properly connected to the USB interface of the device.

Read result




The read bar code information is displayed.










Device address

Displays the set PROFIBUS network address (default = 126).





3.5.3 LED status indicators

PWR LED

PWR	Off	Device OFF
		<ul style="list-style-type: none"> No supply voltage
PWR	Flashes green	Device ok, initialization phase
		<ul style="list-style-type: none"> No bar code reading possible Voltage connected Self test running Initialization running
PWR	Green, continuous light	Device ok
		<ul style="list-style-type: none"> Bar code reading possible Self test successfully finished Device monitoring active

PWR 	Orange, continuous light	Service mode <ul style="list-style-type: none"> • Bar code reading possible • Configuration via the USB service interface • Configuration via the display • No data on the host interface
PWR 	Flashes red	Device ok, warning set <ul style="list-style-type: none"> • Bar code reading possible • Temporary operating fault
PWR 	Red, continuous light	Device error / parameter enable <ul style="list-style-type: none"> • No bar code reading possible
NET LED		
NET 	Off	No supply voltage <ul style="list-style-type: none"> • No communication possible • PROFIBUS DP communication not initialized or inactive
NET 	Flashes green	Initialization <ul style="list-style-type: none"> • Of the device, establishing communication
NET 	Green, continuous light	Operation ok <ul style="list-style-type: none"> • Network mode ok • Connection and communication to IO Controller (PLC) established ("data exchange")
NET 	Flashes orange	Timeout
NET 	Flashes red	Communication error <ul style="list-style-type: none"> • Bus error • Parameterization or configuration failed ("parameter failure") • IO error • No data exchange
NET 	Red, continuous light	Network error <ul style="list-style-type: none"> • No communication (protocol) to IO controller established (no data exchange) • Bus error • No DP protocol to the master established ("no data exchange")


3.6 Control buttons

	Up	Navigate upward/sideways.
	Down	Navigate downward/sideways.
	ESC	Exit menu item.
	ENTER	Confirm/enter value, change menu levels.

Navigating within the menus

The menus within a level are selected with the up/down buttons  .


The selected menu item is activated with the enter button .





Press the ESC button  to move up one menu level.

When one of the buttons is actuated, the display illumination is activated for 10 min.

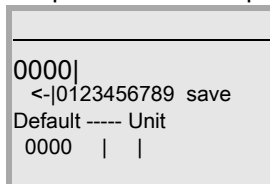Setting values

If input of a value is possible, the display looks like this:




Use the   and  buttons to set the desired value. An accidental, incorrect entry can be corrected by selecting <-| and then pressing .


Then use the   buttons to select **save** and save the set value by pressing .

Selecting options

If options can be selected, the display looks like this:

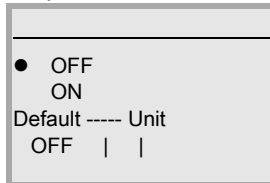

Select the desired option with the   buttons.

Activate the option by pressing .

3.7 External parameter memory

The optionally available external parameter memory – based on a USB memory stick (compatible with version 1.1) – is housed in an external hood with integrated connectors which cover the USB service interface when installed (IP 65).

The external parameter memory makes it easy and reduces the time needed to replace a device on site by providing a copy of the current parameter set of the device. This eliminates the need to configure the exchanged device manually.

The delivery contents of the external parameter memory include the hood with integrated connectors with unscrewable cover and the USB memory stick.

For transferring the configuration with the aid of the external parameter memory see chapter 6.2.

NOTE



To mount, the cover of the service interface must be unscrewed. Then take the USB memory stick and plug it into the USB connection on the device. Then, take the connector hood of the USB memory stick and screw this over the plugged-in USB memory stick onto the service interface to close the system and ensure degree of protection IP 65.

4 Functions

General information

The integrated fieldbus connectivity = / contained in the bar code readers of the BCL 500 / series facilitates the use of identification systems which function without connection unit or gateways. The integrated fieldbus interface considerably simplifies handling. The Plug-and-Play concept enables easy networking and very simple commissioning: Directly connect the respective fieldbus and all parameterization is performed with no additional software.

For decoding bar codes, the bar code readers of the BCL 500 / series make available the proven **CRT decoder** with code reconstruction technology:

The proven code reconstruction technology (**CRT**) enables bar code readers of the BCL 500 / series to read bar codes with a small bar height, as well as bar codes with a damaged or soiled print image.

With the aid of the **CRT decoder**, bar codes can also be read without problem in other demanding situations, such as with a large tilt angle (azimuth angle or even twist angle).

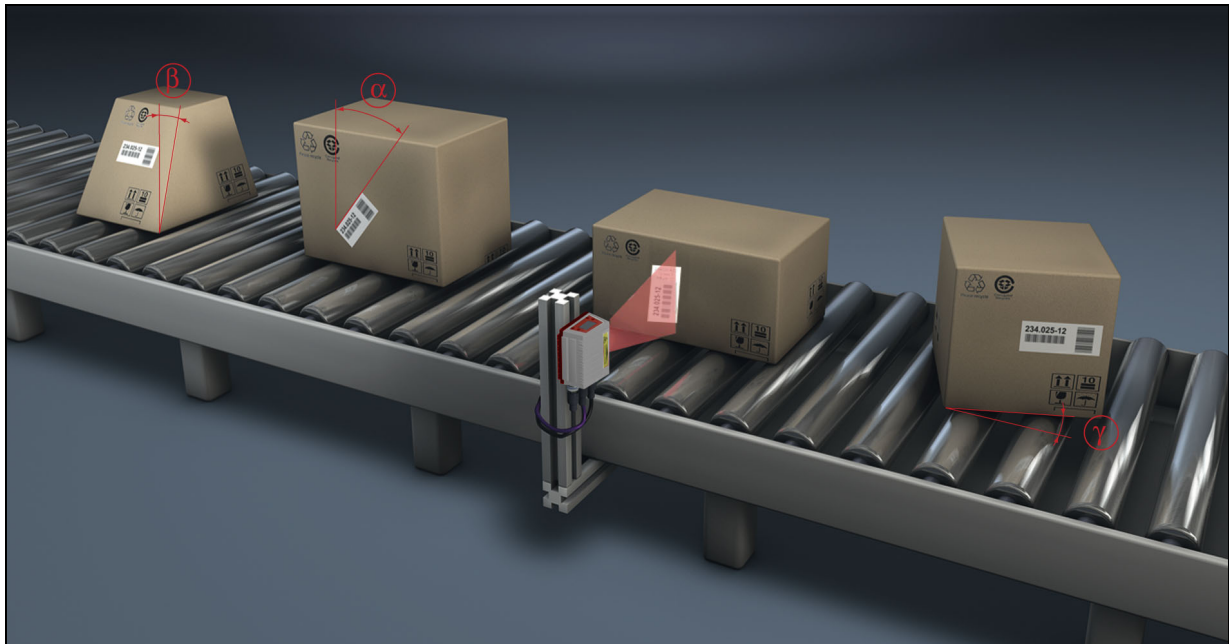


Figure 4.1: Possible bar code orientation

With the BCL 504 /, parameterization is generally performed with the aid of the GSD file.

The device needs a suitable activation to start a read process as soon as an object is in the reading field. This opens a time window (reading gate) in the device for the read process during which the bar code reader has time to detect and decode a bar code.

In the basic setting, triggering takes place through an external reading cycle signal or via the PROFIBUS. An alternative option for activation is the **autoReflAct** function.

Through the read operation, the device collects additional useful pieces of data for diagnostics which can also be transmitted to the host. The quality of the read operation can be inspected using the **alignment mode** which is integrated in the webConfig tool.

A multi-language display with buttons is used to operate the device as well as for visualization purposes. Two LEDs provide additional optical information on the current operating state of the device.

The four freely configurable switching inputs/outputs SWIO 1 ... SWIO 4 can be assigned various functions and control e.g. activation of the device or external devices, such as a PLC.

System, warning and error messages provide assistance in setup/troubleshooting during commissioning and read operation.

4.1 autoReflAct

autoReflAct stands for **automatic Reflector Activation** and permits an activation without additional sensors. This is achieved by directing the scanner with reduced scanning beam towards a reflector mounted behind the conveyor path. As long as the scanner is targeted at the reflector, the reading gate remains closed. If, however, the reflector is blocked by an object such as a container with a bar code label, the scanner activates the read procedure, and the label on the container is read. When the path from the scanner to the

reflector has cleared, the read procedure has completed and the scanning beam is reduced and again directed onto the reflector. The reading gate is closed.

NOTE



You will find a matching reflector in Accessories, and more are available on request.

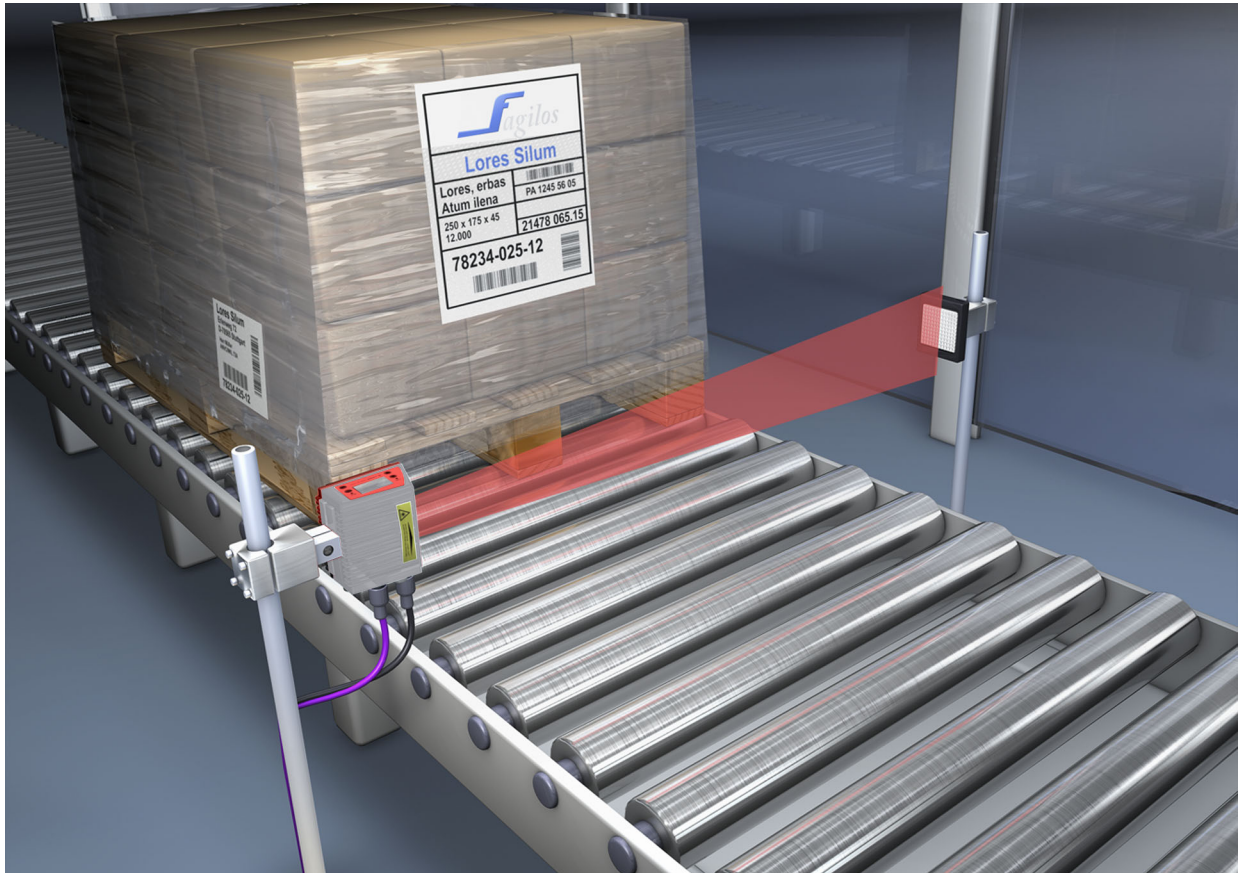


Figure 4.2: Reflector arrangement for autoRefIAct

The **autoRefIAct** function uses the scanning beam to simulate a photoelectric sensor and thus permits an activation without additional sensors.

4.2 Reference codes

The device offers the possibility of storing one or two reference codes.

It is possible to store the reference codes by means of teach-in (display command), via the webConfig tool or via PROFIBUS.


The device can compare read bar codes with one and/or both reference codes and execute user-configurable functions depending on the comparison result.

4.3 autoConfig

With the autoConfig function, the device offers an extremely simple and convenient configuration option to users who only want to read one code type (symbology) with one number of digits at a time.

After starting the autoConfig function via the display, switching input or from a superior control, it is sufficient to position a bar code label with the desired code type and number of digits in the reading field of the device.

Afterward, bar codes with the same code type and number of digits are recognized and decoded.

NOTE	
	<p>The settings made via display or webConfig configuration tool push the parameters set in the PROFIBUS only temporarily into the background. They are overwritten during integration into the PROFIBUS or when the parameter enable is deactivated!</p> <p>Device settings for operating the device on the PROFIBUS are managed and configured exclusively by the PROFIBUS controller (PLC). Permanent changes must be carried out here!</p>

Detailed information on this topic can be found in Chapter 10 "Starting up the device - Configuration" on page 63.

4.4 Heating

For low-temperature applications to min. -35°C (e.g. in cold storage), the bar code readers of the BCL 500/i series can optionally be permanently fitted with a built-in heating and these bar code readers purchased as separate device models.

5 Reading techniques

5.1 Line scanner (single line)

A line (scan line) scans the label. Due to the opt. opening angle, the reading field width is dependent on the read distance. Through the movement of the object, the entire bar code is automatically transported through the scan line.

The integrated code reconstruction technology permits twisting of the bar code (tilt angle) within certain limits. These are dependent on the transport speed, the scanning rate of the scanner and the bar code properties.

Areas of application of the line scanner

The line scanner is used:

- When the bars of the bar code are printed in the conveying direction ('ladder arrangement').
- With bar codes having very short bar lengths.
- When the ladder code is turned out of the vertical position (tilt angle).
- When the reading distance is large.



Figure 5.1: Deflection principle for the line scanner

5.2 Line scanner with oscillating mirror

The oscillating mirror deflects the scan line additionally to both sides across the scan direction at a randomly adjustable oscillation frequency. In this way, the device can also scan larger areas or spaces for bar codes. The reading field height (and the scan line length useful for evaluation) depends on the reading distance due to the optical opening angle of the oscillating mirror.

Areas of application of the line scanner with oscillating mirror

For line scanners with oscillating mirror, oscillation frequency, start/stop position etc. are adjustable. It is used:

- When the position of the label is not fixed, e.g. on pallets – various labels can, thus, be detected at various positions.
- When the bars of the bar code are printed perpendicular to the conveying direction ("picket fence arrangement").
- When reading stationary objects.
- When the bar code is turned out of the horizontal position.
- When the reading distance is large.
- When a large reading field (reading window) has to be covered.

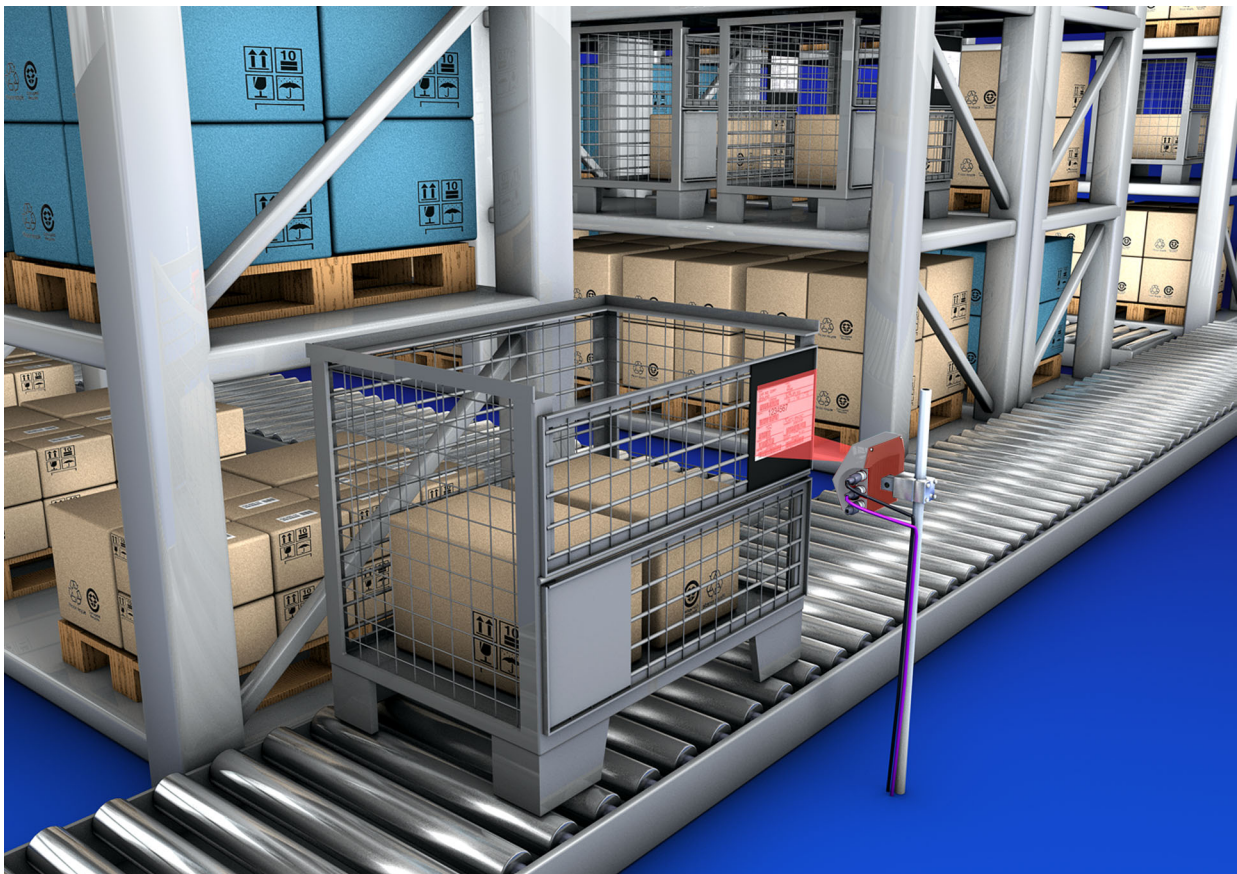


Figure 5.2: Deflection principle for the line scanner with oscillating mirror add-on

5.3 Omnidirectional reading

In order to read arbitrarily oriented bar codes on an object, at least 2 bar code readers are necessary. If the bar code is not printed over-square, i.e. bar length > code length, bar code readers with integrated code reconstruction technology are necessary.

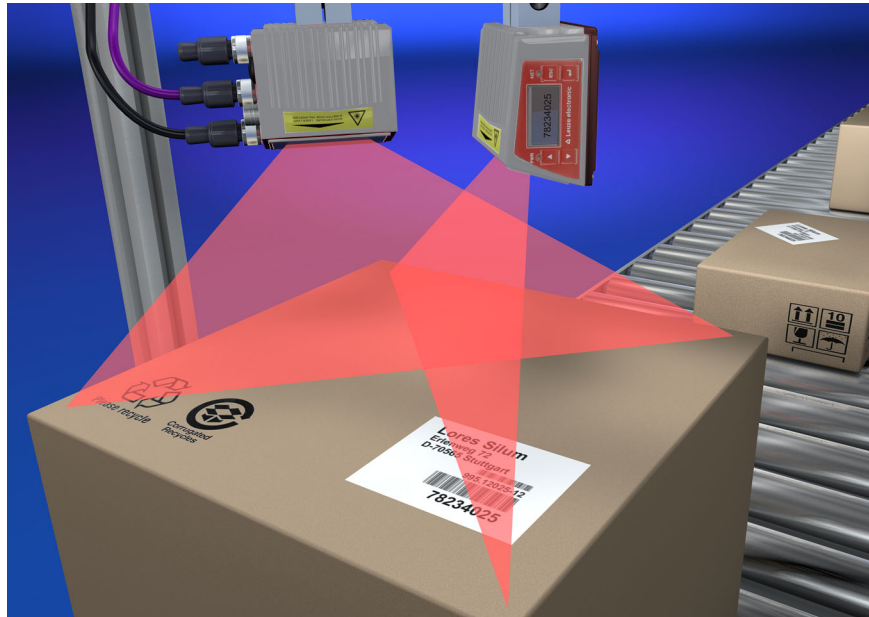


Figure 5.3: Principle arrangement for omnidirectional reading

6 Mounting

The bar code readers can be mounted in different ways:

- Using two M4x6 screws on the rear of the device or using four M4x6 screws on the bottom of the device (see figure 3.2).
- Using a BT 56 mounting device on the two fastening grooves (see figure 15.3).
- Using a BT 59 mounting device on the two fastening grooves (see figure 15.4).


6.1 Device arrangement

6.1.1 Selecting a mounting location

In order to select the right mounting location, several factors must be considered:

- Size, orientation, and position tolerance of the bar codes on the objects to be scanned.
- The reading field of the device in relation to the bar code module width.
- The resulting minimum and maximum reading distance from the respective reading field (see chapter 15.5 "Reading field curves / optical data").
- The permissible cable lengths between the device and the host system depending on which interface is used.
- The correct time for data output. The device should be positioned in such a way that, taking into consideration the time required for data processing and the conveyor belt speed, there is sufficient time to e.g. initiate sorting operations on the basis of the read data.
- The display and control panel should be very visible and accessible.
- For configuring and commissioning with the webConfig tool, the USB interface should be easily accessible.

For specific information, please refer to Chapter 5.

NOTE	
	<p>The beam of the device exits:</p> <ul style="list-style-type: none"> • Parallel to the housing base in the case of the line scanner • Perpendicular to the housing base in the case of the oscillating mirror <p>In each case, the housing base is the black area.</p>
	<p>The best read results are obtained when:</p> <ul style="list-style-type: none"> • The device is mounted in such a way that the scanning beam is incident on the bar code at an angle of inclination greater than $\pm 10^\circ \dots 15^\circ$ to vertical. • The reading distance lies in the middle area of the reading field. • The bar code labels are of good print quality and have good contrast ratios. • You do not use high-gloss labels. • There is no direct sunlight.

6.1.2 Avoiding total reflection – Line scanner

The bar code label must be positioned at an angle of inclination greater than $\pm 10^\circ \dots 15^\circ$ from vertical in order to avoid total reflection of the laser beam (see Figure 6.1)!

Total reflection occurs whenever the laser light of the bar code reader is directly incident on the surface of the bar code at an angle of 90° . The light directly reflected by the bar code may overload the bar code reader and thereby cause non-readings!

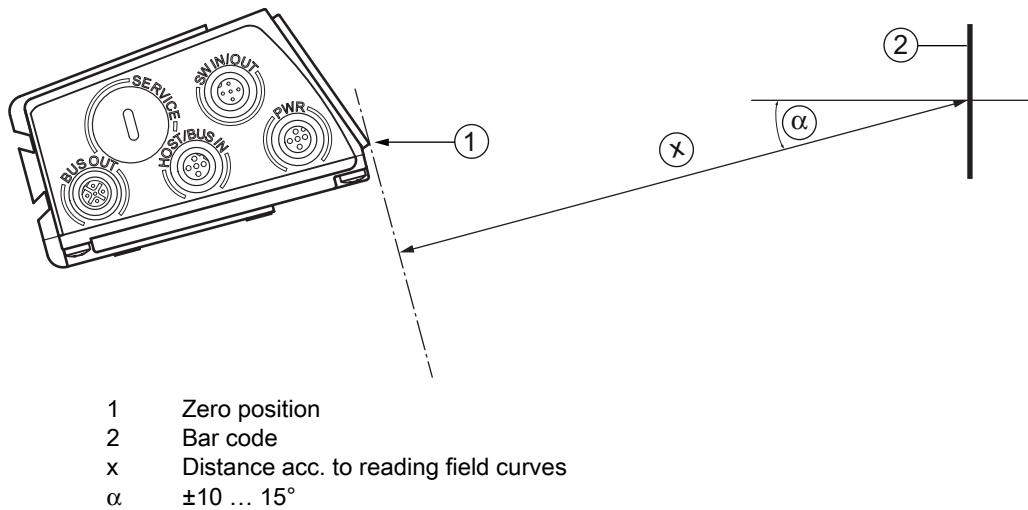



Figure 6.1: Total reflection – line scanner

6.1.3 Avoiding total reflection – oscillating-mirror scanner

For the device with **oscillating mirror**, the laser beam exits at an **angle of 90° to vertical**.

Furthermore, the **swivel range of $\pm 20^\circ$ ($\pm 12^\circ$ for devices with heating) is to be taken into account**.

This means that in order to be on the safe side and to avoid total reflection, the device with oscillating mirror must be inclined upward or downward $20^\circ \dots 30^\circ$!

NOTE	
	Mount the device with oscillating mirror in such a way that the exit window of the bar code reader is parallel to the object. This will result in an angle of inclination of approx. 25° .

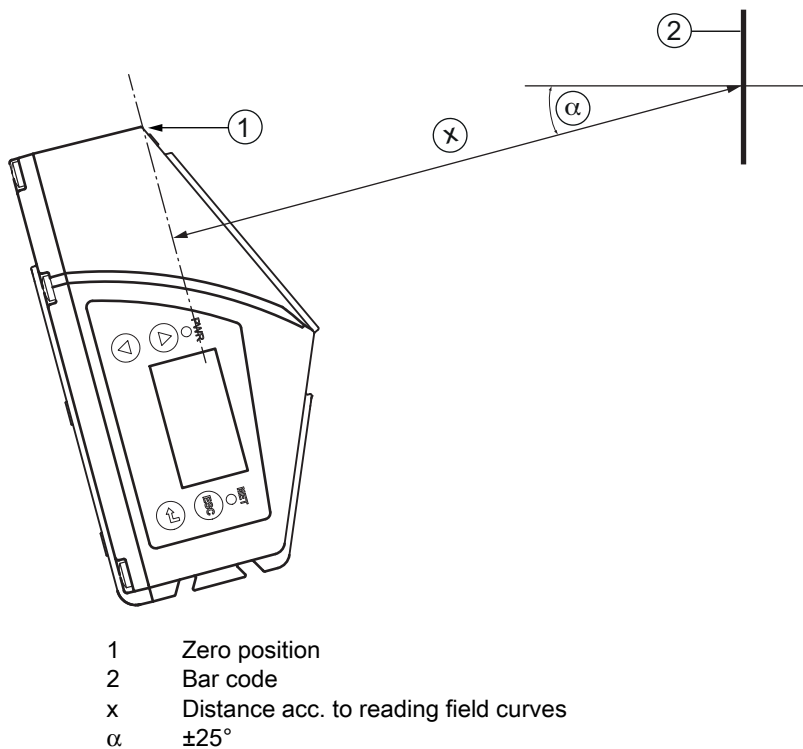


Figure 6.2: Total reflection – oscillating-mirror scanner

6.1.4 Mounting location

- ✎ When choosing the mounting location, observe the following:
- Maintaining the required environmental conditions (temperature, humidity).
 - Possible soiling of the reading window due to liquids, abrasion by boxes, or packaging material residues.
 - Lowest possible chance of damage to the device by mechanical collision or jammed parts.
 - Possible extraneous light (no direct sunlight or sunlight reflected by the bar code).

6.1.5 Devices with integrated heating

- ✎ When mounting devices with integrated heating, also observe the following points:
- Mount the device in a way which provides maximum thermal isolation, e.g. using rubber-bonded metal.
 - Mount in such a way that the device is protected from draft and wind; mount additional shields if necessary.


NOTE



When installing the device in a protective housing, it must be ensured that the scanning beam can exit the protective housing without obstruction.

6.1.6 Possible read angles between device and bar code

The optimum alignment of the device is accomplished when the scan line scans the bar code bars almost at a right angle (90°). All reading angles that are possible between the scan line and bar code must be taken account (Figure 6.3).

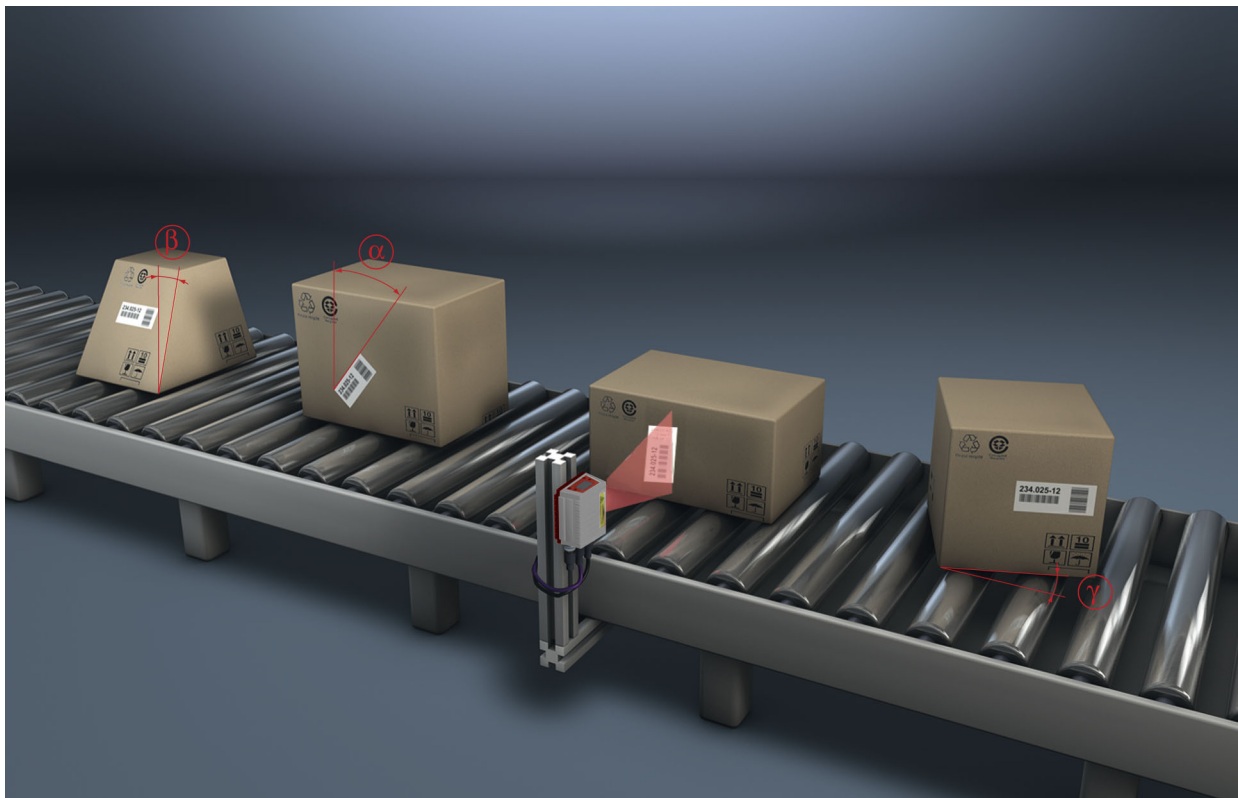

- α Azimuth angle (tilt)
 β Inclination angle (pitch)
 γ Angle of rotation (skew)

Figure 6.3: Reading angle for the line scanner

NOTE



In order to avoid total reflection, the angle of rotation γ should be greater than 10°.

6.2 Installing the external parameter memory

✚ Remove the cover of the USB connection on the device.

✚ Insert the USB memory stick into the USB connection and then cover it with the connector hood to ensure degree of protection IP 65.

The USB memory stick can be inserted regardless of whether or not the device is connected to supply voltage.

- After the USB memory stick has been inserted and supply voltage applied, the following message appears on the display.

Memory stick connected: Export internal configuration?

✚ Use the navigation buttons   to select OK and activate with the enter button .

The configuration is now transferred to the external parameter memory and is from now on updated immediately when the configuration is changed via display or online commands.

- The display of MS under the device address indicates that the USB memory stick is correctly connected and functional.

Replacing a defective device

✚ Uninstall the defective device.




✚ Remove the external parameter memory from the defective device by unscrewing the protection hood.


✚ Mount the external parameter memory on the new device.

✚ Install and start up the new device.

The following message appears on the display again:

- Memory stick connected: Export internal configuration?

✚ Use the navigation buttons   to select Cancel and activate with the enter button .

NOTE	
	Make sure you select Cancel. Otherwise, the configuration in the external parameter memory is lost!

The configuration is now imported from the external parameter memory and the device is immediately operational without any further configuration.

7 Electrical connection

The bar code readers of this series are connected using variously coded M12 connectors. This ensures unique connection assignments.

The additional USB interface is used for configuring the device.

For the locations of the individual device connections, please refer to the device detail shown below.




NOTE	
	The corresponding mating connectors and preassembled cables are available as accessories for all connections. For additional information, refer to Section 16.3 and Section 7.4.




Figure 7.1: Location of the electrical connections

7.1 Safety notices for the electrical connection

⚠ CAUTION!	
	<p>Do not open the device yourself under any circumstances! There is otherwise a risk of uncontrolled emission of laser radiation from the device. The housing of the device contains no parts that need to be adjusted or maintained by the user.</p> <p>Before connecting the device, be sure that the supply voltage agrees with the value printed on the name plate.</p> <p>Connection of the device and cleaning must only be carried out by a qualified electrician.</p> <p>Ensure that the functional earth (FE) is connected correctly. Unimpaired operation is only guaranteed when the functional earth is connected properly.</p> <p>If faults cannot be cleared, the device should be switched off and protected against accidental use.</p>

⚠ CAUTION!	
	For UL applications, use is only permitted in Class 2 circuits in accordance with the NEC (National Electric Code). The bar code readers are designed in accordance with protection class III for supply by PELV (protective extra-low voltage with reliable disconnection).

NOTE	
	Degree of protection IP65 is achieved only if the connectors and caps are screwed into place!

7.2 Electrical connection of the device

As a PROFIBUS participant, the device is equipped with four M12 plugs/sockets which are A- and B-coded.

The voltage supply (**PWR**) as well as the four freely configurable switching inputs/outputs (**SW IN/OUT** and **PWR**) are connected there.

The device is designed for use in PROFIBUS DP. An **incoming DP IN - PROFIBUS DP** is available as a "**HOST / BUS IN**" interface for connecting to the PLC. An **outgoing DP OUT - PROFIBUS DP** is present as another second physical "**BUS OUT**" interface for setting up the PROFIBUS DP network.

An USB connection is used as a "SERVICE" interface.

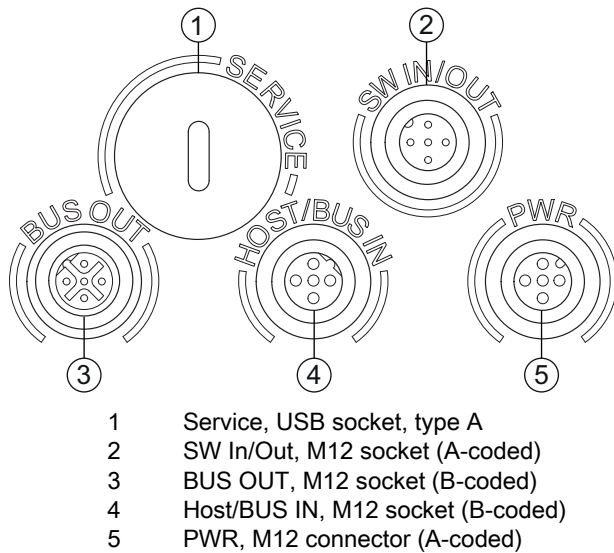


Figure 7.2: Connections of the device

Described in detail in the following are the individual connections and pin assignments.

7.2.1 PWR – Voltage supply and switching inputs/outputs 3 and 4

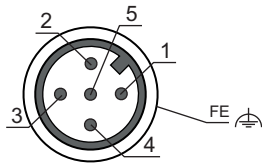



Figure 7.3: PWR, M12 connector (A-coded)

Table 7.1: Pin assignments - PWR

Pin	Name	Comment
1	VIN	Positive supply voltage +10 ... +30 V DC
2	SWIO_3	Configurable switching input / output 3
3	GND	Negative supply voltage 0 V DC
4	SWIO_4	Configurable switching input / output 4
5	FE	Functional earth
Thread	FE	Functional earth (housing)

Supply voltage


NOTE	
	Connecting the functional earth FE Ensure that the functional earth (FE) is connected correctly. Unimpaired operation is only guaranteed when the functional earth is connected properly. All electrical disturbances (EMC couplings) are discharged via the functional earth connection.

Switching input/output

The device is equipped with four freely programmable, opto-decoupled switching inputs and outputs **SWIO_1 ... SWIO_4**.

The switching inputs can be used to activate various internal functions of the device (decoding, autoConfig, ...). The switching outputs can be used to signal the state of the device and to implement external functions independent of the superior control.

The two switching inputs/outputs **SWIO_1** and **SWIO_2** are located on the **SW IN/OUT** M12 socket and are described in Section 7.2.3. The other two (**SWIO_3** and **SWIO_4**) of the four freely configurable switching inputs/outputs are located on the **PWR** M12 connector.

NOTE	
	In general, parameterization of the bar code reader takes place on the PROFIBUS via the associated GSD file. Alternatively, you can temporarily set the respective function as input or output via the display or with the aid of the webConfig configuration tool for the purpose of testing the respective functionality. After reconnecting to the PROFIBUS or after deactivating parameter enabling, the parameter settings set by the PROFIBUS are again active!

Described in the following is the external wiring for use as a switching input or output; the respective function assignments to the switching inputs/outputs can be found in Chapter 9.

Function as switching input

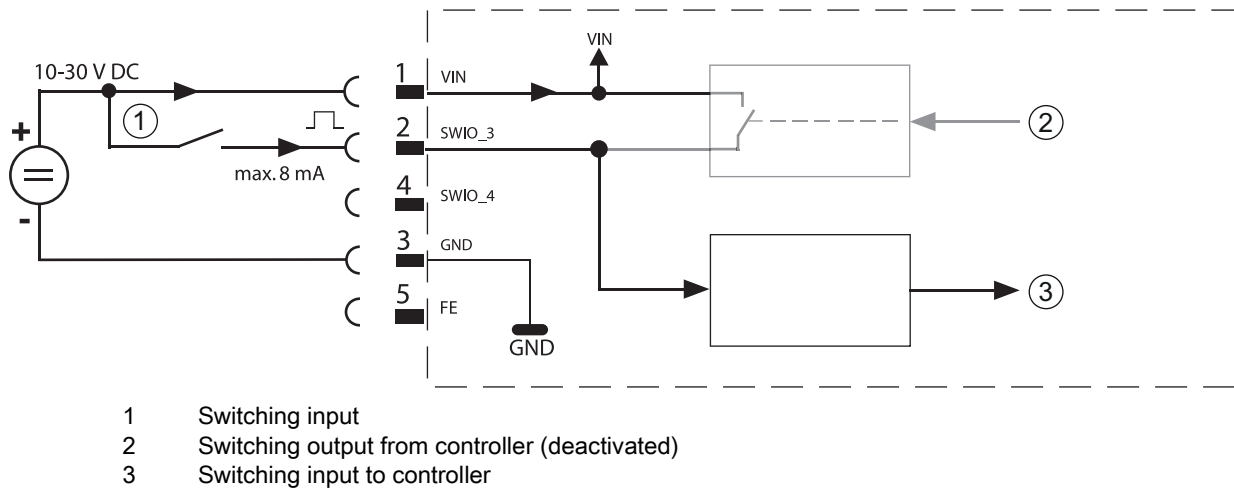


Figure 7.4: Switching input connection diagram SWIO_3 and SWIO_4

NOTE



If you use a sensor with a standard M12 connector, please note the following:

- Pins 2 and 4 must not be operated as switching outputs if sensors which function as inputs are also connected to these pins.

If, for example, the inverted sensor output is connected to pin 2, and pin 2 of the bar code reader is, at the same time, configured as an output (and not as an input), the switching output malfunctions.

CAUTION!



The maximum input current must not exceed 8 mA!

Function as switching output

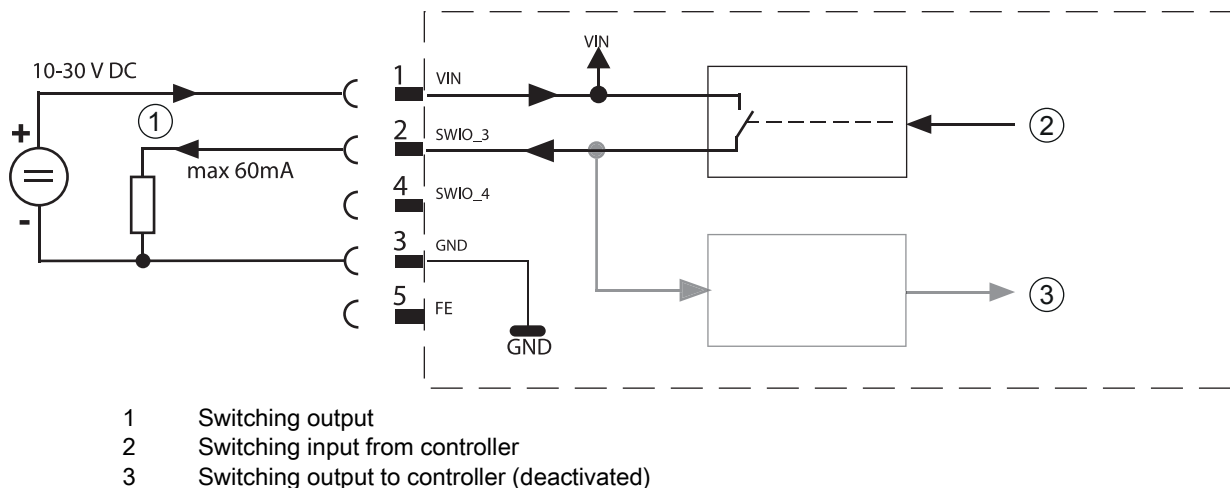


Figure 7.5: Switching output connection diagram SWIO_3 / SWIO_4

CAUTION!



Each configured switching output is short-circuit proof! Do not load the respective switching output of the device with more than 60 mA at +10 ... +30 V DC in normal operation!

NOTE



Both switching inputs/outputs SWIO_3 and SWIO_4 are configured by default in such a way that:

- Switching input SWIO_3 activates the reading gate
- Switching output SWIO_4 switches on "No Read."

7.2.2 SERVICE – USB interface (type A)

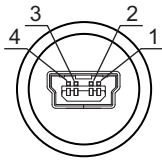


Figure 7.6: Service, USB, type A

Table 7.2: Pin assignments of SERVICE – USB interface

Pin	Name	Comment
1	VB	Positive supply voltage +5 V DC
2	D-	Data -
3	D+	Data +
4	GND	Ground

 **CAUTION!**



Maximum load of the +5 V DC supply voltage of the USB interface is 200 mA!

☞ Ensure adequate shielding.

The entire interconnection cable must absolutely be shielded acc. to the USB specifications. Cable length must not exceed 3 m.

☞ Use the Leuze-specific **USB service cable** (see chapter 16 "Order guide and accessories") for the connection and use a service PC to configure.

NOTE



IP 65 is achieved only if the connectors and caps are screwed into place. Alternatively, a parameter memory in the form of a USB memory stick certified by Leuze electronic GmbH + Co. can be connected to the provided USB service interface. With this Leuze memory stick, degree of protection IP 65 is also ensured.

7.2.3 SW IN/OUT – Switching input/switching output

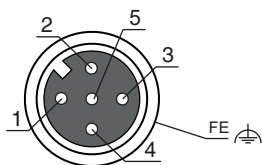


Figure 7.7: SW IN/OUT, M12 socket (A-coded)

Table 7.3: Pin assignment SW IN/OUT

Pin	Name	Comment
1	VOUT	Voltage supply for sensor system (VOUT identical to VIN at PWR IN)
2	SWIO_1	Configurable switching input / output 1
3	GND	GND for the sensor system
4	SWIO_2	Configurable switching input / output 2
5	FE	Functional earth
Thread	FE	Functional earth (housing)

The device is equipped with four freely programmable, opto-decoupled switching inputs and outputs **SWIO_1 ... SWIO_4**.

The two switching inputs/outputs **SWIO_1** and **SWIO_2** are located on the **SW IN/OUT** M12 socket. The other two (**SWIO_3** and **SWIO_4**) of the four freely configurable switching inputs/outputs are located on the **PWR** M12 connector and are described in Chapter 7.2.1.

Described in the following is the external wiring for use as a switching input or output; the respective function assignments to the switching inputs/outputs can be found in Chapter 9.

Function as switching input

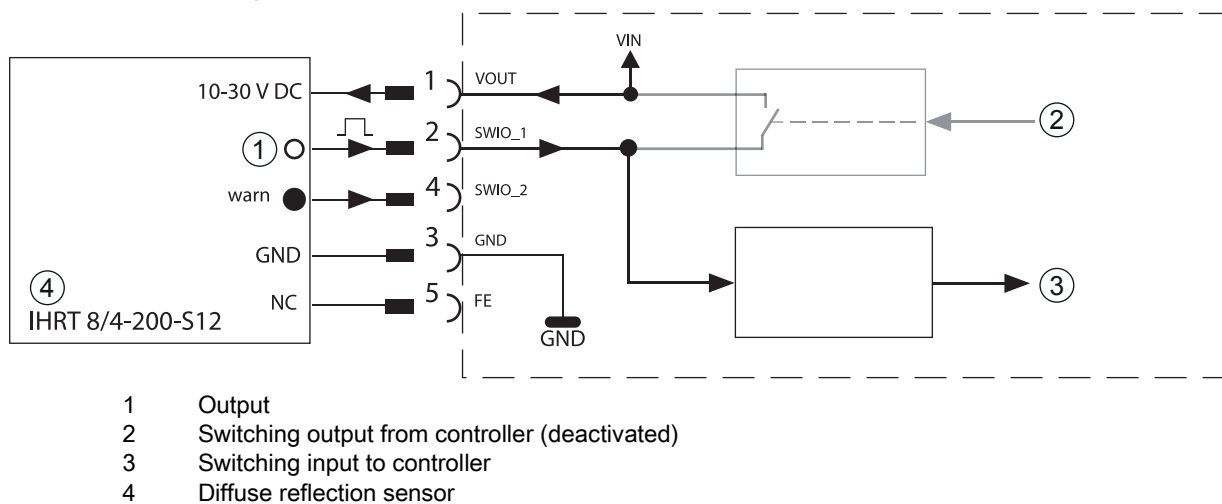


Figure 7.8: Switching input connection diagram SWIO_1 and SWIO_2

NOTE



If you use a sensor with a standard M12 connector, please note the following:

- Pins 2 and 4 must not be operated as switching outputs if sensors which function as inputs are also connected to these pins.

If, for example, the inverted sensor output is connected to pin 2, and pin 2 of the bar code reader is, at the same time, configured as an output (and not as an input), the switching output malfunctions.

⚠ CAUTION!	
⚠	The maximum input current must not exceed 8 mA!

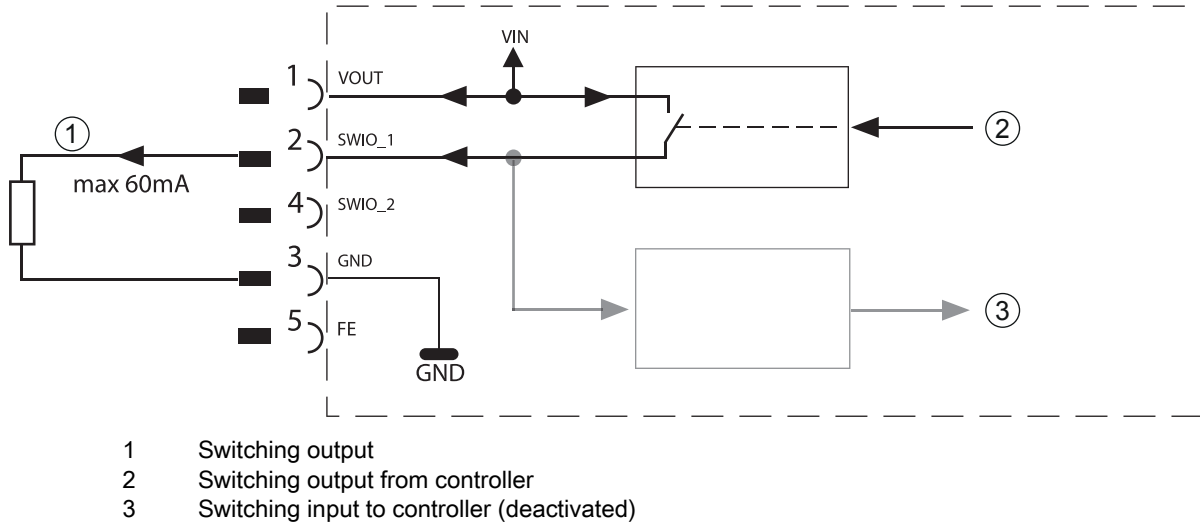
Function as switching output

Figure 7.9: Switching output connection diagram SWIO_1 / SWIO_2

⚠ CAUTION!	
⚠	Each configured switching output is short-circuit proof! Do not load the respective switching output of the device with more than 60 mA at +10 ... +30 V DC in normal operation!

NOTE	
i	<p>By default, the two switching inputs/outputs SWIO_1 and SWIO_2 are configured so that they function as switching inputs.</p> <ul style="list-style-type: none"> • Switching input SWIO_1 activates the start reading gate function • Switching input SWIO_2 activates the reference code teach-in function <p>The functions of the individual switching inputs/outputs are programmed via the display or via parameterization in the webConfig tool under the Switching input or Switching output heading. For further information, see also Chapter 10 "Starting up the device - Configuration" on page 56.</p>

7.2.4 HOST / BUS IN

The device makes an PROFIBUS DP IN interface available as host interface.

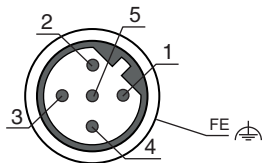


Figure 7.10: HOST/BUS IN – DP IN, M12 socket (B-coded)

Table 7.4: Pin assignment HOST / BUS IN

Pin	Name	Comment
1	N.C.	Not assigned
2	A (N)	Receive/transmit data A-line (N)
3	N.C.	Not assigned
4	B (P)	Receive/transmit data B-line (P)
5	FE	Functional earth
Thread	FE	Functional earth (housing)

If you use ready-made cables, note the following:

⚠ CAUTION!	
⚠	<p>⚡ Ensure adequate shielding.</p> <p>The entire interconnection cable must be shielded and earthed.</p> <p>⚡ For connecting DP IN and DP OUT, we recommend the preassembled PROFIBUS cables.</p>

7.2.5 BUS OUT

To set up the PROFIBUS with additional participants, the device makes available another interface of type PROFIBUS DP OUT.

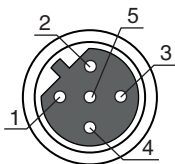


Figure 7.11: M12 socket (B-coded)

Table 7.5: Pin assignment BUS OUT

Pin	Name	Comment
1	VP	+5VDC for bus termination
2	A (N)	Receive/transmit data A-line (N)
3	GND 485	RS 485 reference ground for bus termination
4	B (P)	Receive/transmit data B-line (P)
5	FE	Functional earth / shield
Thread	FE	Functional earth (housing)

If you use ready-made cables, note the following:

⚠ CAUTION!	
⚠	<p>☞ Ensure adequate shielding.</p> <p>The entire interconnection cable must be shielded and earthed.</p> <p>☞ For connecting DP IN and DP OUT, we recommend the preassembled PROFIBUS cables.</p>

7.3 Terminating the PROFIBUS

The last physical PROFIBUS participant must be terminated with a terminating resistor (see chapter 16 "Order guide and accessories") on the BUS OUT socket.

7.4 Cable lengths and shielding

☞ Observe the following maximum cable lengths and shielding types:






Table 7.6: Cable lengths and shielding

Connection	Interface	Max. cable length	Shielding
BCL – service	USB	3m	Shielding absolutely necessary acc. to USB specifications
BCL – host	PROFIBUS DP	Acc. to PNO specifications	Acc. to PNO specifications
BCL – power supply unit		30m	Not necessary
Switching input		10 m	Not necessary
Switching output		10 m	Not necessary

8 Menu description

After voltage is applied to the bar code reader, a startup screen is displayed for several seconds. The display then shows the bar code reading window with all status information.

8.1 The main menus

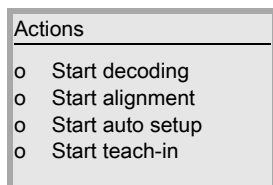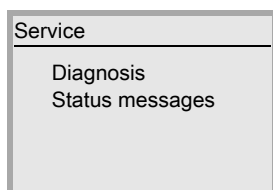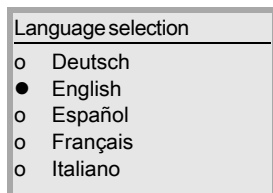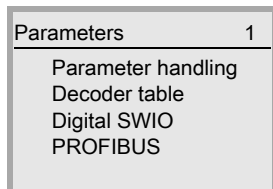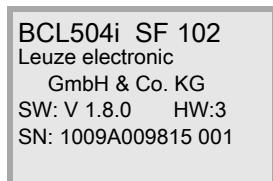

Device information - main menu

This menu item contains detailed information on

- Device type
- Software version
- Hardware version
- Serial number

Main menu Bar code reading window

- Visualization of the read bar code information
- Status overview of the switching inputs/outputs
- Set device address
- Bar graphs for read quality of the current bar code.

See "Indicators in the display" on page 20.

Parameter - main menu

- Parameterization of the bar code reader.

See "Parameter menu" on page 43.

Language selection - main menu

- Selection of the display language.

See "Language selection menu" on page 47.

Service - main menu

- Scanner diagnostics and status messages

See "Service menu" on page 48.

Main menu Actions


- Various functions for scanner configuration and manual operation

See "Actions menu" on page 48.

NOTE



A detailed description of the individual parameters can be found in the description of the PROFINET-IO GSD modules (see chapter 10 "Starting up the device - Configuration").

⚠ CAUTION!	
	<p>Changes made via the display are overwritten!</p> <p>Device settings for operating the device on the PROFIBUS are managed and configured exclusively by the PLC.</p> <p>If parameters are changed via the display during bus operation, the device is separated from the PROFIBUS at the moment parameter enabling is activated via the display. Parameters set by the PROFIBUS are moved to the background, and changes to parameters can be made via the display. When parameter enabling is exited, the device is automatically reconnected to the PROFIBUS. Upon connection to the PROFIBUS, the device receives all parameters from the PLC.</p>

8.2 Parameter menu

Parameter handling

The **Parameter handling** submenu is used to lock and release the parameter input via the display and for resetting to default values.

Table 8.1: Parameter handling submenu

Level 3	Level 4	Level 5	Selection/configuration option <i>Description</i>	Standard
Parameter enable			OFF/ON <i>The standard setting (OFF) prevents unintended parameter changes. If parameter enabling is activated (ON), parameters can be changed manually. As long as parameter enabling is activated, the device is disconnected from the PROFIBUS.</i>	OFF
Parameters to default			<i>By pressing the enter button (↵) after selecting Parameters to default, all parameters are reset to their standard settings without any further security prompts. In this case, English is selected as the display language.</i>	

Decoder table

In the **Decoder table** submenu, 4 different code type definitions can be stored. Bar codes that have been read can only be decoded if they correspond to one of the definitions stored here.

Table 8.2: Decoder table submenu

Level 3	Level 4	Level 5	Selection/configuration option <i>Description</i>	Standard
Max. no. of labels			Value between 0 and 64 <i>The value set here specifies the maximum number of labels that should be detected for each reading gate.</i>	1
Decoder 1	Symbology (Code type)		No code Code 2/5 Interleaved Code 39 Code 32 Code UPC Code EAN Code 128 EAN Addendum Codabar Code 93 GS1 DataBar Omnidirectional GS1 DataBar Limited GS1 DataBar Expanded <i>If No code is configured, the current and all subsequent decoders are deactivated.</i>	Code 2/5i

Table 8.2: Decoder table submenu

Level 3	Level 4	Level 5	Selection/configuration option <i>Description</i>	Standard
	Number of digits	Interval mode	OFF/ON <i>With the ON setting, the values in digits 1 and 2 define a range of character numbers that are to be read.</i>	OFF
		Number of digits 1	0 to 64 characters <i>First decodable number of characters or lower range limit.</i>	10
		Number of digits 2	0 to 64 characters <i>Second decodable number of characters or upper range limit.</i>	0
		Number of digits 3	0 to 64 characters <i>Third decodable number of characters.</i>	0
		Number of digits 4	0 to 64 characters <i>Fourth decodable number of characters.</i>	0
		Number of digits 5	0 to 64 characters <i>Fifth decodable number of characters.</i>	0
	Reading reliability		Value from 2 to 100 <i>Number or scans required to reliably detect a label.</i>	4
	Check digit method		Standard No check <i>Depending on the symbology (code type) selected for the decoder, further calculation algorithms can be selected here.</i> <i>Check digit method used for the decoding of the bar code that has been read.</i> <i>If Standard is set, the check digit method intended for the respective code type is used.</i>	Standard
	Check digit transm.		Standard Not standard <i>Specifies whether the check digit is transmitted. Standard means that the transmission matches the standard intended for the respective code type.</i>	Standard
Decoder 2	Symbology		<i>Same as decoder 1</i>	Code 39
	Number of digits	Interval mode	OFF/ON	ON
		Number of digits 1	0 to 64 characters	4
		Number of digits 2	0 to 64 characters	30
		Number of digits 3	0 to 64 characters	0
		Number of digits 4	0 to 64 characters	0
		Number of digits 5	0 to 64 characters	0
	Reading reliability		Value from 2 to 100	4
	Check digit method		<i>Same as decoder 1</i>	Standard
	Check digit transm.		<i>Same as decoder 1</i>	Standard
Decoder 3	Symbology		<i>Same as decoder 1</i>	Code 128
	Number of digits	Interval mode	OFF/ON	ON
		Number of digits 1	0 to 64 characters	4
		Number of digits 2	0 to 64 characters	63
		Number of digits 3	0 to 64 characters	0
		Number of digits 4	0 to 64 characters	0
		Number of digits 5	0 to 64 characters	0
	Reading reliability		Value from 2 to 100	4
	Check digit method		<i>Same as decoder 1</i>	Standard
	Check digit transm.		<i>Same as decoder 1</i>	Standard
Decoder 4	Symbology		<i>Same as decoder 1</i>	Code UPC
	Number of digits	Interval mode	OFF/ON	OFF
		Number of digits 1	0 to 64 characters	8
		Number of digits 2	0 to 64 characters	0
		Number of digits 3	0 to 64 characters	0
		Number of digits 4	0 to 64 characters	0
		Number of digits 5	0 to 64 characters	0
	Reading reliability		Value from 2 to 100	4
	Check digit method		<i>Same as decoder 1</i>	Standard
	Check digit transm.		<i>Same as decoder 1</i>	Standard

Digital SWIO

The **Digital SWIO** submenu is used to configure the 4 switching inputs/outputs of the device.

Table 8.3: Digital SWIO submenu

Level 3	Level 4	Level 5	Selection/configuration option <i>Description</i>	Standard
Sw. input/ output 1	I/O mode		Input / Output / Passive <i>Determines the function of switching input/output 1. In the case of passive, the connection is on 0 V if the Inverted parameter is set to OFF, and on +UB if the Inverted parameter is set to ON.</i>	Input
	Switching input	Inverted	OFF / ON OFF = activation of the switching input function upon high level at the switching input ON = activation of the switching input function upon low level at the switching input	OFF
		Debounce time	Value from 0 to 1000 <i>Time in milliseconds for which the input signal must be present and stable.</i>	5
		Switch-on delay	Value from 0 to 65535 <i>Time in milliseconds between the end of the debounce time and activation of the function configured below.</i>	0
		Pulse duration	Value from 0 to 65535 <i>Minimum activation time in milliseconds for the function configured below.</i>	0
		Switch-off delay	Value from 0 to 65535 <i>Time in milliseconds for which the function configured below remains activated after the switching input signal is deactivated and the pulse duration has expired.</i>	0
		Function	No BCL 500 function Reading gate start/stop Reading gate stop Rd. gate start Teach reference code Autoconfig start/stop <i>The function set here is carried out after the switching input is activated.</i>	Reading gate start/stop

Table 8.3: Digital SWIO submenu

Level 3	Level 4	Level 5	Selection/configuration option <i>Description</i>	Standard
	Switching output	Inverted	OFF / ON <i>OFF = activated switching output upon high level ON = activated switching output upon low level</i>	OFF
		Signal delay	Value from 0 to 65535 <i>Time in milliseconds between activation function and switching of the switching output.</i>	0
		Pulse duration	Value from 0 to 65535 <i>Switch-on time of the switching output in milliseconds. If the Pulse duration is set to 0, the switching output is switched on via the Activation function and switched off via the Deactivation function. If the Pulse duration is greater than 0, the Deactivation function has no effect.</i>	400
		Activation function 1	No function Reading gate start Reading gate end Positive reference code comparison 1 Negative reference code comparison 1 Valid read result Invalid read result Device ready Device not ready Data transmission active Data transmission not active AutoCont. good quality AutoCont. bad quality Reflector detected Reflector not detected External event, pos. edge External event, neg. edge Device active Device standby No device error Device error Positive reference code comparison 2 Negative reference code comparison 2 <i>The function set here specifies which event activates the switching output.</i>	No function
		Deactivation function 1	See Activation function 1 for selection options <i>The function set here specifies the event that deactivates the switching output.</i>	No function
Sw. input/ output 2	I/O mode		Input / Output / Passive	Output
	Switching input	Inverted	OFF / ON	OFF
		Debounce time	Value from 0 to 1000	5
		Switch-on delay	Value from 0 to 65535	0
		Pulse duration	Value from 0 to 65535	0
		Switch-off delay	Value from 0 to 65535	0
		Function	<i>See switching input/output 1</i>	No function
	Switching output	Inverted	OFF / ON	OFF
		Signal delay	Value from 0 to 65535	0
		Pulse duration	Value from 0 to 65535	400
		Activation function 2	<i>See switching input/output 1</i>	Valid read result
		Deactivation function 2	<i>See switching input/output 1</i>	Reading gate start

Table 8.3: Digital SWIO submenu

Level 3	Level 4	Level 5	Selection/configuration option <i>Description</i>	Standard
Sw. input/ output 3	I/O mode		Input / Output / Passive	Input
	Switching input	Inverted	OFF / ON	OFF
		Debounce time	Value from 0 to 1000	5
		Switch-on delay	Value from 0 to 65535	0
		Pulse duration	Value from 0 to 65535	0
		Switch-off delay	Value from 0 to 65535	0
		Function	<i>See switching input/output 1</i>	Reading gate start/stop
	Switching output	Inverted	OFF / ON	OFF
		Signal delay	Value from 0 to 65535	0
		Pulse duration	Value from 0 to 65535	400
		Activation function 3	<i>See switching input/output 1</i>	No function
		Deactivation func- tion 3	<i>See switching input/output 1</i>	No function
Sw. input/ output 4	I/O mode		Input / Output / Passive	Output
	Switching input	Inverted	OFF / ON	OFF
		Debounce time	Value from 0 to 1000	5
		Switch-on delay	Value from 0 to 65535	0
		Pulse duration	Value from 0 to 65535	0
		Switch-off delay	Value from 0 to 65535	0
		Function	<i>See switching input/output 1</i>	No function
	Switching output	Inverted	OFF / ON	OFF
		Signal delay	Value from 0 to 65535	0
		Pulse duration	Value from 0 to 65535	400
		Activation function 4	<i>See switching input/output 1</i>	Invalid read result
		Deactivation func- tion 4	<i>See switching input/output 1</i>	Reading gate start

PROFIBUS

The PROFIBUS submenu is used to set the **PROFIBUS** address.

NOTE

Note that the parameters described in the following are editable and may be overwritten by the dominant PLC data.

Table 8.4: PROFIBUS submenu

Level 3	Level 4	Level 5	Selection/configuration option <i>Description</i>	Standard
PROFIBUS address			Value from 0 to 126 <i>The PROFIBUS permits an address range from 0 to 126. Address 126 must not be used for data communication. It may only be used temporarily for commissioning. The default address is 126. The address must be assigned individually for each bar code reader of type BCL 504i.</i>	126

8.3 Language selection menu

Currently, there are 6 display languages available:

- German
- English
- Spanish
- French
- Italian
- Chinese

The display language and the language of the webConfig user interface are synchronized. The setting in the display affects the webConfig tool and vice versa.

NOTE



When operating the device on the PROFIBUS, the language configured in the GSD file is used in the display.

8.4 Service menu

Diagnosis

This menu item is used exclusively for service purposes by Leuze electronic.

Status messages

This menu item is used exclusively for service purposes by Leuze electronic.


8.5 Actions menu

Start decoding

Here, you can perform a single reading via the display.

☞ Activate the single reading with the button and hold a bar code in the reading field of the device.

The laser beam is switched on and the following display appears:

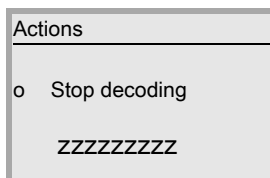


Once the bar code is detected, the laser beam is switched off again. The read result ZZZZZZZZ is shown directly in the display for about 1 s. After that, the Actions menu is displayed again.

Start alignment

The alignment function makes it easy to align the device by optically displaying the read quality.

☞ Activate the alignment function with the button and hold a bar code in the reading field of the device.

At first, the laser beam is switched on continuously, enabling you to position the bar code securely in the reading field. Once the bar code is read, the laser beam is switched off briefly and the following display appears:

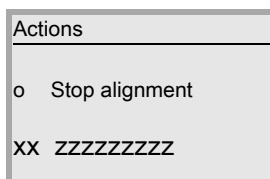

xx Read quality in % (scans with info)

ZZZZZZ Contents of the decoded bar code

Once the bar code has been detected, the laser beam starts to flash.

The flash frequency provides visual information on the read quality. The faster the laser beam flashes, the higher the read quality.


NOTE




In this mode, the bar code reader must reach at least 100 identical readings to obtain the result. The more readings are required, the lower the read quality. The read quality is displayed via the bar graph.

Start auto setup

The auto setup function provides an easy option for configuring the code type and number of digits of Decoder 1.

Use the button  to activate the auto-setup function and hold an unknown bar code in the reading beam of the device.

The following display appears:

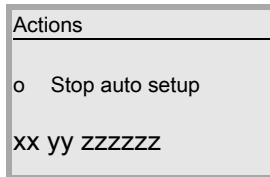

The following information is displayed:

xx Code type of the detected code (sets the code type of Decoder 1)


'01'	2/5 Interleaved
'02'	Code 39
'03'	Code 32
'06'	UPC (A, E)
'07'	EAN
'08'	Code 128, EAN 128
'10'	EAN Addendum
'11'	Codabar
'12'	Code 93
'13'	GS1 Databar Omnidirectional
'14'	GS1 Databar Limited
'15'	GS1 Databar Expanded

yy Number of digits of the detected code (sets the number of digits of Decoder 1)


zzzzzz: Contents of the decoded label. A – appears if the label was not correctly read.

Start teach-in

The teach-in function can be used to conveniently read reference code 1.

Use the button  to activate the teach-in function and hold a bar code which contains the content that you wish to store as the reference code in the reading beam of the device.

The following display appears:

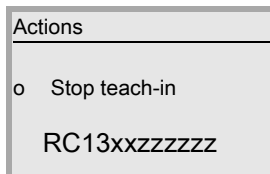

The following information is displayed:





RC13 Means that **ReferenceCode** number 1 is stored in RAM. This is always output

xx Defined code type (see auto setup)

z Defined code information (1 ... 63 characters)


8.6 Operation


 
Shown here is an example describing important operating procedures in detail.


NOTE	
	Use the navigation buttons   to move through the menu. Activate the desired selection with the enter button  .

Parameter enable



During normal operation parameters can be viewed only. If parameters need to be changed, the **ON** menu item in the **Parameter enabling** menu must be activated. To do this proceed as follows:

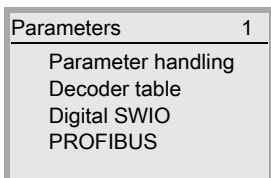


  ➤ In the Parameter menu, use the   buttons to select the **Parameter handling** menu item.

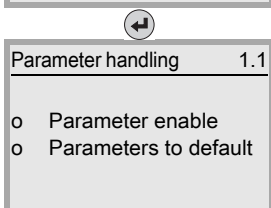
 



➤ Press the enter button to enter the **Parameter handling** menu.

➤ In the Parameter handling menu, use the   buttons to select the **Parameter enable** menu item.

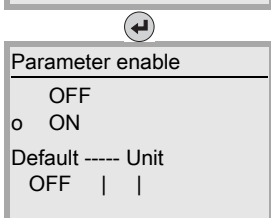

➤ Press the enter button to enter the **Parameter enable** menu.

➤ In the Parameter enable menu, use the   buttons to select the **ON** menu item.

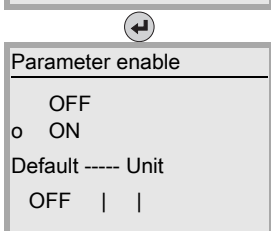



➤ Press the enter button to activate parameter enable.


➤ The PWR LED lights up red. You can now set individual parameters via the display.




➤ Press the ESC button twice to return to the main menu.

NOTE	
	If a password was stored, parameter enable is not possible until this password is entered; see "Password for parameter enable" on page 51.

CAUTION!	
	The device is deactivated on the PROFIBUS when parameter enable is activated via the display. The device is reactivated on the PROFIBUS after parameter enable is canceled.


NOTE	
	In the PROFIBUS network, parameterization is performed exclusively via the PROFIBUS. Parameters set via the display when operating the device on the PROFIBUS are overwritten by the parameters set in the GSD modules. For GSD modules which are not actively used on the PROFIBUS, the default settings of the bar code reader (see see chapter 10 "Starting up the device - Configuration") apply. Thus, the PROFIBUS presets values to all parameters.


⚠ CAUTION!	
	<p>Changes made via the display are overwritten!</p> <p>Device settings for operating the device on the PROFIBUS are managed and configured exclusively by the PROFIBUS controller.</p> <p>If parameters are changed via the display during bus operation, the device is separated from the PROFIBUS at the moment parameter enabling is activated via the display. Parameters set by the PROFIBUS are moved to the background, and changes to parameters can be made via the display. When parameter enabling is exited, the device is automatically reconnected to the PROFIBUS. Upon connection to the PROFIBUS, the device receives all parameters from the PROFIBUS controller.</p>

Password for parameter enable

The password query is deactivated by default. To protect against unwanted changes, the password query can be activated. The preset password is **0000** and can be changed as necessary. To switch on password protection, proceed as follows:

Setting the password

NOTE	
	<p>In order to enter the password, parameter enabling must be activated.</p> <p>A selected password is saved with save.</p> <p>If the password is not known, the master password 2301 can always be used to enable the device.</p>

⚠ CAUTION!	
	<p>When operating the device on the PROFIBUS, the password entered in the display has no effect. The PROFIBUS overwrites the password with the default settings.</p> <p>If a password is desired for PROFIBUS operation, it must be configured via module 62 (see "Starting up the device - Configuration" on page 56).</p>

Network configuration

Information on configuring PROFIBUS can be found in chapter "Starting up the device - Configuration" on page 59.

9 Starting up the device – Leuze webConfig tool

With the **Leuze webConfig tool**, an operating-system independent, web-technology based, graphical user interface is available for configuring bar code readers of the BCL 500*i* series.

Through the use of HTTP as communication protocol and by using only standard technologies on the client side (HTML, JavaScript and AJAX), which are supported by all commonly used, modern browsers (e.g. **Mozilla Firefox** beginning with Version 2 or **Internet Explorer** beginning with Version 7.0), it is possible to operate the **Leuze webConfig tool** on any internet-ready PC.

9.1 Connecting the SERVICE USB interface

The connection to the SERVICE USB interface of the device is established via the PC-side USB interface using a special USB cable with 2 type A/A plugs.

9.2 Installing the required software

9.2.1 System requirements


NOTE	
	It is recommended to update the operating system regularly and to install the current Windows service packs.

Table 9.1: webConfig system requirements

Operating system	Windows 10 (recommended) Windows 8. 8.1 Windows 7
Computer	PC, laptop or tablet with USB interface, version 1.1 or higher
Graphics card	Min. resolution: 1280 x 800 pixels
Required disk space for USB driver	10 MB
Internet browser	Recommended is a current version of Mozilla Firefox Google Chrome Microsoft Edge Note: Other Internet browsers are possible but have not been tested with the current device firmware.

9.2.2 Installing the USB driver


In order for the device to be automatically detected by the connected PC, the **USB driver** must be installed **once** on your PC. To do this, you must have **administrator privileges**.

Please proceed according to the following steps:

- Start your PC with administrator privileges and log on.
- Load the CD included in the delivery contents of your device in the CD drive and start the setup.exe program.
- Alternatively, you can also download the setup program from the internet at www.leuze.com.
- Follow the instructions provided by the setup program.

Upon successful installation of the USB driver, an icon BCL 50xi  automatically appears on the desktop.

To check: In the Windows device manager, a device called "Leuze electronic, USB Remote NDIS Network Device" appears under the "Network adapter" device class following successful USB registration.

NOTE	
	If the installation failed, contact your network administrator: The settings of the firewall used may need to be adjusted.

9.3 Starting the webConfig tool

To start the **webConfig tool**, click the icon BCL 50xi located on the desktop. Make certain that the device is connected to the PC via the USB interface and that voltage is connected.

Or alternatively: Open a browser on your PC and enter the following address: **192.168.61.100**.

This is the default Leuze service address for communication with bar code readers of the BCL 500/series. In both cases, the following start page appears on your PC.

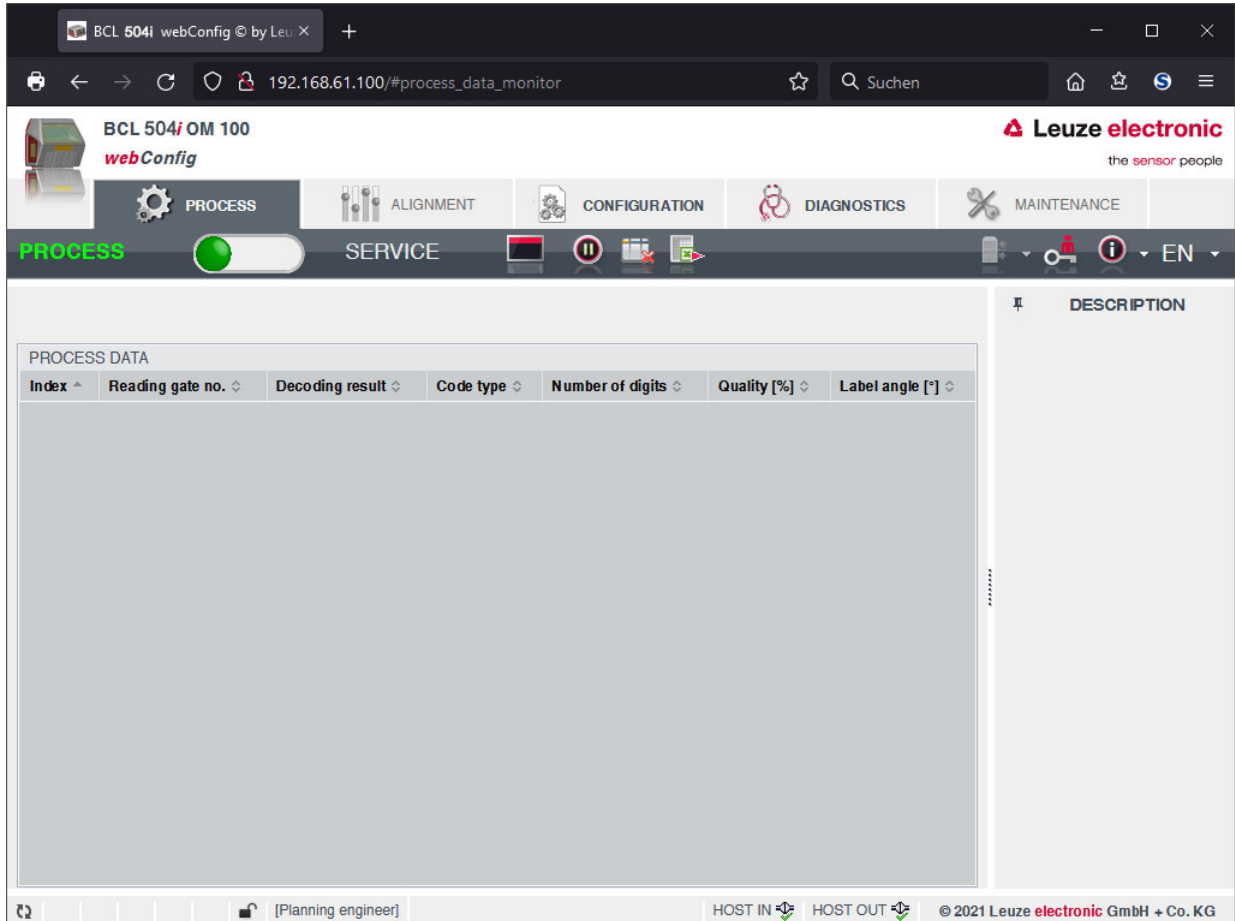


Figure 9.1: The start page of the webConfig tool

NOTE



The webConfig tool is completely contained in the firmware of the device. Depending on firmware version, the start page may vary from that shown above.

The individual parameters are – where useful – graphically displayed in order to better illustrate the meaning of the what are often perceived as abstract parameters.

The result is an easy-to-use and practically-oriented user interface!

9.4 Short description of the webConfig tool

The webConfig tool has 5 main menus:

- **Process**
with the current read bar code information.
- **Alignment**
for manually starting read processes and for aligning the bar code reader. The results of the read processes are displayed immediately. As a result, this menu item can be used to determine the optimum installation location.
- **Configuration**
for adjusting decoding, for data formatting and output, switching inputs/outputs, communication parameters and interfaces, etc. ...
- **Diagnostics**
for event logging of warnings and errors
- **Maintenance**
for updating the firmware.

The user interface of the webConfig tool is largely self-explanatory.

9.4.1 Module overview in the Configuration menu

The adjustable parameters of the device are clustered in modules in the Configuration menu.

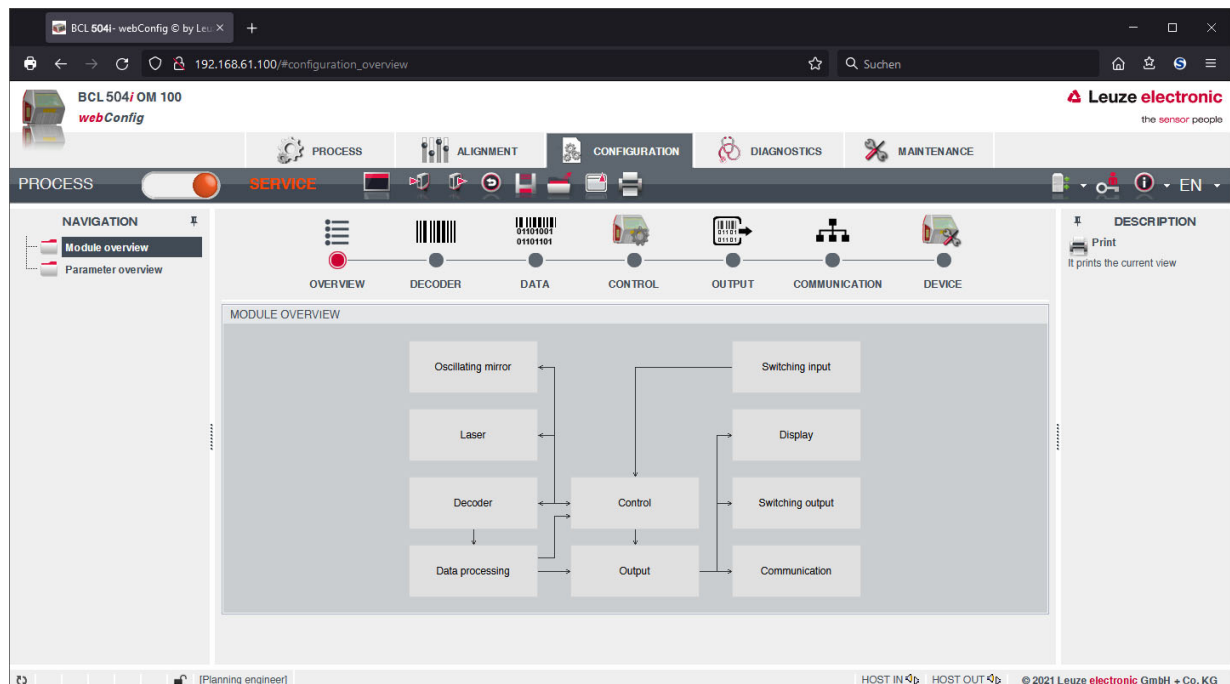


Figure 9.2: Module overview in the webConfig tool

NOTE




The webConfig tool is completely contained in the firmware of the device. Depending on firmware version, the module overview may vary from that shown above.

The individual modules and their relationships to one another are graphically displayed in the module overview. The display is context sensitive, i.e. click a module to directly access the corresponding submenu.


An overview of the modules:

- **Decoder**
Definition of code types, code-type features and number of digits of the labels that are to be decoded
- **Data processing**
Filtering and processing of the decoded data
- **Output**
Sorting of the processed data and comparison with reference codes
- **Communication**
Formatting of the data for output via the communication interfaces
- **Control**
Activation/deactivation of decoding
- **Switching input**
Activation/deactivation of read processes
- **Switching output**
Definition of events which activate/deactivate the switching output
- **Display**
Formatting of the data for output on the display
- **Oscillating mirror** (optional)
Setting oscillating mirror parameters

The webConfig tool is available for all bar code readers of the BCL 500/*i* series. Because configuration of the BCL 504/*i* PROFIBUS device is performed via the PROFIBUS, the module overview shown in the webConfig tool is, in this case, used only for displaying and checking the configured parameters.

The current configuration of your device is loaded upon startup of the webConfig tool. If you change the configuration via the PROFIBUS while the webConfig tool is running, you can use the  "Load parameter from device" button after making the changes to update the display in the webConfig tool. This button appears in the upper left in the center window area in all submenus of the Configuration main menu.

10 Starting up the device - Configuration

⚠ ATTENTION, LASER RADIATION – CLASS 1 LASER PRODUCT	
	Observe the safety notices (see chapter 2.5).

10.1 General information on the PROFIBUS implementation

10.1.1 Communication profile

The communication profile defines how participants serially transmit their data via the transmission medium. The device supports the communication profile for automation systems and Decentral Periphery -> **PROFIBUS DP**.

DP communication profile

The PROFIBUS DP communication profile is designed for efficient data exchange on the field level. Data exchange with the decentral devices occurs primarily cyclically. The necessary communication functions are defined in the DP base functions. The DP optionally offers acyclic communication services as well. These are used for configuring, operating, observing and alarm handling.

In order to be able to perform data exchange, services are defined which PROFIBUS DP differentiates between on the basis of the data access points transmitted in the telegram header.

The device profile is based on the PROFIBUS profile for identification systems.


10.1.2 Bus-access protocol

The PROFIBUS communication profiles (DP,FMS) use a uniform bus-access process. It is implemented by layer 2 of the OSI model. The bus-access control (MAC) defines the process for specifying the point in time at which a network device can transmit data. It must ensure that no more than one participant has permission to transmit at any given time. The PROFIBUS bus-access process includes the token-passing process and the master-slave process.

Table 10.1: PROFIBUS bus-access processes

Process	Description	BCL 504/
Token-passing process	With this process, the bus-access permission is distributed by means of a token. The participant obtains permission to transmit with the token. The token wanders between the master devices in the ring in a permanently defined time frame. This type of bus-access process is used for communication between the masters.	No
Master-slave process	Various slave devices are assigned to a master. The master can address the slaves which are assigned to it and fetch messages from them. The master always has the initiative.	Yes

Both processes can be mixed in order to create a multi-master system. The device functions both in a mono-master system as well as in a multi-master system.

NOTE	
	In 2007, the PROFIBUS DP was extended by the DPV2 specification. The specification will then also permit slave-slave communication. The device does not support this type of communication.

10.1.3 Device types

With the PROFIBUS DP, there are two types of master and one type of slave:

Table 10.2: PROFIBUS DP master and slave types

Device type	Description	BCL 504/
Class 1 master (DPM1)	Class 1 masters are defined for the user-data communication. (e.g., PLC, PC)	
Class 2 master (DPM2)	Class 2 masters are defined for commissioning purposes. Additional services facilitate easier configuration as well as device diagnosis.	
Slave	The slave is a peripheral device which makes available input data for the control and receives output data from the control.	X

NOTE



The device is defined as a slave in the device master file (GSD file) of the BCL 504/.

10.1.4 Extended DP functions

The PROFIBUS standard has been expanded (DPV1) and, in addition to the cyclic services, also offers acyclic services. These services operate in parallel with the cyclic user-data communication. Masters and slaves can use additional READ and WRITE functions as well as ALARM functions. This is intended especially for operation with an engineering tool (DP-master class 2, DPM2) in order to change parameters and read out status information during normal operation.

The acyclic services operate with lower priority. The functions are different for the various master classes.

Table 10.3: Services for DPV1 class 1 and slaves

Function	Slave SAP	Description	BCL 504/
MSAC1_Read	SAP51	Read datablock at slave	Yes ^{a)}
MSAC1_Write	SAP51	Write datablock at slave	Yes ^{a)}
MSAC1_Alarm_Acknowledge	SAP50	Alarm acknowledgment from master to slave	No
MSAC2_Read	51	Read datablock at slave	No
MSAC2_Write	51	Write datablock at slave	No
MSAC2_Initiate	49	Establish connection between DPM2 and slave	No
MSAC2_Abort	0 ... 48	Establish connection between DPM2 and slave	No
MSAC1_Data_Transport	0 ... 48	Write data to slave and read data from slave in a service cycle	No

a) For I&M functionality

NOTE



All expanded services are **not** implemented for the first PROFIBUS profile of the device.

10.1.5 Automatic baud rate detection

The PROFIBUS implementation of the device features automatic baud rate detection. The device uses this function and offers no possibility for manual or permanent adjustment. The following baud rates are supported:

Table 10.4: Baud rates


Baud rate kbit/s	9.6	19.2	45.45	93.75	187.5	500	1500	3000	6000	12000
------------------	-----	------	-------	-------	-------	-----	------	------	------	-------

Automatic baud rate detection is indicated in the device master file of the device: **Auto_Baud_supp = 1**

10.2 Measures to be performed prior to the initial commissioning

🔧 Before commissioning, familiarize yourself with the operation and configuration of the device.

- ⚡ Before connecting the supply voltage, recheck all connections and ensure that they have been properly made.

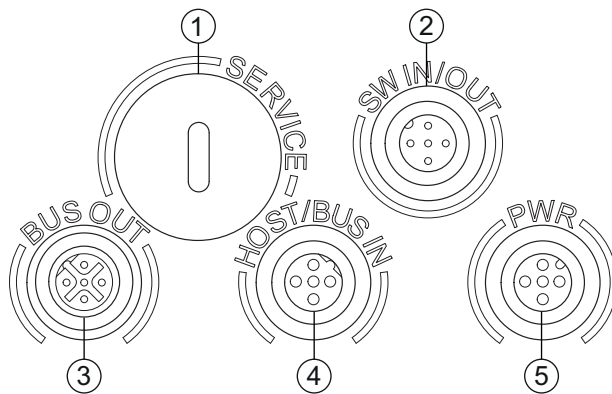

- 1 Service, USB socket, type A
- 2 SW In/Out, M12 socket (A-coded)
- 3 BUS OUT, M12 socket (B-coded)
- 4 Host/BUS IN, M12 socket (B-coded)
- 5 PWR, M12 connector (A-coded)

Figure 10.1: Connections of the device

- ⚡ Check the applied voltage. It must be in the range between +10V ... 30 V DC.

Connecting the functional earth FE

- ⚡ Ensure that the functional earth (FE) is connected correctly.

NOTE



Unimpaired operation is only guaranteed when the functional earth is connected properly. All electrical disturbances (EMC couplings) are discharged via the functional earth connection.

10.3 Address setting

10.3.1 Setting the device address on the display

The display of the device has an important function for setting the PROFIBUS address. The PROFIBUS address is set there, i.e., the respective station number of the bus participant.

NOTE



The address can only be set via the display if the parameter enable is active (see chapter 8.6, section "Parameter enable" on page 50).

The set address must be ≥ 0 and < 126 . Each bus participant thereby automatically knows that it is a slave in the PROFIBUS with its specific address and is initialized and queried by the PLC.

The PROFIBUS permits an address range from 0 to 126. Address 126 must not be used for data communication. It may only be used temporarily for commissioning. The default address is 126.

The address must be assigned individually for each bar code reader of type BCL 504*i*; this can be performed by means of an entry on the display or via the webConfig tool.

NOTE






The device does not permit any address assignment via the PROFIBUS!

Proceed as follows to set the address via the display:

NOTE




Use the navigation buttons   to move through the menu. Activate the desired selection with the enter button .

- ⚡ In the main menu, select the **Parameter menu**.

- ↵ Select the **PROFIBUS** menu item.
- ↵ Press the enter button to enter the menu.
- ↵ Select the **PROFIBUS address** menu item.
- ↵ Press the enter button to enter the menu.
- ↵ Set the desired **PROFIBUS address**.
- ↵ Select the **Save** menu item.
- ↵ Press the enter button in order to save the set **PROFIBUS address**.

After saving the **PROFIBUS address**, the device performs a restart and then resumes with the bar code read menu.

- ↵ In the upper right part of the display, check the address that you set.


NOTE	
	Permitted values for the PROFIBUS address are 0 ... 125. Make certain that you assign each PROFIBUS participant a different PROFIBUS address.

All other parameters required for the reading task, such as setting the code type and number of digits, etc., are set using the engineering tool of the PLC with the aid of the various available modules (see chapter 10.4).

10.4 Commissioning via the PROFIBUS

10.4.1 General information

The device is designed as a PROFIBUS slave device. The functionality of the device is defined via parameter sets which are clustered in modules. The modules are included in a GSD file, which is supplied as an integral part of the device. By using a user-specific configuration tool, such as, e.g., Simatic Manager for the programmable logic control by Siemens, the required modules are integrated into a project during commissioning and its settings and parameters are adjusted accordingly. These modules are provided by the GSD file.

NOTE	
	The reception of the input data and the sending of the output data are described from the perspective of the control (IO controller).

10.4.2 Preparing the control for consistent data transmission

During programming the control system must be prepared for consistent data transmission. This varies from control to control. The following possibilities are available for the Siemens control systems.

S7

The specific function blocks **SFC 14** for input data and **SFC 15** for output data must be integrated in the program. These are standard function blocks and are used to facilitate consistent data transmission.

10.4.3 General information on the GSD file

The GSD file can be found at www.leuze.de in the download area for the respective device model.

All data in modules required for operating the device is described in this file. These are input and output data and device parameters for the functioning of the device and the definition of the control and status bits.

If parameters are changed, e.g., in the project tool, these changes are stored on the PLC side in the project, not in the GSD file. The GSD file is a certified integral part of the device and must not be changed manually. The file is not changed by the system either.

The functionality of the device is defined via parameter sets. The parameters and their functions are structured in the GSD file using modules. A user-specific configuration tool is used during PLC program creation to integrate the required modules and configure them appropriately for their respective use. During operation of the device on the PROFIBUS all parameters are set to default values. If these parameters are not changed by the user, the device functions with the default settings delivered by Leuze electronic.

For the default settings of the device, please refer to the following module descriptions.

NOTE

Please note that the set data is overwritten by the PLC!
Some controls make available a so-called "universal module". This module must not be activated for the device!

From the perspective of the device, a distinction is made between PROFIBUS parameters and internal parameters. PROFIBUS parameters are all parameters that can be changed via the PROFIBUS and are described in the following modules. Internal parameters, on the other hand, can only be changed via a service interface and retain their value even following a PROFIBUS parameterization.

During the configuration phase, the device receives a parameter telegram from the master. Before this is evaluated and the respective parameter values are set, all PROFIBUS parameters are reset to default values. This ensures that the parameters of modules that are not selected are set to the default values.

NOTE

This does not affect modules 1-4 for the code table extension. By default, all but the first code table entry are locked. If "no code" is selected here, all subsequent code tables are deactivated (see chapter 10.6.1 "Modules 1-4 – Code table extensions 1 to 4").

10.4.4 Permanently defined parameters/device parameters

On the PROFIBUS, parameters may be stored in modules or may be defined permanently in a PROFIBUS participant.

Depending on the configuration tool, the permanently defined parameters are called "common" parameters or device-specific parameters.

These parameters must always be present. They are defined outside of the modules and are permanently anchored in the telegram header.

Hilscher master control

In SyCon, the permanently defined parameters are set under **Slave Configuration -> Parameter Data -> Common**. The module parameters are set under **Slave Configuration -> Parameter Data -> Module**.

Simatic S7 control

In SIMATIC Manager, the permanently defined parameters are set via object properties of the device. The module parameters are set via the module list of the selected device. By selecting the project properties of a module, the respective parameters may be set if required.

The following list contains the parameters that are permanently defined in the device but are configurable. These parameters always exist and are available independent of the modules.

Table 10.5: "Common" parameters

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Profile number	Number of the activated profile. For devices, constant with value 0.	0	Byte	0 ... 255	0	-
Code type 1	Released code type; no code means that all subsequent code tables are also deactivated. The valid number of digits also depends on the code type.	1.0 ... 1.5	BitArea	0: No code 1: 2/5 Interleaved 2: Code39 3: Code32 6: UPC, UPCE 7: EAN8, EAN13 8: Code128 10: EAN Addendum 11: Codabar 12: Code93 13: GS1 DataBar Omni-directional 14: DataBar Limited 15: GS1 DataBar Expanded	0	-
Number-of-digits mode	Specifies how the subsequent numbers of digits are to be interpreted.	2.6	Bit	0: Enumeration 1: Range	0	-
Number of digits 1	Decodable number of digits; in the case of a range, this number defines the lower limit. ^{a)}	2.0 ... 2.5	UNSIGNED8	0 ... 63	1	-

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Number of digits 2	Decodable number of digits; in the case of a range, this number defines the upper limit.	3	UNSIGNED8	0 ... 63	0	-
Number of digits 3	Decodable number of digits in the enumeration mode.	4	UNSIGNED8	0 ... 63	0	-
Number of digits 4	Decodable number of digits in the enumeration mode.	5	UNSIGNED8	0 ... 63	0	-
Number of digits 5	Decodable number of digits in the enumeration mode.	6	UNSIGNED8	0 ... 63	0	-
Reading reliability	Min. reading reliability to be achieved in order to output a read code.	7	UNSIGNED8	1 ... 100	4	-
Check digit method	Used check digit procedure.	8.0 ... 8.6	BitArea	0: Standard check digit evaluation 1: No check digit verification 2: MOD10 Weight 3 3: MOD10 Weight 2 4: MOD10 Weight 4_9 5: MOD11 Cont 6: MOD43 7: MOD16	0	-
Check digit output	Turns the check digit output on or off.	8.7	Bit	Check digit output 0: Standard 1: Not standard	0	-
Code type 2	See code type 1	9.0 ... 9.5	BitArea	See code type 1	0	-
Number-of-digits mode 2	Specifies how the subsequent numbers of digits are to be interpreted.	10.6	Bit	0: Enumeration 1 : Range	0	-
Number of digits 2.1	Decodable number of digits; in the case of a range, this number defines the lower limit.	10.0 ... 10.5	UNSIGNED8	0 ... 63	0	-
Number of digits 2.2	Decodable number of digits; in the case of a range, this number defines the upper limit.	11	UNSIGNED8	0 ... 63	0	-
Number of digits 2.3	Decodable number of digits in the enumeration mode.	12	UNSIGNED8	0 ... 63	0	-
Number of digits 2.4	Decodable number of digits in the enumeration mode.	13	UNSIGNED8	0 ... 63	0	-
Number of digits 2.5	Decodable number of digits in the enumeration mode.	14	UNSIGNED8	0 ... 63	0	-
Reading reliability 2	Min. reading reliability to be achieved in order to output a read code.	15	UNSIGNED8	1 ... 100	4	-
Check digit method 2	Used check digit procedure.	16.0 ... 16.6	BitArea	0: Standard check digit evaluation 1: No check digit verification 2: MOD10 Weight 3 3: MOD10 Weight 2 4: MOD10 Weight 4_9 5: MOD11 Cont 6: MOD43 7: MOD16	0	-
Check digit output 2	Turns the check digit output on or off	16.7	Bit	Check digit output 0: Standard 1: Not standard	0	-
Code type 3	See code type 1	17.0 ... 17.5	BitArea	See code type 1	0	-
Number of digits mode 3	Specifies how the subsequent numbers of digits are to be interpreted.	18.6	Bit	0: Enumeration 1 : Range	0	-
Number of digits 3.1	Decodable number of digits; in the case of a range, this number defines the lower limit.	18.0 ... 18.5	UNSIGNED8	0 ... 63	0	-
Number of digits 3.2	Decodable number of digits; in the case of a range, this number defines the upper limit.	19	UNSIGNED8	0 ... 63	0	-

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Number of digits 3.3	Decodable number of digits in the enumeration mode.	20	UNSIGNED8	0 ... 63	0	-
Number of digits 3.4	Decodable number of digits in the enumeration mode.	21	UNSIGNED8	0 ... 63	0	
Number of digits 3.5	Decodable number of digits in the enumeration mode.	22	UNSIGNED8	0 ... 63	0	-
Reading reliability 3	Min. reading reliability to be achieved in order to output a read code.	23	UNSIGNED8	1 ... 100	4	-
Check digit method 3	Used check digit procedure.	24.0... 24.6	BitArea	0: Standard check digit evaluation 1: No check digit verification 2: MOD10 Weight 3 3: MOD10 Weight 2 4: MOD10 Weight 4_9 5: MOD11 Cont 6: MOD43 7: MOD16	0	-
Check digit output 3	Turns the check digit output on or off	24.7	Bit	Check digit output 0: Standard 1: Not standard	0	-
Code type 4	See code type 1	25.0 ... 25.5	BitArea	See code type 1	0	-
Number-of-digits mode 4	Specifies how the subsequent numbers of digits are to be interpreted.	26.6	Bit	0: Enumeration 1 : Range	0	-
Number of digits 4.1	Decodable number of digits; in the case of a range, this number defines the lower limit.	26.0 ... 26.5	UNSIGNED8	0 ... 63	0	-
Number of digits 4.2	Decodable number of digits; in the case of a range, this number defines the upper limit.	27	UNSIGNED8	0 ... 63	0	-
Number of digits 4.3	Decodable number of digits in the enumeration mode.	28	UNSIGNED8	0 ... 63	0	-
Number of digits 4.4	Decodable number of digits in the enumeration mode.	29	UNSIGNED8	0 ... 63	0	
Number of digits 4.5	Decodable number of digits in the enumeration mode.	30	UNSIGNED8	0 ... 63	0	-
Reading reliability 4	Min. reading reliability to be achieved in order to output a read code.	31	UNSIGNED8	1 ... 100	4	-
Check digit method 4	Used check digit procedure.	32.0... 32.6	BitArea	0: Standard check digit evaluation 1: No check digit verification 2: MOD10 Weight 3 3: MOD10 Weight 2 4: MOD10 Weight 4_9 5: MOD11 Cont 6: MOD43 7: MOD16	0	-
Check digit output 4	Turns the check digit output on or off	32.7	Bit	Check digit output 0: Standard 1: Not standard	0	-

a) Specifying a 0 for the number of digits means that this entry is ignored for the device.

Parameter length

33 bytes

Input data

None

Output data

None

Note on number of digits

If 0 is specified in a field for the number of digits, the corresponding parameter is ignored by the device firmware.

Example:

For a code table entry x, the two code lengths 10 and 12 are to be enabled. For this purpose, the following number of digit entries are necessary:

- Number of digits mode x = 0 (enumeration)
 - Number of digits x.1 = 10
 - Number of digits x.2 = 12
 - Number of digits x.3 = 0
 - Number of digits x.4 = 0
 - Number of digits x.5 = 0

10.5 Overview of the project modules

In the current version, a total of 56 modules are available for use. A device module (see chapter 10.4.4 "Permanently defined parameters/device parameters") is used for basic parameterization of the device and is permanently integrated into the project. Further modules may be included into the project according to requirements and application.

The modules fall into the following categories:

- Parameter module for the parameterization of the device.
- Status or control modules that influence the input/output data.
- Modules that may include both parameters and control or status information.


A PROFIBUS module defines the existence and meaning of the input and output data. In addition, it defines the necessary parameters. The arrangement of the data within a module is defined.

The composition of the input/output data is defined via the module list.

The device interprets the incoming output data and triggers the appropriate reactions in the device. The interpreter for processing the data is adapted to the module structure during initialization.

The same applies for the input data. Using the module list and the defined module properties, the input data string is formatted and referenced to the internal data.

During cyclic operation, the input data is then passed on to the master.

NOTE	
	The modules can be grouped together in any order in the engineering tool. The device offers 56 different modules. Each of these modules may only be selected once; otherwise, the device ignores the configuration. The device checks its max. permissible number of modules. In addition, it checks the max. permissible total length (244 bytes each) of the input and output data over all selected modules. The specific limits of the individual modules of the device are declared in the GSD file.

The following module overview shows the characteristics of the individual modules:


Table 10.6: Module overview

Module	Description	Module identifier	Parameters ^{a)}	Output data	Input data
Decoder					
Code table extension 1	Extension of the existing code table	1	8	0	0
Code table extension 2	Extension of the existing code table	2	8	0	0
Code table extension 3	Extension of the existing code table	3	8	0	0
Code table extension 4	Extension of the existing code table	4	8	0	0
Code type properties	The module permits changing the muted zones as well as the line-gap ratios	5	6	0	0
Code reconstruction technology	Support of code reconstruction technology	7	3	0	0
Control					
Activations	Control bits for activation of the standard reading operation	10	1	0	1

Module	Description	Module identifier	Parameters ^{a)}	Output data	Input data
Reading gate control	Extended control of the reading gate	11	6	0	0
Multi-label	Output of several bar codes per reading gate	12	2	1	0
Fragmented read result	Transmission of the read results in the fragmented mode	13	1	2	0
Interlinked read result	Interlinking of the individual read results within one reading gate	14	1	0	0
Result format					
Decoder state	Status display – decoding	20	0	1	0
Decoding result 1	Bar code information 4 bytes max.	21	0	6	0
Decoding result 2	Bar code information 8 bytes max.	22	0	10	0
Decoding result 3	Bar code information 12 bytes max.	23	0	14	0
Decoding result 4	Bar code information 16 bytes max.	24	0	18	0
Decoding result 5	Bar code information 20 bytes max.	25	0	22	0
Decoding result 6	Bar code information 24 bytes max.	26	0	26	0
Decoding result 7	Bar code information 28 bytes max.	27	0	30	0
Data formatting	Specification for formatting the data output	30	23	0	0
Reading gate number	Number of the reading gate since system start-up	31	0	2	0
Number of scans per reading gate	Number of scans per reading gate	32	0	2	0
Code position	Relative position of the bar code label in the scanning beam	33	0	2	0
Reading reliability	Calculated reading reliability for the transmitted bar code	34	0	2	0
Scans per bar code	Number of scans between the first and the last time of detecting the bar code	35	0	2	0
Scans with information	Number of scans with processed information	36	0	2	0
Decoding quality	Quality of the read result	37	0	1	0
Code direction	Orientation of the bar code	38	0	1	0
Number of digits	Number of digits in the bar code	39	0	1	0
Code type	Bar code type	40	0	1	0
Code position in the swivel range	Code position in the swivel range of an oscillating mirror device	41	0	2	0
Data Processing					
Characteristics filter	Parameterization of the characteristics filter	50	TBD	TBD	TBD
Data filtering	Parameterization of the data filtering	51	60	0	0
Segmentation acc. to the EAN process	Activation and parameterization of the segmentation acc. to the EAN process	52	27	0	0
Segmentation via fixed positions	Activation and parameterization of the segmentation via fixed positions	53	37	0	0
Segmentation acc. to identifier and separator	Activation and parameterization of the segmentation acc. to identifier and separator	54	29	0	0
String handling parameter	Definition of placeholder characters for bar code segmentation, filtering, completion and reference code processing	55	3	0	0
Device-Functions					
Device status	Display of the device status as well as control bits for reset and standby	60	0	1	1
Laser control	Switch-on and switch-off positions of the laser	61	4	0	0
Display	Display of parameter setting	62	3	0	0
Alignment	Alignment mode	63	0	1	1
Oscillating mirror	Parameterization of the oscillating mirror	64	6	0	0
Deflecting mirror	Parameterization of the deflecting mirror	65	2	0	0
Switching inputs/outputs SWIO					
Switching input/output SWIO1	Parameter settings SWIO1	70	23	0	0
Switching input/output SWIO2	Parameter settings SWIO2	71	23	0	0

Module	Description	Module identifier	Parameters ^{a)}	Output data	Input data
Switching input/output SWIO3	Parameter settings SWIO3	72	23	0	0
Switching input/output SWIO4	Parameter settings SWIO4	73	23	0	0
SWIO status and control	Handling of switching input and switching output signals	74	0	2	2
Data output					
Sorting	Sorting support	80	3	0	0
Reference code comparator 1	Definition of the operation mode of reference code comparator 1	81	8	0	0
Reference code comparator 2	Definition of the operation mode of reference code comparator 2	82	8	0	0
Reference code comparison pattern 1	Definition of the 1st comparison pattern	83	31	0	0
Reference code comparison pattern 2	Definition of the 2nd comparison pattern	84	31	0	0
Special functions					
Status and control	Grouping of multiple status and control bits	90	0	1	0
AutoReflAct	Automatic reflector activation	91	2	0	0
AutoControl	Automatic monitoring of the reading properties	92	3	1	0

a) The number of parameter bytes does not include the constant module number, which is always transmitted in addition.

NOTE	
	For the standard case, at least module 10 (activation) and one of modules 21 ... 27 (decoding result 1 ... 7) should be integrated.

10.6 Decoder modules

10.6.1 Modules 1-4 – Code table extensions 1 to 4

Description

The modules extend the code type tables of the device parameters and permit the additional definition of further 4 code types together with the respective number of digits.

Parameter

Table 10.7: Parameters for modules 1-4

Parameter	Description	Rel. addr.	Data type	Value range	Default	Unit
Code type	Released code type; no code means that all subsequent code tables are also deactivated. The valid number of digits also depends on the code type.	0.0 ... 0.5	BitArea	0: No code 1: 2/5 Interleaved 2: Code39 3: Code32 6: UPC, UPCE 7: EAN8, EAN13 8: Code128 10: EAN Addendum 11: Codabar 12: Code93 13: GS1 DataBar Omnidirectional 14: DataBar Limited 15: GS1 DataBar Expanded	0	-
Number of digits mode	Interpretation of the number of digits.	1.6	Bit	0: Enumeration 1 : Range	0	-
Number of digits 1 ^{a)}	Decodable number of digits; in the case of a range, this number defines the lower limit.	1.0 ... 1.5	UNSIGNED8	0 ... 63	0	-
Number of digits 2	Decodable number of digits; in the case of a range, this number defines the upper limit.	2	UNSIGNED8	0 ... 63	0	-

Parameter	Description	Rel. addr.	Data type	Value range	Default	Unit
Number of digits 3	Decodable number of digits in the enumeration mode.	3	UNSIGNED8	0 ... 63	0	-
Number of digits 4	Decodable number of digits in the enumeration mode.	4	UNSIGNED8	0 ... 63	0	-
Number of digits 5	Decodable number of digits in the enumeration mode.	5	UNSIGNED8	0 ... 63	0	-
Reading reliability	Min. reading reliability to be achieved in order to output a read code.	6	UNSIGNED8	1 ... 100	4	-
Check digit method	Used check digit procedure.	7.0 ... 7.6	BitArea	0: Standard check digit evaluation 1: No check digit verification 2: MOD10 Weight 3 3: MOD10 Weight 2 4: MOD10 Weight 4_9 5: MOD11 Cont 6: MOD43 7: MOD16	0	-
Check digit output	Turns the check digit output on or off. Standard means that the check digit is transmitted according to the applicable standard for the selected code type. If no check digit transmission is intended for the selected code type, then Standard means that the check digit is not transmitted and Not Standard means that the check digit is transmitted anyway.	7.7	Bit	Check digit output 0: Standard 1: Not standard	0	-

a) Refer to the notice on the number of digits (see chapter 10.4.4 "Permanently defined parameters/device parameters").

Parameter length

8 bytes

Input data

None

Output data

None

10.6.2 Module 5 – Code type features (symbology)

Description

The module defines extended features for various code types.

Parameter

Table 10.8: Parameters for module 5

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Maximum width deviation	Max. permitted width deviation of a character in percent of the directly adjacent character.	0	UNSIGNED8	0 ... 100	15	%
Code 39 max. element ratio	Permissible ratio between maximum and minimum element of Code 39.	1	UNSIGNED8	0 ... 255	8	-
Code 39 character gap	Permissible ratio for the gap between two characters for Code 39.	2	UNSIGNED8	0 ... 255	3	-
Codabar max. element ratio	Permissible ratio between maximum and minimum element of the Codabar code.	3	UNSIGNED8	0 ... 255	8	-
Codabar character gap	Permissible ratio for the gap between two characters for the Codabar code.	4	UNSIGNED8	0 ... 255	3	-
Codabar Monarch Mode	The decoding of a Monarch bar code as Codabar bar code can be switched on or off.	5.0	Bit	0: Off 1: On	0	-

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Codabar start/stop character	Switches the transmission of a start and stop character for the Codabar code on and off.	5.1	Bit	0: Off 1: On	0	-
UPC-E extension	Switches the extension of a UPC-E code to a UPC-A result on and off.	5.4	Bit	0: Off 1: On	0	-
Code 128: activate EAN header	Switches the output of the EAN header on and off.	5.5	Bit	0: Off 1: On	0	-
Code 39 conversion	Defines the conversion method used for Code 39.	5.6 ... 5.7	BitArea	0: Standard (usual conversion method) 1: Standard ASCII (combination of standard method and ASCII method) 2: ASCII (This conversion method uses the entire ASCII character set)	0	-

Parameter length

6 byte

Input data

None

Output data

None

10.6.3 Module 7 – Code reconstruction technology**Description**

Module for supporting the code reconstruction technology.

Parameter

Table 10.9: Parameters for module 7

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Maximum width ratio	The maximum width ratio is used to determine the light zones. The light zones identify the beginning or end of patterns.	0	UNSIGNED8	0 ... 255	13	-
Minimum number of elements	A pattern must have at least this minimum number of duo-elements, i.e. no patterns which have fewer duo-elements.	1 ... 2	UNSIGNED16	2 ... 400	6	-
Code fragment mode	This parameter can be used to switch CRT mode on and off.	3.0	Bit	0: Switched off 1: Switched on	1	-
Processing end at end of label	If this parameter is set, a decoded bar code is only completely decoded after the scanning beam has exited the entire bar code.	3.2	Bit	0: Switched off 1: Switched on	0	-

Parameter length

4 byte

Input data

None

Output data

None

Processing end at end of label:

If this parameter is set, a decoded bar code is only completely decoded after the scanning beam has exited the entire bar code. This mode is useful if the quality of the bar code is to be assessed, since more scans are now available for the quality evaluation of the bar code.

This parameter should be set if the AutoControl function is activated (see chapter 10.15.3 "Module 92 – AutoControl"). If the parameter is not set, the bar code is immediately decoded and processed further as soon as all necessary bar code elements are available.

10.7 Control modules

10.7.1 Module 10 – Activations

Description

The module defines the control signals for the reading operation of the bar code reader. It is possible to select between standard reading operation and handshake operation.

In handshake operation, the control must acknowledge the data reception via the ACK bit before the new data is written into the input area.

After acknowledging the last decoding result, the input data is reset (filled with zeros).

Parameter

Table 10.10: Parameters for module 10

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Mode	The parameter defines the mode in which the activation module is operated.	0	UNSIGNED8	0: Without ACK ^{a)} 1: With ACK ^{b)}	0	-

a) corresponds to BCL34 module 18

b) corresponds to BCL34 module 19

Parameter length

1 byte

Input data

None


Output data

Table 10.11: Output data for module 10

Output data	Description	Addr.	Data type	Value range	Initial value	Unit
Reading gate	Signal for activating the reading gate	0.0	Bit	1 -> 0: Reading gate off 0 -> 1: Reading gate active	0	-
	Free	0.1	Bit		0	-
	Free	0.2	Bit		0	-
	Free	0.3	Bit		0	-
Data acknowledgment	This control bit signals that the transmitted data have been processed by the master. Only relevant in handshake mode (with ACK).	0.4	Bit	0 -> 1: Data has been processed by the master 1 -> 0: Data has been processed by the master	0	-
Data reset	Deletes decoding results that may have been stored and resets the input data of all modules.	0.5	Bit	0 -> 1: Data reset	0	-
	Free	0.6	Bit			
	Free	0.7	Bit			

Output data length

1 byte consistent

NOTE	
	If several bar codes are decoded in sequence without the acknowledge mode having been activated, the input data of the result modules are overwritten with the respective most recently read decoding result. Thus, to avoid a data loss in the control in such a case, mode 1 (With ACK) should be activated. If multiple decoding results occur within one reading gate, it is possible - dependent on the cycle time - that only the last decoding result is visible on the bus. In this case, the acknowledge mode MUST be used. There is otherwise a risk of data loss. Multiple, individual decoding results may then occur within one reading gate if module 12 – Multi-label (see chapter 10.7.3) or one of the identifier modules (see chapter 10.10) is used.

Data reset behavior:

If the data reset control bit is activated, the following actions are carried out:

1. Deletion of decoding results that may still be stored.
2. Reset of module 13 - fragmented read result (see chapter 10.7.4), i.e., even a partially transmitted read result is deleted.
3. Deletion of the input data areas of all modules. Exception: The input data of module 60 - device status (see chapter 10.11.1) is not deleted. For the status byte of decoding result modules 20 ... 27 (see chapter 10.8.2), the two toggle bytes and the reading gate status remain unchanged.

10.7.2 Module 11 – Reading gate control**Description**

With the module, the reading gate control of the bar code reader can be adapted to the application. With different parameters from the bar code reader, a time-controlled reading gate may be created. In addition, it defines the internal criteria for the reading gate end and the completeness inspection.

Parameter

Table 10.12: Parameters for module 11

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Automatic reading gate repeat	The parameter defines the automatic repeat of reading gates.	0	Byte	0: No 1: Yes	0	-
Reading gate end mode/completeness mode	This parameter can be used to configure the completeness inspection.	1	Byte	0: Independent of decoding, i.e., the reading gate is not terminated prematurely. 1: Dependent on decoding, i.e. the reading gate is terminated if the configured number of bar codes to be decoded has been reached. ^{a)} 2: DigitRef table-dependent, i.e., the reading gate is terminated if each bar code stored in the code type table has been decoded. ^{b)} 3: Ident list dependent, i.e., the reading gate is terminated if each identifier stored in a list could be segmented via a respective bar code segmentation. ^{c)} 4: Reference code comparison, i.e., the reading gate is terminated if a positive reference code comparison has taken place. ^{d)}	1	-
Restart delay	The parameter specifies a time after which a reading gate is restarted. The device generates its own periodic reading gate. The configured time is active only if the automatic reading gate repeat is switched on.	2	UNSIGNED16	0 ... 65535	0	ms
Max. reading gate time when scanning	The parameter switches off the reading gate after the set time has elapsed, thus limiting the reading gate to the set period.	4	UNSIGNED16	1 ... 65535 0: Reading gate deactivation is switched off.	0	ms

a) see chapter 10.7.2 "Module 11 – Reading gate control"

b) Corresponds to the settings carried out via the device module (see chapter 10.4.4, see chapter 10.6.1).

c) see chapter 10.10, modules 52-54 Identifier filter string

d) see chapter 10.14.3, see chapter 10.14.4

Parameter length

6 byte

Input data

None

Output data

None

10.7.3 Module 12 – Multi-label

Description

The module permits the definition of multiple bar codes with a different number of digits and/or code types in the reading gate and provides the necessary input data.

Parameter

Table 10.13: Parameters for module 12

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Minimum number of bar codes	Minimum number of different bar codes scanned for per reading gate.	0	UNSIGNED8	0 ... 64	1	-
Maximum number of bar codes	Maximum number of different bar codes scanned for per reading gate. Only if this number of bar codes has been reached, the reading gate is terminated prematurely. ^{a)}	1	UNSIGNED8	0 ... 64	1	-

a) see chapter 10.7.2, parameter "reading gate termination mode"

Parameter length

2 bytes

Input data

Table 10.14: Input data for module 12

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Number of decoding results	Number of decoding results which have not been fetched.	0	UNSIGNED8	0 ... 255	0	-

Input data length

1 byte


Output data

None

This module is used to set the maximum and minimum number of bar codes which are to be decoded within a reading gate.

If parameter "minimum number of bar codes" = 0, it is not taken into account at the decoder control. If it is not equal to 0, this means that the bar code reader expects a number of labels within the set range.

If the number of decoded bar codes is within the set limits, no additional "No Reads" are output.

NOTE	
	When using this module, the ACK mode should be activated (see chapter 10.7.1 "Module 10 – Activations", "Mode" parameter). Otherwise there is a risk of losing decoding results if the control is not fast enough.

10.7.4 Module 13 – Fragmented read result**Description**

The module defines the transfer of fragmented reading results. To occupy few I/O data, the read results may be split into several fragments with this module. The fragments can then be transmitted one after another with a handshake.

Parameter

Table 10.15: Parameters for module 13

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Fragment length	The parameter defines the maximum length of the bar code information per fragment.	0	UNSIGNED8	1 ... 28	0	-

Parameter length

1 byte

Input data

Table 10.16: Input data for module 13

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Fragment number	Current fragment number	0.0 ... 0.3	Bitarea	0 ... 15	0	-
Remaining fragments	Number of fragments which still have to be read for a complete result.	0.4 ... 0.7	Bitarea	0 ... 15	0	-
Fragment size	Fragment length, always corresponds to the configured fragment length, except for the last fragment.	1	UNSIGNED8	0 ... 28	0	-

Input data length

2 byte consistent

Output data

None

10.7.5 Module 14 – Interlinked read result**Description**

This module is used to switch to a mode in which all decoding results within one reading gate are combined into a single read result.

Parameter

Table 10.17: Parameters for module 14

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Separator character	This parameter is used to define a delimiter that is inserted between two individual decoding results.	0	UNSIGNED8	1 ... 255 0: No delimiter is used.	','	-

Parameter length

1 byte

Input data

None

Output data

None

NOTE

An interlinked read result also requires module 12 – Multi-label. In this mode, the additional information transmitted in modules 31ff relates to the last decoding result in the chain.

10.8 Result format

In the following, various modules for the output of decoding results are listed. They have the same structure but different output lengths. The PROFIBUS module concept does not cater for modules of variable data length.

NOTE

Modules 20 ... 27 are, thus, to be understood as alternatives and should not be used in parallel. Modules 30 ... 40, on the other hand, can be freely combined with the decoding result modules.

10.8.1 Module 20 – Decoder state**Description**

The module indicates the state of the decoding and of the automatic decoder configuration.

Parameter

None

Input data

Table 10.18: Input data for module 20

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Reading gate state	The signal indicates the current state of the reading gate ^{a)} .	0.0	Bit	0: Off 1: On	0	-
New result	The signal indicates whether a new decoding has occurred.	0.1	Bit	0: No 1: Yes	0	-
Result state	The signal indicates whether the bar code has been read successfully.	0.2	Bit	0: Successful reading 1: NOREAD	0	-
Further results in the buffer	The signal indicates whether further results are in the buffer.	0.3	Bit	0: No 1: Yes	0	-
Buffer overflow	The signal indicates that result buffers are occupied and the decoder rejects data.	0.4	Bit	0: No 1: Yes	0	-
New decoding	Toggle bit indicates whether decoding has occurred.	0.5	Bit	0->1: New result 1->0: New result	0	-
Result state	Toggle bit indicates that the bar code has not been read.	0.6	Bit	0->1: NOREAD 1->0: NOREAD	0	-
Waiting for acknowledgment	This signal represents the internal state of the control.	0.7	Bit	0: Base state 1: Control waiting for acknowledgment from the PROFIBUS master	0	-

a) Attention: This does not necessarily correspond to the state at the time the bar code is scanned

Input data length

1 byte

Output data

None

Comments

The following bits are constantly updated, i.e. they are updated immediately after the respective event occurs:

Reading gate state

- Further results in the buffer
- Buffer overflow
- Waiting for acknowledgment

All other flags refer to the currently output decoding result.

If the input data is reset to the initial value, the following bits are deleted (see chapter 10.8.3 "Module 30 – Data formatting"):

- New result
- Result state

All others remain unchanged.

Data reset behavior:

Upon data reset the input data is deleted, except for the reading gate status and the two toggle bits (see chapter 10.7.1 "Module 10 – Activations").

10.8.2 Modules 21-27 – Decoding result**Description**

The module defines the transfer of the actually decoded reading results. The data is transmitted consistently over the entire range.

Parameter

None

Input data

Table 10.19: Input data for modules 21 ... 27

Module no.	Input data	Description	Addr.	Data type	Value range	Initial value	Unit
21 ... 27	Reading gate state	The signal indicates the current state of the reading gate. ^{a)}	0.0	Bit	0: Off 1: On	0	-
21 ... 27	New result	Signal indicates whether a new decoding result is present.	0.1	Bit	0: No 1: Yes	0	-
21 ... 27	Result state	Signal indicates whether the bar code has been read successfully.	0.2	Bit	0: Successful reading 1: NOREAD	0	-
21 ... 27	Further results in the buffer	Signal indicates whether further results are in the buffer.	0.3	Bit	0: No 1: Yes	0	-
21 ... 27	Buffer overflow	Signal indicates that result buffers are occupied and the decoder rejects data.	0.4	Bit	0: No 1: Yes	0	-
21 ... 27	New result	Toggle bit indicates that a new decoding result is present.	0.5	Bit	0->1: New result 1->0: New result	0	-
21 ... 27	Result state	Toggle bit indicates that the bar code has not been read.	0.6	Bit	0->1: NOREAD 1->0: NOREAD	0	-
21 ... 27	Waiting for acknowledgment	This signal represents the internal state of the control.	0.7	Bit	0: Base state 1: Control waiting for acknowledgment from the PROFIBUS master	0	-
21 ... 27	Bar code data length	Data length of the actual bar code information. ^{b)}	1	UNSIGNED8	0-48	0	-
21	Data	Bar code information with a length of consistently 4 bytes.	2..	4x UNSIGNED8	0-FFh	0	-
22	Data	Bar code information with a length of consistently 8 bytes.	2..	8x UNSIGNED8	0-FFh	0	-
23	Data	Bar code information with a length of consistently 12 bytes.	2..	12x UNSIGNED8	0-FFh	0	-
24	Data	Bar code information with a length of consistently 16 bytes.	2..	16x UNSIGNED8	0-FFh	0	-
25	Data	Bar code information with a length of consistently 20 bytes.	2..	20x UNSIGNED8	0-FFh	0	-
26	Data	Bar code information with a length of consistently 24 bytes.	2..	24x UNSIGNED8	0-FFh	0	-
27	Data	Bar code information with a length of consistently 28 bytes.	2..	28x UNSIGNED8	0-FFh	0	-

a) Attention: This does not necessarily correspond to the state at the time the bar code is scanned

b) If the bar code information (bar code and, possibly, other items such as the check sum) fits in the selected module width, this value reflects the length of the transmitted data. A value larger than the module width indicates a loss of information caused by a module width which has been selected too small.

Input data


2 bytes consistently + 4..28 bytes of bar code information depending on the module

Output data

None

Comments

The remarks for module 20 – decoder state, apply in an analogous manner. In addition, all bytes beginning with address 1 are reset to the initial value.

NOTE	
	<p>Shortening decoding results that are too long: If the bar code information (bar code possibly including supplementary information such as the check sum) does not fit in the selected module width, the decoding results are shortened. This shortening is either from the left or the right depending on the setting in module 30 – Data formatting.</p> <p>Shortening is indicated by the passed bar code data length.</p>

10.8.3 Module 30 – Data formatting

Description

The module defines the output string for the case that the device could not read a bar code. In addition, the initialization of the data fields and the definition of unused data ranges may be set.

Parameter

Table 10.20: Parameters for module 30

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Text in the case of misreading	The parameter defines the output characters if no bar code could be read.	0	STRING 20 characters Null terminated	1 ... 20 bytes of ASCII characters	63 ("?")	-
Decoding result at reading gate start	The parameter defines the state of the data at the start of the reading gate.	20.5	Bit	0: Input data remain on the old value 1: Input data is reset to the initial value	0	-
Data alignment	The parameter defines the alignment of the data in the result field ^{a)}	21.1	Bit	0: Left-justified 1: Right-justified	0	-
Fill mode	The parameter defines the fill mode for the not assigned data ranges	21.4 ... 21.7	Bitarea	0: No fill up 3: Fill up to the transmission length	3	-
Fill character	The parameter defines the character which is used for filling up the data ranges.	22	UNSIGNED8	0 ... FFh	0	-

a) and thus also controls possible shortening of a decoding result that is too large.

Parameter length

23 bytes

Input data

None

Output data

None

Comment

The "decoding result at reading gate start" parameter is only taken into account if the "Without ACK" mode is set (see chapter 10.7.1 "Module 10 – Activations").

10.8.4 Module 31 – Reading gate number

Description

The module defines input data for the communication of the number of reading gates since system start.

Parameter

None

Input data

Table 10.21: Input data for module 31

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Reading gate number	The device transmits the current reading gate number. The reading gate number is initialized with the system start and is then incremented continuously. At 65535, an overflow occurs and the counter starts again from 0.	0 ... 1	UNSIGNED16	0 ... 65535	0	-

Input data length

2 byte consistent

Output data

None

10.8.5 Module 32 – Reading gate time**Description**

This module returns the time between opening and closing of the last reading gate.

Parameter

None

Input data

Table 10.22: Input data for module 32

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Opening duration of the reading gate	Opening duration of the last reading gate in ms.	0 ... 1	UNSIGNED16	0 ... 65535 If the range is exceeded, the value remains at 65535	0	ms

Input data length

2 byte consistent

Output data

None

10.8.6 Module 33 – Code position**Description**

The module defines input data for the communication of the relative bar code position in the laser beam.

Parameter

None

Input data

Table 10.23: Input data for module 33

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Code position	Relative position of the bar code in the scanner beam. The position is normalized to the zero position (middle position). Specified in 1/10 degrees.	0 ... 1	SIGNED16	±450	0	1/10 degree

Input data length

2 byte consistent

Output data

None

10.8.7 Module 34 – Reading reliability (equal scans)**Description**

The module defines the input data for the communication of the calculated reading reliability. The value refers to the currently output bar code.

Parameter

None

Input data

Table 10.24: Input data for module 34

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Reading reliability (equal scans)	Calculated reading reliability for the transmitted bar code.	0 ... 1	UNSIGNED16	0 ... 65535	0	-

Input data length

2 byte consistent

Output data

None

10.8.8 Module 35 – Bar code length**Description**

The module defines input data for the communication of the length of the currently output bar code.

Parameter

None

Input data

Table 10.25: Input data for module 35

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Bar code length	Length/duration of the currently output bar code, beginning with the code position specified in module 35 in 1/10 degrees.	0 ... 1	UNSIGNED16	1 ... 900	1	1/10 degree

Input data length

2 byte consistent

Output data

None

10.8.9 Module 36 – Scans with information**Description**

The module defines input data for the communication of the calculated number of scans which provided information contributing to the result of the bar code.

Parameter

None

Input data

Table 10.26: Input data for module 36

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Scans with information per bar code	See above	0 ... 1	UNSIGNED16	0 ... 65535	0	-

Input data length

2 byte consistent

Output data

None

10.8.10 Module 37 – Decoding quality**Description**

The module defines input data for the communication of the calculated decoding quality of the currently transmitted bar code.

Parameter

None

Input data

Table 10.27: Input data for module 37

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Decoding quality	Decoding quality of the transmitted bar code	0	UNSIGNED8	0 ... 100	0	1%

Input data length

1 byte consistent

Output data

None

10.8.11 Module 38 – Code direction**Description**

The module defines input data for the communication of the detected code direction of the currently transmitted bar code.

Parameter

None

Input data

Table 10.28: Input data for module 38

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Code direction	Code direction of the transmitted bar code	0	UNSIGNED8	0: Normal 1: Inverted 2: Unknown	0	-

Input data length

1 byte

Output data

None

Comment:

A decoding result of type "No Read" has as code direction the value 2 = unknown!

10.8.12 Module 39 – Number of digits**Description**

The module defines input data for the communication of the number of digits of the currently transmitted bar code.

Parameter

None

Input data

Table 10.29: Input data for module 39

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Number of digits	Number of digits of the transmitted bar code	0	UNSIGNED8	0 ... 48	0	-

Input data length

1 byte

Output data

None

10.8.13 Module 40 – Code type**Description**

The module defines input data for the communication of the code type of the currently transmitted bar code.

Parameter

None

Input data

Table 10.30: Input data for module 40

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Code type	Code type of the transmitted bar code	0	UNSIGNED8	0: No code 1: 2/5 Interleaved 2: Code39 6: UPC, UPCE 7: EAN8, EAN13 8: Code128, EAN128 10: EAN Addendum 11: Codabar 12: Code93 13: GS1 DataBar Omni-directional 14: DataBar Limited 15: GS1 DataBar Expanded	0	-

Input data length

1 byte

Output data

None

10.8.14 Module 41 – Code position in the swivel range

Description

The module defines input data for the communication of the relative bar code position in the swivel range of an oscillating mirror device.

Parameter

None

Input data

Table 10.31: Input data for module 41

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Position in the swivel range	Relative position of the bar code in the swivel range. The position is normalized to the zero position (middle position). Specified in 1/10 degrees.	0 ... 1	SIGNED16	-200 ... +200	0	1/10°

Input data length

2 bytes

Output data

None

10.9 Data Processing

10.9.1 Module 50 – Characteristics filter

Description

Parameterization of the characteristics filter. This filter can be used to set how bar codes with identical content are handled and what criteria are to be taken into account in determining the likeness.

Parameter

Table 10.32: Parameters for module 50

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Handling of identical bar code information	Determines how bar codes with the same content are to be managed	0	UNSIGNED8	0: All bar codes are stored and output. 1: Only non-identical bar code contents are output. 2: Two identical bar codes arranged in T-shape are treated as a single bar code.	1	-
Comparison parameter - code type	If this criterion has been activated, the bar code type is used to determine whether the bar codes are identical.	1.0	Bit	0: Deactivated 1: Activated	1	-
Comparison parameter bar code content	If this criterion has been activated, the bar code content is used to determine whether the bar codes are identical.	1.1	Bit	0: Deactivated 1: Activated	1	-
Comparison parameter bar code direction	If this criterion has been activated, the bar code direction is used to determine whether the bar codes are identical.	1.2	Bit	0: Deactivated 1: Activated	1	-

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Comparison parameter scan position	If this parameter is not equal to 0, the bar code position in the scanning beam is used to determine whether identical bar codes have already been decoded. In this case, a +/- bandwidth in degrees must be specified, within which the same bar code is permitted to be in the scanning beam.	2 ... 3	UNSIGNED16	0 ... 450	0	1/10 degree
Comparison parameter oscillating mirror position	If this parameter is not equal to 0, the bar code position in the swivel range of the oscillating mirror is used to determine whether identical bar codes have already been decoded. A +/- bandwidth in degrees must then be specified, within which the same bar code is permitted to be in the oscillating mirror swivel range.	4 ... 5	UNSIGNED16	0 ... 200	0	1/10 degree
Comparison parameter scanning time info	If this parameter is not equal to 0, the decoding time (time at which the bar code was decoded) is used to determine whether identical bar codes have already been detected. Here, a difference time specified in milliseconds ensures that identical bar codes may only occur within this time.	6 ... 7	UNSIGNED16	0 ... 65535	0	ms

Parameter length

8 byte

Input data

None

Output data

None

All comparison criteria are AND linked; this means all active comparisons must be fulfilled before the just-decoded bar code can be identified as already decoded and then deleted.

10.9.2 Module 51 – Data filtering**Description**

Parameterization of the data filter.

Parameter

Table 10.33: Parameters for module 51

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Bar code filter string 1	Filter expression 1	0	STRING 30 characters null terminated	1 ... 30 bytes of ASCII characters	\00	-
Bar code filter string 2	Filter expression 2	30	STRING 30 characters null terminated	1 ... 30 bytes of ASCII characters	\00	-

Parameter length

60 bytes

Input data

None

Output data

None

Filter string

The filter string is used to define passthrough filters for bar codes.


Any number of '?' is permitted as placeholders for an arbitrary character at exactly this position. Also permitted are '*' as placeholders for a character sequence of arbitrary length, and an 'x' if the character at the respective position is to be deleted.

10.10 Identifier

The following modules can be used to specify the segmentation process to be used when extracting identifiers from the bar code data.

When a module is configured, the associated segmentation process is activated. If none of the modules is configured, no segmentation takes place.

Therefore, the modules can only be used one at a time and not simultaneously.

NOTE	
	<p>When using one of the following modules, multiple results may occur within a reading gate.</p> <p>If there are multiple results, acknowledge mode must be used, data may otherwise be lost (see chapter 10.7.1 "Module 10 – Activations", "Mode" parameter and the additional notices)!</p>

10.10.1 Module 52 – Segmentation according to the EAN process

Description

The module activates the segmentation according to the EAN process. The parameters specify the identifiers to be searched for and the output mode.

Parameter

Table 10.34: Parameters for module 52

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Identifier list						
Identifier 1	The identifier string is used for the identifier list and the filtering according to the segmentation.	0	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	***	-
Identifier 2	See identifier 1.	5	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	\0	-
Identifier 3	See identifier 1.	10	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	\0	-
Identifier 4	See identifier 1.	15	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	\0	-
Identifier 5	See identifier 1.	20	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	\0	-
Identifier output						
Output with identifier	If this switch is not set, the output of the identifiers is suppressed. Only the data values that belong to the identifiers are displayed in this case.	25.0	Bit	0: Output of the identifiers is suppressed. 1: Identifiers are output.	1	-
Output delimiter	This delimiter, if not equal to 0, is inserted between the identifier and the associated data value in the output.	26	UNSIGNED8	0 ... 127	0	-

Parameter length

27 byte

Input data

None

Output data

None

Identifier string n (n = 1 ... 5)

The identifier string defines both the identifier list for the segmentation and the passthrough filter for the subsequent filtering.

The string may contain wildcards. Any number of '?' is permitted as placeholders for an arbitrary character at exactly that defined position.

Also permitted are '*' as placeholders for a character sequence of arbitrary length, and an 'x' if the character at the respective position is to be deleted. There are a total of 5 identifier strings.

An identifier with less than 5 characters must be null terminated. However, if the identifier string consists of exactly 5 characters, it does not have to be terminated.

10.10.2 Module 53 – Segmentation via fixed positions

Description

The module activates the segmentation via fixed positions. The parameters specify the identifiers to be searched for, the output mode, and the positions.

Parameter

Table 10.35: Parameters for module 53

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Identifier list						
Identifier 1	The identifier string is used for the identifier list and the filtering according to the segmentation.	0	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	***	-
Identifier 2	See identifier 1.	5	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	\0	-
Identifier 3	See identifier 1.	10	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	\0	-
Identifier 4	See identifier 1.	15	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	\0	-
Identifier 5	See identifier 1.	20	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	\0	-
Identifier output						
Output with identifier	If this switch is not set, the output of the identifiers is suppressed. Only the data values that belong to the identifiers are displayed in this case.	25.0	Bit	0: Output of the identifiers is suppressed. 1: Identifiers are output.	1	-
Output delimiter	This delimiter, if not equal to 0, is inserted between the identifier and the associated data value in the output.	26	UNSIGNED8	0 ... 127	0	-
Fixed positions						
Start position of the 1st identifier	Specifies the position of the first character of the first identifier in the data string of the bar code. The first character in the bar code has position 1. If the parameter is = 0, it is deactivated.	27	UNSIGNED8	0 ... 127	0	-
Start position of the 1st data value	Specifies the position of the first character of the first data value in the data string of the bar code. The first character in the bar code has position 1. If the parameter is = 0, it is deactivated.	28	UNSIGNED8	0 ... 127	0	-
Start position of the 2nd identifier	Specifies the position of the first character of the second identifier in the data string of the bar code. The first character in the bar code has position 1. If the parameter is = 0, it is deactivated.	29	UNSIGNED8	0 ... 127	0	-
Start position of the 2nd data value	Specifies the position of the first character of the second data value in the data string of the bar code. The first character in the bar code has position 1. If the parameter is = 0, it is deactivated.	30	UNSIGNED8	0 ... 127	0	-

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Start position of the 3rd identifier	Specifies the position of the first character of the third identifier in the data string of the bar code. The first character in the bar code has position 1. If the parameter is = 0, it is deactivated.	31	UNSIGNED8	0 ... 127	0	-
Start position of the 3rd data value	Specifies the position of the first character of the third data value in the data string of the bar code. The first character in the bar code has position 1. If the parameter is = 0, it is deactivated.	32	UNSIGNED8	0 ... 127	0	-
Start position of the 4th identifier	Specifies the position of the first character of the fourth identifier in the data string of the bar code. The first character in the bar code has position 1. If the parameter is = 0, it is deactivated.	33	UNSIGNED8	0 ... 127	0	-
Start position of the 4th data value	Specifies the position of the first character of the fourth data value in the data string of the bar code. The first character in the bar code has position 1. If the parameter is = 0, it is deactivated.	34	UNSIGNED8	0 ... 127	0	-
Start position of the 5th identifier	Specifies the position of the first character of the fifth identifier in the data string of the bar code. The first character in the bar code has position 1. If the parameter is = 0, it is deactivated.	35	UNSIGNED8	0 ... 127	0	-
Start position of the 5th data value	Specifies the position of the first character of the fifth data value in the data string of the bar code. The first character in the bar code has position 1. If the parameter is = 0, it is deactivated.	36	UNSIGNED8	0 ... 127	0	-

Parameter length

37 bytes

Input data

None

Output data

None

Identifier string n (n = 1 ... 5)

The identifier string defines both the identifier list for the segmentation and the passthrough filter for the subsequent filtering.

The string may contain wildcards. Any number of '?' is permitted as placeholders for an arbitrary character at exactly that defined position.

Also permitted are '*' as placeholders for a character sequence of arbitrary length, and an 'x' if the character at the respective position is to be deleted. There are a total of 5 identifier strings.

An identifier with less than 5 characters must be null terminated. However, if the identifier string consists of exactly 5 characters, it does not have to be terminated.

10.10.3 Module 54 – Segmentation according to identifier and separator**Description**

This module activates the segmentation according to identifier and separator. The parameters specify the identifiers to be searched for, the output mode, and the parameters for the identifier/separator algorithm.

Parameter

Table 10.36: Parameters for module 54

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Identifier list						
Identifier 1	The identifier string is used for the identifier list and the filtering according to the segmentation.	0	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	""	-
Identifier 2	See identifier 1.	5	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	\0	-
Identifier 3	See identifier 1.	10	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	\0	-
Identifier 4	See identifier 1.	15	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	\0	-
Identifier 5	See identifier 1.	20	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	\0	-
Identifier output						
Output with identifier	If this switch is not set, the output of the identifiers is suppressed. Only the data values that belong to the identifiers are displayed in this case.	25.0	Bit	0: Output of the identifiers is suppressed. 1: Identifiers are output.	1	-
Output delimiter	This delimiter, if not equal to 0, is inserted between the identifier and the associated data value in the output.	26	UNSIGNED8	0 ... 127	0	-
Segmentation acc. to identifier and separator						
Identifier length	Fixed length of all identifiers in the segmentation process. After this length, the text of the identifier ends and the associated data value starts. The end of the data value is determined by the separator.	27	UNSIGNED8	0 ... 255	0	-
Delimiter in the identifier/separator algorithm	The separator terminates the data value that follows its identifier directly after the identifier length. After the separator, the next identifier starts.	28	UNSIGNED8	0 ... 127	0	-

Parameter length

29 byte

Input data

None

Output data

None

Identifier string n (n = 1 ... 5)

The identifier string defines both the identifier list for the segmentation and the passthrough filter for the subsequent filtering.

The string may contain wildcards. Any number of '?' is permitted as placeholders for an arbitrary character at exactly that defined position.

Also permitted are '*' as placeholders for a character sequence of arbitrary length, and an 'x' if the character at the respective position is to be deleted. There are a total of 5 identifier strings.

An identifier with less than 5 characters must be null terminated. However, if the identifier string consists of exactly 5 characters, it does not have to be terminated.

10.10.4 Module 55 – String handling parameters

Description

This module is used to configure placeholder characters for the bar code segmentation, filtering, termination, and reference code processing.

Parameter

Table 10.37: Parameters for module 55

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Wildcard character	This parameter is similar to the "don't care character" parameter. The difference between this and the "don't care character" is that all subsequent characters, and not only one character at a certain position, are disregarded until a character pattern is found in the string that follows the wildcard character pattern. This character has the same behavior as the wildcard character for the DIR command in the command line interpreter under Windows.	0	UNSIGNED8	32 ... 127	'*'	-
Don't care character	Placeholder character. Characters at the position of the placeholder character are not taken into account in a comparison. This permits certain areas to be masked.	1	UNSIGNED8	32 ... 127	'?'	-
Delete character	Delete character for bar code and identifier filtering (characters at the position of the delete character are deleted in a comparison. This permits certain areas to be deleted).	2	UNSIGNED8	32 ... 127	'x'	-

Parameter length

3 bytes

Input data

None

Output data

None

10.11 Device functions**10.11.1 Module 60 – Device status****Description**

The module contains the display of the device status as well as control bits for triggering a reset or putting the device into standby mode.

Parameter

None

Input data

Table 10.38: Input data for module 60

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Device status	This byte represents the device status	0	UNSIGNED8	0: Device is ready 1: Initialization 10: Standby 11: Service 12: Diagnosis 13: Parameter enabled 0x80: Error 0x81: Warning	0	-

Input data length

1 byte

Output data

Table 10.39: Input data for module 60

Output data	Description	Addr.	Data type	Value range	Initial value	Unit
System reset	The control bit triggers a system reset ^{a)} if the level changes from 0 to 1	0.6	Bit	0: Run 0 -> 1: Reset	0	-
Standby	Activates the standby function	0.7	Bit	0: Standby off 1: Standby on	0	-

a) Analogous to command H, activation of this bit triggers a restart of all electronics, incl. a restart of the PROFIBUS stack.

NOTE

Analogous to command H, activation of the system reset bit triggers a restart of all electronics, incl. a restart of the PROFINET-IO stack. I.e., the device restarts!

Output data length

1 byte

NOTE

When resetting the data the input data of this module is not deleted (see chapter 10.7.1 "Module 10 – Activations").

10.11.2 Module 61 – Laser control**Description**

The module defines the switch-on and switch-off position of the laser.

Parameter

Table 10.40: Parameters for module 61

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Laser start position	This parameter defines the switch-on position of the laser in 1/10° increments within the visible range of the laser. The center of the reading field corresponds to the 0° position.	0 ... 1	UNSIGNED16	-450 ... +450	-450	1/10°
Laser stop position	This parameter defines the switch-off position of the laser in 1/10° increments within the visible range of the laser.	2 ... 3	UNSIGNED16	-450 ... +450	+450	1/10°

Parameter length

4 byte

Input data

None

Output data

None

10.11.3 Module 62 – Display**Description**

In this module, general parameters and parameters that relate to the operation and the display are set.

Parameter

Table 10.41: Parameters for module 62

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Language selection	Language selection for the display. A language selected via the display is overwritten by this parameter.	0.0 ... 0.2	Bit	1: English 2: German 3: Italian 4: French 5: Spanish	0	-
Display illumination	Off after 10 min., or permanently on.	0.3	Bit	0: Off after 10 min 1: Permanently on	0	-
Display contrast	Contrast setting of the display. The contrast changes under extreme ambient temperatures and can be adjusted with this parameter.	0.4 ... 0.5	Bit	0: Weak 1: Medium 2: Strong	1	-
Password protection	Password protection on/off	0.7	Bit	0: OFF 1: ON	0	-
Password	Password entry. Password is only active if password protection is on.	1 ... 2	UNSIGNED16	0000 ... 9999	0000	-

Parameter length

3 bytes

Input data

None

Output data

None

NOTE

This module overwrites the local display settings. After activating this module, the language setting set there, the setting for password protection and the password set in the module take effect.

10.11.4 Module 63 – Alignment**Description**

The module defines input and output data for the alignment mode of the device. The alignment mode is used for easy alignment of the device with the bar code. Using the transmitted decoding quality as a percentage, the optimum alignment can be easily selected. This module should not be used in connection with module 81 (AutoRefIAct) as this may cause malfunctions.

Parameter

None

Input data

Table 10.42: Input data for module 63

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Decoding quality	Transmits the current decoding quality of the bar code located in the scanning beam	0	Byte	0 ... 100	0	Percentage

Input data length

1 byte

Output data

Table 10.43: Output data for module 63

Output data	Description	Addr.	Data type	Value range	Initial value	Unit
Alignment mode	Signal activates and deactivates the alignment mode for optimum alignment of the device with the bar code	0.0	Bit	0 -> 1: On 1 -> 0: Off	0	-

Output data length

1 byte

10.11.5 Module 64 – Oscillating mirror**Description**

Module for supporting the oscillating mirror.

Parameter

Table 10.44: Parameters for module 64

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Oscillation mode	This parameter defines the mode in which the oscillating mirror operates.	0	UNSIGNED8	0: Single oscillation 1: Double oscillation 2: Continuous oscillation 3: Continuous oscillation, oscillating mirror moves to the start position at the end of the reading gate.	2	-
Start position	Start position (opening angle) relative to the zero position of the swivel range.	1 ... 2	SIGNED16	-200 ... +200	200	1/10°
Stop position	Stop position (opening angle) relative to the zero position of the swivel range.	3 ... 4	SIGNED16	-200 ... +200	-200	1/10°
Oscillation frequency	Common value for forward and backward motion	5	UNSIGNED8	15 ... 116	48	°/s

Parameter length

6 byte

Input data

None

Output data

None

10.11.6 Module 65 – Deflecting mirror**Description**

Module for supporting the deflecting mirror.

Parameter

Table 10.45: Parameters for module 65

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Deflection angle	Lateral beam exit in degrees relative to the zero position	0 ... 1	SIGNED16	-100 ... +100	0	1/10°

Parameter length

2 bytes

Input data

None

Output data

None

10.12 Switching inputs/ outputs SWIO 1 ... 4

These modules define the mode of operation of the 4 digital switching inputs and outputs (I/Os). They are separated into individual modules for configuring the individual I/Os and a shared module for signaling the status and controlling all I/Os.

10.12.1 Parameters for operating as an output**Switch-on delay**

With this setting, the output pulse can be delayed by the specified time (in ms).

Switch-on time

Defines the switch-on time period for the switching input. Any activated switch-off function then no longer has any function.

A value of 0 causes the output to be set statically; this means that the selected input function(s) activate the output, and the selected switch-off function(s) deactivate it again.

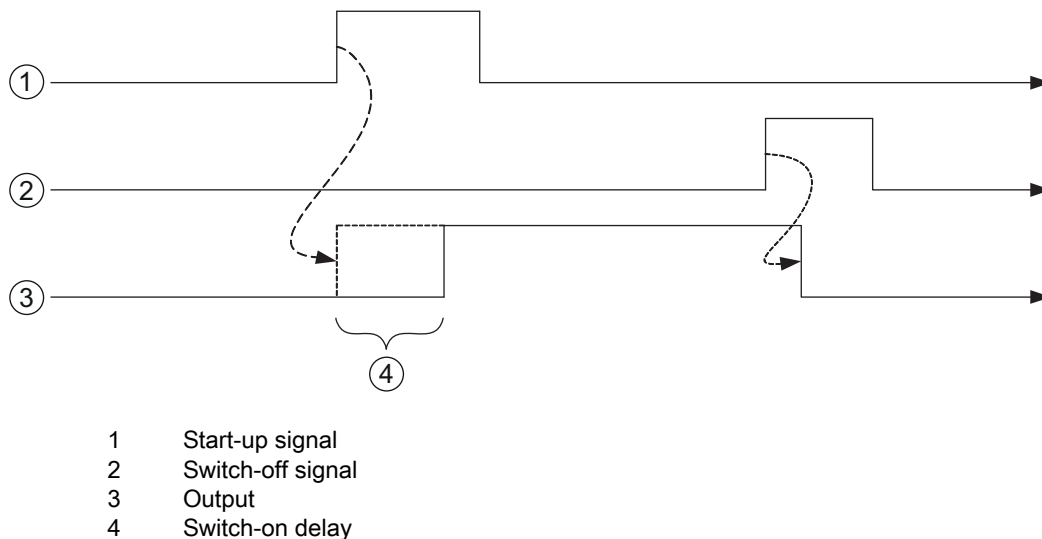


Figure 10.2: Example 1: Switch-on delay > 0 and switch-on time = 0

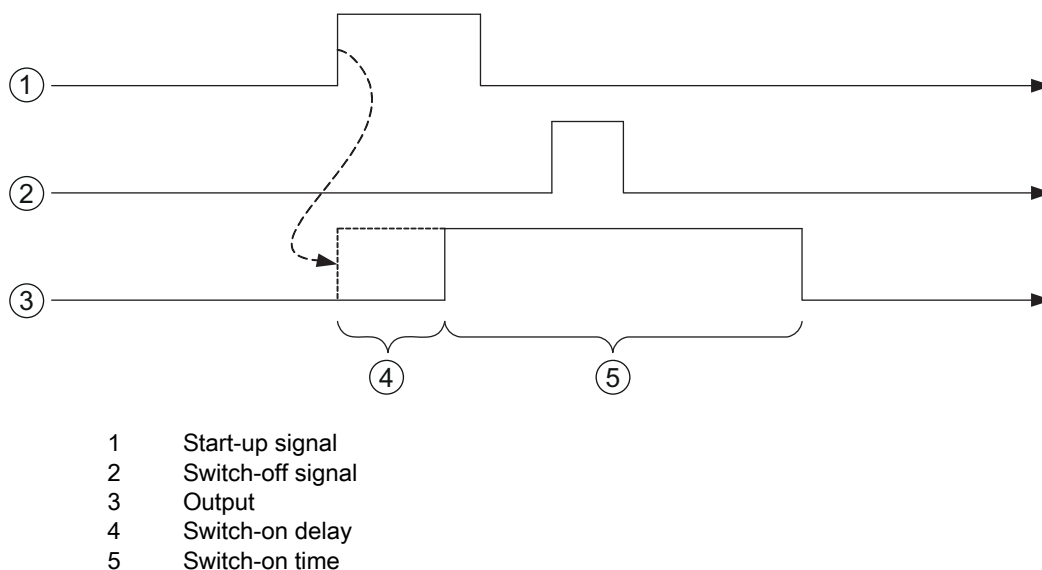


Figure 10.3: Example 2: Switch-on delay > 0 and switch-on time > 0

In example 2, the activation duration of the output is only dependent on the selected switch-on time; the switch-off signal has no effect.

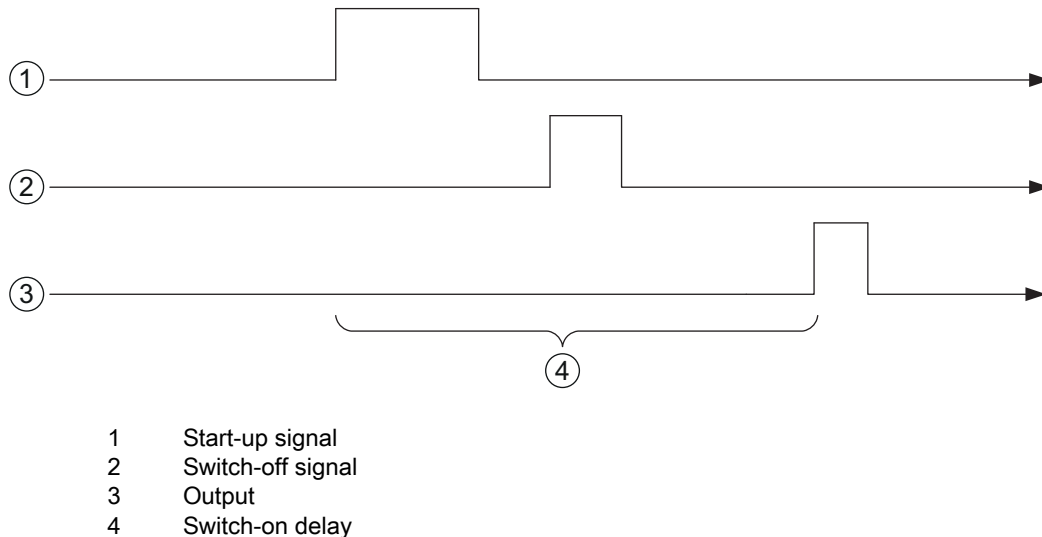


Figure 10.4: Example 3: Switch-on delay > 0 Switch-off signal prior to lapsing of the switch-on delay

If the output is again deactivated via the switch-off signal before the switch-on delay lapses, only a brief pulse appears at the output following the switch-on delay.

Comparison functionality

If, for example, the switching output is to be activated after four invalid read results, the **comparative value** is set to **4** and the **switch-on function** is configured to "invalid read result".

The **comparison mode** parameter can be used to define whether the switching output is activated only once in the case that the event counter and comparative value fulfill the "parity" condition, or if it is activated multiple times, on each successive event after the "parity" condition is met.

The event counter can always be reset with the I/O data in the **I/O status and control** module; furthermore, the **reset mode** parameter enables automatic resetting upon reaching the **comparative value**. Automatic resetting upon reaching the **comparative value** always results in the switching output being switched once independent of the **comparison mode** parameter.

The standard switch-off function at **reading gate start** is rather unsuited for this module since it causes the event counter to be reset on each reading gate start. Suitable as switch-off function for this example is the **valid read result** function; otherwise, all switch-off functions are deactivated.

10.12.2 Parameters for operating as an input

Debounce time

Parameter for setting the software debounce time for the switching input. The definition of a debounce time extends the signal transition time accordingly.

If the value of this parameter = 0, no debouncing takes place; otherwise, the configured value represents the duration in milliseconds for which the input signal must be present and stable.

Switch-on delay td_on

If the value of this parameter = 0, no switch-on delay occurs for the activation of the input function; otherwise, the configured value represents the time in milliseconds by which the input signal is delayed.

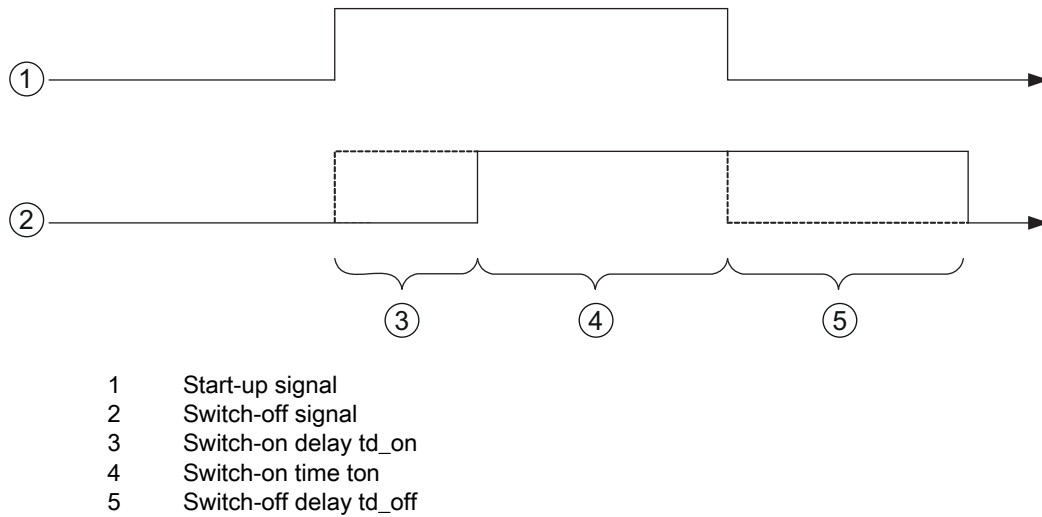


Figure 10.5: Switch-on delay in input mode

Switch-on time ton

This parameter specifies the min. activation duration for the selected input function in ms.

The actual activation duration is calculated from the switch-on time as well as the switch-off delay.

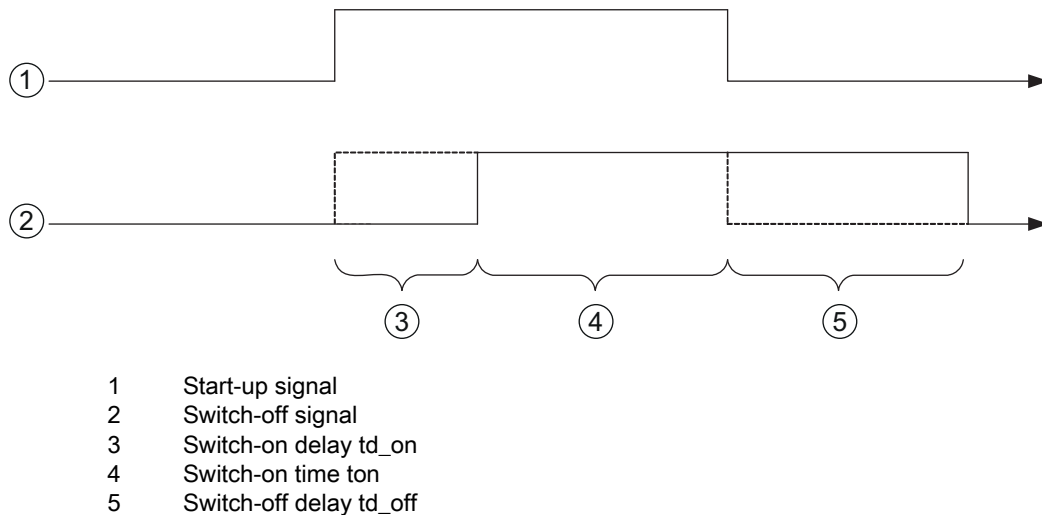


Figure 10.6: Switch-on time in input mode

Switch-off delay td_{off}

This parameter specifies the duration of the switch-off delay in ms.

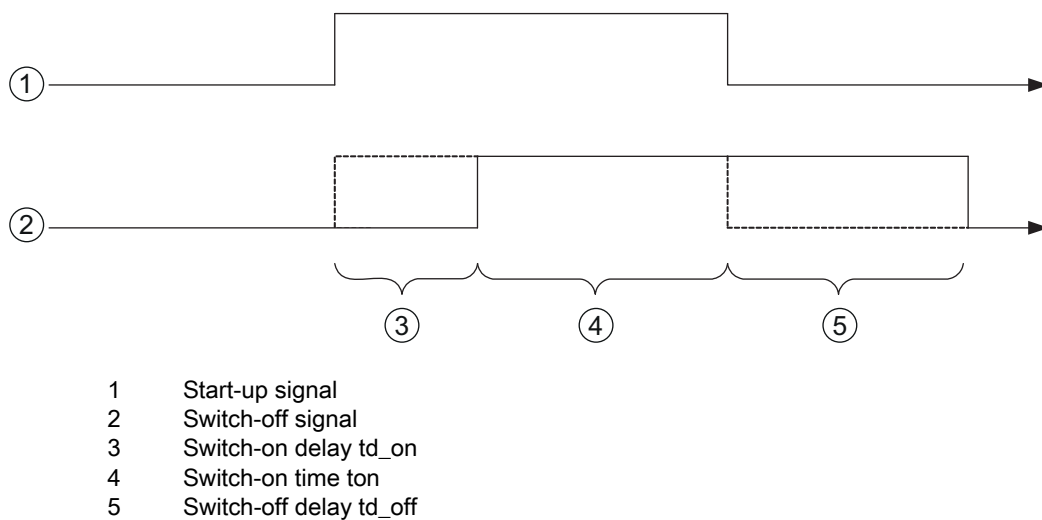


Figure 10.7: Switch-off delay in input mode

10.12.3 Switch-on and switch-off functions for operation as an output

The following options are available for switch-on and switch-off functions in the "output" operating mode:

Table 10.46: Switch-on/switch-off functions

Name	Value	Comment
No function	0	No functionality
Reading gate start	1	
Reading gate end	2	
Positive reference code comparison 1	3	
Negative reference code comparison 1	4	
Valid read result	5	
Invalid read result	6	
Device ready	7	The device is in a ready state.
Device not ready	8	The device is not yet ready (motor and laser are being activated).
Data transmission active	9	
Data transmission not active	10	
AutoControl good quality	13	
AutoControl bad quality	14	
Reflector detected	15	
Reflector not detected	16	
External event, pos. edge	17	In the PROFIBUS case, the external event is generated with the aid of module 74 – "I/O status and control", see chapter 10.12.9 "Module 74 – SWIO status and control"
External event, neg. edge	18	See above
Device active	19	Decoding is currently being performed.
Device in standby mode	20	Motor and laser inactive.
No device error	21	No error detected.
Device error	22	Device is in an error state.
Positive reference code comparison 2	23	
Negative reference code comparison 2	24	

10.12.4 Input functions for operation as an input

Table 10.47: Input functions

Name	Value	Comment
No function	0	No functionality
Reading gate activation	1	
Reading gate deactivation only	2	
Reading gate activation only	3	
Reference bar code teach-in	4	
Start/Stop Autoconfiguration Mode	5	

10.12.5 Module 70 – Switching input/output SWIO1

Parameter

Table 10.48: Parameters for module 70 – Input/Output 1

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Function	This parameter defines whether I/O 1 functions as an input or as an output.	0.0	Bit	0: Input 1: Output	0	-
Mode of operation for configuration as an output						
Bias level	The parameter defines the DC bias level of the switching output and, thus, simultaneously whether the output is low-active (0) or high-active (1).	0.1	Bit	0: LOW (0V) 1: HIGH (+Ub)	0	-
Reserved	Free	0.2 ... 0.7				

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Switch-on delay	With this parameter, the output pulse may be delayed by a set time period.	1	UNSIGNED16	0 ... 65535	0	ms
Switch-on time	The parameter defines the switch-on time period for the switching output. If the value is 0, the signal is static.	3	UNSIGNED16	0 ... 1300	400	ms
Switch-on function 1	This parameter specifies an event which can set the switching output.	5	UNSIGNED8	see table 10.46	0	-
Switch-on function 2	This parameter specifies an event which can set the switching output. Switch-on function 1 and switch-on function 2 are OR linked.	6	UNSIGNED8	see table 10.46	0	-
Switch-off function 1	This parameter specifies an event which can reset the switching output.	7	UNSIGNED8	see table 10.46	0	-
Switch-off function 2	This parameter specifies an event which can reset the switching output. Switch-off function 1 and switch-off function 2 are OR linked.	8	UNSIGNED8	see table 10.46	0	-
Comparative value (Event Counter)	If the number of activation events of the selected switch-on function reaches this comparative value, the switching output is activated. A deactivation event of the selected switch-off function resets the counter.	9	UNSIGNED16	0..65535	0	-
Comparison mode (Event Counter)	Specifies whether the switching output switches only on parity (once) or also in the event of greater or equal to (multiple times) after the comparative value is reached.	11	UNSIGNED8	0: SWOUT switches once 1: SWOUT switches several times	0	-
Reset mode (Event Counter)	Specifies whether the counter (Event Counter) is reset only by the reset bit and the selected switch-off function, or if the counter should be automatically reset after the comparative value is reached.	12	UNSIGNED8	0: Reset bit and switch-off function 1: Comparative value reached	0	-
Mode of operation for configuration as an input						
Inversion	The parameter defines the logic of the incident signal. In case of an inversion, an external HIGH level is interpreted internally as a LOW level.	13.1	Bit	0: Normal 1: Inverted	0	-
Reserved	Free	13.2 ... 13.7				
Debounce time	The parameter defines a debounce time which is implemented in software.	14	UNSIGNED16	0 ... 1000	5	ms
Switch-on delay	The parameter influences the time behavior during switch-on.	16	UNSIGNED16	0 ... 65535	0	ms
Minimum switch-on time	The parameter defines a minimum time period before the signal is reset.	18	UNSIGNED16	0 ... 65535	0	ms
Switch-off delay	The parameter defines a time delay for the signal during switch-off.	20	UNSIGNED16	0 ... 65535	0	ms
Input function	The parameter specifies the function which is to be activated or deactivated by a status change in the signal.	22	UNSIGNED8	see table 10.47	1	-

Parameter length

23 bytes

Input data

None

Output data

None

Comment

The bias level also defines whether the output is low-active (0) or high-active (1).

Switching on an I/O configured as an output means switching to the active state; switching off, on the other hand, results in switching to the inactive or idle state.

10.12.6 Module 71 – Switching input/output SWIO2

Parameter

Table 10.49: Parameters for module 71 – Input/Output 2

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Function	This parameter defines whether I/O 2 functions as an input or as an output.	0.0	Bit	0: Input 1: Output	1	-
Mode of operation for configuration as an output						
Bias level	The parameter defines the DC bias level of the switching output and, thus, simultaneously whether the output is low-active (0) or high-active (1).	0.1	Bit	0: LOW (0V) 1: HIGH (+Ub)	0	-
Reserved	Free	0.2 ... 0.7				
Switch-on delay	With this parameter, the output pulse may be delayed by a set time period.	1	UNSIGNED16	0 ... 65535	0	ms
Switch-on time	The parameter defines the switch-on time period for the switching output. If the value is 0, the signal is static.	3	UNSIGNED16	0 ... 1300	400	ms
Switch-on function 1	This parameter specifies an event which can set the switching output.	5	UNSIGNED8	see table 10.46	5	-
Switch-on function 2	This parameter specifies an event which can set the switching output. Switch-on function 1 and switch-on function 2 are OR linked.	6	UNSIGNED8	see table 10.46	0	-
Switch-off function 1	This parameter specifies an event which can reset the switching output.	7	UNSIGNED8	see table 10.46	1	-
Switch-off function 2	This parameter specifies an event which can reset the switching output. Switch-off function 1 and switch-off function 2 are OR linked.	8	UNSIGNED8	see table 10.46	0	-
Comparative value (Event Counter)	If the number of activation events of the selected switch-on function reaches this comparative value, the switching output is activated. A deactivation event of the selected switch-off function resets the counter.	9	UNSIGNED16	0..65535	0	-
Comparison mode (Event Counter)	Specifies whether the switching output switches only on parity (once) or also in the event of greater or equal to (multiple times) after the comparative value is reached.	11	UNSIGNED8	0: SWOUT switches once 1: SWOUT switches several times	0	-
Reset mode (Event Counter)	Specifies whether the counter (Event Counter) is reset only by the reset bit and the selected switch-off function, or if the counter should be automatically reset after the comparative value is reached.	12	UNSIGNED8	0: Reset bit and switch-off function 1: Comparative value reached	0	-
Mode of operation for configuration as an input						
Inversion	The parameter defines the logic of the incident signal. In case of an inversion, an external HIGH level is interpreted internally as a LOW level.	13.1	Bit	0: Normal 1: Inverted	0	-
Reserved	Free	13.2 ... 13.7				
Debounce time	The parameter defines a debounce time which is implemented in software.	14	UNSIGNED16	0 ... 1000	5	ms
Switch-on delay	The parameter influences the time behavior during switch-on.	16	UNSIGNED16	0 ... 65535	0	ms
Minimum switch-on time	The parameter defines a minimum time period before the signal is reset.	18	UNSIGNED16	0 ... 65535	0	ms
Switch-off delay	The parameter defines a time delay for the signal during switch-off.	20	UNSIGNED16	0 ... 65535	0	ms
Input function	The parameter specifies the function which is to be activated or deactivated by a status change in the signal.	22	UNSIGNED8	see table 10.47	0	-

Parameter length

23 bytes

Input data

None

Output data

None

Comment

The bias level also defines whether the output is low-active (0) or high-active (1).

Switching on an I/O configured as an output means switching to the active state; switching off, on the other hand, results in switching to the inactive or idle state.

10.12.7 Module 72 – Switching input/output SWIO3**Parameter**

Table 10.50: Parameters for module 72 – Input/Output 3

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Function	This parameter defines whether I/O 3 functions as an input or as an output.	0.0	Bit	0: Input 1: Output	0	-
Mode of operation for configuration as an output						
Bias level	The parameter defines the DC bias level of the switching output and, thus, simultaneously whether the output is low-active (0) or high-active (1).	0.1	Bit	0: LOW (0V) 1: HIGH (+Ub)	0	-
Reserved	Free	0.2 ... 0.7				
Switch-on delay	With this parameter, the output pulse may be delayed by a set time period.	1	UNSIGNED16	0 ... 65535	0	ms
Switch-on time	The parameter defines the switch-on time period for the switching output. If the value is 0, the signal is static.	3	UNSIGNED16	0 ... 1300	400	ms
Switch-on function 1	This parameter specifies an event which can set the switching output.	5	UNSIGNED8	see table 10.46	0	-
Switch-on function 2	This parameter specifies an event which can set the switching output. Switch-on function 1 and switch-on function 2 are OR linked.	6	UNSIGNED8	see table 10.46	0	-
Switch-off function 1	This parameter specifies an event which can reset the switching output.	7	UNSIGNED8	see table 10.46	0	-
Switch-off function 2	This parameter specifies an event which can reset the switching output. Switch-off function 1 and switch-off function 2 are OR linked.	8	UNSIGNED8	see table 10.46	0	-
Comparative value (Event Counter)	If the number of activation events of the selected switch-on function reaches this comparative value, the switching output is activated. A deactivation event of the selected switch-off function resets the counter.	9	UNSIGNED16	0..65535	0	-
Comparison mode (Event Counter)	Specifies whether the switching output switches only on parity (once) or also in the event of greater or equal to (multiple times) after the comparative value is reached.	11	UNSIGNED8	0: SWOUT switches once 1: SWOUT switches several times	0	-
Reset mode (Event Counter)	Specifies whether the counter (Event Counter) is reset only by the reset bit and the selected switch-off function, or if the counter should be automatically reset after the comparative value is reached.	12	UNSIGNED8	0: Reset bit and switch-off function 1: Comparative value reached	0	-
Mode of operation for configuration as an input						

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Inversion	The parameter defines the logic of the incident signal. In case of an inversion, an external HIGH level is interpreted internally as a LOW level.	13.1	Bit	0: Normal 1: Inverted	0	-
Reserved	Free	13.2 ... 13.7				
Debounce time	The parameter defines a debounce time which is implemented in software.	14	UNSIGNED16	0 ... 1000	5	ms
Switch-on delay	The parameter influences the time behavior during switch-on.	16	UNSIGNED16	0 ... 65535	0	ms
Minimum switch-on time	The parameter defines a minimum time period before the signal is reset.	18	UNSIGNED16	0 ... 65535	0	ms
Switch-off delay	The parameter defines a time delay for the signal during switch-off.	20	UNSIGNED16	0 ... 65535	0	ms
Input function	The parameter specifies the function which is to be activated or deactivated by a status change in the signal.	22	UNSIGNED8	see table 10.47	2	-

Parameter length

23 bytes

Input data

None

Output data

None

Comment

The bias level also defines whether the output is low-active (0) or high-active (1).

Switching on an I/O configured as an output means switching to the active state; switching off, on the other hand, results in switching to the inactive or idle state.

10.12.8 Module 73 – Switching input/output SWIO4**Parameter**

Table 10.51: Parameters for module 73 – Input/Output 4

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Function	This parameter defines whether I/O 4 functions as an input or as an output.	0.0	Bit	0: Input 1: Output	1	-
Mode of operation for configuration as an output						
Bias level	The parameter defines the DC bias level of the switching output and, thus, simultaneously whether the output is low-active (0) or high-active (1).	0.1	Bit	0: LOW (0V) 1: HIGH (+Ub)	0	-
Reserved	Free	0.2 ... 0.7				
Switch-on delay	With this parameter, the output pulse may be delayed by a set time period.	1	UNSIGNED16	0 ... 65535	0	ms
Switch-on time	The parameter defines the switch-on time period for the switching output. If the value is 0, the signal is static.	3	UNSIGNED16	0 ... 1300	400	ms
Switch-on function 1	This parameter specifies an event which can set the switching output.	5	UNSIGNED8	see chapter 10.12.3	6	-
Switch-on function 2	This parameter specifies an event which can set the switching output. Switch-on function 1 and switch-on function 2 are OR linked.	6	UNSIGNED8	see chapter 10.12.3	0	-
Switch-off function 1	This parameter specifies an event which can reset the switching output.	7	UNSIGNED8	see chapter 10.12.3	1	-

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Switch-off function 2	This parameter specifies an event which can reset the switching output. Switch-off function 1 and switch-off function 2 are OR linked.	8	UNSIGNED8	see chapter 10.12.3	0	-
Comparative value (Event Counter)	If the number of activation events of the selected switch-on function reaches this comparative value, the switching output is activated. A deactivation event of the selected switch-off function resets the counter.	9	UNSIGNED16	0..65535	0	-
Comparison mode (Event Counter)	Specifies whether the switching output switches only on parity (once) or also in the event of greater or equal to (multiple times) after the comparative value is reached.	11	UNSIGNED8	0: SWOUT switches once 1: SWOUT switches several times	0	-
Reset mode (Event Counter)	Specifies whether the counter (Event Counter) is reset only by the reset bit and the selected switch-off function, or if the counter should be automatically reset after the comparative value is reached.	12	UNSIGNED8	0: Reset bit and switch-off function 1: Comparative value reached	0	-
Mode of operation for configuration as an input						
Inversion	The parameter defines the logic of the incident signal. In case of an inversion, an external HIGH level is interpreted internally as a LOW level.	13.1	Bit	0: Normal 1: Inverted	0	-
Reserved	Free	13.2 ... 13.7				
Debounce time	The parameter defines a debounce time which is implemented in software.	14	UNSIGNED16	0 ... 1000	5	ms
Switch-on delay	The parameter influences the time behavior during switch-on.	16	UNSIGNED16	0 ... 65535	0	ms
Minimum switch-on time	The parameter defines a minimum time period before the signal is reset.	18	UNSIGNED16	0 ... 65535	0	ms
Switch-off delay	The parameter defines a time delay for the signal during switch-off.	20	UNSIGNED16	0 ... 65535	0	ms
Input function	The parameter specifies the function which is to be activated or deactivated by a status change in the signal.	22	UNSIGNED8	see chapter 10.12.4	0	-

Parameter length

23 bytes

Input data

None

Output data

None

Comment

The bias level also defines whether the output is low-active (0) or high-active (1).

Switching on an I/O configured as an output means switching to the active state; switching off, on the other hand, results in switching to the inactive or idle state.

10.12.9 Module 74 – SWIO status and control**Description**

Module for handling switching input and switching output signals.

Parameter

None

Input data

Table 10.52: Input data for module 74 Input/output status and control

Parameter	Description	Addr.	Data type	Value range	Initial value	Unit
State 1	Signal state of switching input or output 1	0.0	Bit	0.1	0	-
State 2	Signal state of switching input or output 2	0.1	Bit	0.1	0	-
State 3	Signal state of switching input or output 3	0.2	Bit	0.1	0	-
State 4	Signal state of switching input or output 4	0.3	Bit	0.1	0	-
Comparison state switching output 1 (Event Counter)	Indicates whether the event counter has exceeded the set comparative value. The bit is reset to the init. value by resetting the event counter.	1.0	Bit	0: Not exceeded 1: Exceeded	0	-
Switching output 1 Comparison state toggle bit (Event Counter)	If "SWOUT switches several times" was configured as comparison mode, this bit is toggled each time the event counter is exceeded. The bit is reset to the init. value by resetting the event counter.	1.1	Bit	0 -> 1: Event counter exceeded 1 -> 0: Event counter exceeded again	0	-
Comparison state switching output 2 (Event Counter)	Indicates whether the event counter has exceeded the set comparative value. The bit is reset to the init. value by resetting the event counter.	1.2	Bit	0: Not exceeded 1: Exceeded	0	-
Switching output 2 Comparison state toggle bit (Event Counter)	If "SWOUT switches several times" was configured as comparison mode, this bit is toggled each time the event counter is exceeded. The bit is reset to the init. value by resetting the event counter.	1.3	Bit	0 -> 1: Event counter exceeded 1 -> 0: Event counter exceeded again	0	-
Comparison state switching output 3 (Event Counter)	Indicates whether the event counter has exceeded the set comparative value. The bit is reset to the init. value by resetting the event counter.	1.4	Bit	0: Not exceeded 1: Exceeded	0	-
Switching output 3 Comparison state toggle bit (Event Counter)	If "SWOUT switches several times" was configured as comparison mode, this bit is toggled each time the event counter is exceeded. The bit is reset to the init. value by resetting the event counter.	1.5	Bit	0 -> 1: Event counter exceeded 1 -> 0: Event counter exceeded again	0	-
Comparison state switching output 4 (Event Counter)	Indicates whether the event counter has exceeded the set comparative value. The bit is reset to the init. value by resetting the event counter.	1.6	Bit	0: Not exceeded 1: Exceeded	0	-
Switching output 4 Comparison state toggle bit (Event Counter)	If "SWOUT switches several times" was configured as comparison mode, this bit is toggled each time the event counter is exceeded. The bit is reset to the init. value by resetting the event counter.	1.7	Bit	0 -> 1: Event counter exceeded 1 -> 0: Event counter exceeded again	0	-

Input data length:

2 bytes

Output data

Table 10.53: Output data for module 74 Input/output status and control

Output data	Description	Addr.	Data type	Value range	Initial value	Unit
Switching output 1	Sets the state of switching output 1	0.0	Bit	0: Switching output 0 1: Switching output 1	0	-
Switching output 2	Sets the state of switching output 2	0.1	Bit	0: Switching output 0 1: Switching output 1	0	-
Switching output 3	Sets the state of switching output 3	0.2	Bit	0: Switching output 0 1: Switching output 1	0	-
Switching output 4	Sets the state of switching output 4	0.3	Bit	0: Switching output 0 1: Switching output 1	0	-

Output data	Description	Addr.	Data type	Value range	Initial value	Unit
Reset Event Counter Switching output 1	Sets the event counter of the activation function [AF] for switching output 1 back to zero.	0.4	Bit	0 -> 1: Perform reset 1 -> 0: No function	0	-
Reset Event Counter Switching output 2	Sets the event counter of the activation function [AF] for switching output 2 back to zero.	0.5	Bit	0 -> 1: Perform reset 1 -> 0: No function	0	-
Reset Event Counter Switching output 3	Sets the event counter of the activation function [AF] for switching output 3 back to zero.	0.6	Bit	0 -> 1: Perform reset 1 -> 0: No function	0	-
Reset Event Counter Switching output 4	Sets the event counter of the activation function [AF] for switching output 4 back to zero.	0.7	Bit	0 -> 1: Perform reset 1 -> 0: No function	0	-
	Reserved	1	Byte			

Output data length:

2 bytes

10.13 Data output**10.13.1 Module 80 – Sorting****Description**

Module to support the sorting of the output data.

Parameter

Table 10.54: Parameters for module 80

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Sort criterion 1	Specifies the criterion according to which sorting takes place.	0.0 ... 0.6	BitArea	0: No sorting 1: Sorting according to scan number 2: Sorting according to position in the scanning beam 3: Sorting according to the oscillating mirror position 4: Sorting according to the decoding quality 5: Sorting according to the bar code length 6: Sorting according to the code type number 7: Sorting according to the decoding direction 8: Sorting according to the bar code content 9: Sorting according to time 10: Sorting according to scanning duration 11: Sorting according to the code list (in which the enabled bar codes are listed) 12: Sorting according to the identifier list	0	-
Sort direction 1	Specifies the sorting direction.	0.7	Bit	0: In ascending order 1: In descending order	0	-
Sort criterion 2	Specifies the criterion according to which sorting takes place.	1.0 ... 1.6	BitArea	See sorting criterion 1	0	-
Sort direction 2	Specifies the sorting direction.	1.7	Bit	See sorting direction 1	0	-
Sort criterion 3	Specifies the criterion according to which sorting takes place.	2.0 ... 2.6	BitArea	See sorting criterion 1	0	-
Sort direction 3	Specifies the sorting direction.	2.7	Bit	See sorting direction 1	0	-

Parameter length

3 bytes

Input data

None

Output data

None

10.14 Reference code comparison

The following modules can be used to support reference code comparison.

The reference code function compares the currently decoded read results with one or more stored comparison patterns. The function is split into two comparison units which can be configured independently of each other.

10.14.1 Module 81 – Reference code comparator 1

Description

The module defines the mode of operation of reference code comparator 1.

Parameter

Table 10.55: Parameters for module 81 – Reference code comparison

Parameter	Description	Add r.	Data type	Value range	Default	Unit
Output function after reference bar code comparison	This parameter specifies the associated output linkage after a reference bar code comparison.	0	UNSIGNED8	0: No function 1: Comparison function 1 2: Comparison function 2 3: Comparison function 1 AND 2 4: Comparison function 1 OR 2	1	-
Linking logic for reference code output signal	This parameter specifies the linking logic for the reference code output signal.	1	UNSIGNED8	0: Length and type and ASCII 1: Length and (type or ASCII) 2: (Length or type) and ASCII 3: Length or type or ASCII	0	-
Output for reference code comparison	This parameter specifies whether a bar code length comparison should be carried out.	2	UNSIGNED8	0: Length ignored 1: Comparison o.k. if length not identical 2: Comparison o.k. if length identical.	2	-
Bar code type comparison	This parameter specifies whether a bar code type comparison should be carried out.	3	UNSIGNED8	0: Type ignored 1: Comparison o.k. if types not identical 2: Comparison o.k. if types identical.	2	-
Reference code ASCII comparison	This parameter specifies how the ASCII comparison should be carried out.	4	UNSIGNED8	0: No comparison 1: Bar code not identical to RC 2: Bar code identical to RC 3: Bar code greater than RC 4: Bar code greater than or equal to RC 5: Bar code less than RC 6: Bar code less than or equal to RC 7: RC1 less than or equal to bar code less than or equal to RC2 8: Bar code less than RC1 or bar code greater than RC2	2	-
Reference code comparison mode	This parameter determines how and which reference bar codes (RC) are to be used for the bar code comparison.	5	UNSIGNED8	0: Only the first RC is used for the comparison. 1: Only the second RC is used for the comparison. 2: RC 1 and 2 are used for the comparison. Both conditions for RC 1 and 2 must be satisfied for a positive comparison. 3: RC 1 and 2 are used for the comparison. One of the two conditions for reference bar codes 1 and 2 must be satisfied.	0	-

Parameter	Description	Add r.	Data type	Value range	Default	Unit
Bar code comparison mode	This parameter specifies which decoded bar codes are to be used for the reference bar code comparison.	6	UNSIGNED8	0: Only the first bar code is used for the comparison. 1: Only the second bar code is used for the comparison. 2: All bar codes are used for the comparison. All comparisons must be successful. 3: All bar codes are used for the comparison. One comparison must be successful.	3	-
Reference code completeness comparison	If this parameter is set, the basic condition for a positive reference code comparison is that all mandatory bar codes that are to be read within a reading gate were actually read. If this condition is not satisfied, no positive reference code comparison is achieved.	7.0	Bit	0: Completeness comparison switched off. 1: Completeness comparison switched on.	0	-

Parameter length

8 byte

Input data

None

Output data

None

10.14.2 Module 82 – Reference code comparator 2**Description**

The module defines the mode of operation of reference code comparator 2.

Parameter

Table 10.56: Parameters for module 82 – Reference code comparison

Parameter	Description	Add r.	Data type	Value range	Default	Unit
Output function after reference bar code comparison	This parameter specifies the associated output linkage after a reference bar code comparison.	0	UNSIGNED8	0: No function 1: Comparison function 1 2: Comparison function 2 3: Comparison function 1 AND 2 4: Comparison function 1 OR 2	1	-
Linking logic for reference code output signal	This parameter specifies the linking logic for the reference code output signal.	1	UNSIGNED8	0: Length and type and ASCII 1: Length and (type or ASCII) 2: (Length or type) and ASCII 3: Length or type or ASCII	0	-
Output for reference code comparison	This parameter specifies whether a bar code length comparison should be carried out.	2	UNSIGNED8	0: Length ignored 1: Comparison o.k. if length not identical 2: Comparison o.k. if length identical.	2	-
Bar code type comparison	This parameter specifies whether a bar code type comparison should be carried out.	3	UNSIGNED8	0: Type ignored 1: Comparison o.k. if types not identical 2: Comparison o.k. if types identical.	2	-

Parameter	Description	Add r.	Data type	Value range	Default	Unit
Reference code ASCII comparison	This parameter specifies how the ASCII comparison should be carried out.	4	UNSIGNED8	0: No comparison 1: Bar code not identical to RC 2: Bar code identical to RC 3: Bar code greater than RC 4: Bar code greater than or equal to RC 5: Bar code less than RC 6: Bar code less than or equal to RC 7: RC1 less than or equal to bar code less than or equal to RC2 8: Bar code less than RC1 or bar code greater than RC2	2	-
Reference code comparison mode	This parameter determines how and which reference bar codes (RC) are to be used for the bar code comparison.	5	UNSIGNED8	0: Only the first RC is used for the comparison. 1: Only the second RC is used for the comparison. 2: RC 1 and 2 are used for the comparison. Both conditions for RC 1 and 2 must be satisfied for a positive comparison. 3: RC 1 and 2 are used for the comparison. One of the two conditions for reference bar codes 1 and 2 must be satisfied.	0	-
Bar code comparison mode	This parameter specifies which decoded bar codes are to be used for the reference bar code comparison.	6	UNSIGNED8	0: Only the first bar code is used for the comparison. 1: Only the second bar code is used for the comparison. 2: All bar codes are used for the comparison. All comparisons must be successful. 3: All bar codes are used for the comparison. One comparison must be successful.	3	-
Reference code completeness comparison	If this parameter is set, the basic condition for a positive reference code comparison is that all mandatory bar codes that are to be read within a reading gate were actually read. If this condition is not satisfied, no positive reference code comparison is achieved.	7.0	Bit	0: Completeness comparison switched off. 1: Completeness comparison switched on.	0	-

Parameter length

8byte

Input data

None

Output data

None

10.14.3Module 83 – Reference code comparison pattern 1**Description**

This module can be used to define the 1st comparison pattern.

Parameter

Table 10.57: Parameters for module 83 – Reference code comparison pattern

Parameter	Description	Add r.	Data type	Value range	Default	Unit
Code type comparison pattern 1	Specifies the type of the reference bar code.	0	UNSIGNED8	0: No code 1: 2/5 Interleaved 2: Code39 3: Code32 6: UPC, UPCE 7: EAN8, EAN13 8: Code128 10: EAN Addendum 11: Codabar 12: Code93 13: GS1 DataBar Omnidirectional 14: DataBar Limited 15: GS1 DataBar Expanded	0	-
Comparison pattern 1	Parameter string describing the content of the reference bar code. Note: You can also use the two placeholder characters that are stored in the "Wildcard character" and "Don't care character" parameters. If the string is empty, no comparison takes place. If the most recently stored character is the wildcard character, the comparison is only carried out up to the character before this wildcard character. In this way it is possible to switch off a comparison according to bar code length.	1	STRING 30 characters null terminated	1 ... 30 bytes of ASCII characters	\00	-

Parameter length

31 bytes

Input data

None

Output data

None

NOTE



The defined comparison pattern affects both reference code comparators (module 81 – reference code comparator 1 and module 82 – reference code comparator 2).

10.14.4 Module 84 – Reference code comparison pattern 2

Description

This module can be used to define the 2nd comparison pattern.

Parameter

Table 10.58: Parameters for module 84 – Reference code comparison pattern

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Code type comparison pattern 2	Specifies the type of the reference bar code.	0	UNSIGNED8	0: No code 1: 2/5 Interleaved 2: Code39 3: Code32 6: UPC, UPCE 7: EAN8, EAN13 8: Code128 10: EAN Addendum 11: Codabar 12: Code93 13: GS1 DataBar Omni-directional 14: DataBar Limited 15: GS1 DataBar Expanded	0	-
Comparison pattern 2	Parameter string describing the content of the reference bar code. Note: You can also use the two placeholder characters that are stored in the "Wildcard character" and "Don't care character" parameters. If the string is empty, no comparison takes place. If the most recently stored character is the wildcard character, the comparison is only carried out up to the character before this wildcard character. In this way it is possible to switch off a comparison according to bar code length.	1	STRING 30 characters null terminated	1 ... 30 bytes of ASCII characters	\00	-

Parameter length

31 bytes

Input data

None

Output data

None

NOTE



The defined comparison pattern affects both reference code comparators (module 81 – reference code comparator 1 and module 82 – reference code comparator 2).

10.15 Special functions

10.15.1 Module 90 – Status and control

This module supplies various device status information to the PROFIBUS master. Various functions of the device can be controlled via the master's output data.

Parameter

None

Input data

Table 10.59: Input data for module 90 – Status and control

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Reserved	Free	0.0	Bit		0	-
AutoRefl state	Signal state of the AutoRefl module	0.1	Bit	0: Reflector is recognized 1: Reflector is hidden	1	-

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Auto Control result	Indicates whether the result of the Auto-Control function was a good or bad reading.	0.2	Bit	0: Quality good 1: Quality bad	0	-
Reserved	Free	0.3	Bit		0	-
RefCode comparison state 1	The signal indicates whether the decoded bar code corresponds to the reference code with regard to the comparison criteria as defined in the comparison function 1. If it matches, the value 1 is output.	0.4 ... 0.5	Bit	0: Not equal 1: Equal 2: Unknown	2	-
RefCode comparison state 2	The signal indicates whether the decoded bar code corresponds to the reference code with regard to the comparison criteria as defined in the comparison function 2. If it matches, the value 1 is output.	0.6 ... 0.7	Bit	0: Not equal 1: Equal 2: Unknown	2	-

Input data length:

1 byte

Output data

None

10.15.2 Module 91 – AutoRefIAct (automatic reflector activation)**Description**

The module defines the mode of operation of the diffuse laser sensor for controlling the reading gate.

The AutoRefIAct function uses the scanning beam to simulate a photoelectric sensor and thus permits an activation without additional sensory mechanism. This is achieved by directing the scanner with reduced scanning beam towards a reflector mounted behind the conveyor path. As long as the scanner is targeted at the reflector, the reading gate remains closed. If, however, the reflector is blocked by an object such as a container with a bar code label, the scanner activates the read procedure, and the label on the container is read. When the path from the scanner to the reflector has cleared, the read procedure has completed and the scanning beam is reduced and again directed onto the reflector. The reading gate is closed.

Parameter

Table 10.60: Parameters for module 91 – AutoreflAct

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Mode	This parameter activates the function of the diffuse laser sensor. If "Autom. reading gate control" is set as the parameter value, the device activates the reading gate automatically if the reflector is obscured.	0	UNSIGNED8	0: Normal - AutoreflAct switched off. 1: Auto - AutoreflAct activated. Autom. reading gate control. 2: Manual - AutoreflAct activated. No reading gate control, signaling only.	0	-
Debouncing	The parameter defines the debounce time in scans for the reflector detection. With a motor speed of 1000, 1 scan corresponds to a debounce time of 1 ms.	1	UNSIGNED8	1 ... 16	5	-

Parameter length

2 bytes

Input data

None

Output data

None

10.15.3 Module 92 – AutoControl

Description

The module defines the mode of operation of the function AutoControl. The function monitors the quality of the decoded bar codes and compares these with a limit value. If the limit is reached, a status is set.

Parameter

Table 10.61: Parameters for module 92 – AutoControl

Parameter	Description	Addr.	Data type	Value range	Default	Unit
AutoControl enable	This parameter can be used to activate or deactivate the AutoControl function.	0	UNSIGNED8	0: Deactivated 1: Activated	0	-
Limit for reading quality	The parameter defines a threshold for the reading quality.	1	UNSIGNED8	0 ... 100	50	%
Sensitivity	With this parameter the sensitivity towards changes in the reading ability can be specified. The higher the value, the less influence a change of reading ability has.	2	UNSIGNED8	0 ... 255	0	-

Parameter length

3 bytes

Input data

Table 10.62: Input data for module 92 – AutoControl

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Scan quality	Represents the current average value of the scan quality (at the time of the last reading gate).	0	UNSIGNED8	0 ... 100	0	-

Input data length

1 byte

Output data

None

NOTE

By means of the AutoControl function, it is possible to detect bar codes of decreasing quality and thus take appropriate measures before the label is no longer legible. With activated AutoControl function, note that the "Processing end at end of label" parameter in the CRT module should be set to allow for a better assessment of the bar code quality (see chapter 10.6.3 "Module 7 – Code reconstruction technology").


10.16 Example configuration: Indirect activation via the PLC

10.16.1 Task

- Reading of a 10-digit code in 2/5 Interleaved format
- Activation of the device via the PLC

Code sample

Code 2/5 Interleaved 10 digits with check digit

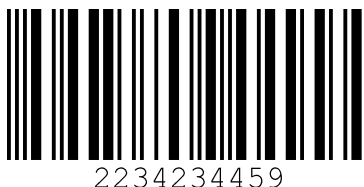

10.16.2 Procedure

Hardware, connections

The following connections must have been established:

- Voltage supply (PWR)
- PROFIBUS In
- PROFIBUS termination

Required modules

Include the following modules in your project:

- Module 10 – Activations
- Module 23 – Decoding result 12 bytes

Parameter settings

No parameters need to be set separately. The standard parameter set provides all required functions.

Flow charts

Table 10.63: Successful reading

PLC	Photoelectric sensor	BCL	Description
Time	Photoelectric sensor from 0 -> 1		The photoelectric sensor is interrupted.
	M 10 bit 0.0 0 -> 1		Activation bit 0.0 is set to 1. This activates the reading gate.
	M 23 bit 0.1 from 0 -> 1 M 23 bit 0.2 = 0 M 23 byte 1 = data length M 23 byte 2 to 16: result		The bar codes that have been read are processed and transmitted by module 23: Reading concluded bit 0.1 = 1 and bar code not decoded bit 0.2 = 0. The data length is entered in byte 1, in this case 15 decimal. The decoding result is transmitted in the following 15 bytes.
	Internal processing		Internal data processing.
	M 10 bit 0.0 1 -> 0		Activation bit 0.0 is reset to 0.

Table 10.64: Unsuccessful reading

PLC	Photoelectric sensor	BCL	Description
Time	Photoelectric sensor from 0 - > 1		The photoelectric sensor is interrupted.
	M 10 bit 0.0 0 -> 1		Activation bit 0.0 is reset to 1.
	Photoelectric sensor from 1 - > 0		The reading gate elapses without read result.
	M 10 bit 0.0 0 -> 1		Activation bit 0.0 is reset to 0.
	M 23 bit 0.1 from 0 -> 1 M 23 bit 0.2 from 0 -> 1 M 23 byte 1 = data length M 23 byte 2 = result		The module decoding state signals: Reading concluded bit 0.1 = 1 and bar code not decoded bit 0.2 = 1. The data length 1 is entered in byte 1. The result hex 3F (? = no read) is transmitted.
	Internal processing		Internal processing of the data and signaling of the non-reading.


10.17 Example configuration: Direct activation via the switching input

10.17.1 Task

- Reading of a 12-digit bar code in 2/5 Interleaved format
- Direct activation of the device via a photoelectric sensor

Code sample

Code 2/5 Interleaved 12 digits with check digit

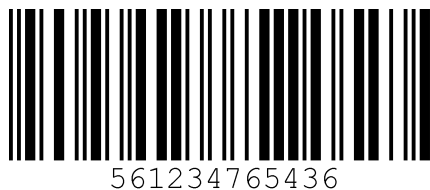

10.17.2 Procedure

Hardware, connections

The following connections must have been established:

- Voltage supply (PWR)
- PROFIBUS In
- PROFIBUS termination
- Photoelectric sensor at SWIO1

Required modules

Include the following modules in your project:

- Module 23 – Decoding result 12 bytes

Parameter settings of the "common parameters"

Table 10.65: Device parameters for example configuration 2

Byte	Description	Default value	Change value to:
1	Code type 1	0	01: 2/5 Interleaved
4	Number of digits 3	0	12

Flow charts

Table 10.66: Successful reading

PLC	Photoelectric sensor	BCL	Description
Time	Internal processing		The photoelectric sensor is interrupted. The signal of the switching output of the photoelectric sensor is present at the switching input of the device and activates the scanner.
			The bar codes that have been read are processed and transmitted by module 23: Reading concluded bit 0.1 = 1 and bar code not decoded bit 0.2 = 0. The data length is entered in byte 1, in this case 12 decimal. The decoding result is transmitted in the following 12 bytes.
			Internal data processing.
			The beam of the photoelectric sensor is cleared and sets the switching input of the device to 0. This deactivates the scanner.

Table 10.67: Unsuccessful reading

PLC	Photoelectric sensor	BCL	Description
Time	Internal processing		The photoelectric sensor is interrupted. The signal of the switching output of the photoelectric sensor is present at the switching input of the device and activates the scanner.
			The beam of the photoelectric sensor is cleared before a read result is present. The photoelectric sensor sets the switching input of the device to 0 and deactivates the scanner.
			The module decoding state signals: Reading concluded bit 0.1 = 1 and bar code not decoded bit 0.2 = 1. The data length 1 is entered in byte 1. The result hex 3F (? = no read) is transmitted.
			Internal data processing.

11 Online commands

11.1 Overview of commands and parameters

Online commands can be used to send commands directly to the device for control and configuration. For this purpose, the device must be connected to a host- or service computer via the interface. The commands described can be sent either via the host or the service interface.

Online commands

With the commands, you can:

- control/decode.
- read/write/copy parameters.
- carry out an automatic configuration.
- teach-in/set reference codes.
- call up error messages.
- call up statistical device information.
- carry out a software reset in order to reinitialize the device.

Syntax

Online commands consist of one or two ASCII characters followed by command parameters.

No separation characters may be entered between the command and the command parameter(s). Both small and capitalized letters can be used.

Example:

Command 'CA': autoConfig function
 Parameter '+': Activation
 Transmitted is: 'CA+'

Notation

Commands, command parameters and returned data are enclosed between single quotation marks ' ' in the text of this manual.

Most "online" commands are acknowledged by the device and any requested data returned. For commands that are not acknowledged, command execution can be observed or monitored directly on the device.

11.1.1 General online commands

Software version number

Command	'V'
Description	Requests device version information
Parameters	No
Acknowledgment	'BCL 500i SM 100 V 1.3.8 2008-02-15' The first line contains the device type, followed by the device version number and version date. (The data which is actually displayed may vary from the values given here.)

NOTE



This command returns the major release number of the software packet. This major release number also appears on the display during start-up.

This command can be used to check whether the connected host or service computer is properly connected and configured. If you do not receive an acknowledgment, please check interface connections, protocol and service switches.

Software reset

Command	'H'
Description	Carries out a software reset. The device is restarted and reinitialized, leaving it in the same state as when the supply voltage is switched on.
Parameters	No
Acknowledgment	'S' (start character)

Code recognition

Command	'CC'
Description	Detects an unknown bar code and outputs number of digits, code type, and code information to the interface, without storing the bar code in the parameter memory.
Parameters	No
Acknowledgment	<p>'xx yy zzzzz'</p> <p>xx: Number of digits of the read code</p> <p>yy: Code type of the read code</p> <p>'01' 2/5 Interleaved</p> <p>'02' Code 39</p> <p>'03' Code 32</p> <p>'06' UPC (A, E)</p> <p>'07' EAN</p> <p>'08' Code 128, EAN 128</p> <p>'10' EAN Addendum</p> <p>'11' Codabar</p> <p>'12' Code 93</p> <p>'13' GS1 Databar Omnidirectional</p> <p>'14' GS1 Databar Limited</p> <p>'15' GS1 Databar Expanded</p> <p>zzzzz: Contents of the decoded label. A – appears if the label was not correctly read.</p>

autoConfig

Command	'CA'
Description	Activates or deactivates the 'autoConfig' function. Certain label reading parameters are programmed automatically in the setup by the labels which the device reads while the autoConfig function is active.
Parameters	<p>'+' Activates 'autoConfig'</p> <p>'/' Rejects the last code read</p> <p>'-' Deactivates 'autoConfig' and stores the decoded data in the current parameter set</p>
Acknowledgment	<p>'CSx'</p> <p>x Status</p> <p>'0' Valid 'CA' command</p> <p>'1' Invalid command</p> <p>'2' autoConfig could not be activated</p> <p>'3' autoConfig could not be deactivated</p> <p>'4' Result could not be deleted</p>
Description	<p>'xx yy zzzzz'</p> <p>xx Number of digits of the read code</p> <p>yy Code type of the read code</p> <p>'01' 2/5 Interleaved</p> <p>'02' Code 39</p> <p>'03' Code 32</p> <p>'06' UPC (A, E)</p> <p>'07' EAN</p> <p>'08' Code 128, EAN 128</p> <p>'10' EAN Addendum</p> <p>'11' Codabar</p> <p>'12' Code 93</p> <p>'13' GS1 Databar Omnidirectional</p> <p>'14' GS1 Databar Limited</p> <p>'15' GS1 Databar Expanded</p> <p>zzzzz: Contents of the decoded label. A – appears if the label was not correctly read.</p>

Alignment mode

Command	'JP'
Description	<p>This command simplifies mounting and alignment of the device. After activating the function with JP+, the device continuously supplies status information to the serial interfaces.</p> <p>With this online command, the scanner is set to terminate the decoding after 100 successfully decoded labels and output the status information. Subsequently, the read process is reactivated automatically.</p> <p>In addition to the output of the status information, the laser beam is used to display the reading quality. Depending on how many read results could be extracted, the duration of the laser's "OFF" time increases.</p> <p>If the reading quality is high, the laser beam flashes in brief, regular intervals. The worse the decoder decodes, the longer the pauses become during which the laser is switched off. The flashing intervals become more and more irregular because the laser may, in total, be active for longer to extract more labels. The duration of the pauses has been stepped in such a way that they can be distinguished by the eye.</p>
Parameters	<p>'+' : Starts the adjustment mode.</p> <p>'-' : Ends the adjustment mode.</p>
Acknowledgment	<p>'yyy_zzzzzz'</p> <p>yyy: Read quality in %. A high process availability is ensured at read qualities > 75 %.</p> <p>zzzzz: Bar code information.</p>

Manual definition of the reference code

Command	'RS'
Description	This command can be used to define a new reference code in the device by means of direct input via the serial interface. The data is saved in the parameter set according to your input under reference code 1 through 2 and stored in the working buffer for direct further processing.
Parameters	<p>'RSyvxzzzzzz'</p> <p>y, v, x and z are placeholders (variables) for the actual input.</p> <p>y Defined reference code no.</p> <p>'1' (code 1)</p> <p>'2' (code 2)</p> <p>v Storage location for reference code:</p> <p>'0' RAM+EEPROM,</p> <p>'3' RAM only</p> <p>xx Defined code type (see command 'CA')</p> <p>z Defined code information (1 ... 63 characters)</p>
Acknowledgment	<p>'RSx'</p> <p>x Status</p> <p>'0' Valid 'Rx' command</p> <p>'1' Invalid command</p> <p>'2' Insufficient memory for reference code</p> <p>'3' Reference code has not been saved</p> <p>'4' Reference code invalid</p>
Example	Entry = 'RS130678654331' (Code 1 (1), RAM only (3), UPC (06), code information)

Reference code teach-in

Command	'RT'
Description	This command enables a reference code to be defined quickly by reading an example label.
Parameters	<p>'RTy'</p> <p>y Function</p> <p>'1' Defines reference code 1</p> <p>'2' Defines reference code 2</p> <p>'+' Activates the definition of reference code 1 up to the value of Parameter no_of_labels</p> <p>'-' Ends the teach event</p>

Command	'RT'
Acknowledgment	<p>The device first responds with the command 'RS' and corresponding status (see command RS). After a bar code has been read, it sends the result in the following format:</p> <p>'RCyvxzzzzz'</p> <p>y, v, x and z are placeholders (variables) for the actual input.</p> <p>y Defined reference code no. '1' (code 1) '2' (code 2)</p> <p>v Storage location for reference code '0' RAM+EEPROM, '3' RAM only</p> <p>xx Defined code type (see command 'CA')</p> <p>z Defined code information (1 ... 63 characters)</p>

NOTE

With this function, only code types are recognized that are identified using the 'autoConfig' function or which were set in the set-up.

⚠ After each reading via an 'RTy' command, explicitly switch off the function again since failure to do so will interfere with other commands as well as prevent execution of a new 'RTx' command.

Reading a reference code

Command	'RR'
Description	The command reads out the reference code defined in the device. If no parameters are specified, all defined codes are output.
Parameters	<p><Reference code number> '1' ... '2' value range of reference codes 1 to 2</p>
Acknowledgment	<p>If no reference codes are defined, the device responds with the 'RS' command and corresponding status (see command RS). For valid codes, the output corresponds to the following format:</p> <p>RCyvxzzzzz</p> <p>y, v, x and z are placeholders (variables) for the actual input.</p> <p>y Defined reference code no. '1' (code 1) '2' (code 2)</p> <p>v Storage location for reference code '0' RAM+EEPROM, '3' RAM only</p> <p>xx Defined code type (see command 'CA')</p> <p>z Defined code information (1 ... 63 characters)</p>

11.1.2 Online commands for system control**Activating sensor input**

Command	'+'
Description	<p>The command activates decoding. This command is used to activate the reading gate. It remains active until it is deactivated by one of the following criteria:</p> <ul style="list-style-type: none"> • Deactivation by a manual command • Deactivation by a switching input • Deactivation upon reaching the specified read quality (equal scans) • Deactivation by timeout • Deactivation upon reaching a preset number of scans without information.
Parameters	No
Acknowledgment	None

Deactivating sensor input

Command	'_'
Description	The command activates decoding. This command can be used to deactivate the reading gate. Following deactivation, the read result is output. Because the reading gate was manually deactivated and, thus, no GoodRead criterion was met, a NoRead is output.
Parameters	No
Acknowledgment	None

System boot-up

Command	'SON'
Description	System boot-up: changes the device from standby mode back to operating mode. The polygon wheel motor is started, the device works as usual.
Parameters	No
Acknowledgment	'S' (start character)

System standby

Command	'SOS'
Description	System standby: puts the device in standby mode. The device cannot be triggered, and the polygon wheel motor is stopped.
Parameters	No
Acknowledgment	None

11.1.3 Online commands for configuring the switching inputs/outputs

Activate switching output

Command	'OA'
Description	The switching outputs 1 - 4 can be activated with this command. The respective port must have been configured as a switching output. The logic state is output, i.e., an inverted logic is taken into account (e.g., inverted logic and a state of High corresponds to a voltage of 0V at the switching output).
Parameters	'OA<a> <a> Selected switching output [1..4], unit [dimensionless]
Acknowledgment	None

Query the state of the switching outputs

Command	'OA'
Description	This command may be used to query the states of the switching inputs and outputs that are configured as a switching output and that have been set via commands. The logic state is output, i.e., an inverted logic is taken into account (e.g., inverted logic and a state of High corresponds to a voltage of 0V at the switching output).
Parameters	'OA?'
Acknowledgment	'OA S1=<a>;S2=<a>;S3=<a>;S4=<a>' <a> State of the switching outputs '0' Low '1' High 'I' Configuration as switching input 'P' Passive configuration

Set the state of the switching outputs

Command	'OA'
Description	This command is used to set the states of the switching inputs/outputs that are configured as a switching output. The logic state is specified, i.e., an inverted logic is taken into account (e.g., inverted logic and a state of High corresponds to a voltage of 0V at the switching output). The values of the switching inputs/outputs that are not configured as switching outputs are ignored. You may also use only a selection of the existing switching inputs/outputs as long as these are listed in ascending order.
Parameters	'OA [S1=<a>;S2=<a>;S3=<a>;S4=<a>' <a> State of the switching output '0' Low '1' High
Acknowledgment	'OA=<aa>'

Command	'OA'
	<aa> Status acknowledgment, unit [dimensionless] '00' Ok '01' Syntax error '02' Parameter error '03' Other error

Deactivate switching output

Command	'OD'
Description	The switching outputs 1 - 4 can be deactivated with this command. The respective port must have been configured as a switching output. The logic state is output, i.e., an inverted logic is taken into account (e.g., inverted logic and a state of High corresponds to a voltage of 0V at the switching output).
Parameters	'OD<a>' <a> Selected switching output [1..4], unit [dimensionless]
Acknowledgment	None

Query the configuration of the switching inputs/outputs

Command	'OF'
Description	This command is used to query the configuration of the switching inputs/outputs 1 to 4.
Parameters	'OF?'
Acknowledgment	'OF S1=<a>;S2=<a>;S3=<a>;S4=<a>' <a> Function of the switching input/ output, unit [dimensionless] 'I' Switching input 'O' Switching output 'P' Passive

Configure the switching inputs/outputs

Command	'OF'
Description	This command is used to configure the function of the switching inputs/outputs 1 to 4. You may also use only a selection of the existing switching inputs/outputs as long as these are listed in ascending order.
Parameters	'OF [S1=<a>;S2=<a>;S3=<a>;S4=<a>' <a> Function of the switching input/ output, unit [dimensionless] 'I' Switching input 'O' Switching output 'P' Passive
Acknowledgment	'OF=<bb>' <bb> Status acknowledgment '00' Ok '01' Syntax error '02' Parameter error '03' Other error

11.1.4 Online commands for the parameter set operations

Copying parameter set

Command	'PC'
Description	This command can only be used to copy parameter sets in their entirety. This can be used to replicate the three parameter sets default , permanent and operating parameters on the basis of one another. In addition, this command also be used to restore the factory settings.
Parameters	'PC<Source type><Target type>' <Source type> Parameter data set that is to be copied, unit [dimensionless] '0' Parameter data set in permanent memory '2' Default or factory parameter set

Command	'PC'
	<p>'3' Operating parameter data set in volatile memory</p> <p><Target type> Parameter set into which the data is to be copied, unit [dimensionless]</p> <p>'0' Parameter data set in permanent memory</p> <p>'3' Operating parameter data set in volatile memory</p> <p>Permissible combinations here include:</p> <p>'03' Copying the data set from the permanent memory to the operating parameter data set</p> <p>'30' Copying the operating parameter data set to the permanent parameter set memory</p> <p>'20' Copying the default parameters to the permanent memory and to the main memory</p>
Acknowledgment	<p>'PS=<aa>'</p> <p><aa> Status acknowledgment, unit [dimensionless]</p> <p>'00' Ok</p> <p>'01' Syntax error</p> <p>'02' Impermissible command length</p> <p>'03' Reserved</p> <p>'04' Reserved</p> <p>'05' Reserved</p> <p>'06' Impermissible combination, source type - target type</p>

Requesting parameter data set from device

Command	'PR'
Description	The parameters of the device are grouped together in a parameter set and permanently stored in memory. There is one parameter set in permanent memory and one operating parameter set in volatile memory; in addition, there is a default parameter set (factory parameter set) for initialization. This command can be used to edit the first two parameter sets (in permanent and volatile memory). A check sum can be used for reliable parameter transfer.
Parameters	<p>'PR<BCC type><PS type><Address><Data length>[<BCC>]'</p> <p><BCC type> Check-digit function during transmission, unit [dimensionless]</p> <p>'0' Not used</p> <p>'3' BCC mode 3</p> <p><PS type> Memory from which the values are to be read, unit [dimensionless]</p> <p>'0' Parameter values stored in the flash memory</p> <p>'1' Reserved</p> <p>'2' Default values</p> <p>'3' Operating values in RAM</p> <p><Address> Relative address of the data within the data set</p> <p>'aaaa' Four-digit, unit [dimensionless]</p> <p><Data length> Length of the parameter data to be transferred</p> <p>'bbbb' Four-digit, unit [length in bytes]</p> <p><BCC> Check sum calculated as specified under BCC type</p>

Command	'PR'
Acknowledgment positive	<p>PT<BCC type><PS type><Status><Start></p> <p><Address parameter value><Address+1 parameter value>...</p> <p>[;<Address><Address parameter value>][<BCC>]</p> <p><BCC type> Check-digit function during transmission, unit [dimensionless]</p> <p> '0' Not used</p> <p> '3' BCC mode 3</p> <p><PS type> Memory from which the values are to be read, unit [dimensionless]</p> <p> '0' Parameter values stored in the flash memory</p> <p> '2' Default values</p> <p> '3' Operating values in RAM</p> <p><Status> Mode of parameter processing, unit [dimensionless]</p> <p> '0' No further parameters</p> <p> '1' Additional parameters follow</p> <p><Start> Relative address of the data within the data set,</p> <p> 'aaaa' Four-digit, unit [dimensionless]</p> <p><P.value A.> Parameter value of the parameter stored at this address; the parameter set data 'bb' is converted from HEX format to a 2-byte ASCII-format for transfer.</p> <p><BCC> Check sum calculated as specified under BCC type</p>
Acknowledgment negative	<p>'PS=<aa>'</p> <p>Parameter reply:</p> <p><aa> Status acknowledgment, unit [dimensionless]</p> <p> '01' Syntax error</p> <p> '02' Impermissible command length</p> <p> '03' Impermissible value for checksum type</p> <p> '04' Invalid check sum received</p> <p> '05' Impermissible number of data requested</p> <p> '06' Requested data does not (any longer) fit in the transmission buffer</p> <p> '07' Impermissible address value</p> <p> '08' Read access after end of data set</p> <p> '09' Impermissible QPF data set type</p>

Determining parameter set difference to default parameters

Command			'PD'
Description			<p>This command outputs the difference between the default parameter set and the operating parameter set or the difference between the default parameter set and the permanent parameter set.</p> <p>Comment: The reply supplied by this command can e.g. be directly used for programming a device with factory settings, whereby this device receives the same configuration as the device on which the PD-sequence was executed.</p>
Parameters	<p>'PD<P.set1><P.set2>'</p> <p><P.set1> Parameter data set that is to be copied, unit [dimensionless]</p> <p> '0' Parameter data set in permanent memory</p> <p> '2' Default or factory parameter set</p> <p><P.set2> Parameter set into which the data is to be copied, unit [dimensionless]</p> <p> '0' Parameter data set in permanent memory</p> <p> '3' Operating parameter data set in volatile memory</p> <p>Permissible combinations here include:</p> <p> '20' Output of the parameter differences between the default and the permanently saved parameter set</p> <p> '23' Output of the parameter differences between the default parameter set and the operating parameter set saved in volatile memory</p> <p> '03' Output of the parameter differences between the permanent parameter set and the operating parameter set saved in volatile memory</p>		
Acknowledgment positive	<p>PT<BCC><PS type><Status><Adr.><P.value adr.><P.valueAdr.+1>... [:<Adr.><P.value adr.>]</p> <p><BCC></p> <p> '0' No check digits</p> <p> '3' BCC mode 3</p> <p><PS type></p> <p> '0' Values stored in flash memory</p> <p> '3' Operating values stored in RAM</p> <p><Status></p> <p> '0' No further parameters</p> <p> '1' Additional parameters follow</p> <p><Adr.></p> <p> 'aaaa' Four-digit, unit [dimensionless]</p> <p><P.value></p> <p> Parameter value of the -bb- parameter stored at this address. The parameter set data is converted from HEX format to a 2-byte-ASCII format for transfer.</p>		
Acknowledgment negative	<p>'PS=<aa>'</p> <p><aa> Status acknowledgment, unit [dimensionless]</p> <p> '0' No difference</p> <p> '1' Syntax error</p> <p> '2' Impermissible command length</p> <p> '6' Impermissible combination, parameter set 1 and parameter set 2</p> <p> '8' Invalid parameter set</p>		

Writing parameter set

Command	'PT'
Description	The parameters of the device are grouped together in a parameter set and permanently stored in memory. There is one parameter set in permanent memory and one operating parameter set in volatile memory; in addition, there is a default parameter set (factory parameter set) for initialization. This command can be used to edit the first two parameter sets (in permanent and volatile memory). A check sum can be used for reliable parameter transfer.
Parameters	<p>PT<BCC type><PS type><status><addr.><P. value addr.> <P. value addr+1>... [;<addr.><P. value addr.>][<BCC>]</p> <p><BCC type> Check-digit function during transmission, unit [dimensionless]</p> <p>'0' No check digits</p> <p>'3' BCC mode 3</p> <p><PS type> Memory from which the values are to be read, unit [dimensionless]</p> <p>'0' Parameter values stored in the flash memory</p> <p>'3' Operating values stored in RAM</p> <p><Status> Mode of parameter processing, without function here, unit [dimensionless]</p> <p>'0' No reset after parameter change, no further parameters</p> <p>'1' No reset after parameter change, additional parameters follow</p> <p>'2' With reset after parameter change, no further parameters</p> <p>'6' Set parameters to factory setting, no further parameters</p> <p>'7' Set parameters to factory settings, lock all code types; the code-type setting must follow in the command!</p> <p><Addr.> Relative address of the data within the data set, 'aaaa' Four-digit, unit [dimensionless]</p> <p><P.value> Parameter value of the -bb- parameter stored at this address. The parameter set data is converted from HEX format to a 2-byte-ASCII format for transfer.</p> <p><BCC> Check sum calculated as specified under BCC type</p>
Acknowledgment	<p>'PS=<aa>'</p> <p>Parameter reply:</p> <p><aa> Status acknowledgment, unit [dimensionless]</p> <p>'01' Syntax error</p> <p>'02' Impermissible command length</p> <p>'03' Impermissible value for checksum type</p> <p>'04' Invalid check sum received</p> <p>'05' Impermissible data length</p> <p>'06' Invalid data (parameter limits violated)</p> <p>'07' Invalid start address</p> <p>'08' Invalid parameter set</p> <p>'09' Invalid parameter type</p>

12 Care, maintenance and disposal

Usually, the bar code reader does not require any maintenance by the operator.

12.1 Cleaning

🔧 In the event of dust build-up, clean the device with a soft cloth; use a cleaning agent (commercially available glass cleaner) if necessary.

NOTE



Do not use aggressive cleaning agents such as thinner or acetone for cleaning the device. Use of improper cleaning agents can damage the optical window.

12.2 Repairs, servicing

Repairs to the device must only be carried out by the manufacturer.

🔧 Contact your Leuze distributor or service organization should repairs be required.
The addresses can be found in Chapter 14.

NOTE



When sending devices to Leuze electronic for repair, please provide an accurate description of the error.

12.3 Disposing

🔧 For disposal observe the applicable national regulations regarding electronic components.

13 Diagnostics and troubleshooting

13.1 General causes of errors

Table 13.1: General causes of errors

Error	Possible error cause	Measures
Status LED PWR		
Off	<ul style="list-style-type: none"> No supply voltage connected to the device Hardware error 	<ul style="list-style-type: none"> Check supply voltage Send device to customer service
Orange, continuous light	<ul style="list-style-type: none"> Device in service mode 	<ul style="list-style-type: none"> Reset service mode with webConfig tool or display
Red, flashing	<ul style="list-style-type: none"> Warning 	<ul style="list-style-type: none"> Query diagnostic data and carry out the resulting measures
Red, continuous light	<ul style="list-style-type: none"> Error: no function possible 	<ul style="list-style-type: none"> Internal device error, send in device
Status LED NET		
Off	<ul style="list-style-type: none"> No supply voltage connected to the device Device not yet recognized by the PROFIBUS 	<ul style="list-style-type: none"> Check supply voltage Send device to customer service
Orange, flashing	<ul style="list-style-type: none"> Topology error detected Deviating target/actual topology 	<ul style="list-style-type: none"> Check interface
Red, flashing	<ul style="list-style-type: none"> Error on the PROFIBUS 	<ul style="list-style-type: none"> Can be corrected by resetting
Red, continuous light	<ul style="list-style-type: none"> Error on the PROFIBUS 	<ul style="list-style-type: none"> Cannot be corrected by resetting Send device to customer service

13.2 Interface errors

Table 13.2: Interface error

Error	Possible error cause	Measures
No communication via USB service interface	<ul style="list-style-type: none"> Incorrect interconnection cable Connected device is not recognized 	<ul style="list-style-type: none"> Check interconnection cable Install USB driver
No communication via PROFIBUS. BUS status LED, red, continuous light	<ul style="list-style-type: none"> Incorrect wiring Wrong termination Incorrect PROFIBUS address set Incorrect configuration 	<ul style="list-style-type: none"> Check wiring Check termination Check PROFIBUS address Check configuration of the device in the configuration tool
Sporadic errors on the PROFIBUS	<ul style="list-style-type: none"> Incorrect wiring Wrong termination Effects due to EMC Overall network expansion exceeded 	<ul style="list-style-type: none"> Check wiring Check termination Check shielding Check grounding concept and connection to the functional earth Avoid EMC coupling caused by power cables laid parallel to device lines Check max. network expansion as a function of the set baud rate

14 Support

Service hotline

You can find the contact information for the hotline in your country on our website www.leuze.com under **Contact & Support**.

Repair service and returns


Defective devices are repaired in our service centers competently and quickly. We offer you an extensive service packet to keep any system downtimes to a minimum. Our service center requires the following information:

- Your customer number
- Product description or part description
- Serial number or batch number
- Reason for requesting support together with a description

Please register the merchandise concerned. Simply register return of the merchandise on our website www.leuze.com under **Contact & Support > Repair Service & Returns**.

To ensure quick and easy processing of your request, we will send you a returns order with the returns address in digital form.

What to do should servicing be required?

NOTE	
	<p>Please use this chapter as a master copy should servicing be required.</p> <p>✉ Enter the contact information and fax this form together with your service order to the fax number given below.</p>

Customer data (please complete)

Device type:	
Serial number:	
Firmware:	
Display messages:	
Status of LEDs:	
Error description	
Company:	
Contact person/department:	
Phone (direct dial):	
Fax:	
Street / no.:	
ZIP code / City:	
Country:	

Leuze Service fax number:

+49 7021 573 - 199

15 Technical data

15.1 General specifications of the bar code readers


15.1.1 Line scanner

Table 15.1: Technical data of the BCL 504/i line scanners without heating

Type	BCL 504/i PROFIBUS DP
Design	Line scanner without heating
Optical data	
Light source	Laser diode $\lambda = 655\text{nm}$ (red light)
Beam exit	At the front
Max. output power (peak)	2 mW
Pulse duration	<150 μs
Scanning rate	1000 scans/s (adjustable in the range 800 ... 1200 scans/s)
Beam deflection	Via rotating polygon wheel
Useful opening angle	Max. 60°
Optics models / resolution	High Density (N): 0.25 ... 0.5mm Medium Density (M): 0.35 ... 0.8 mm Low Density (F): 0.5 ... 1.0 mm Ultra Low Density (L): 0.7 ... 1.0 mm
Reading distance	See reading field curves
Laser class	1 acc. to IEC 60825-1:2014 / EN 60825-1:2014+A11:2021 and U.S. 21 CFR 1040.10 with Laser Notice No. 56
Bar code data	
Code types	2/5 Interleaved, Code 39, Code 128, EAN 128, EAN / UPC, Codabar, Code 93, GS1 DataBar Omnidirectional
Bar code contrast (PCS)	$\geq 60\%$
Ambient light tolerance	2000 lx (on the bar code)
Number of bar codes per scan	6

Type	BCL 504/i PROFIBUS DP
Design	Line scanner without heating
Electrical data	
Interface type	1x RS 485 on 2x M12 (B)
Protocols	PROFIBUS DP
Baud rate	9.6kBaud ... 12MBaud
Data formats	Slave DPV1
Service interface	USB 1.1 compatible, A-coded
Switching input / switching output	4 switching inputs/outputs, freely programmable functions - Switching input: 10 ... 30 V DC depending on supply voltage, I max. = 8 mA - Switching output: 10 ... 30VDC depending on supply voltage, I max. = 60mA (short-circuit proof) Switching inputs/outputs protected against polarity reversal!
Operating voltage	10 ... 30 V DC (Class II, protection class III)
Power consumption	Max. 10 W
Operating and display elements	
Display	Monochromatic graphical display, 128 x 64 pixel, with background lighting
Keyboard	4 buttons
LEDs	2 LEDs for power (PWR) and bus state (NET), two-colored (red/green)
Mechanical data	
Degree of protection	IP 65 (with screwed-on M12 connectors or mounted caps)
Weight	1.1 kg
Dimensions (H x W x D)	63 x 123.5 x 106.5 mm
Housing	Diecast aluminum
Environmental data	
Operating temperature range	0 °C ... -40 °C
Storage temperature range	-20 °C ... +70 °C
Air humidity	Max. 90% rel. humidity, non-condensing
Vibration	IEC 60068-2-6, test Fc
Shock	IEC 60068-2-27, test Ea
Continuous shock	IEC 60068-2-29, test Eb
Electromagnetic com- patibility	EN 55022; IEC 61000-6-2 (contains IEC 61000-4-2, -3, -4, -5 and -6) ^{a)}

a) This is a Class A product. In a domestic environment this product may cause radio interference, in which case the operator may be required to take adequate measures.

⚠ CAUTION!	
	For UL applications, use is only permitted in Class 2 circuits in accordance with the NEC (National Electric Code). The bar code readers are designed in accordance with protection class III for supply by PELV (protective extra-low voltage with reliable disconnection).

15.1.2 Oscillating-mirror scanner

Technical data same as for line scanner without heating, however with the following differences:

Table 15.2: Technical data of the BCL 504/i oscillating-mirror scanners with heating

Type	BCL 504/i PROFIBUS DP
Design	Oscillating-mirror scanner without heating
Optical data	
Beam exit	Lateral zero position at an angle of 90°
Beam deflection	Via rotating polygon wheel (horizontal) and stepping motor with mirror (vertical)
Oscillation frequency	0 ... 10 Hz (adjustable, max. frequency is dependent on set swivel angle)
Max. swivel angle	±20° (adjustable)
Reading field height	See reading field curves
Electrical data	
Power consumption	Max. 14 W
Mechanical data	
Weight	1.5 kg
Dimensions (H x W x D)	84 x 173 x 147 mm

15.2 Heating models of the bar code readers

The bar code readers of the BCL 500/i series are optionally available as models with integrated heating. In this case, heating is permanently installed ex works. Self-installation on-site by the user is not possible!

Features

- Integrated heating (permanently installed)
- Extends the application range of the device to -35 °C
- Supply voltage 24VDC ±20%
- Enabling the device through an internal temperature switch
(switch-on delay about 30 min for 24 V DC and minimum ambient temperature of -35 °C)
- Necessary conductor cross-section for the voltage supply: at least 0.75 mm²; the use of preassembled cables is, thus, not possible

Structure

The heating consists of two parts:


- The front cover heater
- The housing heater

Function

When the 24 V DC supply voltage is applied to the device, a temperature switch initially only connects the heating to electrical power (front cover heater and housing heater). During the heating phase (around 30 min), when the inside temperature rises above 15 °C, the temperature switch connects the device to the supply voltage. This is followed by the self test and the changeover to read operation. The "PWR" LED lights up showing overall readiness for operation.


When the inside temperature reaches approx. 18 °C, another temperature switch turns the housing heater off and, if necessary, back on again (if the inside temperature drops below 15 °C). This does not interrupt the read operation. The front cover heater remains activated until an inside temperature of 25 °C is reached. At temperatures above this, the front cover heater switches off and, with a switching hysteresis of 3 °C, back on again at an inside temperature below 22 °C.

Mounting location

NOTE	
	The mounting location is to be selected such that it does not expose the device with heating directly to a cold air stream. To achieve an optimal heating effect, the device should be mounted so that it is thermally isolated.

Electrical connection

The required wire cross section of the connection cable for the voltage supply must be at least 0.75 mm².

CAUTION!	
	The voltage supply must not be looped through from one device to the next.

Power consumption

The energy requirement depends on the model:

- the line scanner with heating typically consumes 40 W and a maximum of 50 W power.
- the line scanner with oscillating mirror and heating typically consumes 60 W and a maximum of 75 W.

These values are based on operation with unconnected switching outputs.

15.2.1 Line scanner with heater

Technical data same as for line scanner without heating, however with the following differences:

Table 15.3: Technical data of the BCL 504/i line scanners with heating

Type	BCL 504/i PROFIBUS DP
Design	Line scanner with heater
Electrical data	
Operating voltage	24 VDC ±20%
Power consumption	Max. 50 W
Structure of the heating	Housing heating and separate heating of the optics glass
Warmup time	Min. 30 min at +24 V DC and an ambient temperature of -35 °C
Min. conductor cross section	Conductor cross section of at least 0.75mm ² for the supply voltage supply line. Wiring through of the voltage supply to multiple heating devices is not permissible. Standard, M12 preassembled cable not usable (insufficient cable cross-section)
Environmental data	
Operating temperature range	-35 °C ... +40 °C
Storage temperature range	-20 °C ... +70 °C

15.2.2 Oscillating-mirror scanner with heating

Technical data same as for line scanner without heating, however with the following differences:

Table 15.4: Technical data of the BCL 504/i oscillating-mirror scanners with heating

Type	BCL 504/i PROFIBUS DP
Design	Oscillating-mirror scanner with heating
Optical data	
Useful opening angle	Max. 50°
Max. swivel angle	±12° (adjustable)
Electrical data	
Operating voltage	24VDC ±20%
Power consumption	Max. 75 W
Structure of the heating	Housing heating and separate heating of the optics glass
Warmup time	Min. 30 min at +24 V DC and an ambient temperature of -35 °C
Min. conductor cross section	Conductor cross section of at least 0.75mm² for the supply voltage supply line. Wiring through of the voltage supply to multiple heating devices is not permissible. Standard, M12 preassembled cable not usable (insufficient cable cross-section)
Environmental data	
Operating temperature range	-35°C ... +40°C
Storage temperature range	-20°C ... +70°C

15.3 Dimensioned drawings

15.3.1 Line scanner with / without heating


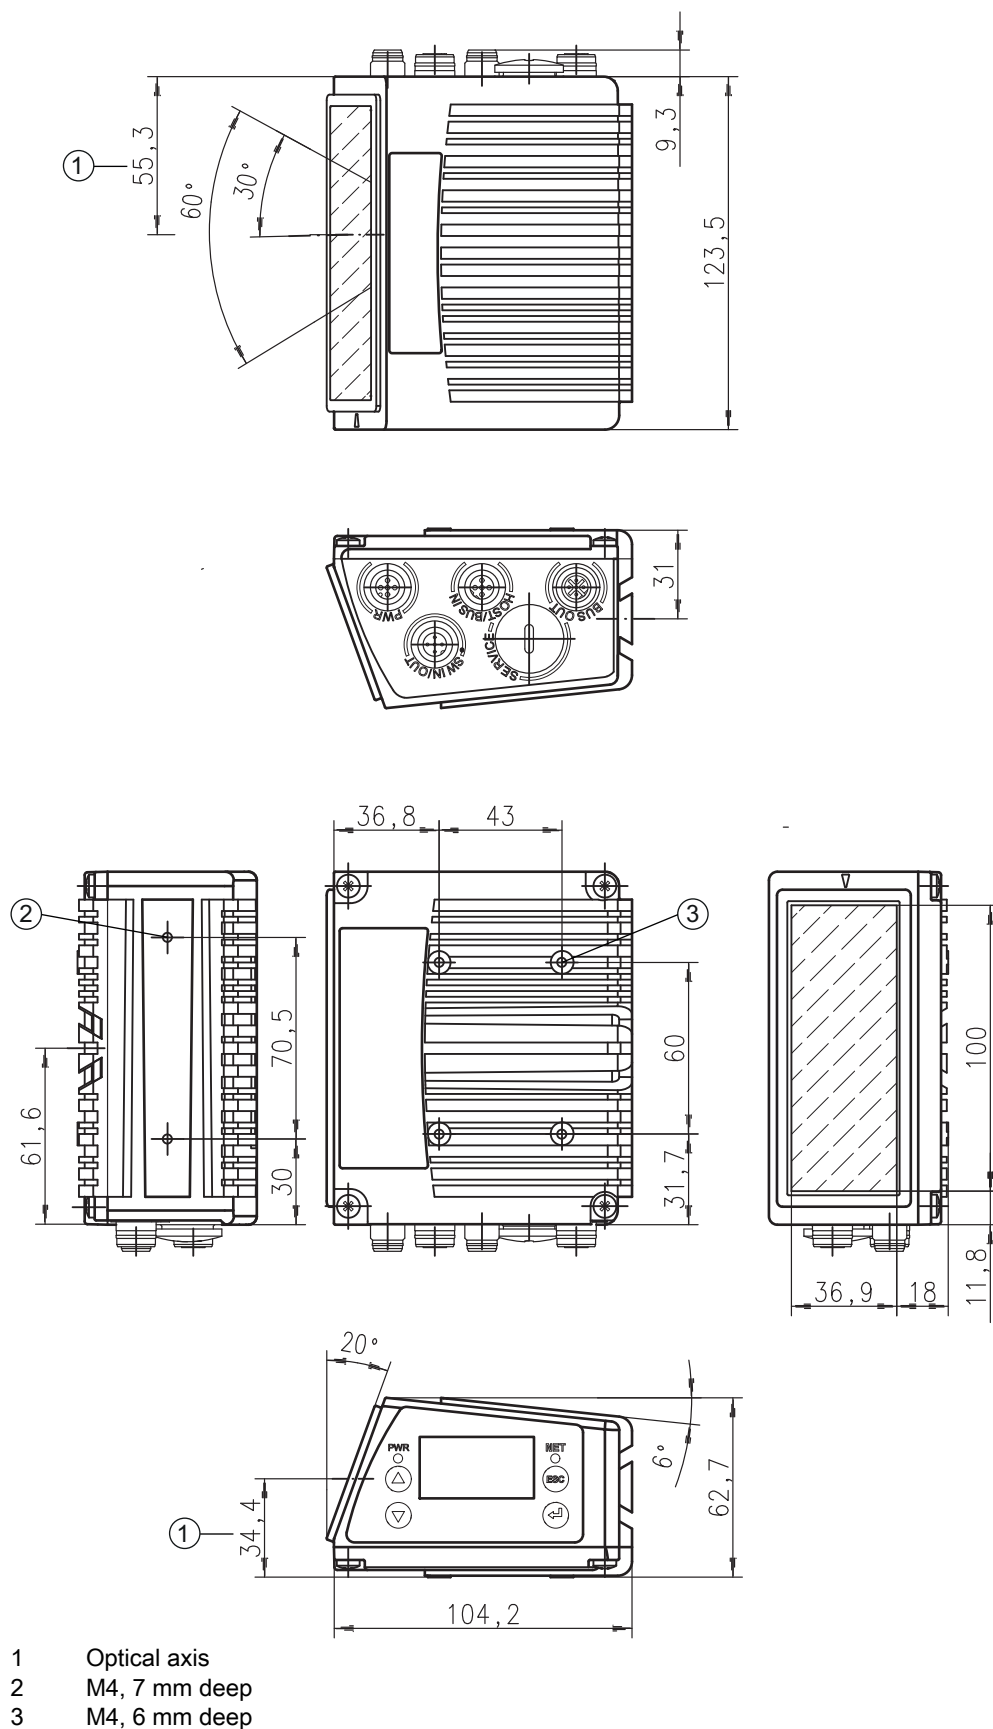


Figure 15.1: Dimensioned drawing - line scanner

15.3.2 Oscillating-mirror scanner with/without heating

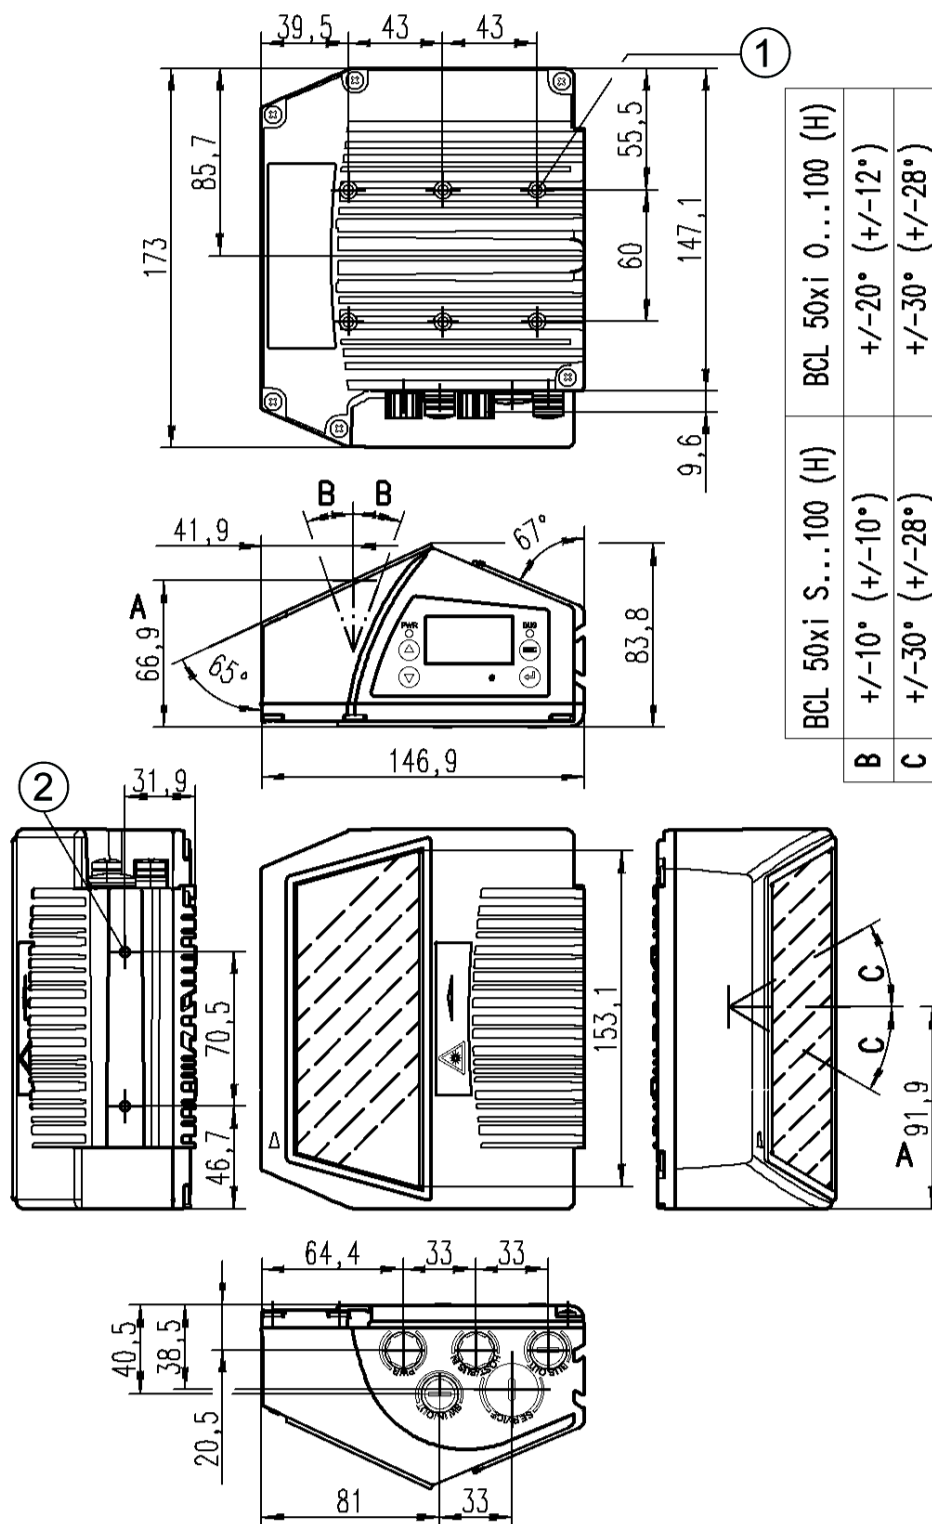

- 1 M4, 6 mm deep
- 2 M4, 7mm deep
- A Optical axis
- B Optical swivel range
- C Opening angle


NOTE



The optical swivel range and the opening angle are reduced on devices with heating; see "Reading field curves for heating devices" on page 142.


Figure 15.2: Dimensioned drawing of oscillating-mirror scanner

15.4 Dimensioned drawings: Accessories

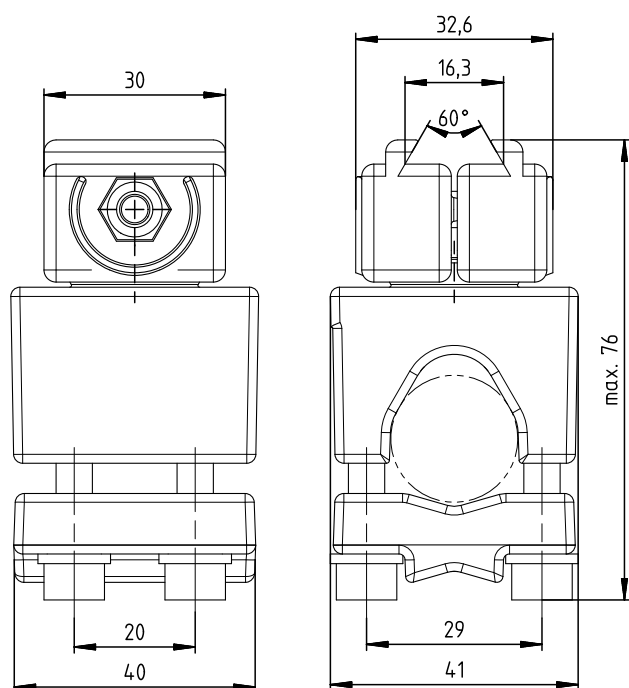

- A** Holder, turnable 360°
B Rods, \varnothing 16 ... 20 mm

Figure 15.3: BT 56 mounting device

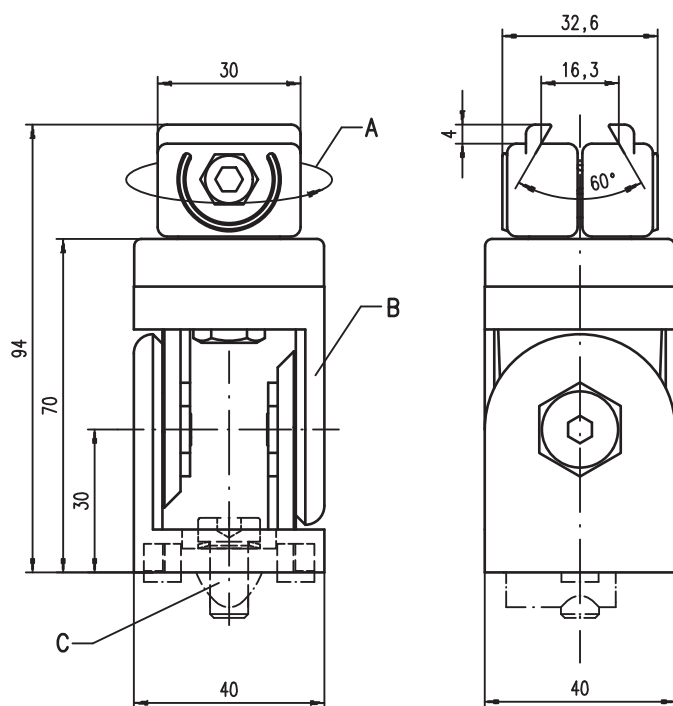

- A** Holder, turnable 360°
B ITEM joint, adjustable $\pm 90^\circ$
C M8x16 screwable cylinder, M8 serrated washer, M8 sliding block, connectors for ITEM profile (2x)

Figure 15.4: BT 59 mounting device

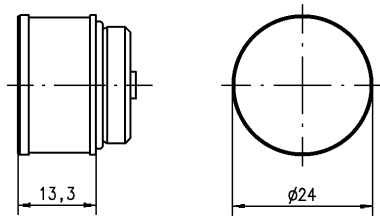



Figure 15.5: External parameter memory

15.5 Reading field curves / optical data

Bar code characteristics

NOTE	
	Please note that the size of the bar code module influences the maximum reading distance and the width of the reading field. Therefore, when selecting a mounting location and/or the bar code label, take into account the different reading characteristics of the scanner with various bar code modules.




- M Module: The narrowest line or space of a bar code in mm
- Z_B Wide character: Wide bars and gaps are a multiple (ratio) of the module.
Module x Ratio = Z_B (Normal Ratio 1 : 2.5)
- B_Z Quiet zone: The quiet zone should be at least 10 times the module, but not less than 2.5mm.
- L Code length: The length of the bar code in mm including the start and stop characters. The quiet zone is included depending on the code definition.
- S_L Bar length: height of the elements in mm


Figure 15.6: The most important characteristics of a bar code

The range in which the bar code can be read by the device (the so-called reading field) depends on the quality of the printed bar code and its dimensions.

Therefore, above all, the module of a bar code is decisive for the size of the reading field.

NOTE	
	A rule of thumb: The smaller the module of the bar code is, the smaller the maximum reading distance and reading field width will be.

15.6 Reading field curves

NOTE	
	Please notice that the real reading fields are also influenced by factors such as labeling material, printing quality, reading angle, printing contrast etc., and may thus deviate from the reading fields specified here.

The zero position of the reading distance always refers to the front edge of the housing of the beam exit and is shown in Figure 15.7 for the two housing types of the device.

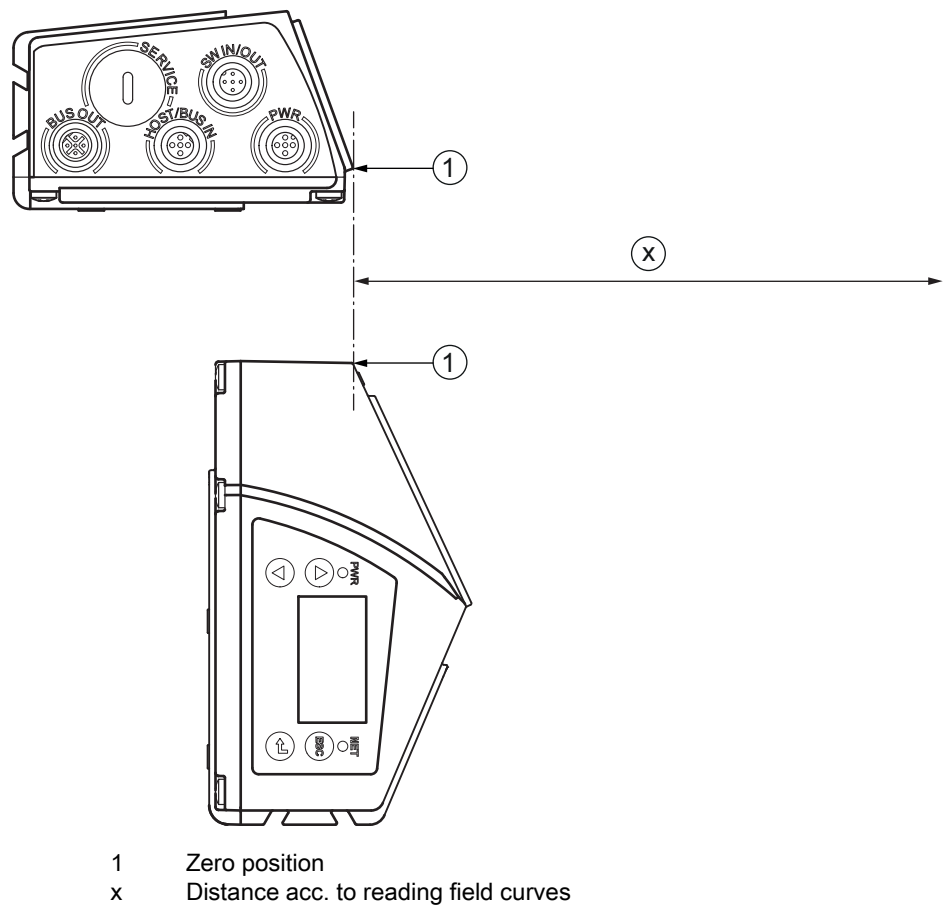


Figure 15.7: Zero position of the reading distance

Reading conditions for the reading field curves

Bar code type	2/5 Interleaved
Ratio	1:2.5
ANSI specification	Class A
Reading rate	> 75%

Table 15.5: Reading conditions

15.6.1 High Density (N) - optics: BCL 504/SN 102

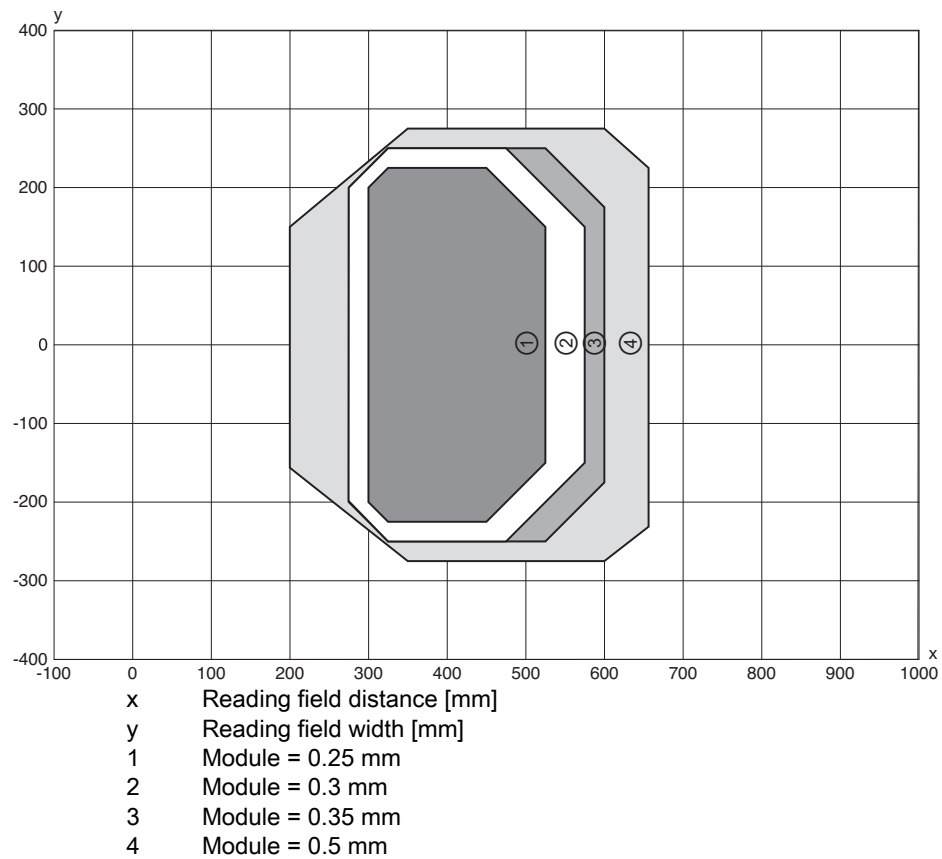


Figure 15.8: "High Density" reading field curve for line scanner

The reading field curve applies for the reading conditions stated in Table 15.5.

15.6.2 High Density (N) - optics: BCL 504/ON 100

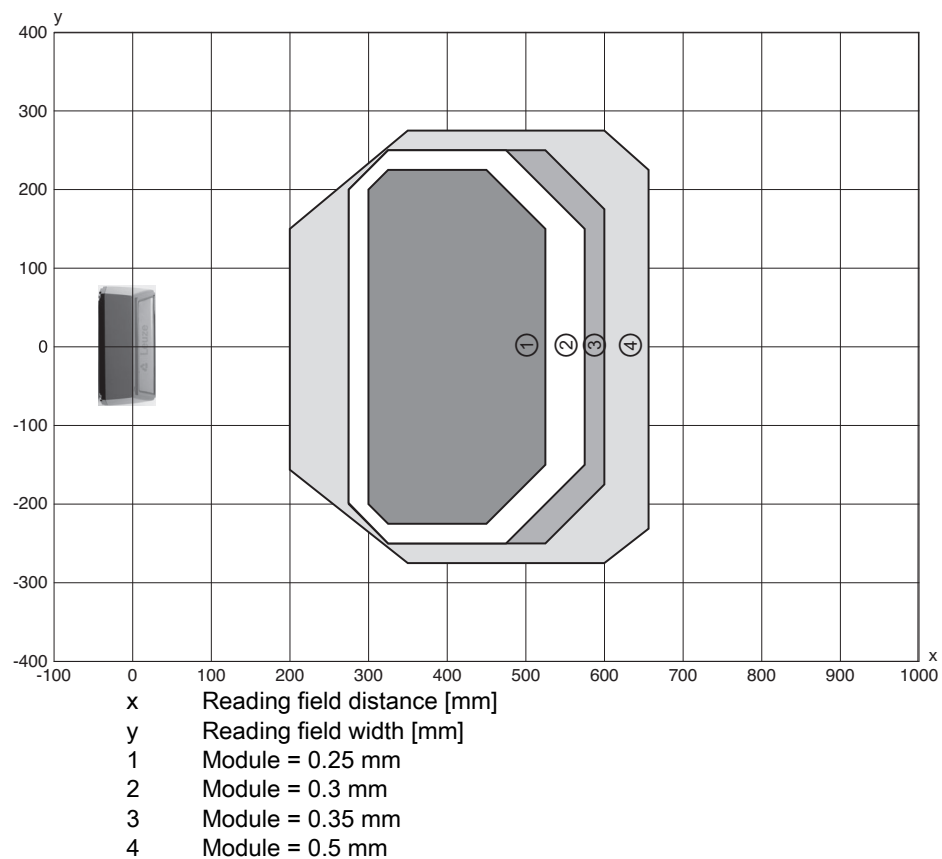


Figure 15.9: "High Density" reading field curve for oscillating-mirror scanners

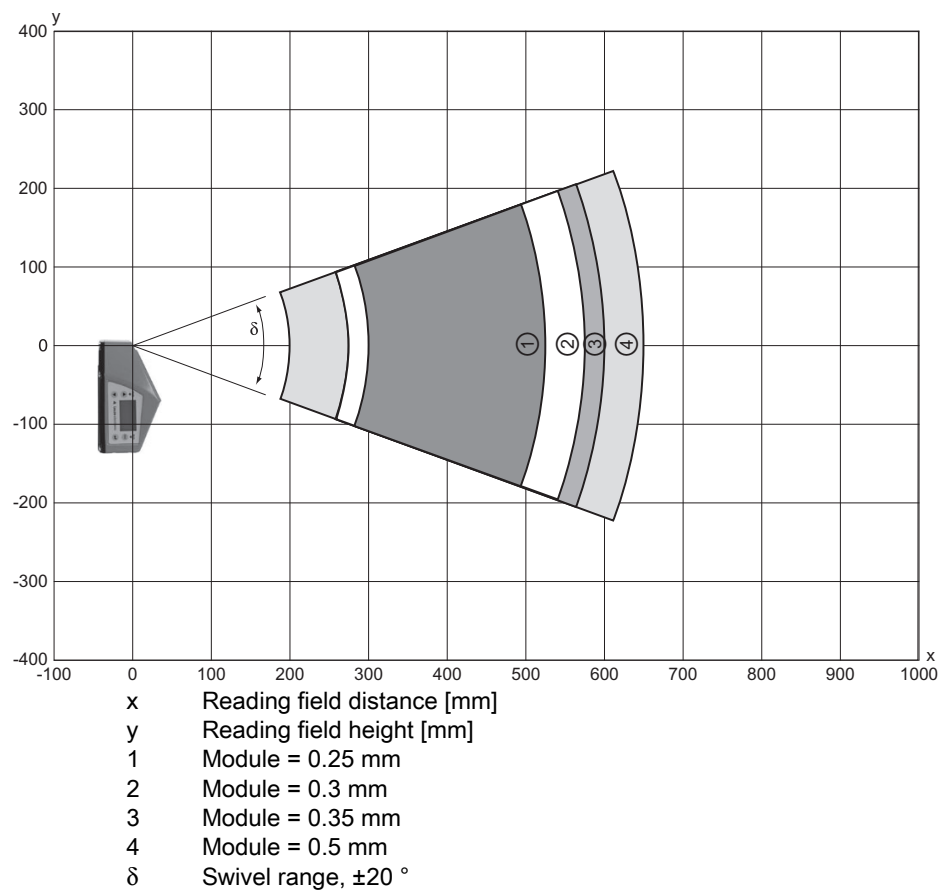


Figure 15.10: Lateral "High Density" reading field curve for oscillating-mirror scanners

The reading field curves apply for the reading conditions stated in Table 15.5.

15.6.3 Medium Density (M) - optics: BCL 504/SM 102

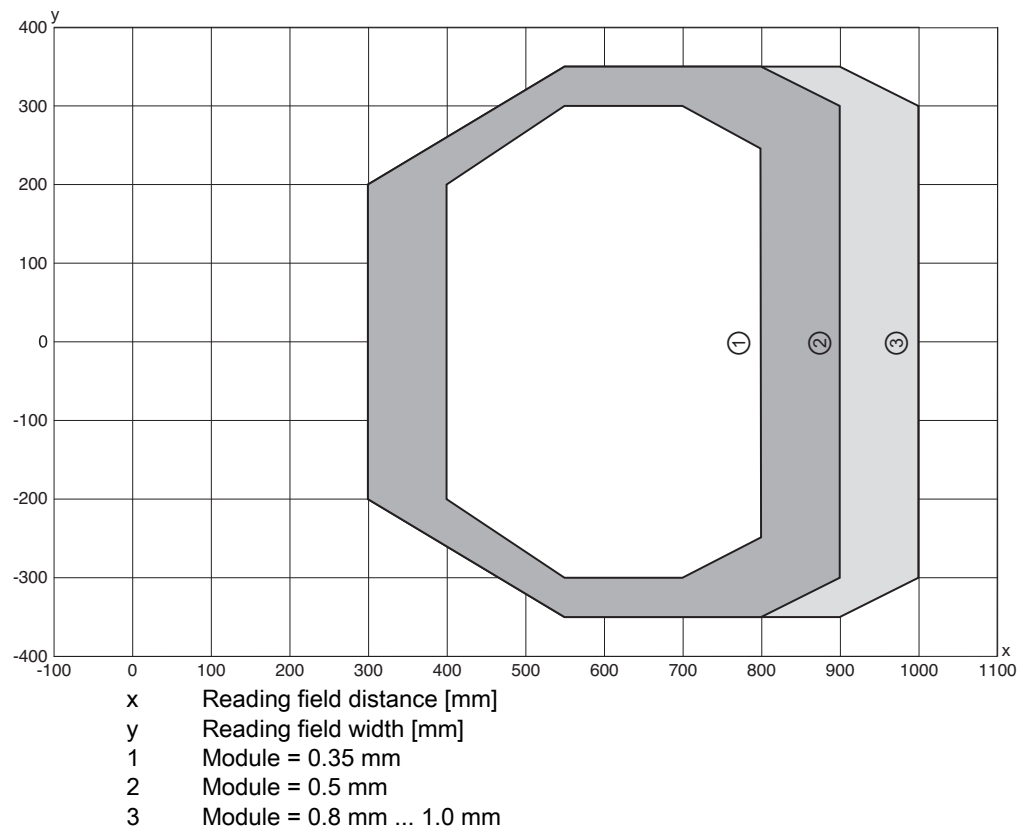


Figure 15.11: "Medium Density" reading field curve for line scanner

The reading field curves apply for the reading conditions stated in Table 15.5.

15.6.4 Medium Density (M) - optics: BCL 504/OM 100

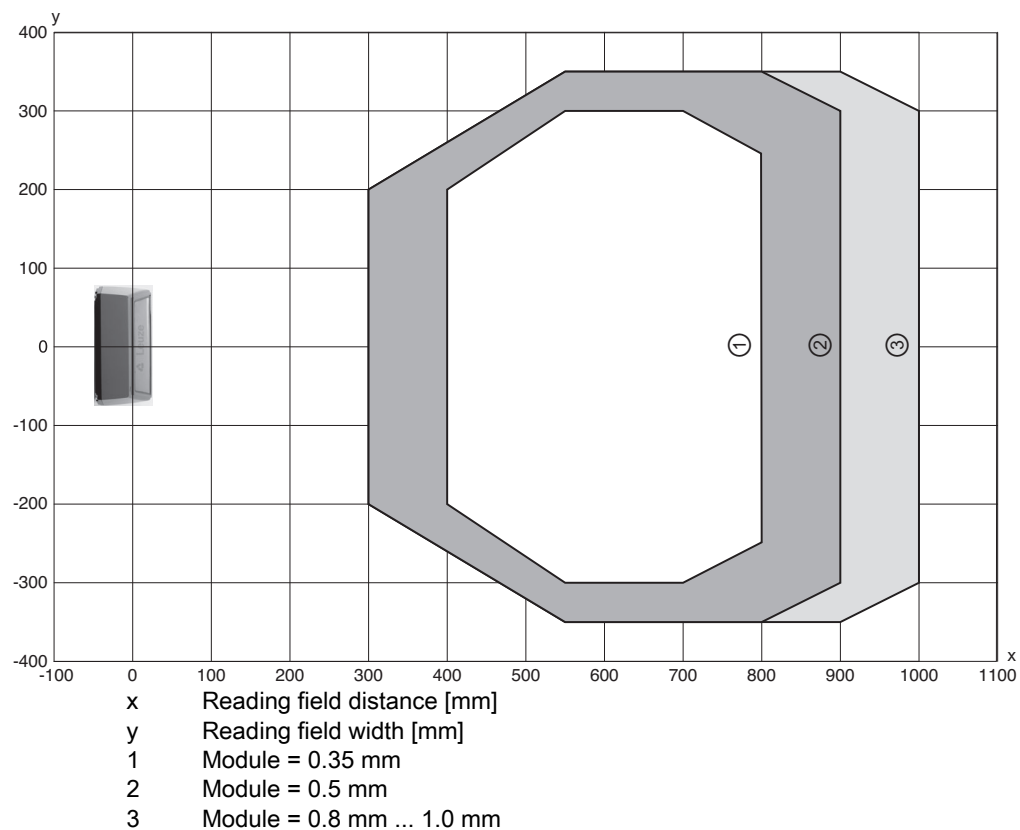


Figure 15.12: "Medium Density" reading field curve for oscillating-mirror scanners

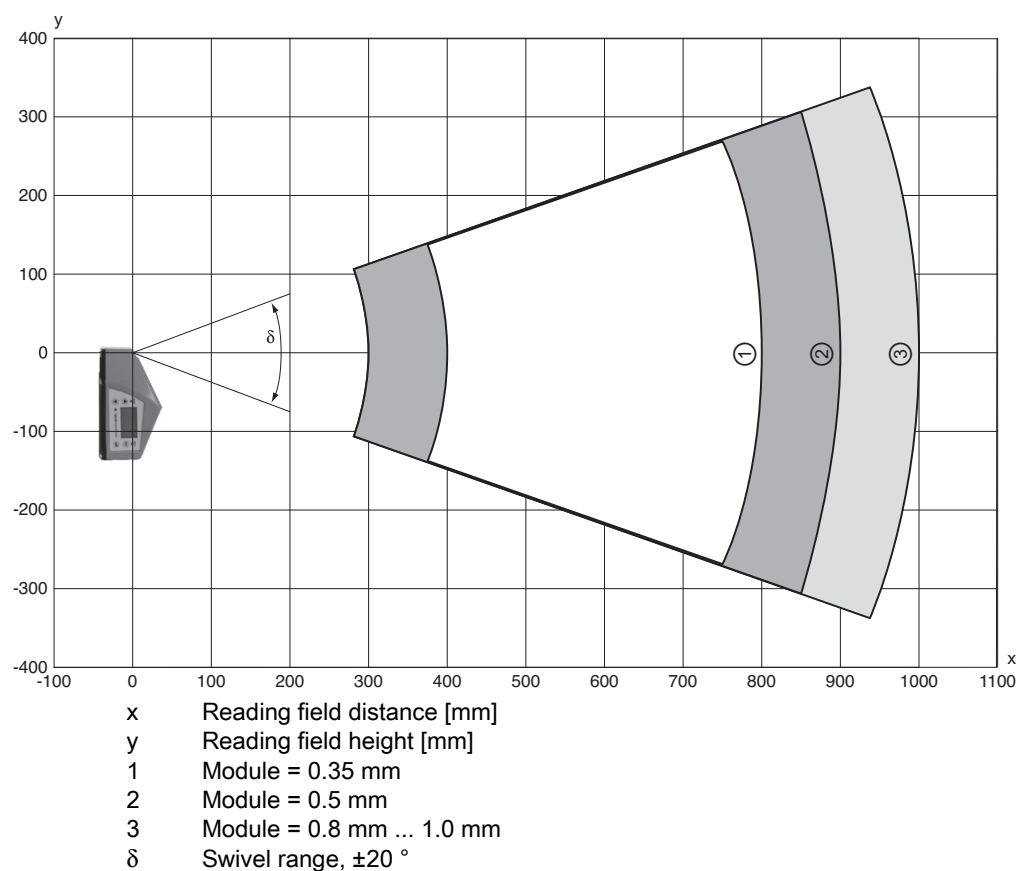


Figure 15.13: Lateral "Medium Density" reading field curve for oscillating-mirror scanners

The reading field curves apply for the reading conditions stated in Table 15.5.

15.6.5 Low Density (F) - optics: BCL 504/iSF 102

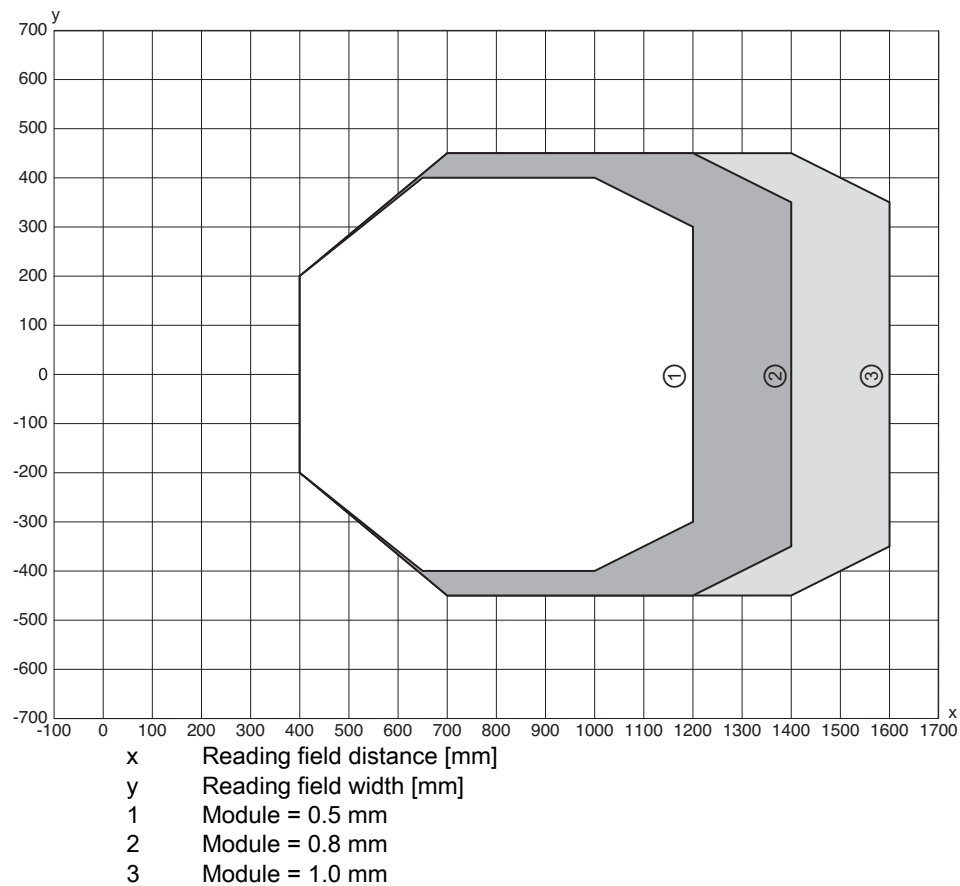


Figure 15.14: "Low Density" reading field curve for line scanner

The reading field curves apply for the reading conditions stated in Table 15.5.

15.6.6 Low Density (F) - optics: BCL 504/i/OF 100

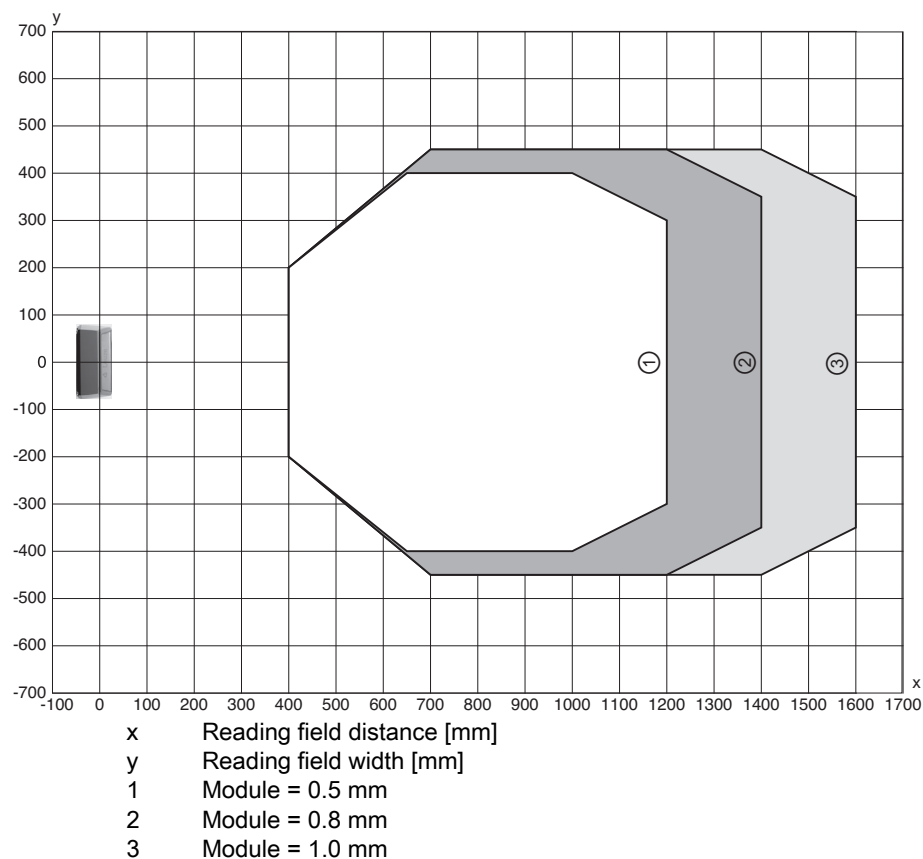


Figure 15.15: "Low Density" reading field curve for oscillating-mirror scanners

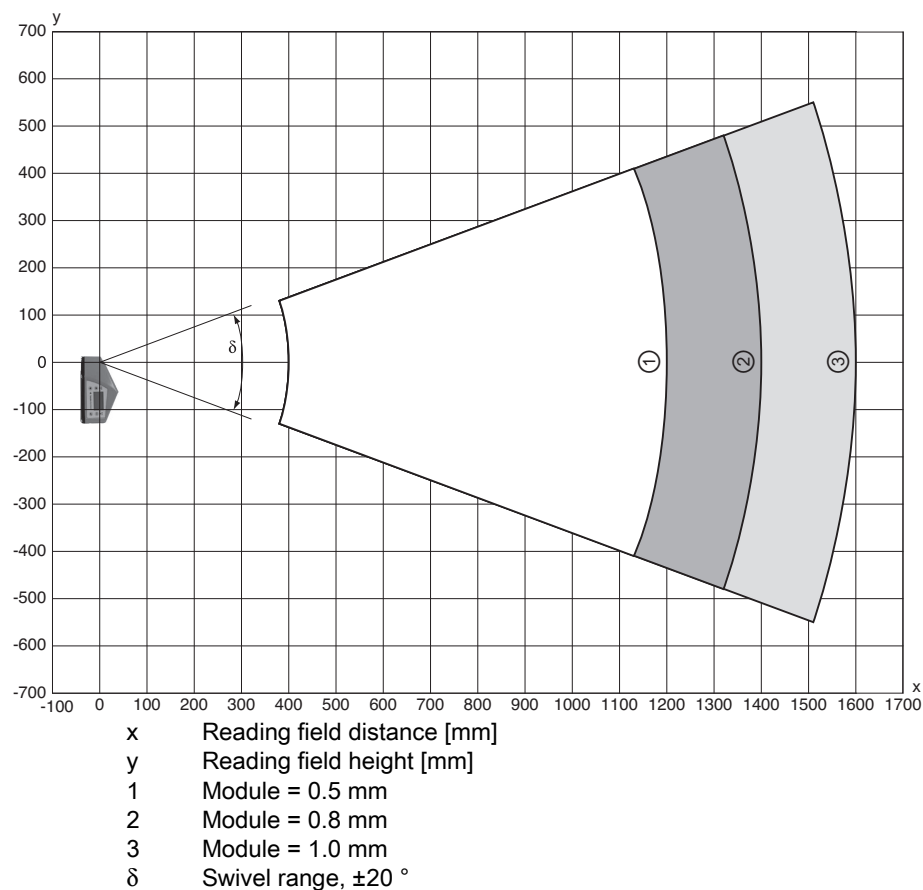


Figure 15.16: Lateral "Low Density" reading field curve for oscillating-mirror scanners

The reading field curves apply for the reading conditions stated in Table 15.5.

15.6.7 Ultra Low Density (L) - optics: BCL 504/i SL 102

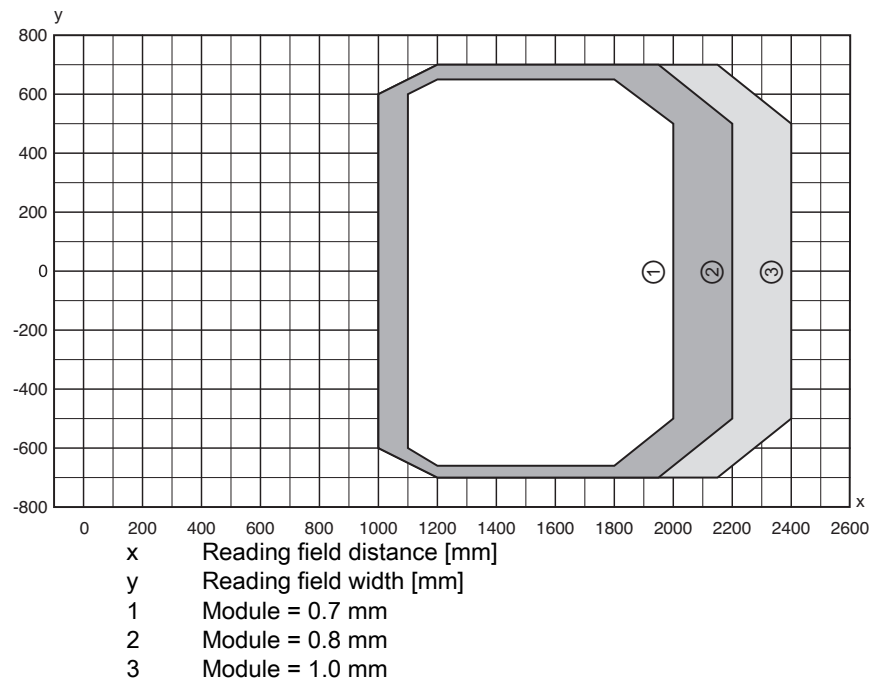


Figure 15.17: "Ultra Low Density" reading field curve for line scanner

The reading field curves apply for the reading conditions stated in Table 15.5.

15.6.8 Ultra Low Density (L) - optics: BCL 504/OL 100

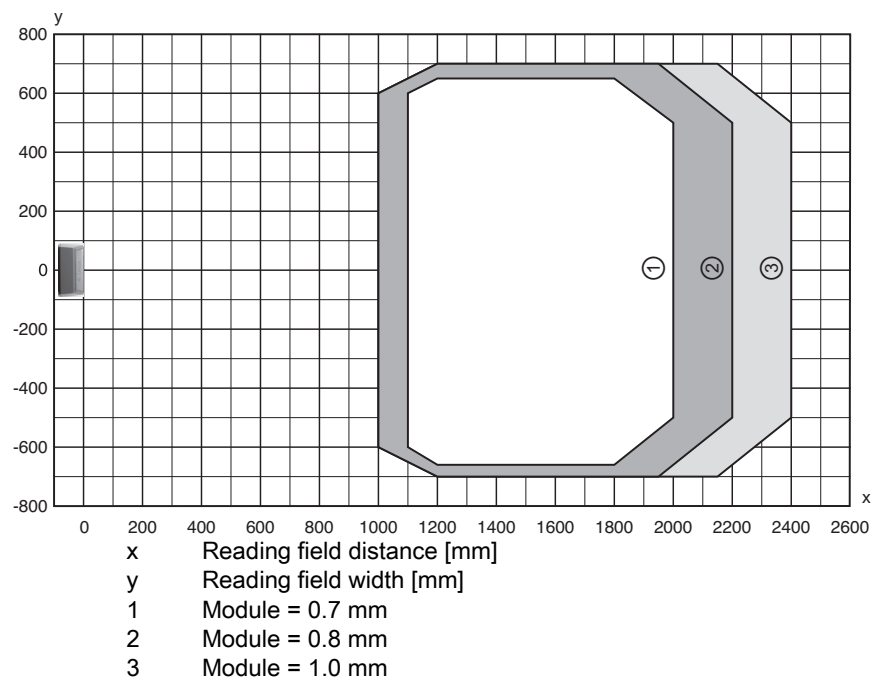


Figure 15.18: "Ultra Low Density" reading field curve for oscillating-mirror scanners

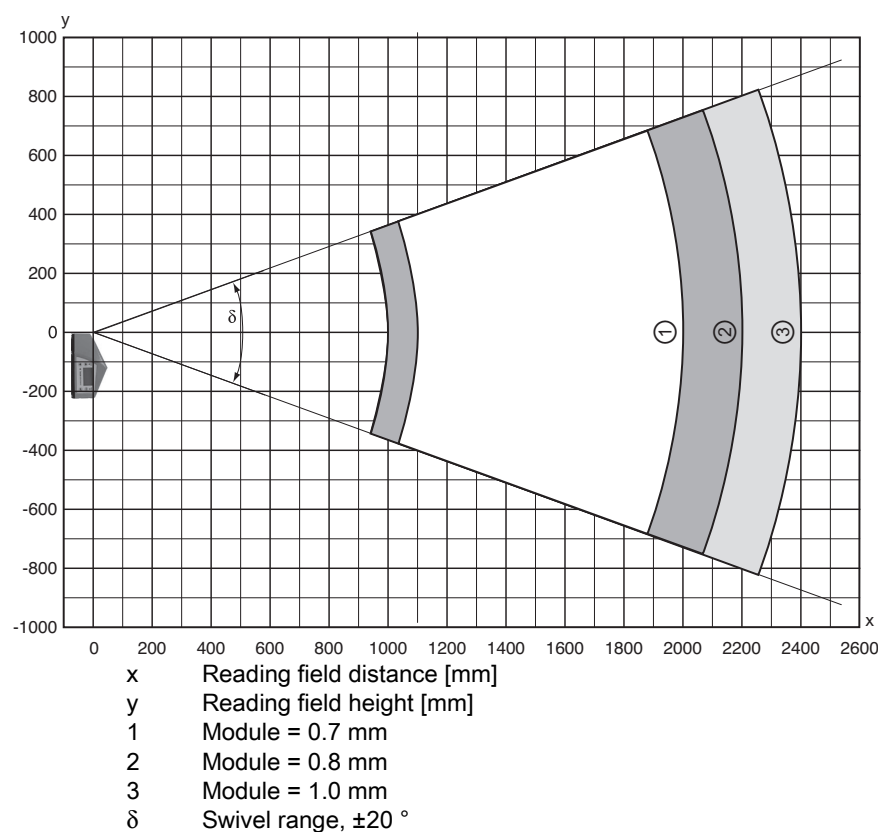


Figure 15.19: Lateral "Ultra Low Density" reading field curve for oscillating-mirror scanners

The reading field curves apply for the reading conditions stated in Table 15.5.

15.7 Reading field curves for heating devices

The reading field curves of the heating devices differ to some extent from the normal reading curves due to the optics heating and are somewhat reduced in the reading field width as well as in the reading field height!

- **The maximum opening angle** for all oscillating mirror devices of the BCL 500/*i* series is **reduced to $\pm 28^\circ$** (without heating = $\pm 30^\circ$).
- **In addition, the maximum swivel range** for all oscillating mirror devices of the BCL 500/*i* series is **reduced to $\pm 12^\circ$** (without heating = $\pm 20^\circ$).
- The reading field curves and opening angles are unchanged for all line scanners with heating of the BCL 500/*i* series.

For details, please refer to the following reading field curves for the heating devices.

15.7.1 High Density (N) - optics: BCL 504/*i* SN 102 H

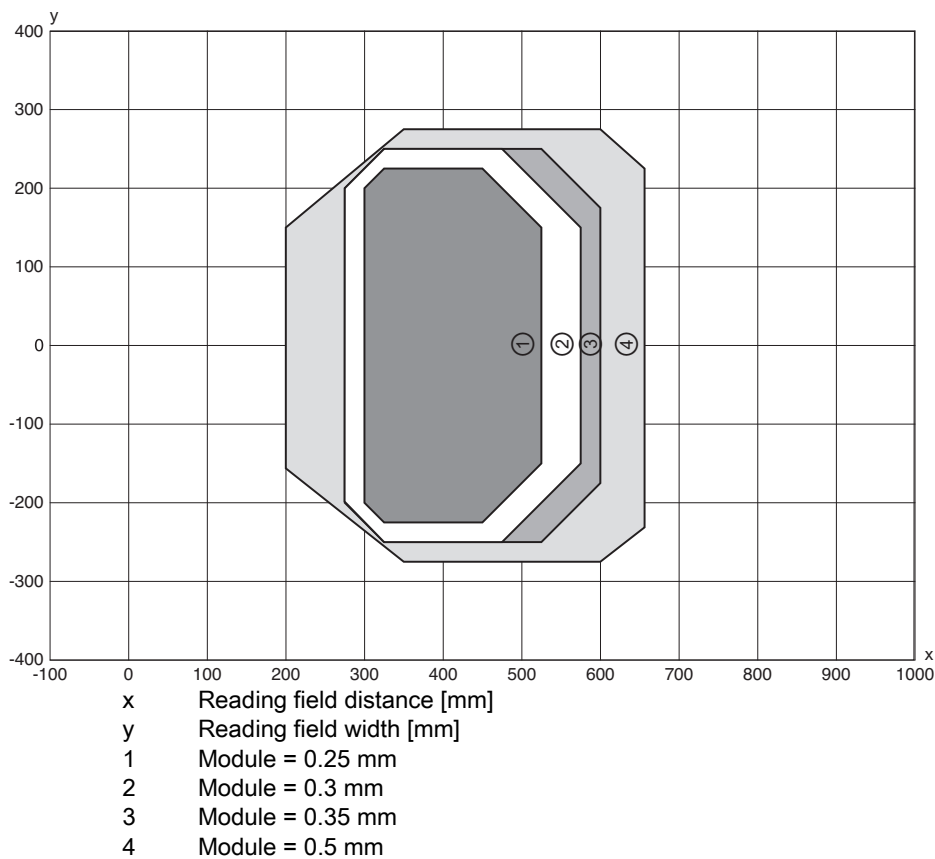


Figure 15.20: "High Density" reading field curve for line scanner with heating

The reading field curve applies for the reading conditions stated in Table 15.5.

15.7.2 High Density (N) - optics: BCL 504/ON 100 H

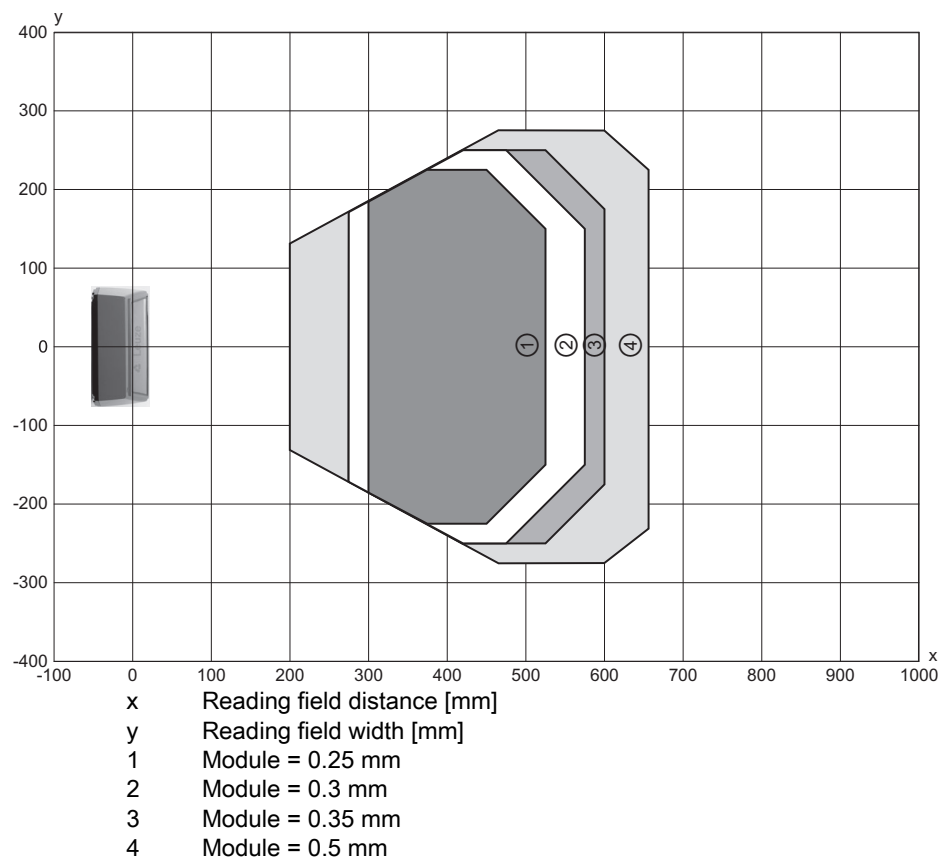


Figure 15.21: "High Density" reading field curve for oscillating-mirror scanners with heating

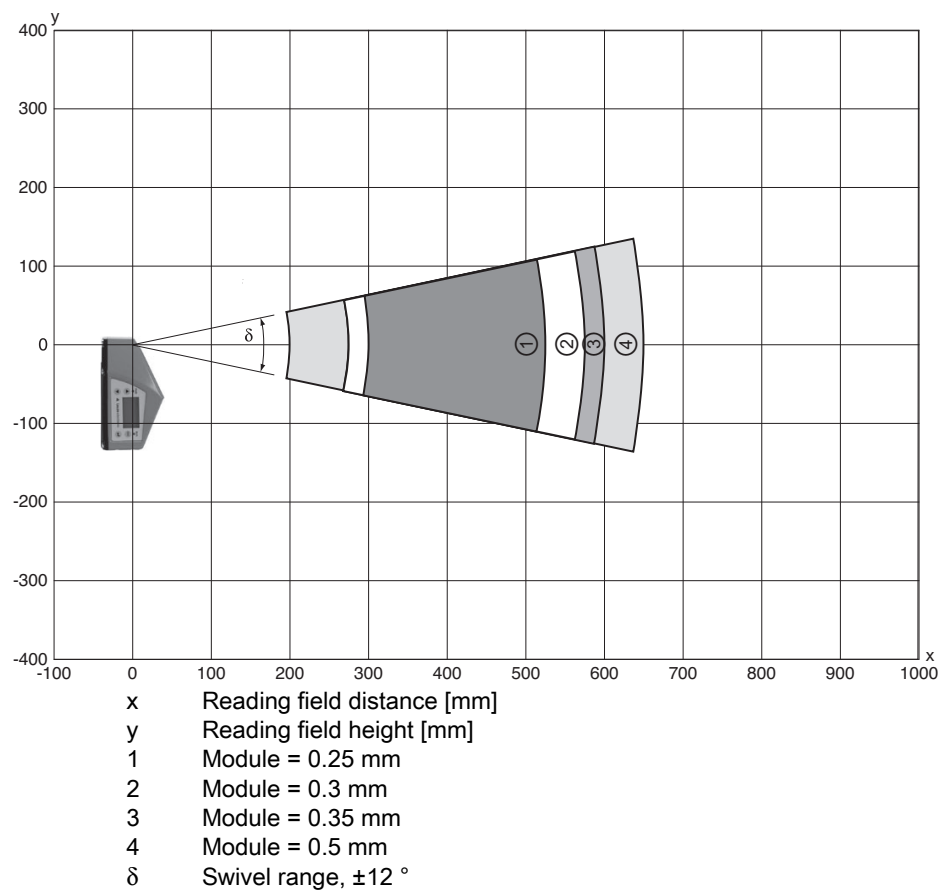


Figure 15.22: Lateral "High Density" reading field curve for oscillating-mirror scanners with heating

The reading field curves apply for the reading conditions stated in Table 15.5.

15.7.3 Medium Density (M) - optics: BCL 504/SM 102 H

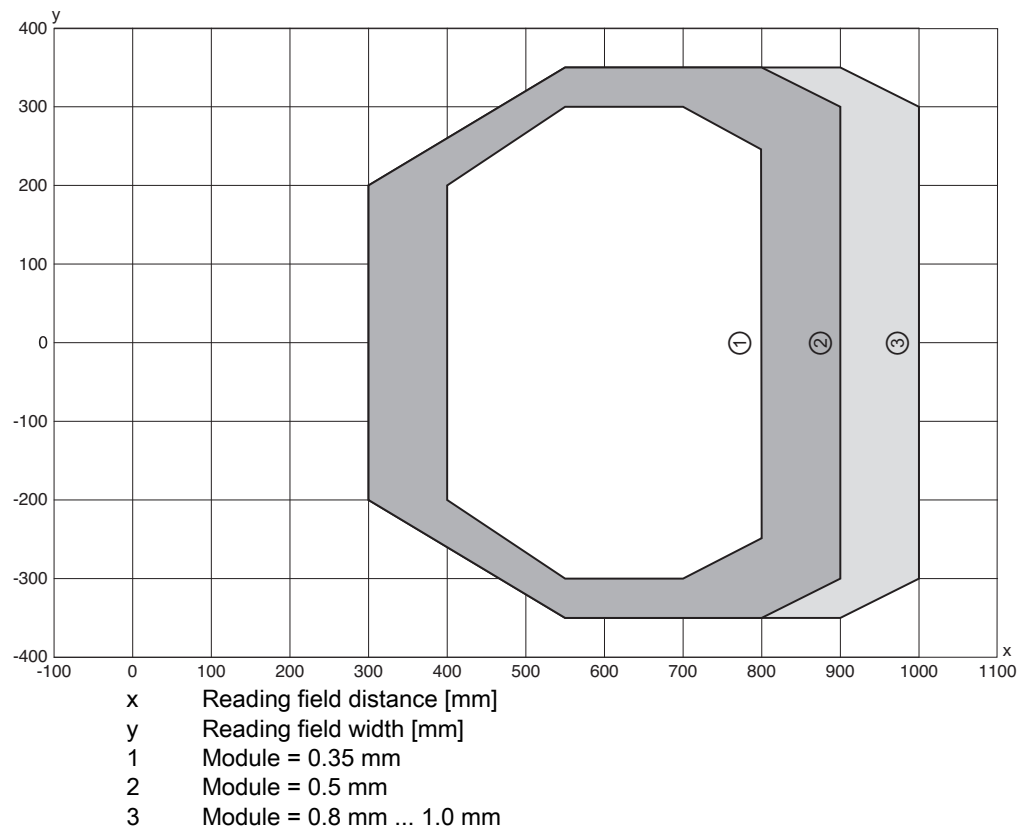


Figure 15.23: "Medium Density" reading field curve for line scanner with heating

The reading field curves apply for the reading conditions stated in Table 15.5.

15.7.4 Medium Density (M) - optics: BCL 504/OM 100 H

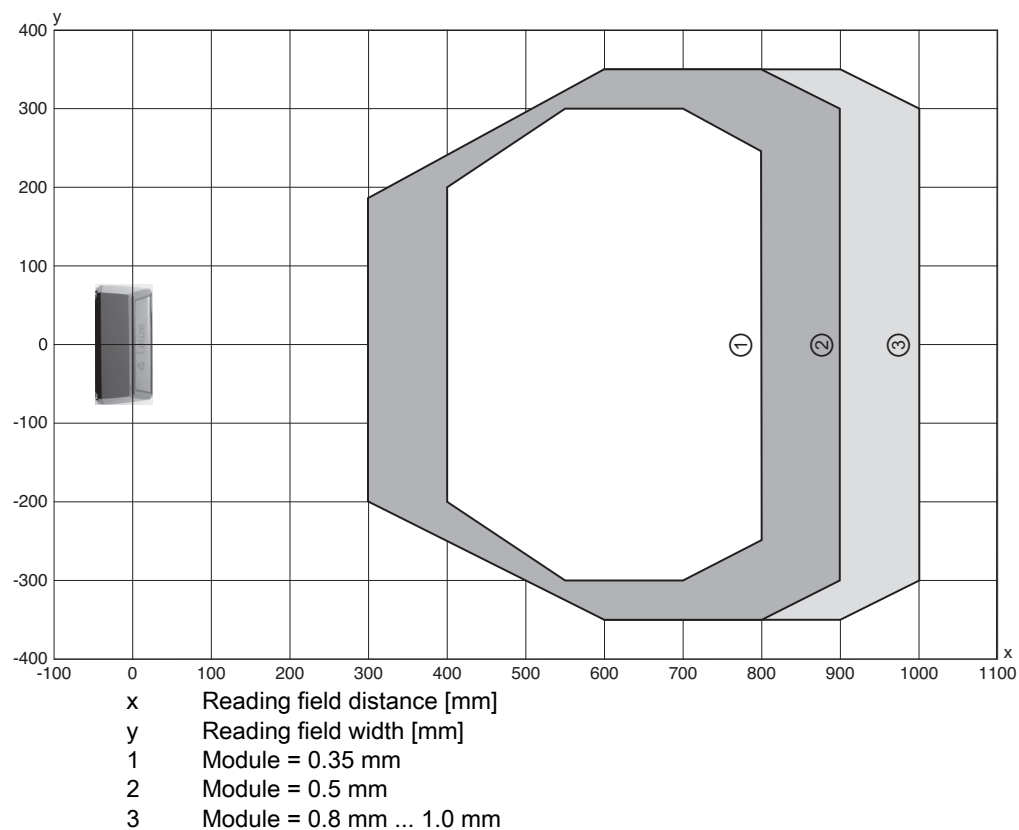


Figure 15.24: "Medium Density" reading field curve for oscillating-mirror scanners with heating

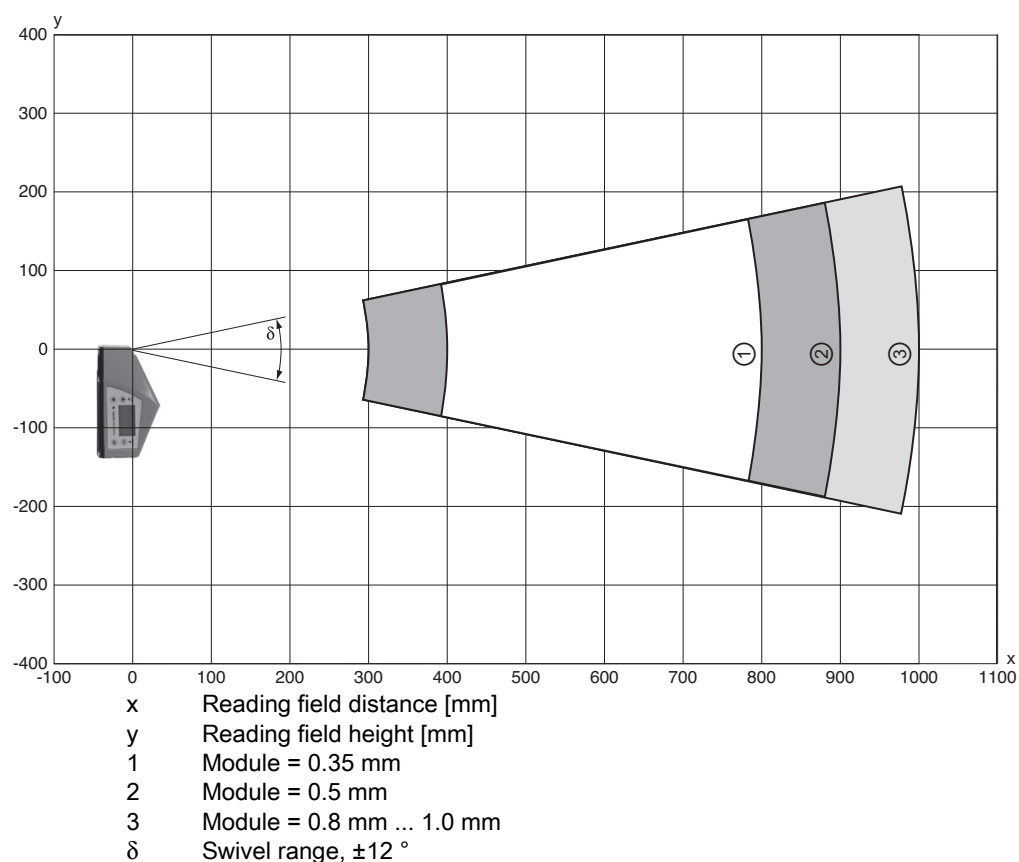


Figure 15.25: Lateral "Medium Density" reading field curve for oscillating-mirror scanners with heating

The reading field curves apply for the reading conditions stated in Table 15.5.

15.7.5 Low Density (F) - optics: BCL 504/SF 102 H

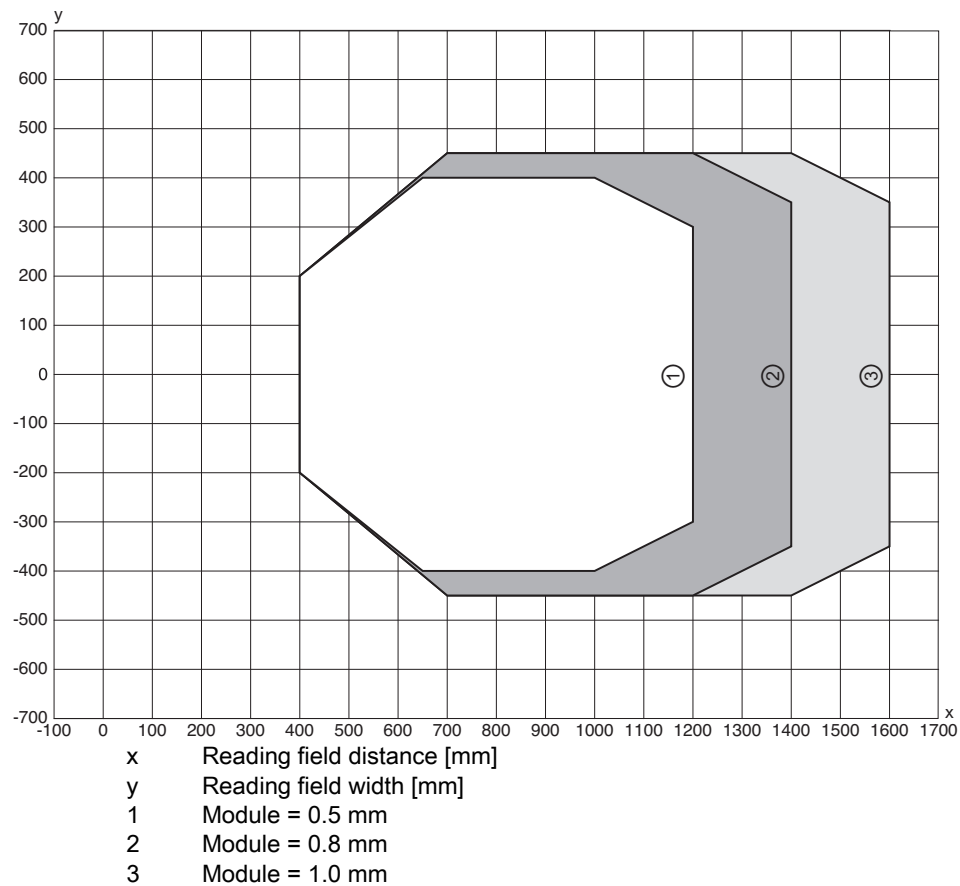


Figure 15.26: "Low Density" reading field curve for line scanner with heating

The reading field curves apply for the reading conditions stated in Table 15.5.

15.7.6 Low Density (F) - optics: BCL 504/i/OF 100 H

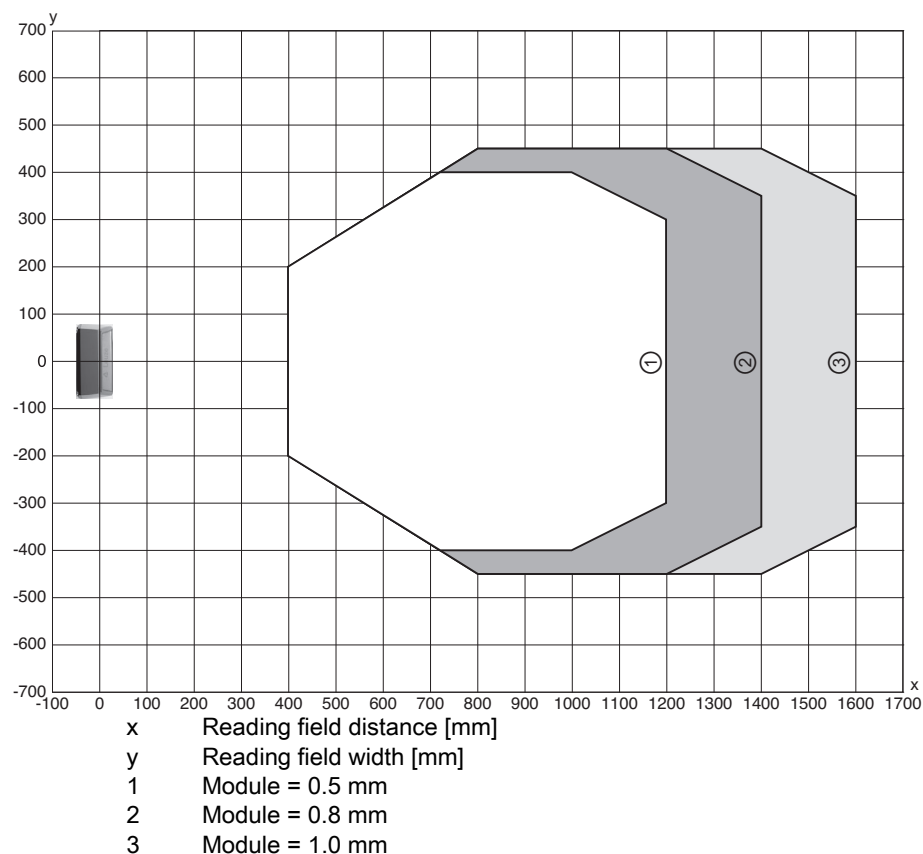


Figure 15.27: "Low Density" reading field curve for oscillating-mirror scanners with heating

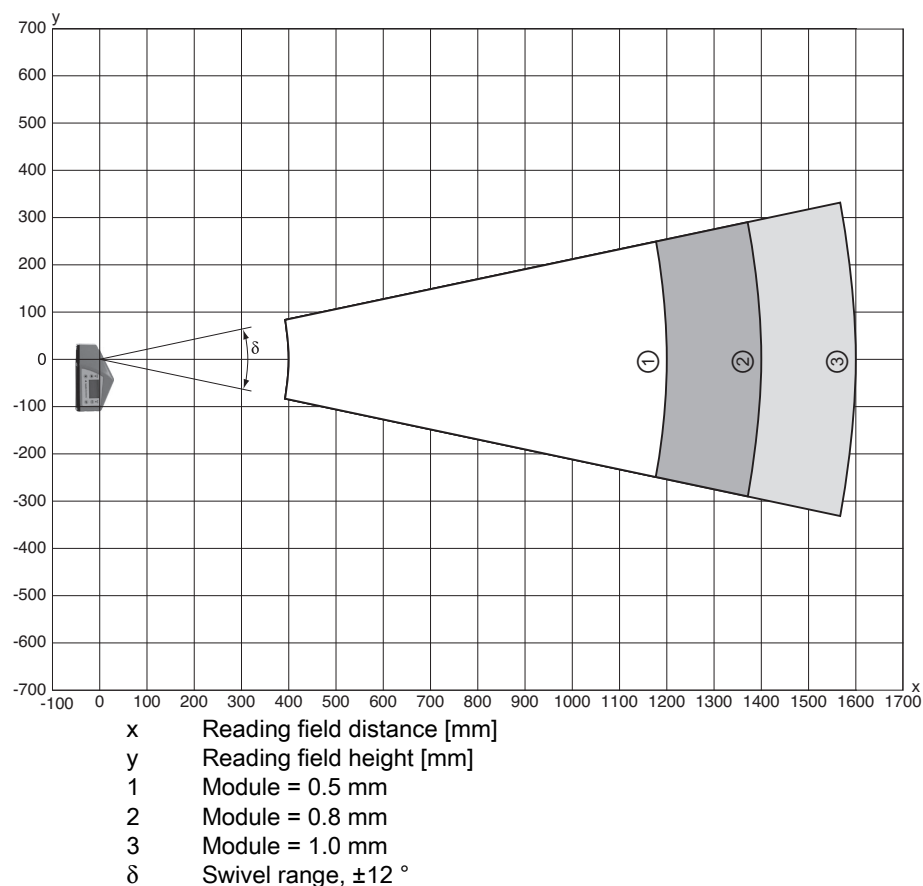


Figure 15.28: Lateral "Low Density" reading field curve for oscillating-mirror scanners with heating

The reading field curves apply for the reading conditions stated in Table 15.5.

15.7.7 Ultra Low Density (L) - optics: BCL 504/SL 102 H

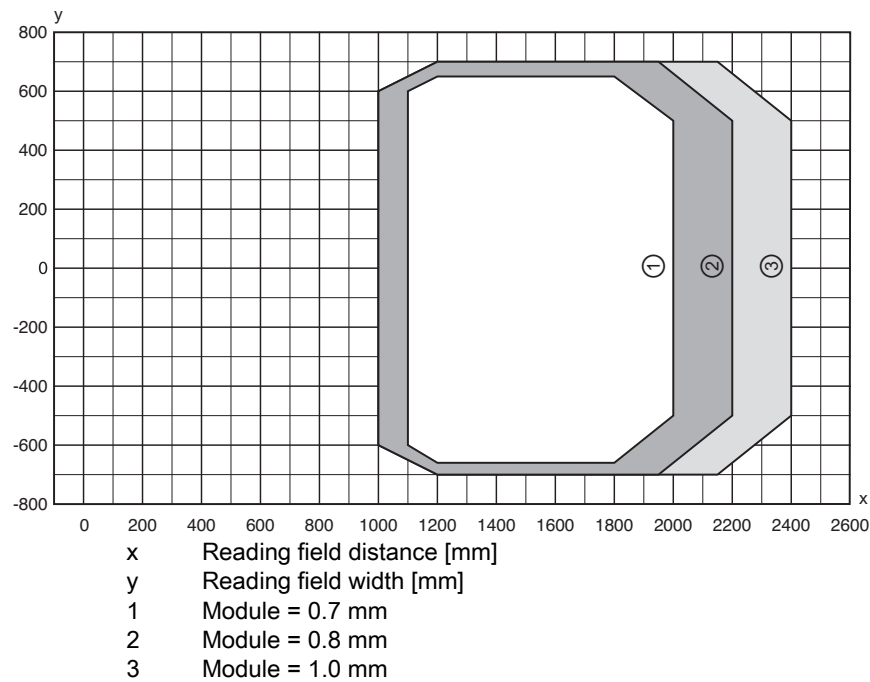


Figure 15.29: "Ultra Low Density" reading field curve for line scanner with heating

The reading field curves apply for the reading conditions stated in Table 15.5.

15.7.8 Ultra Low Density (L) - optics: BCL 504/OL 100 H

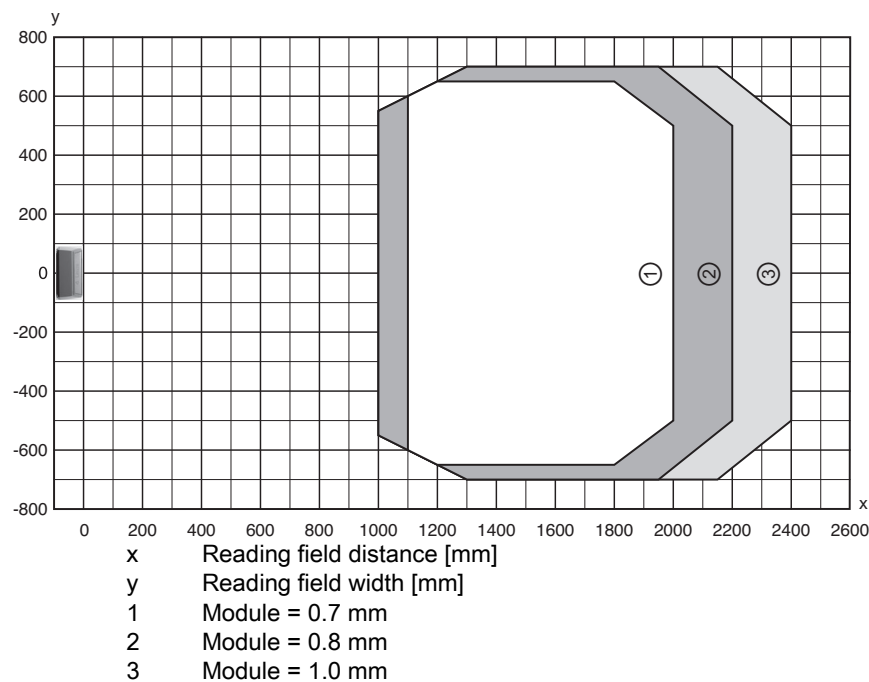


Figure 15.30: "Ultra Low Density" reading field curve for oscillating-mirror scanners with heating

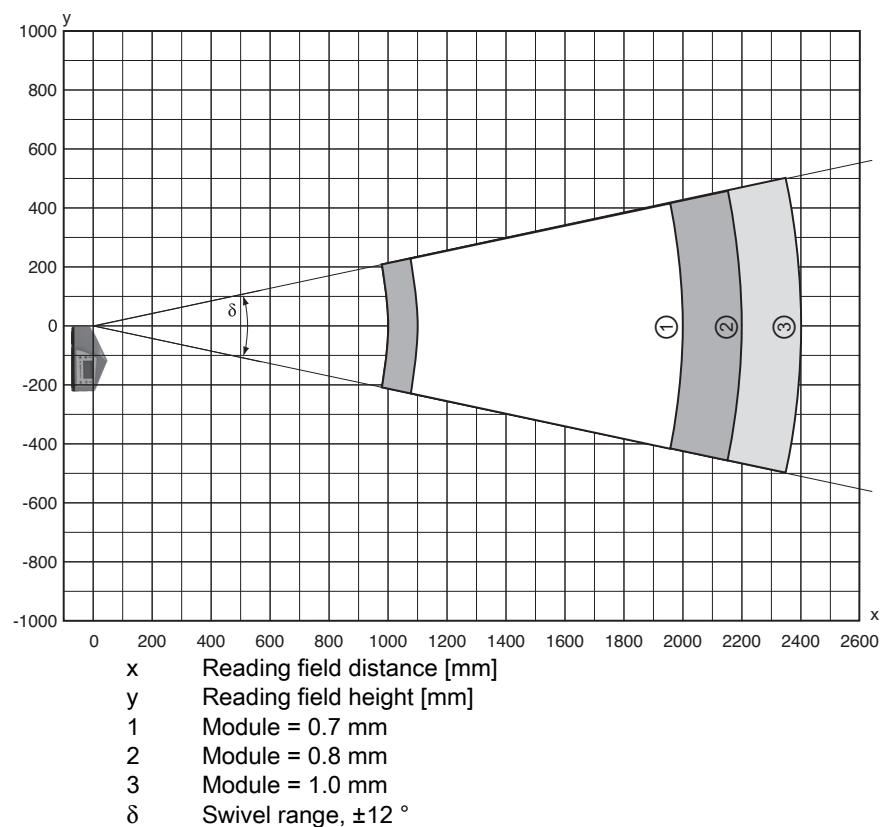


Figure 15.31: Lateral "Ultra Low Density" reading field curve for oscillating-mirror scanners with heating

The reading field curves apply for the reading conditions stated in Table 15.5.

16 Order guide and accessories

16.1 Part number code

Table 16.1: Part number code

BCL	5	00	/	O	M	100	H	
								Heating option
								H = With heating
								Beam exit
								0 Lateral
								2 At the front
								Optics
								N High Density (close)
								M Medium Density (medium distance)
								F Low Density (large distance)
								L Ultra Low Density (very large distances)
								Scanning principle
								S Line scanner (single line)
								O Oscillating-mirror scanner
								/= integrated fieldbus technology
								Interface
								00 RS 232/RS 422/RS 485 (multiNet master)
								01 RS 485 (multiNet slave)
								04 PROFIBUS DP
								08 ETHERNET TCP/IP, UDP
								48 PROFINET-IO RT
								58 Ethernet/IP
								Series: BCL5xx/
								BCL Bar code reader

16.2 Overview of BCL 504/ types

PROFIBUS DP with 1x RS 485 interface at 2x M12 B-coded connectors

Table 16.2: Overview of BCL 504/ types

Type designation	Description	Part no.
High Density optics (m = 0.25 ... 0.5mm)		
BCL 504/SN 102	Line scanner, front beam exit	501 05490
BCL 504/ON 100	Oscillating-mirror scanner	501 05491
BCL 504/SN 102 H	Line scanner, front beam exit, with heating	501 05493
BCL 504/ON 100 H	Oscillating-mirror scanner with heating	501 05494
Medium Density optics (m = 0.35 ... 1.0mm)		
BCL 504/SM 102	Line scanner, front beam exit	501 05496
BCL 504/OM 100	Oscillating-mirror scanner	501 05497
BCL 504/SM 102 H	Line scanner, front beam exit, with heating	501 05499
BCL 504/OM 100 H	Oscillating-mirror scanner with heating	501 05500
Low Density optics (m = 0.5 ... 1.0mm)		
BCL 504/SF 102	Line scanner, front beam exit	501 05502
BCL 504/OF 100	Oscillating-mirror scanner	501 05503
BCL 504/SF 102 H	Line scanner, front beam exit, with heating	501 05505
BCL 504/OF 100 H	Oscillating-mirror scanner with heating	501 05506
Ultra Low Density optics (m = 0.7 ... 1.0mm)		
BCL 504/SL 102	Line scanner, front beam exit	501 09896
BCL 504/OL 100	Oscillating-mirror scanner	501 09897
BCL 504/SL 102 H	Line scanner, front beam exit, with heating	501 09899
BCL 504/OL 100 H	Oscillating-mirror scanner with heating	501 09900

16.3 Accessories

Table 16.3: Accessories – Connectors

Type designation	Description	Part no.
KD 095-5A	M12 socket for voltage supply	50020501
KS 095-4A	M12 connector for SW IN/OUT	50040155
KD 02-5-BA	M12 socket for HOST or BUS IN	50038538
KD 02-5-SA	M12 connector for BUS OUT	50038537
KDS BUS OUT M12-T-5P	M12 T-connector for BUS OUT	50109834

Table 16.4: Accessories – Terminating resistor for BCL 504/i

Type designation	Description	Part no.
TS 02-4-SA M12	M12 connector with integrated terminating resistor for BUS OUT	50038539

Table 16.5: Accessories – Cables

Type designation	Description	Part no.
KB USB-Service	USB service cable	50107726

Table 16.6: Accessories – External parameter memory

Type designation	Description	Part no.
USB Memory Set	External USB parameter memory	50108833

Table 16.7: Mounting device accessories

Type designation	Description	Part no.
BT 56	Mounting device for rod	50027375
BT 59	Mounting device for ITEM	50111224

Table 16.8: Accessory - Reflector for AutoReflAct

Type designation	Description	Part no.
Reflective tape no. 4 / 100 x 100 mm	Reflective tape as reflector for AutoReflAct operation	50106119

17 Appendix

17.1 ASCII character set

ASCII	Dec.	Hex.	Oct.	Designation	Meaning
NUL	0	00	0	ZERO	Zero
SOH	1	01	1	START OF HEADING	Start of heading
STX	2	02	2	START OF TEXT	Start of text characters
ETX	3	03	3	END OF TEXT	Last character of text
EOT	4	04	4	END OF TRANSMISS.	End of transmission
ENQ	5	05	5	ENQUIRY	Request for data trans.
ACK	6	06	6	ACKNOWLEDGE	Positive acknowledgment
BEL	7	07	7	BELL	Bell signal
BS	8	08	10	BACKSPACE	Backspace
HT	9	09	11	HORIZ. TABULATOR	Horizontal tabulator
LF	10	0A	12	LINE FEED	Line feed
VT	11	0B	13	VERT. TABULATOR	Vertical tabulator
FF	12	0C	14	FORM FEED	Form feed
CR	13	0D	15	CARRIAGE RETURN	Carriage return
SO	14	0E	16	SHIFT OUT	Shift out
SI	15	0F	17	SHIFT IN	Shift in
DLE	16	10	20	DATA LINK ESCAPE	Data link escape
DC1	17	11	21	DEVICE CONTROL 1	Device control character 1
DC2	18	12	22	DEVICE CONTROL 2	Device control character 2
DC3	19	13	23	DEVICE CONTROL 3	Device control character 3
DC4	20	14	24	DEVICE CONTROL 4	Device control character 4
NAK	21	15	25	NEG. ACKNOWLEDGE	Negative acknowledge
SYN	22	16	26	SYNCHRONOUS IDLE	Synchronization
ETB	23	17	27	EOF TRANSM. BLOCK	End of data transmission block
CAN	24	18	30	CANCEL	Invalid
EM	25	19	31	END OF MEDIUM	End of medium
SUB	26	1A	32	SUBSTITUTE	Substitution
ESC	27	1B	33	ESCAPE	Escape
FS	28	1C	34	FILE SEPARATOR	File separator
GS	29	1D	35	GROUP SEPARATOR	Group separator
RS	30	1E	36	RECORD SEPARATOR	Record separator
US	31	1F	37	UNIT SEPARATOR	Unit separator
SP	32	20	40	SPACE	Space character
!	33	21	41	EXCLAMATION POINT	Exclamation point
"	34	22	42	QUOTATION MARK	Quotation mark
#	35	23	43	NUMBER SIGN	Number sign
\$	36	24	44	DOLLAR SIGN	Dollar sign
%	37	25	45	PERCENT SIGN	Percent sign
&	38	26	46	AMPERSAND	Ampersand
'	39	27	47	APOSTROPHE	Apostrophe
(40	28	50	OPEN. PARENTHESIS	Open parenthesis
)	41	29	51	CLOS. PARENTHESIS	Closed parenthesis
*	42	2A	52	ASTERISK	Asterisk
+	43	2B	53	PLUS	Plus sign
,	44	2C	54	COMMA	Comma
-	45	2D	55	HYPHEN (MINUS)	Hyphen
.	46	2E	56	PERIOD (DECIMAL)	Period (decimal)
/	47	2F	57	SLANT	Slant
0	48	30	60	0	Number
1	49	31	61	1	Number
2	50	32	62	2	Number

ASCII	Dec.	Hex.	Oct.	Designation	Meaning
3	51	33	63	3	Number
4	52	34	64	4	Number
5	53	35	65	5	Number
6	54	36	66	6	Number
7	55	37	67	7	Number
8	56	38	70	8	Number
9	57	39	71	9	Number
:	58	3A	72	COLON	Colon
;	59	3B	73	SEMICOLON	Semicolon
<	60	3C	74	LESS THAN	Less than
=	61	3D	75	EQUALS	Equals
>	62	3E	76	GREATER THAN	Greater than
?	63	3F	77	QUESTION MARK	Question mark
@	64	40	100	COMMERCIAL AT	Commercial AT
A	65	41	101	A	Capital letter
B	66	42	102	B	Capital letter
C	67	43	103	C	Capital letter
D	68	44	104	D	Capital letter
E	69	45	105	E	Capital letter
F	70	46	106	F	Capital letter
G	71	47	107	G	Capital letter
H	72	48	110	H	Capital letter
I	73	49	111	I	Capital letter
J	74	4A	112	J	Capital letter
K	75	4B	113	K	Capital letter
L	76	4C	114	L	Capital letter
M	77	4D	115	M	Capital letter
N	78	4E	116	N	Capital letter
O	79	4F	117	O	Capital letter
P	80	50	120	P	Capital letter
Q	81	51	121	Q	Capital letter
R	82	52	122	R	Capital letter
S	83	53	123	S	Capital letter
T	84	54	124	T	Capital letter
U	85	55	125	U	Capital letter
V	86	56	126	V	Capital letter
W	87	57	127	W	Capital letter
X	88	58	130	X	Capital letter
Y	89	59	131	Y	Capital letter
Z	90	5A	132	Z	Capital letter
[91	5B	133	OPENING BRACKET	Opening bracket
\	92	5C	134	REVERSE SLANT	Reverse slant
]	93	5D	135	CLOSING BRACKET	Closing bracket
^	94	5E	136	CIRCUMFLEX	Circumflex
_	95	5F	137	UNDERSCORE	Underscore
`	96	60	140	GRAVE ACCENT	Grave accent
a	97	61	141	a	Lower case letter
b	98	62	142	b	Lower case letter
c	99	63	143	c	Lower case letter
d	100	64	144	d	Lower case letter
e	101	65	145	e	Lower case letter
f	102	66	146	f	Lower case letter
g	103	67	147	g	Lower case letter
h	104	68	150	h	Lower case letter
i	105	69	151	i	Lower case letter

ASCII	Dec.	Hex.	Oct.	Designation	Meaning
j	106	6A	152	j	Lower case letter
k	107	6B	153	k	Lower case letter
l	108	6C	154	l	Lower case letter
m	109	6D	155	m	Lower case letter
n	110	6E	156	n	Lower case letter
o	111	6F	157	o	Lower case letter
p	112	70	160	p	Lower case letter
q	113	71	161	q	Lower case letter
r	114	72	162	r	Lower case letter
s	115	73	163	s	Lower case letter
t	116	74	164	t	Lower case letter
u	117	75	165	u	Lower case letter
v	118	76	166	v	Lower case letter
w	119	77	167	w	Lower case letter
x	120	78	170	x	Lower case letter
y	121	79	171	y	Lower case letter
z	122	7A	172	z	Lower case letter
{	123	7B	173	OPENING BRACE	Opening brace
	124	7C	174	VERTICAL LINE	Vertical line
}	125	7D	175	CLOSING BRACE	Closing brace
~	126	7E	176	TILDE	Tilde
DEL	127	7F	177	DELETE (RUBOUT)	Delete

17.2 Bar code samples

17.2.1 Module 0.3

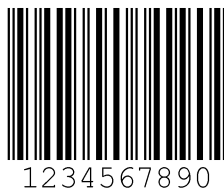


Figure 17.1: Code type 01: Interleaved 2 of 5

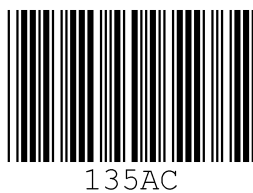


Figure 17.2: Code type 02: Code 39



Figure 17.3: Code type 06: UPC-A



Figure 17.4: Code type 07: EAN 8

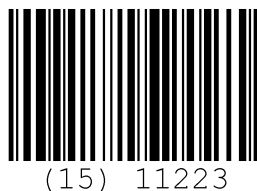


Figure 17.5: Code type 08: EAN 128

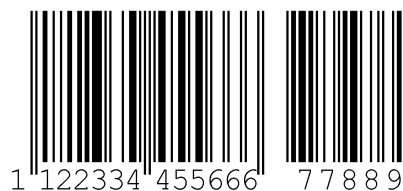


Figure 17.6: Code type 10: EAN 13 Add-on



Figure 17.7: Code type 11: Codabar



Figure 17.8: Code 128

17.2.2 Module 0.5

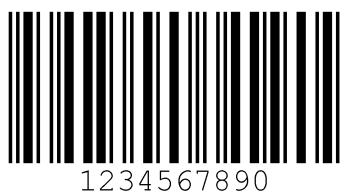


Figure 17.9: Code type 01: Interleaved 2 of 5

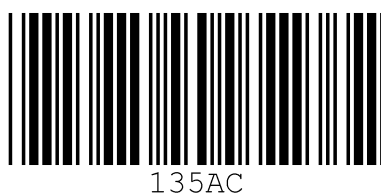


Figure 17.10: Code type 02: Code 39



Figure 17.11: Code type 06: UPC-A



Figure 17.12: Code type 07: EAN 8

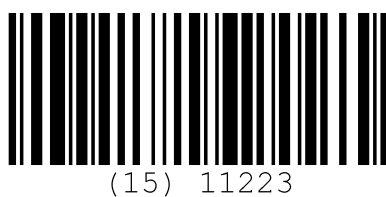


Figure 17.13: Code type 08: EAN 128

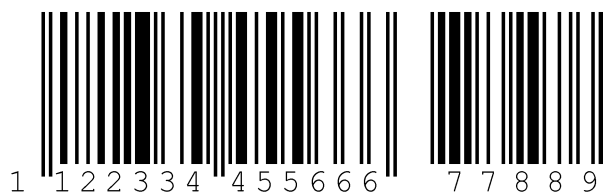


Figure 17.14: Code type 10: EAN 13 Add-on



Figure 17.15: Code type 11: Codabar

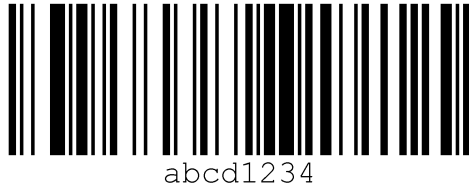


Figure 17.16: Code 128

Level 1	Level 2	Level 3	Level 4	Level 5	Selection/configuration option	Detailed information on
⬆️⬇️ : Selection	⬆️⬇️ : Selection ⬅️ : Back	⬆️⬇️ : Selection ⬅️ : Back	⬆️⬇️ : Selection ⬅️ : Back	⬆️⬇️ : Selection ⬅️ : Back	⬆️⬇️ : Selection ⬆️⬇️ : Activate ⬅️ : Back	
Device information						see page 42
Bar code reading window						see page 20
Parameter	⬆️⬇️ Parameter handling	⬆️⬇️ Parameter enable ⬆️⬇️ Parameters to default			OFF/ON	see page 43
	⬆️⬇️ Decoder table	⬆️⬇️ Max. no. of labels ⬆️⬇️ Decoder 1-4	⬆️⬇️ Symbology		All parameters are reset to their factory settings Set the number of labels to be decoded (0 to 64)	see page 43
			⬆️⬇️ Number of digits	⬆️⬇️ Interval mode ⬆️⬇️ Number of digits 1-5	Code type: no code / Code 2/5 Interleaved / Code 39 / Code 32 / Code UPC / Code EAN / Code 128 / EAN Addendum / Codabar / Code 93 / GS1 DataBar Omnidirectional / GS1 DataBar Limited / GS1 DataBar Expanded OFF / ON for specification of a range of the number of digits 0 ... 64 characters	
			⬆️⬇️ Reading reliability		2 ... 100	
			⬆️⬇️ Check digit method		When decoding used check digit methods	
			⬆️⬇️ Check digit transm.		Check digit transmission standard-compliant / non standard-compliant	
	⬆️⬇️ Digital SWIO	⬆️⬇️ Switching input / output 1-4	⬆️⬇️ I/O mode ⬆️⬇️ Switching input		Input / Output / Passive	see page 45
				⬆️⬇️ Inverted ⬆️⬇️ Debounce time ⬆️⬇️ Switch-on delay ⬆️⬇️ Pulse duration ⬆️⬇️ Switch-off delay ⬆️⬇️ Function	OFF / ON 0 ... 1000ms 0 ... 65535ms 0 ... 65535ms 0 ... 65535ms Function executed when the switching input is activated	
			⬆️⬇️ Switching output	⬆️⬇️ Inverted ⬆️⬇️ Signal delay ⬆️⬇️ Pulse duration ⬆️⬇️ Activation function 1-4 ⬆️⬇️ Deactivation function 1-4	OFF / ON 0 ... 65535ms 0 ... 65535ms Specifies which event activates the switching output Specifies which event deactivates the switching output	
	⬆️⬇️ PROFIBUS	⬆️⬇️ PROFIBUS address			0 ... 126	see page 47
Language selection	⬆️⬇️				Deutsch / English / Español / Français / Italiano / Chinese	see page 47
Service	⬆️⬇️ Diagnosis				Number of readings, reading gates, reading rate / non-reading rate etc.	see page 48
	⬆️⬇️ Status messages				Only for use by Leuze personnel for service purposes	
Actions	⬆️⬇️ Start decoding	Stop decoding			Performs a single read operation	see page 48
	⬆️⬇️ Start alignment	Stop alignment			Alignment aid (alignment mode)	
	⬆️⬇️ Start auto setup	Stop auto setup			Automatic determination of code type and number of digits	
	⬆️⬇️ Start teach-in	Stop teach-in			Teach-in one reference code	