

Translation of original operating instructions

BCL 548*i*

Bar code readers



© 2024
Leuze electronic GmbH + Co. KG
In der Braike 1
D-73277 Owen / Germany
Phone: +49 7021 573-0
Fax: +49 7021 573-199
<http://www.leuze.com>
info@leuze.de

The main menus

BCL548i SF 102
Leuze electronic
GmbH & Co. KG
SW: V 1.8.0 HW:3
SN: 1009A009815 001



Network settings
Channel 1:
Addr: 192.168.60.101
Mask: 255.255.255.0
Gateway: 0.0.0.0
DevName: BCL 548i



IO1 IO2 IO3 [LNK8]
IO4 ATT ERR [LNK1]

12345678

**Device buttons:**

- Navigate upward/sideways
- Navigate downward/sideways
- ESCAPE leave
- ENTER confirm

Input of values

12|
<-0123456789 save
Default ----- Unit
126 | |

- + Delete character
- ... + Enter digit
- save + Save input

Parameter
Parameter handling
Decoder table
Digital SWIO
Ethernet



Language selection
o Deutsch
● English
o Español
o Français
o Italiano



Service
Diagnosis
Status messages



Actions
o Start decoding
o Start alignment
o Start auto setup
o Start teach-in
o Start code recognition

Device information - main menu**Information about**

- Device type
- Software version
- Hardware version
- Serial number

Main menu Display of the network settings

- Display of the network settings.

See "Ethernet" on page 53.

Main menu Bar code reading window

Visualization of the read bar code information.

See "Indicators in the display" on page 22.

Parameter - main menu

Parameterization of the bar code reader.

See "Parameter menu" on page 48.

Language selection - main menu

Selection of the display language.

See "Language selection menu" on page 54.

Service - main menu

Scanner diagnostics and status messages.

See "Service menu" on page 55.

Main menu Actions

Various functions for scanner configuration and manual operation.

See "Actions menu" on page 55.

PWR
 PWR LED

- | | |
|-------------------------|---------------------------------|
| Off | Device OFF |
| Flashes green | Device ok, initialization phase |
| Green, continuous light | Device ok |

NET
 NET LED

- | | |
|-------------------------|-------------------|
| Off | No supply voltage |
| Flashes green | Initialization |
| Green, continuous light | Operation ok |

PWR  **PWR LED**

Orange, continuous light	Service mode
Flashes red	Device ok, warning set
Red, continuous light	Device error

NET  **NET LED**

Flashes orange	Timeout
Flashes red	Communication error
Red, continuous light	Network error

1	General information	14
1.1	Explanation of symbols	14
1.2	Declaration of Conformity	14
2	Safety	15
2.1	Intended use	15
2.2	Foreseeable misuse	15
2.3	Competent persons	15
2.4	Exemption of liability	16
2.5	Laser safety notices	16
3	Device description	18
3.1	Device overview	18
3.2	Performance characteristics	18
3.3	Device construction	20
3.4	Connection technology	21
3.5	Display elements	21
3.5.1	Structure of the control panel	21
3.5.2	Status indicators and operation	22
3.5.3	LED status indicators	22
3.6	Control buttons	23
3.7	External parameter memory	24
4	Functions	25
4.1	autoReflAct	25
4.2	Reference codes	26
4.3	autoConfig	26
4.4	Heating	27
5	Reading techniques	28
5.1	Line scanner (single line)	28
5.2	Line scanner with oscillating mirror	29
5.3	Omnidirectional reading	30
5.4	Leuze multiScan over Ethernet/PROFINET	31
6	Mounting	32
6.1	Device arrangement	32
6.1.1	Selecting a mounting location	32
6.1.2	Avoiding total reflection – Line scanner	32
6.1.3	Avoiding total reflection – oscillating-mirror scanner	33
6.1.4	Mounting location	34
6.1.5	Devices with integrated heating	34
6.1.6	Possible read angles between device and bar code	34
6.2	Installing the external parameter memory	35
7	Electrical connection	36
7.1	Safety notices for the electrical connection	36
7.2	Electrical connection of the device	37
7.2.1	PWR – Voltage supply and switching inputs/outputs 3 and 4	38
7.2.2	SERVICE – USB interface (type A)	40
7.2.3	SW IN/OUT – Switching input/switching output	41
7.2.4	HOST / BUS IN	43

7.2.5	BUS OUT	44
7.3	PROFINET-IO topologies	45
7.3.1	PROFINET-IO wiring	46
7.4	Cable lengths and shielding	46
8	Menu description	47
8.1	The main menus	47
8.2	Parameter menu	48
8.3	Language selection menu	54
8.4	Service menu.	55
8.5	Actions menu.	55
8.6	Operation.	57
9	Starting up the device – Leuze webConfig tool	59
9.1	Connecting the SERVICE USB interface	59
9.2	Installing the required software	59
9.2.1	System requirements	59
9.2.2	Installing the USB driver	59
9.3	Starting the webConfig tool	60
9.4	Short description of the webConfig tool	61
9.4.1	Module overview in the Configuration menu	61
10	Starting up the device - Configuration	63
10.1	General information on the PROFINET-IO implementation	63
10.1.1	PROFINET-IO communication profile	64
10.1.2	Conformance Classes	65
10.2	Measures to be performed prior to the initial commissioning	65
10.3	Starting the device.	65
10.4	Configuration steps for a Siemens Simatic S7 control	65
10.4.1	Step 1 – Preparing the control system (S7 PLC).	66
10.4.2	Step 2 – Installation of the GSD file.	66
10.4.3	Step 3 – Hardware configuration of the S7 PLC: Configuration	67
10.4.4	Step 4 – Transfer of the configuration to the IO controller (S7 PLC)	67
10.4.5	Step 5 – Configuration of the device name – device naming	67
10.4.6	Step 6 – Check device names.	69
10.4.7	Ethernet host communication	70
10.4.8	Manual configuration of the IP address	70
10.4.9	Automatically setting the IP address	70
10.4.10	Address Link Label	71
10.4.11	TCP/IP	72
10.4.12	UDP	72
10.5	Commissioning via the PROFINET-IO	73
10.5.1	General information	73
10.5.2	Permanently defined parameters/device parameters	73
10.6	Overview of the project modules	77
10.7	Decoder modules	80
10.7.1	Modules 1-4 – Code table extensions 1 to 4	80
10.7.2	Module 5 – Code type features (symbology)	81
10.7.3	Module 7 – Code reconstruction technology	82
10.8	Control modules	82
10.8.1	Module 10 – Activations	82
10.8.2	Module 11 – Reading gate control.	84
10.8.3	Module 12 – Multi-label	85
10.8.4	Module 13 – Fragmented read result	85
10.8.5	Module 14 – Interlinked read result	86

10.8.6 Module 15 – Immediate output – reading gate	87
10.9 Result format	87
10.9.1 Module 20 – Decoder state	87
10.9.2 Modules 21-29 – Decoding result	88
10.9.3 Module 48 – Decoding result	90
10.9.4 Module 30 – Data formatting	91
10.9.5 Module 31 – Reading gate number	91
10.9.6 Module 32 – Reading gate time	92
10.9.7 Module 33 – Code position	92
10.9.8 Module 34 – Reading reliability (equal scans)	93
10.9.9 Module 35 – Bar code length	93
10.9.10 Module 36 – Scans with information	94
10.9.11 Module 37 – Decoding quality	94
10.9.12 Module 38 – Code direction	95
10.9.13 Module 39 – Number of digits	95
10.9.14 Module 40 – Code type (symbology)	96
10.9.15 Module 41 – Code position in the swivel range	96
10.10 Data Processing	97
10.10.1 Module 50 – Characteristics filter	97
10.10.2 Module 51 – Data filtering	98
10.11 Identifier	99
10.11.1 Module 52 – Segmentation according to the EAN process	100
10.11.2 Module 53 – Segmentation via fixed positions	101
10.11.3 Module 54 – Segmentation according to identifier and separator	103
10.11.4 Module 55 – String handling parameters	104
10.12 Device functions	104
10.12.1 Module 60 – Device status	104
10.12.2 Module 61 – Laser control	105
10.12.3 Module 62 – Display	106
10.12.4 Module 63 – Alignment	107
10.12.5 Module 64 – Oscillating mirror	107
10.12.6 Module 65 – Deflecting mirror	108
10.13 Switching inputs/ outputs SWIO 1 ... 4	108
10.13.1 Parameters for operating as an output	109
10.13.2 Parameters for operating as an input	110
10.13.3 Switch-on and switch-off functions for operation as an output	112
10.13.4 Input functions for operation as an input	112
10.13.5 Module 70 – Switching input/output SWIO1	112
10.13.6 Module 71 – Switching input/output SWIO2	114
10.13.7 Module 72 – Switching input/output SWIO3	115
10.13.8 Module 73 – Switching input/output SWIO4	117
10.13.9 Module 74 – SWIO status and control	118
10.14 Data output	119
10.14.1 Module 80 – Sorting	119
10.15 Reference code comparison	120
10.15.1 Module 81 – Reference code comparator 1	120
10.15.2 Module 82 – Reference code comparator 2	122
10.15.3 Module 83 – Reference code comparison pattern 1	123
10.15.4 Module 84 – Reference code comparison pattern 2	124
10.16 Special functions	125
10.16.1 Module 90 – Status and control	125
10.16.2 Module 91 – AutoReflAct (automatic reflector activation)	126
10.16.3 Module 92 – AutoControl	127
10.16.4 Module 94 – universal parameter module 1	128
10.16.5 Module 95 – universal parameter module 2	128
10.16.6 Module 96 – universal parameter module 3	129
10.16.7 Module 100 – multiScan master	130
10.16.8 Module 101 – multiScan slave addresses 1	131
10.16.9 Module 102 – multiScan slave addresses 2	132

10.17 Example configuration: Indirect activation via the PLC	133
10.17.1 Task	133
10.17.2 Procedure	133
10.18 Example configuration: Direct activation via the switching input	134
10.18.1 Task	134
10.18.2 Procedure	134
11 Online commands	136
11.1 Overview of commands and parameters	136
11.1.1 General online commands	136
11.1.2 Online commands for system control	139
11.1.3 Online commands for configuring the switching inputs/outputs	140
11.1.4 Online commands for the parameter set operations	141
12 Care, maintenance and disposal	146
12.1 Cleaning	146
12.2 Repairs, servicing	146
12.3 Disposing	146
13 Diagnostics and troubleshooting	147
13.1 General causes of errors	148
13.2 Interface errors	148
14 Support	149
15 Technical data	150
15.1 General specifications of the bar code readers	150
15.1.1 Line scanner	150
15.1.2 Oscillating-mirror scanner	152
15.2 Heating models of the bar code readers	152
15.2.1 Line scanner with heater	153
15.2.2 Oscillating-mirror scanner with heating	154
15.3 Dimensioned drawings	155
15.3.1 Line scanner with / without heating	155
15.3.2 Oscillating-mirror scanner with/without heating	156
15.4 Dimensioned drawings: Accessories	157
15.5 Reading field curves / optical data	158
15.6 Reading field curves	159
15.6.1 High Density (N) - optics: BCL 548/SN 102	160
15.6.2 High Density (N) - optics: BCL 548/ON 100	161
15.6.3 Medium Density (M) - optics: BCL 548/SM 102	162
15.6.4 Medium Density (M) - optics: BCL 548/OM 100	163
15.6.5 Low Density (F) - optics: BCL 548/SF 102	164
15.6.6 Low Density (F) - optics: BCL 548/OF 100	165
15.6.7 Ultra Low Density (L) - optics: BCL 548/SL 102	166
15.6.8 Ultra Low Density (L) - optics: BCL 548/OL 100	167
15.7 Reading field curves for heating devices	168
15.7.1 High Density (N) - optics: BCL 548/SN 102 H	168
15.7.2 High Density (N) - optics: BCL 548/ON 100 H	169
15.7.3 Medium Density (M) - optics: BCL 548/SM 102 H	170
15.7.4 Medium Density (M) - optics: BCL 548/OM 100 H	171
15.7.5 Low Density (F) - optics: BCL 548/SF 102 H	172
15.7.6 Low Density (F) - optics: BCL 548/OF 100 H	173
15.7.7 Ultra Low Density (L) - optics: BCL 548/SL 102 H	174
15.7.8 Ultra Low Density (L) - optics: BCL 548/OL 100 H	175

16 Order guide and accessories	176
16.1 Part number code	176
16.2 Overview of BCL 548/types	176
16.3 Accessories	177
17 Appendix	178
17.1 ASCII character set	178
17.2 Bar code samples	180
17.2.1 Module 0.3	180
17.2.2 Module 0.5	182

Table 1.1:	Warning symbols and signal words	14
Table 1.2:	Other symbols	14
Figure 2.1:	Attaching stick-on labels with warning notices (top: with oscillating mirror, bottom: line scanners)	17
Figure 3.1:	Line scanner and oscillating-mirror scanner.....	18
Figure 3.2:	Device construction	20
Figure 3.3:	Location of the electrical connections	21
Figure 3.4:	Structure of the control panel	21
Table 3.1:	Status displays of the switching inputs/outputs	22
Table 3.2:	Status display of the USB interface	22
Table 3.3:	Link status of the PROFINET-IO interface	22
Figure 4.1:	Possible bar code orientation	25
Figure 4.2:	Reflector arrangement for autoReflAct.....	26
Figure 5.1:	Deflection principle for the line scanner	28
Figure 5.2:	Deflection principle for the line scanner with oscillating mirror add-on.....	29
Figure 5.3:	Principle arrangement for omnidirectional reading.....	30
Figure 5.4:	Scanner arrangement with the multiScan function.....	31
Figure 6.1:	Total reflection – line scanner.....	33
Figure 6.2:	Total reflection – oscillating-mirror scanner.....	33
Figure 6.3:	Reading angle for the line scanner.....	34
Figure 7.1:	Location of the electrical connections	36
Figure 7.2:	Connections of the device	37
Figure 7.3:	PWR, M12 connector (A-coded)	38
Table 7.1:	Pin assignments - PWR	38
Figure 7.4:	Switching input connection diagram SWIO_3 and SWIO_4	39
Figure 7.5:	Switching output connection diagram SWIO_3 / SWIO_4.....	39
Figure 7.6:	Service, USB, type A.....	40
Table 7.2:	Pin assignments of SERVICE – USB interface	40
Figure 7.7:	SW IN/OUT, M12 socket (A-coded)	41
Table 7.3:	Pin assignment SW IN/OUT	41
Figure 7.8:	Switching input connection diagram SWIO_1 and SWIO_2	41
Figure 7.9:	Switching output connection diagram SWIO_1 / SWIO_2.....	42
Figure 7.10:	Host/BUS IN, M12 socket (D-coded).....	43
Table 7.4:	Pin assignment HOST / BUS IN	43
Figure 7.11:	HOST / BUS IN cable assignments on RJ-45	43
Figure 7.12:	M12 socket (D-coded).....	44
Table 7.5:	Pin assignment BUS OUT	44
Figure 7.13:	PROFINET-IO in a star topology	45
Figure 7.14:	PROFINET-IO in a line topology	45
Table 7.6:	Contact assignment of M12 PROFINET-IO connection cable	46
Table 7.7:	Cable lengths and shielding	46
Table 8.1:	Parameter handling submenu	48
Table 8.2:	Decoder table submenu	48
Table 8.3:	Digital SWIO submenu	50
Table 8.4:	Ethernet submenu	53
Table 9.1:	webConfig system requirements	59
Figure 9.1:	The start page of the webConfig tool	60
Figure 9.2:	Module overview in the webConfig tool.....	61
Table 10.1:	Base record I&M0.....	63

Figure 10.1:	Assignment of the device names to IP addresses	67
Figure 10.2:	Assigning the device names to the configured IO devices	68
Figure 10.3:	MAC address - IP address -individual device name	69
Figure 10.4:	Example of an <i>Address Link Label</i> ; the device type varies depending on the series...	71
Table 10.2:	Device parameters	74
Table 10.3:	Module overview	77
Table 10.4:	Parameters for modules 1-4.....	80
Table 10.5:	Parameters for module 5.....	81
Table 10.6:	Parameters for module 7	82
Table 10.7:	Parameters for module 10.....	83
Table 10.8:	Output data for module 10.....	83
Table 10.9:	Parameters for module 11	84
Table 10.10:	Parameters for module 12	85
Table 10.11:	Input data for module 12	85
Table 10.12:	Parameters for module 13.....	86
Table 10.13:	Input data for module 13	86
Table 10.14:	Parameters for module 14	86
Table 10.15:	Parameters for module 15.....	87
Table 10.16:	Input data for module 20	88
Table 10.17:	Input data for module 21 ... 29.....	89
Table 10.18:	Input data for module 48	90
Table 10.19:	Parameters for module 30	91
Table 10.20:	Input data for module 31	92
Table 10.21:	Input data for module 32	92
Table 10.22:	Input data for module 33	93
Table 10.23:	Input data for module 34	93
Table 10.24:	Input data for module 35	94
Table 10.25:	Input data for module 36	94
Table 10.26:	Input data for module 37	95
Table 10.27:	Input data for module 38	95
Table 10.28:	Input data for module 39	96
Table 10.29:	Input data for module 40	96
Table 10.30:	Input data for module 41	97
Table 10.31:	Parameters for module 50	97
Table 10.32:	Parameters for module 51	98
Table 10.33:	Parameters for module 52.....	100
Table 10.34:	Parameters for module 53	101
Table 10.35:	Parameters for module 54	103
Table 10.36:	Parameters for module 55	104
Table 10.37:	Input data for module 60	105
Table 10.38:	Input data for module 60	105
Table 10.39:	Parameters for module 61	106
Table 10.40:	Parameters for module 62.....	106
Table 10.41:	Input data for module 63	107
Table 10.42:	Output data for module 63.....	107
Table 10.43:	Parameters for module 64	108
Table 10.44:	Parameters for module 65	108
Figure 10.5:	Example 1: Switch-on delay > 0 and switch-on time = 0	109
Figure 10.6:	Example 2: Switch-on delay > 0 and switch-on time > 0	109

Figure 10.7:	Example 3: Switch-on delay > 0 Switch-off signal prior to lapsing of the switch-on delay	110
Figure 10.8:	Switch-on delay in input mode	111
Figure 10.9:	Switch-on time in input mode	111
Figure 10.10:	Switch-off delay in input mode	111
Table 10.45:	Switch-on/switch-off functions	112
Table 10.46:	Input functions	112
Table 10.47:	Parameters for module 70 – Input/Output 1	113
Table 10.48:	Parameters for module 71 – Input/Output 2	114
Table 10.49:	Parameters for module 72 – Input/Output 3	115
Table 10.50:	Parameters for module 73 – Input/Output 4	117
Table 10.51:	Input data for module 74 Input/output status and control	118
Table 10.52:	Output data for module 74 Input/output status and control	119
Table 10.53:	Parameters for module 80	120
Table 10.54:	Parameters for module 81 – Reference code comparison	121
Table 10.55:	Parameters for module 82 – Reference code comparison	122
Table 10.56:	Parameters for module 83 – Reference code comparison pattern	123
Table 10.57:	Parameters for module 84 – Reference code comparison pattern	124
Table 10.58:	Input data for module 90 – Status and control.....	125
Table 10.59:	Parameters for module 91 – AutorefAct	126
Table 10.60:	Parameters for module 92 – AutoControl	127
Table 10.61:	Input data for module 92 – AutoControl.....	127
Table 10.62:	Parameter overview module 94 – universal parameter module 1	128
Table 10.63:	Parameter overview module 95 - universal parameter module 2	129
Table 10.64:	Parameter overview module 96 - universal parameter module 3	129
Table 10.65:	Parameters for module 100 – multiScan master	130
Table 10.66:	Input data for module 100	131
Table 10.67:	Parameters for module 101 – multiScan slave addresses 1	132
Table 10.68:	Successful reading	133
Table 10.69:	Unsuccessful reading	134
Table 10.70:	Device parameters for example configuration 2	134
Table 10.71:	Successful reading	135
Table 10.72:	Unsuccessful reading	135
Table 13.1:	Alarm and diagnostic messages	147
Table 13.2:	Error categories.....	148
Table 13.3:	General causes of errors	148
Table 13.4:	Interface error	148
Table 15.1:	Technical data of the BCL 548/line scanners without heating	150
Table 15.2:	Technical data of the BCL 548/oscillating-mirror scanners with heating	152
Table 15.3:	Technical data of the BCL 548/line scanners with heating	153
Table 15.4:	Technical data of the BCL 548/oscillating-mirror scanners with heating	154
Figure 15.1:	Diminished drawing - line scanner	155
Figure 15.2:	Diminished drawing of oscillating-mirror scanner.....	156
Figure 15.3:	BT 56 mounting device.....	157
Figure 15.4:	BT 59 mounting device.....	157
Figure 15.5:	External parameter memory	158
Figure 15.6:	The most important characteristics of a bar code	158
Figure 15.7:	Zero position of the reading distance	159
Table 15.5:	Reading conditions	159

Figure 15.8:	"High Density" reading field curve for line scanner.....	160
Figure 15.9:	"High Density" reading field curve for oscillating-mirror scanners	161
Figure 15.10:	Lateral "High Density" reading field curve for oscillating-mirror scanners	161
Figure 15.11:	"Medium Density" reading field curve for line scanner	162
Figure 15.12:	"Medium Density" reading field curve for oscillating-mirror scanners.....	163
Figure 15.13:	Lateral "Medium Density" reading field curve for oscillating-mirror scanners.....	163
Figure 15.14:	"Low Density" reading field curve for line scanner	164
Figure 15.15:	"Low Density" reading field curve for oscillating-mirror scanners.....	165
Figure 15.16:	Lateral "Low Density" reading field curve for oscillating-mirror scanners	165
Figure 15.17:	"Ultra Low Density" reading field curve for line scanner.....	166
Figure 15.18:	"Ultra Low Density" reading field curve for oscillating-mirror scanners	167
Figure 15.19:	Lateral "Ultra Low Density" reading field curve for oscillating-mirror scanners	167
Figure 15.20:	"High Density" reading field curve for line scanner with heating	168
Figure 15.21:	"High Density" reading field curve for oscillating-mirror scanners with heating.....	169
Figure 15.22:	Lateral "High Density" reading field curve for oscillating-mirror scanners with heating.....	169
Figure 15.23:	"Medium Density" reading field curve for line scanner with heating	170
Figure 15.24:	"Medium Density" reading field curve for oscillating-mirror scanners with heating	171
Figure 15.25:	Lateral "Medium Density" reading field curve for oscillating-mirror scanners with heating.....	171
Figure 15.26:	"Low Density" reading field curve for line scanner with heating	172
Figure 15.27:	"Low Density" reading field curve for oscillating-mirror scanners with heating.....	173
Figure 15.28:	Lateral "Low Density" reading field curve for oscillating-mirror scanners with heating.....	173
Figure 15.29:	"Ultra Low Density" reading field curve for line scanner with heating.....	174
Figure 15.30:	"Ultra Low Density" reading field curve for oscillating-mirror scanners with heating ..	175
Figure 15.31:	Lateral "Ultra Low Density" reading field curve for oscillating-mirror scanners with heating.....	175
Table 16.1:	Part number code	176
Table 16.2:	Overview of BCL 548/types	176
Table 16.3:	Accessories – Connectors	177
Table 16.4:	Accessories – Cables	177
Table 16.5:	Accessories – External parameter memory	177
Table 16.6:	Mounting device accessories	177
Table 16.7:	Accessory - Reflector for AutoReflAct	177
Figure 17.1:	Code type 01: Interleaved 2 of 5	180
Figure 17.2:	Code type 02: Code 39	180
Figure 17.3:	Code type 06: UPC-A.....	180
Figure 17.4:	Code type 07: EAN 8.....	181
Figure 17.5:	Code type 08: EAN 128.....	181
Figure 17.6:	Code type 10: EAN 13 Add-on	181
Figure 17.7:	Code type 11: Codabar	181
Figure 17.8:	Code 128.....	181
Figure 17.9:	Code type 01: Interleaved 2 of 5	182
Figure 17.10:	Code type 02: Code 39	182
Figure 17.11:	Code type 06: UPC-A.....	182
Figure 17.12:	Code type 07: EAN 8.....	182
Figure 17.13:	Code type 08: EAN 128.....	182
Figure 17.14:	Code type 10: EAN 13 Add-on	182

Figure 17.15: Code type 11: Codabar	183
Figure 17.16: Code 128.....	183

1 General information

1.1 Explanation of symbols

Table 1.1: Warning symbols and signal words

CAUTION!	
	This symbol precedes text messages which must strictly be observed. Failure to observe the provided instructions could lead to personal injury or damage to equipment.

ATTENTION, LASER RADIATION – CLASS 1 LASER PRODUCT	
	This symbol warns of possible danger caused by hazardous laser radiation.

NOTE	
	This symbol indicates text passages containing important information.

Table 1.2: Other symbols

	Symbol for action steps Text passages with this symbol instruct you to perform actions.

1.2 Declaration of Conformity

The bar code readers of the BCL 500*i*series have been developed and manufactured in accordance with the applicable European standards and directives.

The BCL 500*i*series is "UL LISTED" according to American and Canadian safety standards and fulfills the requirements of Underwriter Laboratories Inc. (UL).



NOTE	
	The Declaration of Conformity for these devices can be requested from the manufacturer.

The manufacturer of the product, Leuze electronic GmbH & Co KG in D-73277 Owen, possesses a certified quality assurance system in accordance with ISO 9001.

2 Safety

The bar code readers of the BCL 500/*series* were developed, manufactured and tested in accordance with the applicable safety standards. They correspond to the state of the art.

2.1 Intended use

The device is designed as a stationary high-speed scanner with integrated decoder for all common bar codes for automatic object detection.

Areas of application

The device is specially designed for the following areas of application:

- Object identification on fast-moving conveyor lines
- Omnidirectional reading

 CAUTION!
Comply with conditions and regulations! Observe the locally applicable legal regulations and the rules of the employer's liability insurance association.

2.2 Foreseeable misuse

Any use other than that defined under "Intended use" or which goes beyond that use is considered improper use.

In particular, use of the device is not permitted in the following cases:

- in rooms with explosive atmospheres
- in circuits which are relevant to safety
- for medical purposes

 CAUTION!
Do not modify or otherwise interfere with the device! Do not carry out modifications or otherwise interfere with the device. The device must not be tampered with and must not be changed in any way. The device must not be opened. There are no user-serviceable parts inside. Repairs must only be performed by Leuze electronic GmbH + Co. KG.

2.3 Competent persons

Connection, mounting, commissioning and adjustment of the device must only be carried out by competent persons.

Prerequisites for competent persons:

- They have a suitable technical education.
- They are familiar with the rules and regulations for occupational safety and safety at work.
- They are familiar with the technical description of the device.
- They have been instructed by the responsible person on the mounting and operation of the device.

Certified electricians

Electrical work must be carried out by a certified electrician.

Due to their technical training, knowledge and experience as well as their familiarity with relevant standards and regulations, certified electricians are able to perform work on electrical systems and independently detect possible dangers.

In Germany, certified electricians must fulfill the requirements of accident-prevention regulations DGUV V3 (e.g. electrician foreman). In other countries, there are respective regulations that must be observed.


2.4 Exemption of liability

Leuze electronic GmbH + Co. KG is not liable in the following cases:

- The device is not being used properly.
- Reasonably foreseeable misuse is not taken into account.
- Mounting and electrical connection are not properly performed.
- Changes (e.g., constructional) are made to the device.

2.5 Laser safety notices

⚠ ATTENTION, LASER RADIATION – CLASS 1 LASER PRODUCT	
 The device satisfies the requirements of IEC 60825-1:2014 / EN 60825-1:2014+A11:2021 safety regulations for a product of laser class 1 and complies with 21 CFR 1040.10 except for conformance with IEC 60825-1 Ed. 3., as described in Laser Notice No. 56, dated May 8, 2019. ↳ Observe the applicable statutory and local laser protection regulations. ↳ The device must not be tampered with and must not be changed in any way. There are no user-serviceable parts inside the device. CAUTION! Opening the device may result in hazardous radiation exposure! Repairs must only be performed by Leuze electronic GmbH + Co. KG.	

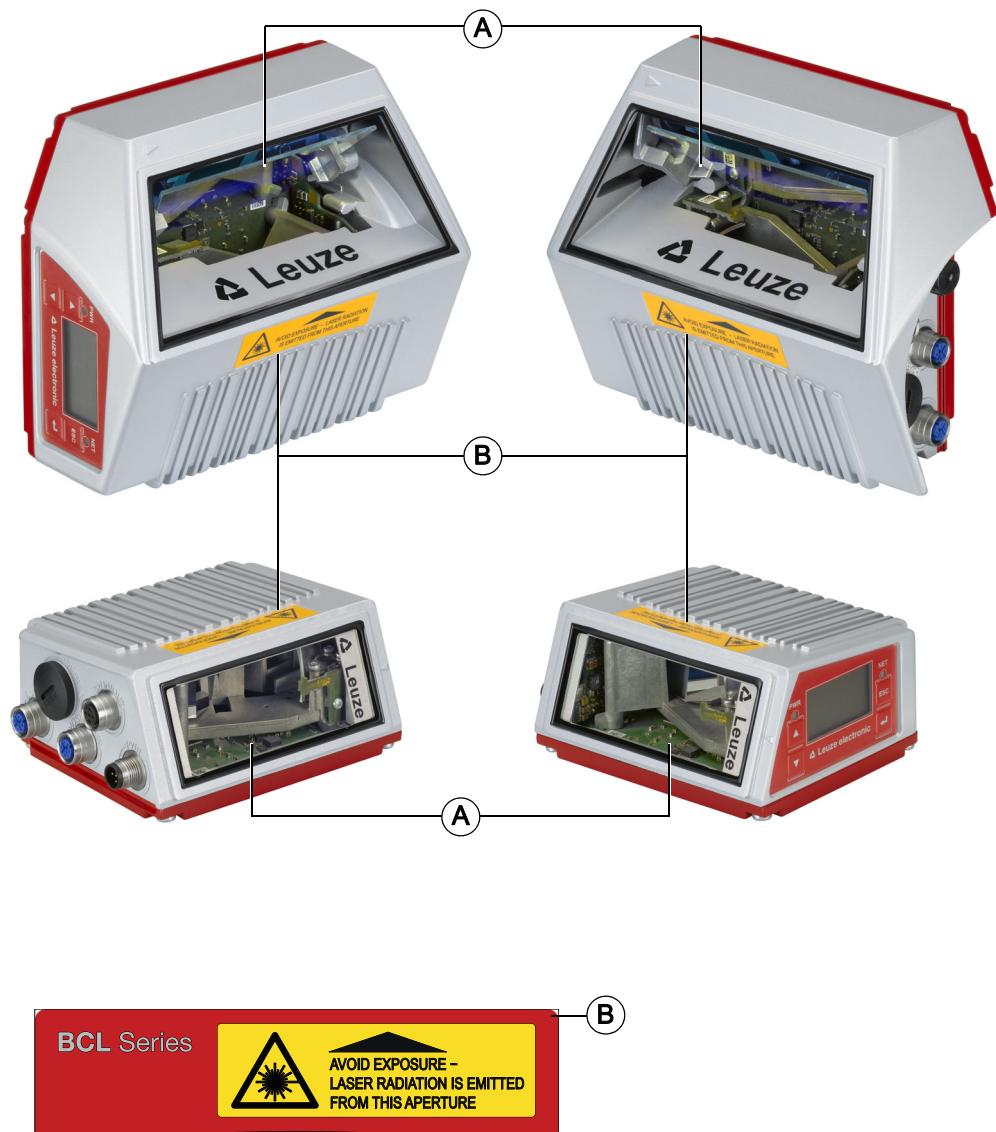

- A Laser aperture
B Laser warning sign

Figure 2.1: Attaching stick-on labels with warning notices
(top: with oscillating mirror, bottom: line scanners)

3 Device description

3.1 Device overview

Bar code readers of the BCL 500/*i*/series are high-speed scanners with integrated decoder for all commonly used bar codes, e.g. 2/5 Interleaved, Code 39, Code 128, EAN 8/13 etc., as well as codes from the GS1 DataBar family.

Bar code readers of the BCL 500/*i*/series are available in various optics models as well as line scanners, line scanners with oscillating mirrors and also optionally as heated models.



Figure 3.1: Line scanner and oscillating-mirror scanner

The extensive options for device configuration via display or software enable adaptation to a multitude of reading tasks. Due to the large reading distance combined with the great depth of field and a very compact construction, the device is ideally suited for package and pallet transportation systems. In general, the bar code readers of the BCL 500/*i*/series are designed for the conveyor and storage technology market.


The interfaces (RS 232, RS 485 and RS 422) integrated in the various device models and the fieldbus systems (PROFIBUS DP, PROFINET-IO, Ethernet and Ethernet IP) of the BCL 500/*i*/series bar code readers offer optimum connection to the superior host system.

3.2 Performance characteristics

- Integrated fieldbus connectivity = *i*-> Plug-and-Play fieldbus coupling and easy networking
- Numerous interface variants facilitate connection to the superior systems
 - RS 232, RS 422 as well as with integrated multiNet plus master
 - RS 485 and multiNet plus slave
- Alternatively, various fieldbus systems, such as
 - PROFIBUS DP
 - PROFINET-IO
 - Ethernet TCP/IP, UDP
 - Ethernet/IP
- Integrated code reconstruction technology (**CRT**) enables the identification of soiled or damaged bar codes
- Maximum depth of field and reading distances from 200 mm to 2400 mm
- Large optical opening angle and, thus, large reading field width
- High scanning rate of 800 / 1200 scans/s for fast reading tasks
- Intuitive, backlit, multi-language display with user-friendly menu navigation
- Integrated **USB 1.1** service interface
- Adjustment of all device parameters with a web browser
- Connection options for an external parameter memory
- Easy alignment and diagnostics functions

- M 12 connections with Ultra-Lock™ technology
- Four freely programmable switching inputs/outputs for the activation or signaling of states
- Automatic monitoring of the read quality with **autoControl**
- Automatic recognition and setting of the bar code type using **autoConfig**
- Reference code comparison
- Optional heating models to -35°C
- Heavy-duty housing of degree of protection IP 65

3.3 Device construction

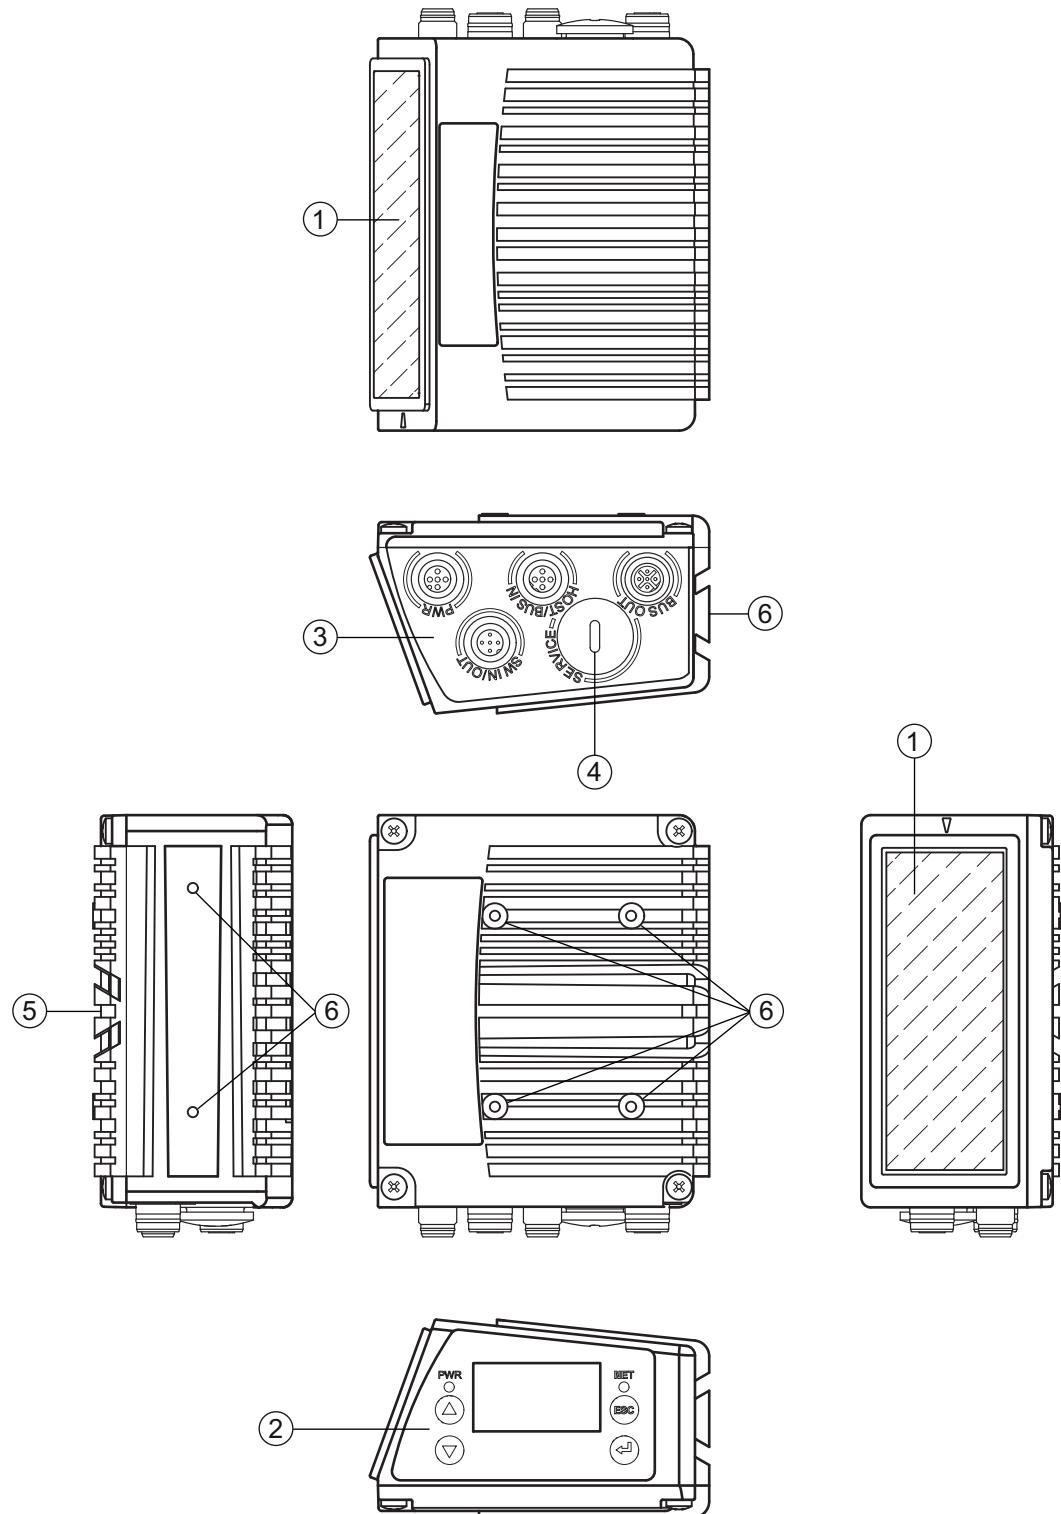

- 1 Reading window
- 2 Control panel with display, LEDs and buttons
- 3 M12 connection technology
- 4 USB interface
- 5 Dovetail mounting
- 6 M4 mounting thread


Figure 3.2: Device construction

3.4 Connection technology

The bar code readers are connected using variously coded M12 connectors. This ensures unique connection assignments.

The additional USB interface is used for configuring the device.

For the locations of the individual device connections, please refer to the device detail shown below.

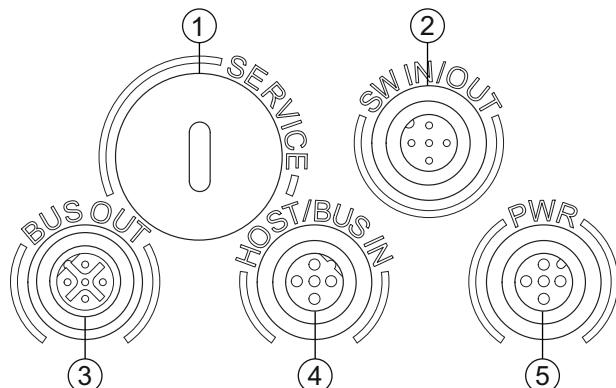


- 1 Service, USB socket, type A
- 2 SW IN/OUT, M12 socket (A-coded)
- 3 BUS OUT, M12 socket (D-coded)
- 4 Host/BUS IN, M12 socket (D-coded)
- 5 PWR, M12 connector (A-coded)

Figure 3.3: Location of the electrical connections

3.5 Display elements

3.5.1 Structure of the control panel

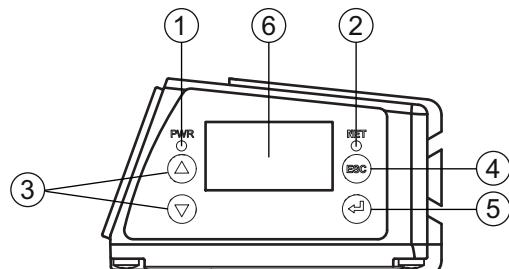

- 1 PWR LED
- 2 NET LED
- 3 Navigation buttons
- 4 Escape button
- 5 Enter button
- 6 Display

Figure 3.4: Structure of the control panel

3.5.2 Status indicators and operation

Indicators in the display

Table 3.1: Status displays of the switching inputs/outputs

IO1	Switching input or switching output 1 active (function dependent on set parameterization). Default: Switching input with the "Reading gate activation" function
IO2	Switching input or switching output 2 active (function dependent on set parameterization). Default: Input with the "Teach-in" function
IO3	Switching input or switching output 3 active (function dependent on set parameterization). Default: Switching input with the "Reading gate activation" function
IO4	Switching input or switching output 4 active (function dependent on set parameterization). Default: Switching output with the "No read" function
ATT	Warning (Attention)
ERR	Internal device error (Error) -> The device must be sent in for inspection

Bar graph

The read quality is shown on a scale of 0 - 100 %. The quality is evaluated based on the "Equal Scans" of the read result configured in the bar code reader.

Table 3.2: Status display of the USB interface

USB The device is connected to a PC via the USB interface.

MS An external parameter memory is properly connected to the USB interface of the device.

Read result

The read bar code information is displayed.

Link states

Table 3.3: Link status of the PROFINET-IO interface

LNK0 Physical connection to the HOST / BUS IN port

LNK1 Physical connection to the BUS OUT port

3.5.3 LED status indicators

PWR LED

PWR	Off	Device OFF
		<ul style="list-style-type: none"> • No supply voltage
PWR	Flashes green	Device ok, initialization phase
		<ul style="list-style-type: none"> • No bar code reading possible • Voltage connected • Self test running • Initialization running
PWR	Green, continuous light	Device ok
		<ul style="list-style-type: none"> • Bar code reading possible • Self test successfully finished • Device monitoring active

PWR	 Orange, continuous light	Service mode	<ul style="list-style-type: none"> • Bar code reading possible • Configuration via the USB service interface • Configuration via the display • No data on the host interface
PWR	 Flashes red	Device ok, warning set	<ul style="list-style-type: none"> • Bar code reading possible • Temporary operating fault
PWR	 Red, continuous light	Device error / parameter enable	<ul style="list-style-type: none"> • No bar code reading possible
NET LED			
NET	 Off	No supply voltage	<ul style="list-style-type: none"> • No communication possible • PROFINET-IO communication not initialized or inactive
NET	 Flashes green	Initialization	<ul style="list-style-type: none"> • Of the device, establishing communication
NET	 Green, continuous light	Operation ok	<ul style="list-style-type: none"> • Network mode ok • Connection and communication to IO Controller (PLC) established ("data exchange")
NET	 Flashes orange	Timeout	
NET	 Flashes red	Communication error	<ul style="list-style-type: none"> • Bus error • Parameterization or configuration failed ("parameter failure") • IO error • No data exchange
NET	 Red, continuous light	Network error	<ul style="list-style-type: none"> • Bus error • No communication (protocol) to IO controller established (no data exchange)

3.6 Control buttons

	Up	Navigate upward/sideways.
	Down	Navigate downward/sideways.
	ESC	Exit menu item.
	ENTER	Confirm/enter value, change menu levels.

Navigating within the menus

The menus within a level are selected with the up/down buttons  .


The selected menu item is activated with the enter button .

Press the ESC button  to move up one menu level.

When one of the buttons is actuated, the display illumination is activated for 10min.

Setting values

If input of a value is possible, the display looks like this:

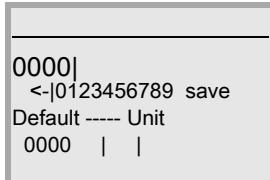


Use the and buttons to set the desired value. An accidental, incorrect entry can be corrected by selecting and then pressing .

Then use the buttons to select **save** and save the set value by pressing .

Selecting options

If options can be selected, the display looks like this:

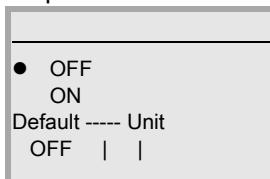

Select the desired option with the buttons.

Activate the option by pressing .

3.7 External parameter memory

The optionally available external parameter memory – based on a USB memory stick (compatible with version 1.1) – is housed in an external hood with integrated connectors which cover the USB service interface when installed (IP 65).

The external parameter memory makes it easy and reduces the time needed to replace a device on site by providing a copy of the current parameter set of the device and also saving the device name. This eliminates the need to configure the exchanged device manually and, in particular, a new naming of the device – the control can immediately access the exchanged device.

The delivery contents of the external parameter memory include the hood with integrated connectors with unscrewable cover and the USB memory stick.

For transferring the configuration with the aid of the external parameter memory see chapter 6.2.

NOTE



To mount, the cover of the service interface must be unscrewed. Then take the USB memory stick and plug it into the USB connection on the device. Then, take the connector hood of the USB memory stick and screw this over the plugged-in USB memory stick onto the service interface to close the system and ensure degree of protection IP 65.

4 Functions

General information

The integrated fieldbus connectivity = *i* contained in the bar code readers of the BCL 500*i*/series facilitates the use of identification systems which function without connection unit or gateways. The integrated fieldbus interface considerably simplifies handling. The Plug-and-Play concept enables easy networking and very simple commissioning: Directly connect the respective fieldbus and all parameterization is performed with no additional software.

For decoding bar codes, the bar code readers of the BCL 500*i*/series make available the proven **CRT decoder** with code reconstruction technology:

The proven code reconstruction technology (**CRT**) enables bar code readers of the BCL 500*i*/series to read bar codes with a small bar height, as well as bar codes with a damaged or soiled print image.

With the aid of the **CRT decoder**, bar codes can also be read without problem in other demanding situations, such as with a large tilt angle (azimuth angle or even twist angle).

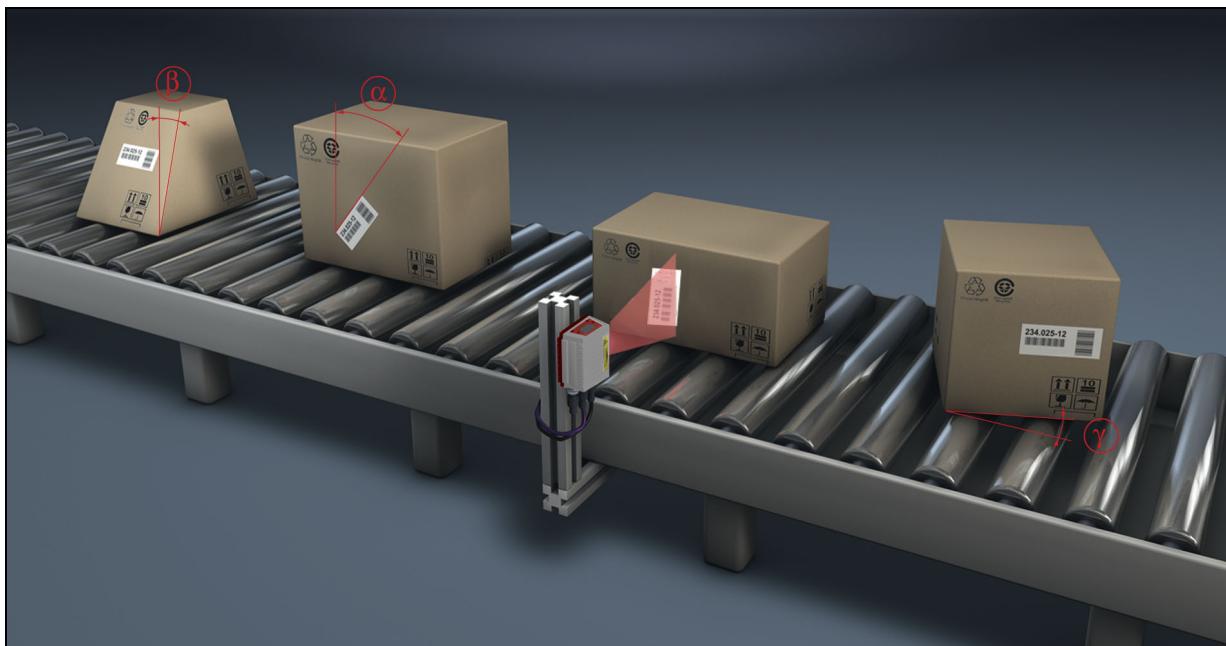


Figure 4.1: Possible bar code orientation

With the BCL 548*i*, parameterization is generally performed with the aid of the GSD file.

The device needs a suitable activation to start a read process as soon as an object is in the reading field. This opens a time window (reading gate) in the device for the read process during which the bar code reader has time to detect and decode a bar code.

In the basic setting, triggering takes place through an external reading cycle signal. Alternative activation options include online commands via the host interface and the **auto-ReflAct-** function.

Through the read operation, the device collects additional useful pieces of data for diagnostics which can also be transmitted to the host. The quality of the read operation can be inspected using the **alignment mode** which is integrated in the webConfig tool.

A multi-language display with buttons is used to operate the device as well as for visualization purposes. Two LEDs provide additional optical information on the current operating state of the device.

The four freely configurable switching inputs/outputs SWIO 1 ... SWIO 4 can be assigned various functions and control e.g. activation of the device or external devices, such as a PLC.

System, warning and error messages provide assistance in setup/troubleshooting during commissioning and read operation.

4.1 autoReflAct

autoReflAct stands for **automatic Reflector Activation** and permits an activation without additional sensors. This is achieved by directing the scanner with reduced scanning beam towards a reflector mounted behind the conveyor path. As long as the scanner is targeted at the reflector, the reading gate remains closed. If, however, the reflector is blocked by an object such as a container with a bar code label, the scanner activates the read procedure, and the label on the container is read. When the path from the scanner to the

reflector has cleared, the read procedure has completed and the scanning beam is reduced and again directed onto the reflector. The reading gate is closed.

NOTE



You will find a matching reflector in Accessories, and more are available on request.



Figure 4.2: Reflector arrangement for autoRefAct

The **autoRefAct** function uses the scanning beam to simulate a photoelectric sensor and thus permits an activation without additional sensors.

4.2 Reference codes

The device offers the possibility of storing one or two reference codes.

It is possible to store the reference codes by means of teach-in (display command), via the webConfig tool, via online commands or PROFINET-IO.

The device can compare read bar codes with one and/or both reference codes and execute user-configurable functions depending on the comparison result.

4.3 autoConfig

With the autoConfig function, the device offers an extremely simple and convenient configuration option to users who only want to read one code type (symbology) with one number of digits at a time.

After starting the autoConfig function via the display, switching input or from a superior control, it is sufficient to position a bar code label with the desired code type and number of digits in the reading field of the device.

Afterward, bar codes with the same code type and number of digits are recognized and decoded.

NOTE

The settings made via display or webConfig configuration tool push the parameters set in the PROFINET-IO only temporarily into the background. They are overwritten during integration into the PROFINET-IO or when the parameter enable is deactivated!

Device settings for operating the device on the PROFINET-IO are managed and configured exclusively by the PROFINET-IO controller (PLC). Permanent changes must be carried out here!

Detailed information on this topic can be found in Chapter 10 "Starting up the device - Configuration" on page 63.

4.4 Heating

For low-temperature applications to min. -35°C (e.g. in cold storage), the bar code readers of the BCL 500/ series can optionally be permanently fitted with a built-in heating and these bar code readers purchased as separate device models.

5 Reading techniques

5.1 Line scanner (single line)

A line (scan line) scans the label. Due to the opt. opening angle, the reading field width is dependent on the read distance. Through the movement of the object, the entire bar code is automatically transported through the scan line.

The integrated code reconstruction technology permits twisting of the bar code (tilt angle) within certain limits. These are dependent on the transport speed, the scanning rate of the scanner and the bar code properties.

Areas of application of the line scanner

The line scanner is used:

- When the bars of the bar code are printed in the conveying direction ('ladder arrangement').
- With bar codes having very short bar lengths.
- When the ladder code is turned out of the vertical position (tilt angle).
- When the reading distance is large.



Figure 5.1: Deflection principle for the line scanner

5.2 Line scanner with oscillating mirror

The oscillating mirror deflects the scan line additionally to both sides across the scan direction at a randomly adjustable oscillation frequency. In this way, the device can also scan larger areas or spaces for bar codes. The reading field height (and the scan line length useful for evaluation) depends on the reading distance due to the optical opening angle of the oscillating mirror.

Areas of application of the line scanner with oscillating mirror

For line scanners with oscillating mirror, oscillation frequency, start/stop position etc. are adjustable. It is used:

- When the position of the label is not fixed, e.g. on pallets – various labels can, thus, be detected at various positions.
- When the bars of the bar code are printed perpendicular to the conveying direction ("picket fence arrangement").
- When reading stationary objects.
- When the bar code is turned out of the horizontal position.
- When the reading distance is large.
- When a large reading field (reading window) has to be covered.

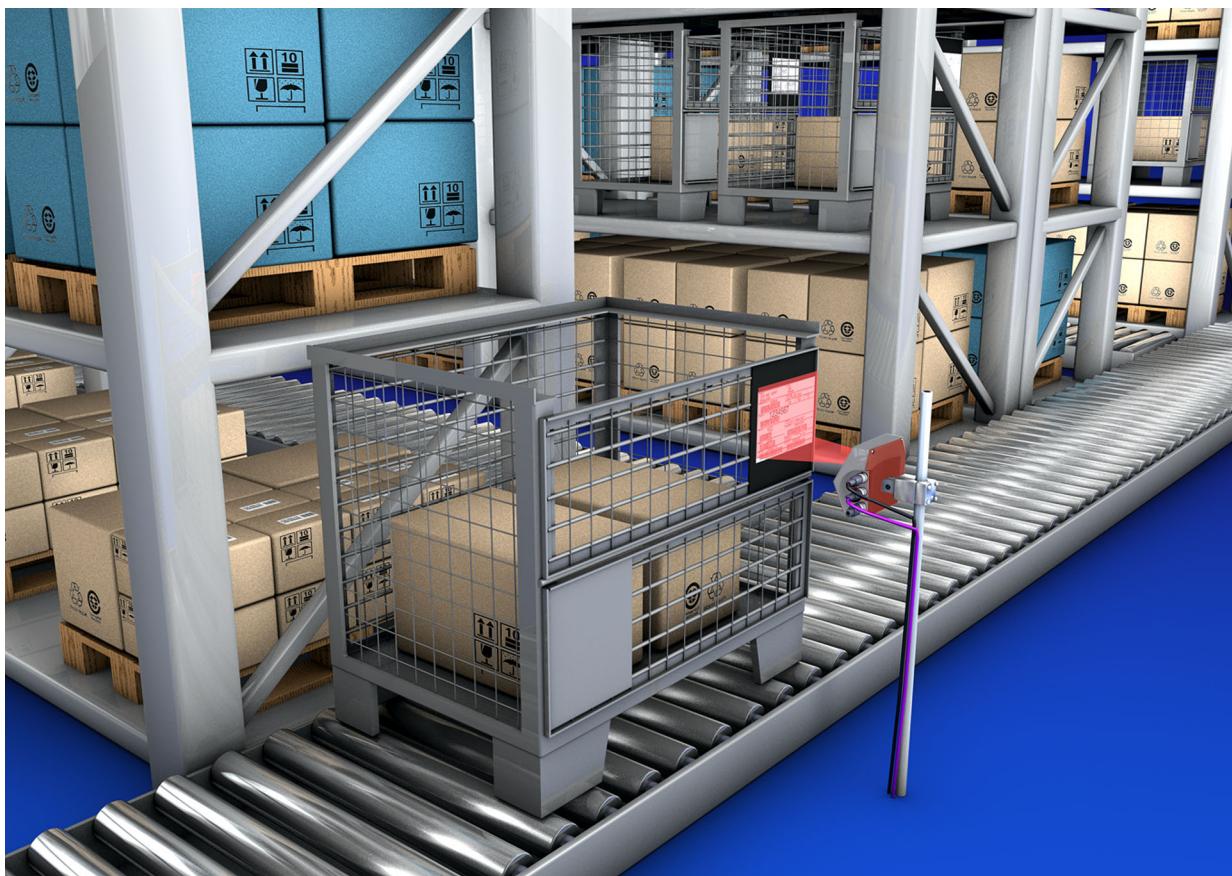


Figure 5.2: Deflection principle for the line scanner with oscillating mirror add-on

5.3 Omnidirectional reading

In order to read arbitrarily oriented bar codes on an object, at least 2 bar code readers are necessary. If the bar code is not printed over-square, i.e. bar length > code length, bar code readers with integrated code reconstruction technology are necessary.

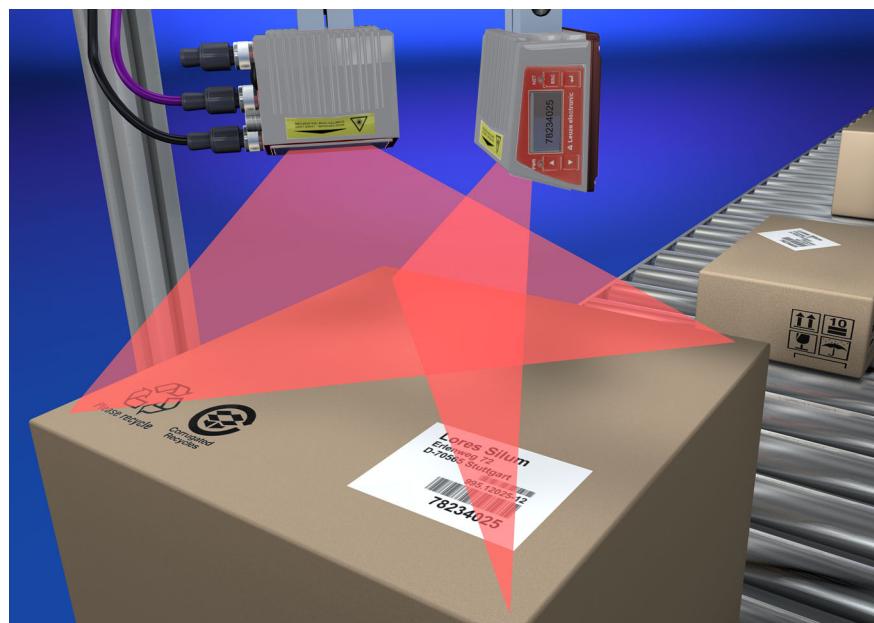


Figure 5.3: Principle arrangement for omnidirectional reading

5.4 Leuze multiScan over Ethernet/PROFINET

The multiScan over Ethernet/PROFINET operating mode links individual bar code readings from multiple bar code scanners into a single decoding result. This is used, for example, on a packet conveyor system on which the label can be affixed on either the right or left side, thereby requiring two read stations. To prevent the host from having to always process two readings for a single packet, i.e. a decoding result and a No Read, a multiScan arrangement is used which transmits only one reading from the two read stations to the host; this single reading is transmitted by the multiScan master.

NOTE

Thus, from the perspective of the host, the scanner network appears to be just a single bar code reader!

For this purpose one multiScan master and one or more multiScan slaves are connected together via Ethernet/PROFINET.

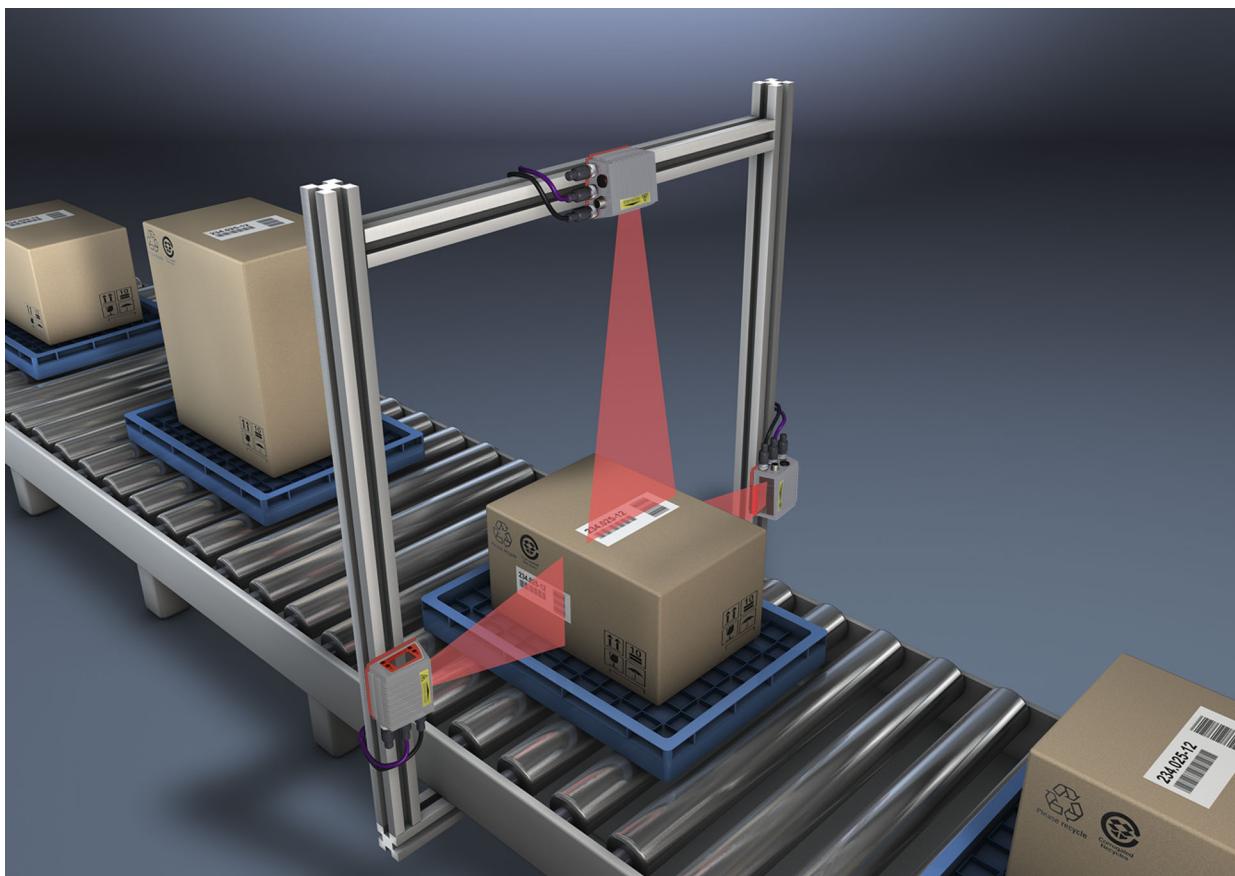


Figure 5.4: Scanner arrangement with the multiScan function

NOTE

The multiScan function for Ethernet/PROFINET is possible for a minimum of 2 and a maximum of 32 devices!

6 Mounting

The bar code readers can be mounted in different ways:

- Using two M4x6 screws on the rear of the device or using four M4x6 screws on the bottom of the device (see figure 3.2).
- Using a BT 56 mounting device on the two fastening grooves (see figure 15.3).
- Using a BT 59 mounting device on the two fastening grooves (see figure 15.4).

6.1 Device arrangement

6.1.1 Selecting a mounting location

In order to select the right mounting location, several factors must be considered:

- Size, orientation, and position tolerance of the bar codes on the objects to be scanned.
- The reading field of the device in relation to the bar code module width.
- The resulting minimum and maximum reading distance from the respective reading field (see chapter 15.5 "Reading field curves / optical data").
- The permissible cable lengths between the device and the host system depending on which interface is used.
- The correct time for data output. The device should be positioned in such a way that, taking into consideration the time required for data processing and the conveyor belt speed, there is sufficient time to e.g. initiate sorting operations on the basis of the read data.
- The display and control panel should be very visible and accessible.
- For configuring and commissioning with the webConfig tool, the USB interface should be easily accessible.


For specific information, please refer to Chapter 5.

NOTE	
i	<p>The beam of the device exits:</p> <ul style="list-style-type: none"> • Parallel to the housing base in the case of the line scanner • Perpendicular to the housing base in the case of the oscillating mirror <p>In each case, the housing base is the black area.</p> <p>The best read results are obtained when:</p> <ul style="list-style-type: none"> • The device is mounted in such a way that the scanning beam is incident on the bar code at an angle of inclination greater than $\pm 10^\circ \dots 15^\circ$ to vertical. • The reading distance lies in the middle area of the reading field. • The bar code labels are of good print quality and have good contrast ratios. • You do not use high-gloss labels. • There is no direct sunlight.

6.1.2 Avoiding total reflection – Line scanner

The bar code label must be positioned at an angle of inclination greater than $\pm 10^\circ \dots 15^\circ$ from vertical in order to avoid total reflection of the laser beam (see Figure 6.1)!

Total reflection occurs whenever the laser light of the bar code reader is directly incident on the surface of the bar code at an angle of 90° . The light directly reflected by the bar code may overload the bar code reader and thereby cause non-readings!

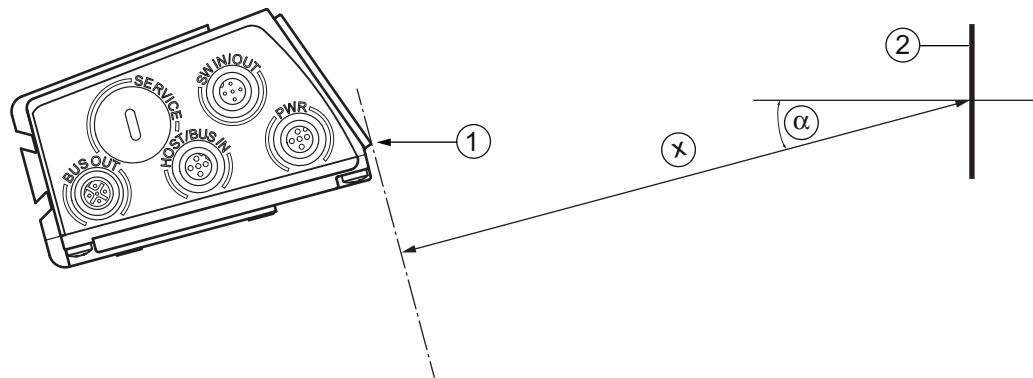

- 1 Zero position
- 2 Bar code
- x Distance acc. to reading field curves
- α ±10 ... 15°

Figure 6.1: Total reflection – line scanner

6.1.3 Avoiding total reflection – oscillating-mirror scanner

For the device with **oscillating mirror**, the laser beam exits at an **angle of 90° to vertical**.


Furthermore, the **swivel range of ±20°** ($\pm 12^\circ$ for devices with heating) is to be taken into account.

This means that in order to be on the safe side and to avoid total reflection, the device with oscillating mirror must be inclined upward or downward $20^\circ \dots 30^\circ$!

NOTE



Mount the device with oscillating mirror in such a way that the exit window of the bar code reader is parallel to the object. This will result in an angle of inclination of approx. 25° .

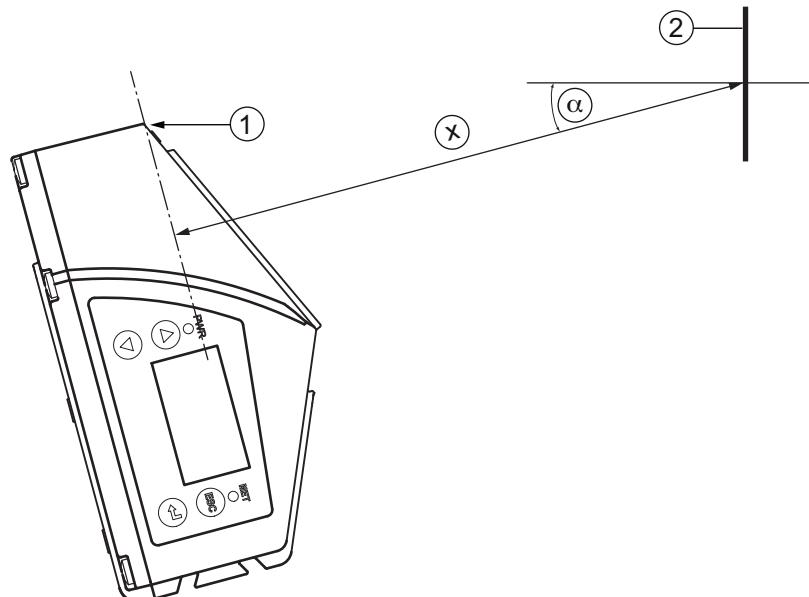

- 1 Zero position
- 2 Bar code
- x Distance acc. to reading field curves
- α ±25°

Figure 6.2: Total reflection – oscillating-mirror scanner

6.1.4 Mounting location

When choosing the mounting location, observe the following:

- Maintaining the required environmental conditions (temperature, humidity).
- Possible soiling of the reading window due to liquids, abrasion by boxes, or packaging material residues.
- Lowest possible chance of damage to the device by mechanical collision or jammed parts.
- Possible extraneous light (no direct sunlight or sunlight reflected by the bar code).

6.1.5 Devices with integrated heating

When mounting devices with integrated heating, also observe the following points:

- Mount the device in a way which provides maximum thermal isolation, e.g. using rubber-bonded metal.
- Mount in such a way that the device is protected from draft and wind; mount additional shields if necessary.


NOTE



When installing the device in a protective housing, it must be ensured that the scanning beam can exit the protective housing without obstruction.

6.1.6 Possible read angles between device and bar code

The optimum alignment of the device is accomplished when the scan line scans the bar code bars almost at a right angle (90°). All reading angles that are possible between the scan line and bar code must be taken account (Figure 6.3).

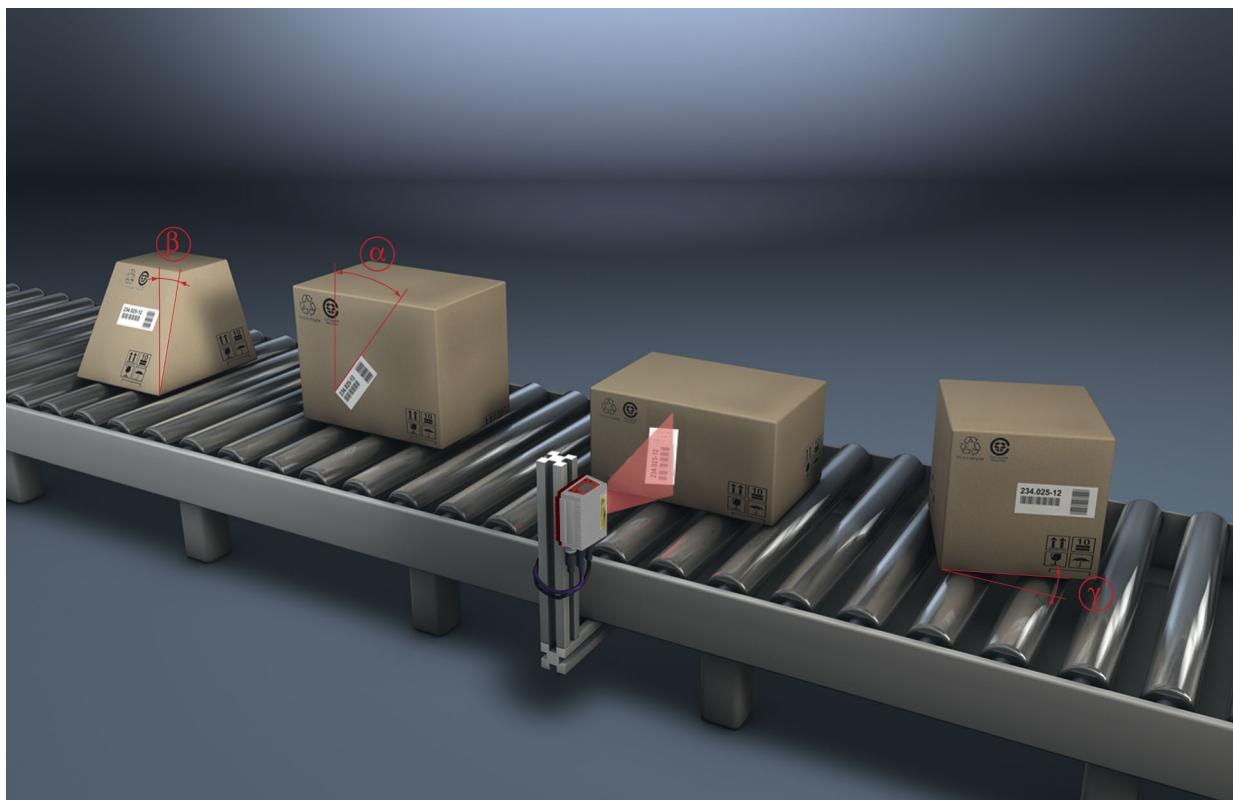

- | | |
|----------|---------------------------|
| α | Azimuth angle (tilt) |
| β | Inclination angle (pitch) |
| γ | Angle of rotation (skew) |

Figure 6.3: Reading angle for the line scanner

NOTE



In order to avoid total reflection, the angle of rotation γ should be greater than 10° .

6.2 Installing the external parameter memory

- ↳ Remove the cover of the USB connection on the device.
- ↳ Insert the USB memory stick into the USB connection and then cover it with the connector hood to ensure degree of protection IP 65.

The USB memory stick can be inserted regardless of whether or not the device is connected to supply voltage.

- After the USB memory stick has been inserted and supply voltage applied, the following message appears on the display.
Memory stick connected: Export internal configuration?

- ↳ Use the navigation buttons   to select OK and activate with the enter button .

The configuration is now transferred to the external parameter memory and is from now on updated immediately when the configuration is changed via display or online commands.

- The display of MS under the device address indicates that the USB memory stick is correctly connected and functional.

Replacing a defective device

- ↳ Uninstall the defective device.
- ↳ Remove the external parameter memory from the defective device by unscrewing the protection hood.
- ↳ Mount the external parameter memory on the new device.
- ↳ Install and start up the new device.

The following message appears on the display again:

- Memory stick connected: Export internal configuration?

- ↳ Use the navigation buttons   to select Cancel and activate with the enter button .

NOTE



Make sure you select Cancel. Otherwise, the configuration in the external parameter memory is lost!

The configuration is now imported from the external parameter memory and the device is immediately operational without any further configuration.

7 Electrical connection

The bar code readers of this series are connected using variously coded M12 connectors. This ensures unique connection assignments.

The additional USB interface is used for configuring the device.

For the locations of the individual device connections, please refer to the device detail shown below.

NOTE



The corresponding mating connectors and preassembled cables are available as accessories for all connections. For additional information, refer to Section 16.3 and Section 7.4.



Figure 7.1: Location of the electrical connections

7.1 Safety notices for the electrical connection

CAUTION!



Do not open the device yourself under any circumstances! There is otherwise a risk of uncontrolled emission of laser radiation from the device. The housing of the device contains no parts that need to be adjusted or maintained by the user.

Before connecting the device, be sure that the supply voltage agrees with the value printed on the name plate.

Connection of the device and cleaning must only be carried out by a qualified electrician.

Ensure that the functional earth (FE) is connected correctly. Unimpaired operation is only guaranteed when the functional earth is connected properly.

If faults cannot be cleared, the device should be switched off and protected against accidental use.

CAUTION!



For UL applications, use is only permitted in Class 2 circuits in accordance with the NEC (National Electric Code). The bar code readers are designed in accordance with protection class III for supply by PELV (protective extra-low voltage with reliable disconnection).

NOTE



Degree of protection IP65 is achieved only if the connectors and caps are screwed into place!

7.2 Electrical connection of the device

The device as PROFINET-IO participant is equipped with four M12 plugs/sockets which are A- and D-coded.

The voltage supply (**PWR**) as well as the four freely configurable switching inputs/outputs (**SW IN/OUT** and **PWR**) are connected there.

"**HOST / BUS IN**" is available as a PROFINET-IO interface for connecting to the host system.

By means of the implemented switch function in the device, an additional second "**BUS OUT**" PROFINET-IO interface is available for creating a scanner network (linear topology).

An USB connection is used as a "**SERVICE**" interface.

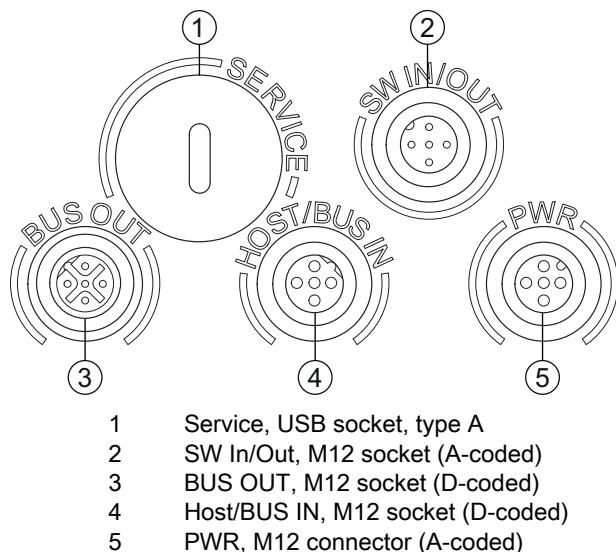


Figure 7.2: Connections of the device

Voltage supply and switching inputs/outputs

The voltage supply (10 ... 30 V DC) is connected at the PWR / SWIO M12 plug.

Available on the PWR M12 connector and on the SW IN/OUT M12 socket are four freely programmable switching inputs/outputs that can be individually adapted to the respective application (see Section 7.2.1 and Section 7.2.3).

Standalone operation in PROFINET-IO

During stand-alone operation of the device, the host interface of the superior system is connected to HOST/BUS IN. A star structure (Ethernet structure) is thus possible.

Network operation in PROFINET-IO

In network mode, the superior system (PC/PLC) is connected to the host interface of the device. With the aid of the switch integrated in the device, the bus connection to the next participant, e.g. another device, can be made directly via the BUS OUT socket! In addition to the classic "star topology", a "linear topology" is thus also possible.

7.2.1 PWR – Voltage supply and switching inputs/outputs 3 and 4

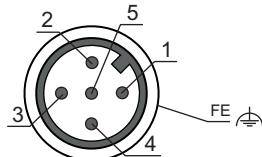


Figure 7.3: PWR, M12 connector (A-coded)

Table 7.1: Pin assignments - PWR

Pin	Name	Comment
1	VIN	Positive supply voltage +10 ... +30 V DC
2	SWIO_3	Configurable switching input / output 3
3	GND	Negative supply voltage 0 V DC
4	SWIO_4	Configurable switching input / output 4
5	FE	Functional earth
Thread	FE	Functional earth (housing)

Supply voltage

NOTE



Connecting the functional earth FE

↳ Ensure that the functional earth (FE) is connected correctly. Unimpaired operation is only guaranteed when the functional earth is connected properly. All electrical disturbances (EMC couplings) are discharged via the functional earth connection.

Switching input/output

The device is equipped with four freely programmable, opto-decoupled switching inputs and outputs **SWIO_1** ... **SWIO_4**.

The switching inputs can be used to activate various internal functions of the device (decoding, autoConfig, ...). The switching outputs can be used to signal the state of the device and to implement external functions independent of the superior control.


The two switching inputs/outputs **SWIO_1** and **SWIO_2** are located on the **SW IN/OUT** M12 socket and are described in Section 7.2.3. The other two (**SWIO_3** and **SWIO_4**) of the four freely configurable switching inputs/outputs are located on the **PWR** M12 connector.

NOTE



In general, parameterization of the bar code reader takes place on the PROFINET-IO via the associated GSD file. Alternatively, you can temporarily set the respective function as input or output via the display or with the aid of the **webConfig** configuration tool for the purpose of testing the respective functionality. After reconnecting to the PROFINET-IO or after deactivating parameter enabling, the parameter settings set by the PROFINET-IO are again active!

Described in the following is the external wiring for use as a switching input or output; the respective function assignments to the switching inputs/outputs can be found in Chapter 10.

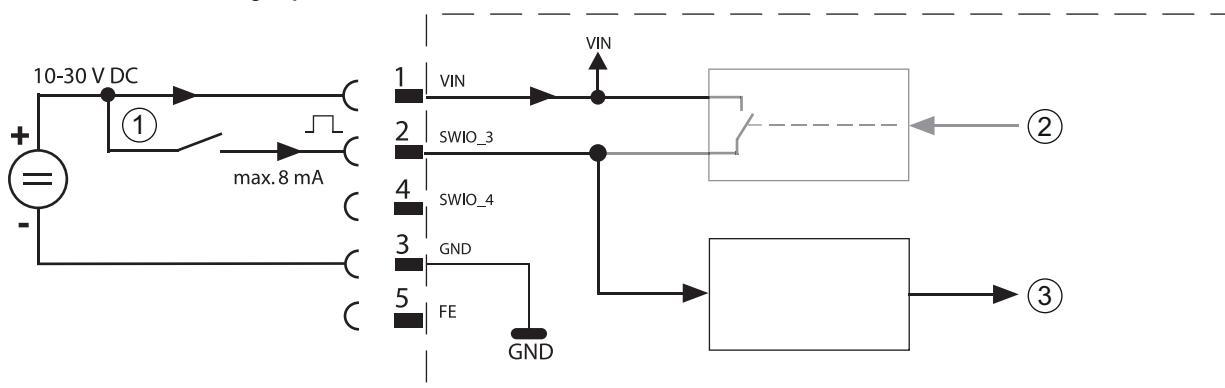Function as switching input

- 1 Switching input
- 2 Switching output from controller (deactivated)
- 3 Switching input to controller

Figure 7.4: Switching input connection diagram SWIO_3 and SWIO_4

NOTE


If you use a sensor with a standard M12 connector, please note the following:

- Pins 2 and 4 must not be operated as switching outputs if sensors which function as inputs are also connected to these pins.

If, for example, the inverted sensor output is connected to pin 2, and pin 2 of the bar code reader is, at the same time, configured as an output (and not as an input), the switching output malfunctions.

CAUTION!

The maximum input current must not exceed 8 mA!

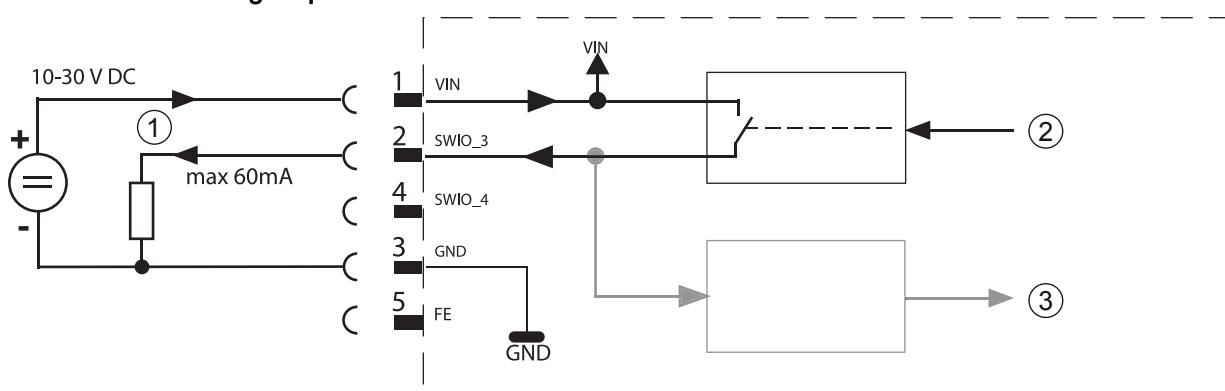Function as switching output

- 1 Switching output
- 2 Switching input from controller
- 3 Switching output to controller (deactivated)

Figure 7.5: Switching output connection diagram SWIO_3 / SWIO_4

CAUTION!

Each configured switching output is short-circuit proof! Do not load the respective switching output of the device with more than 60 mA at +10 ... +30 V DC in normal operation!

NOTE

Both switching inputs/outputs SWIO_3 and SWIO_4 are configured by default in such a way that:

- Switching input SWIO_3 activates the reading gate
- Switching output SWIO_4 switches on "No Read."

7.2.2 SERVICE – USB interface (type A)

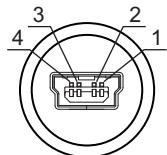


Figure 7.6: Service, USB, type A

Table 7.2: Pin assignments of SERVICE – USB interface

Pin	Name	Comment
1	VB	Positive supply voltage +5 V DC
2	D-	Data -
3	D+	Data +
4	GND	Ground

⚠ CAUTION!



Maximum load of the +5 V DC supply voltage of the USB interface is 200 mA!

↳ Ensure adequate shielding.

The entire interconnection cable must absolutely be shielded acc. to the USB specifications. Cable length must not exceed 3 m.

↳ Use the Leuze-specific **USB service cable** (see chapter 16 "Order guide and accessories") for the connection and use a service PC to configure.

NOTE



IP 65 is achieved only if the connectors and caps are screwed into place. Alternatively, a parameter memory in the form of a USB memory stick certified by Leuze electronic GmbH + Co. can be connected to the provided USB service interface. With this Leuze memory stick, degree of protection IP 65 is also ensured.

7.2.3 SW IN/OUT – Switching input/switching output

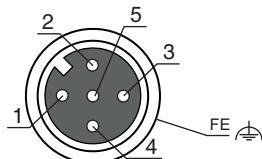


Figure 7.7: SW IN/OUT, M12 socket (A-coded)

Table 7.3: Pin assignment SW IN/OUT

Pin	Name	Comment
1	VOUT	Voltage supply for sensor system (VOUT identical to VIN at PWR IN)
2	SWIO_1	Configurable switching input / output 1
3	GND	GND for the sensor system
4	SWIO_2	Configurable switching input / output 2
5	FE	Functional earth
Thread	FE	Functional earth (housing)

The device is equipped with four freely programmable, opto-decoupled switching inputs and outputs **SWIO_1 ... SWIO_4**.

The two switching inputs/outputs **SWIO_1** and **SWIO_2** are located on the **SW IN/OUT** M12 socket. The other two (**SWIO_3** and **SWIO_4**) of the four freely configurable switching inputs/outputs are located on the **PWR** M12 connector and are described in Chapter 7.2.1.

Described in the following is the external wiring for use as a switching input or output; the respective function assignments to the switching inputs/outputs can be found in Chapter 10.

Function as switching input

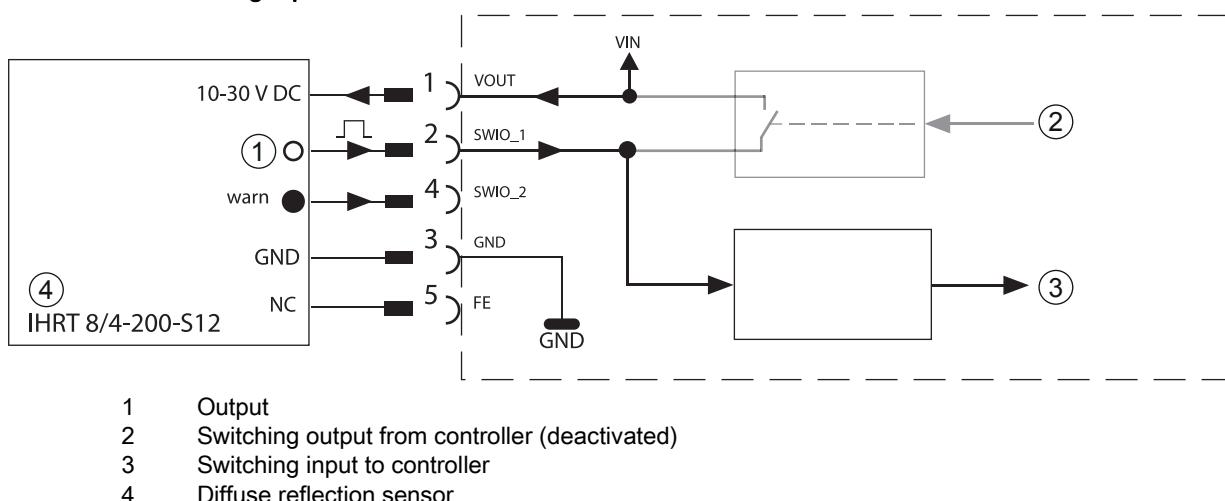


Figure 7.8: Switching input connection diagram SWIO_1 and SWIO_2

NOTE




If you use a sensor with a standard M12 connector, please note the following:

- Pins 2 and 4 must not be operated as switching outputs if sensors which function as inputs are also connected to these pins.

If, for example, the inverted sensor output is connected to pin 2, and pin 2 of the bar code reader is, at the same time, configured as an output (and not as an input), the switching output malfunctions.

⚠ CAUTION!	
	The maximum input current must not exceed 8 mA!

Function as switching output

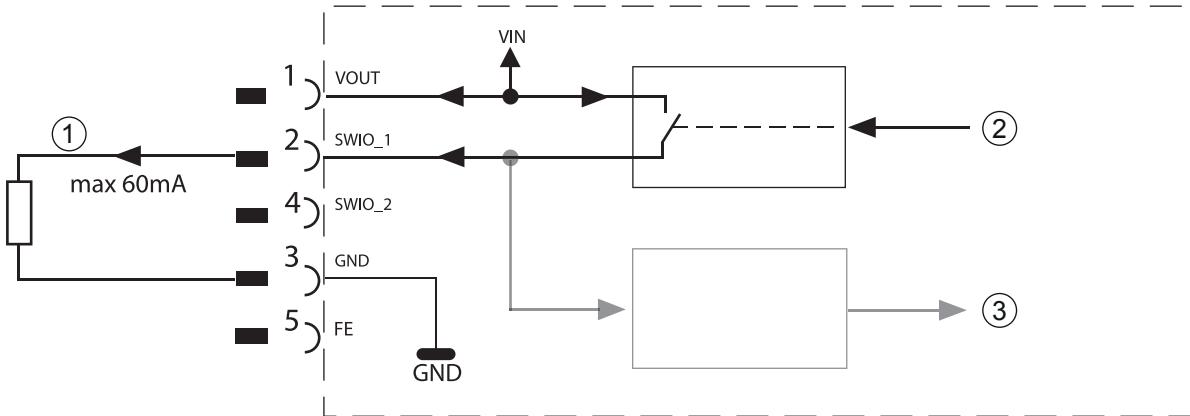

- 1 Switching output
- 2 Switching output from controller
- 3 Switching input to controller (deactivated)

Figure 7.9: Switching output connection diagram SWIO_1 / SWIO_2

⚠ CAUTION!	
	Each configured switching output is short-circuit proof! Do not load the respective switching output of the device with more than 60 mA at +10 ... +30 V DC in normal operation!

NOTE



By default, the two switching inputs/outputs SWIO_1 and SWIO_2 are configured so that they function as **switching inputs**.

- Switching input **SWIO_1** activates the **start reading gate** function
- Switching input **SWIO_2** activates the **reference code teach-in** function

The functions of the individual switching inputs/outputs are programmed via the display or via parameterization in the **webConfig** tool under the **Switching input** or **Switching output** heading. For further information, see also Chapter 10 "Starting up the device - Configuration" on page 63.

7.2.4 HOST / BUS IN

The device makes a PROFINET-IO interface available as host interface.


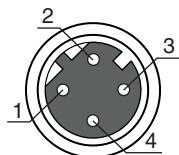


Figure 7.10: Host/BUS IN, M12 socket (D-coded)

Table 7.4: Pin assignment HOST / BUS IN

Pin	Name	Comment
1	TD+	Transmit Data +
2	RD+	Receive Data +
3	TD-	Transmit Data -
4	RD-	Receive Data -
Thread	FE	Functional earth (housing)

PROFINET-IO cable assignment

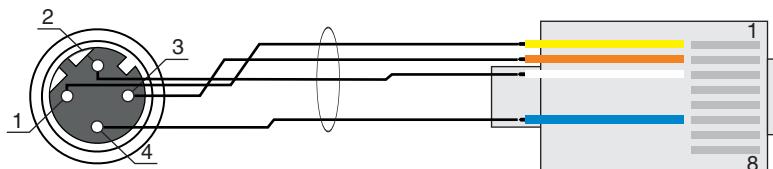

1 Twisted pair

Figure 7.11: HOST / BUS IN cable assignments on RJ-45

NOTE	
	Information on assignment and the core colors can be found in Table 7.6.

⚠ CAUTION!	
	<ul style="list-style-type: none"> ↳ Ensure adequate shielding. The entire interconnection cable must be shielded and earthed. The RD+/RD- and TD+/TD- wires must be stranded in pairs. ↳ Use CAT 5 cables for the connection.

7.2.5 BUS OUT

To set up a PROFINET-IO network with other participants in a linear topology, the device provides an additional PROFINET-IO RT interface. The use of this interface drastically reduces the cabling requirements, as only the first device requires a direct connection to the switch, via which it can communicate with the host. All other devices are connected in series to the first device; see Figure 7.14.

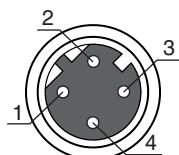


Figure 7.12: M12 socket (D-coded)

Table 7.5: Pin assignment BUS OUT

Pin	Name	Comment
1	TD+	Transmit Data +
2	RD+	Receive Data +
3	TD-	Transmit Data -
4	RD-	Receive Data -
Thread	FE	Functional earth (housing)

If you use ready-made cables, note the following:

⚠ CAUTION!	
	<ul style="list-style-type: none"> ↳ Ensure adequate shielding. The entire interconnection cable must be shielded and earthed. The signal lines must be stranded in pairs. ↳ Use CAT 5 cables for the connection.

NOTE	
	For use as stand-alone device or as the last participant in a linear topology, termination on the BUS OUT socket is not mandatory!

7.3 PROFINET-IO topologies

The device can be operated as a single device (standalone) with individual device name in a PROFINET-IO star topology. The PLC must communicate this device name to the participant during the "device naming" (see section "Step 5 – Configuration of the device name – device naming" on page 67).

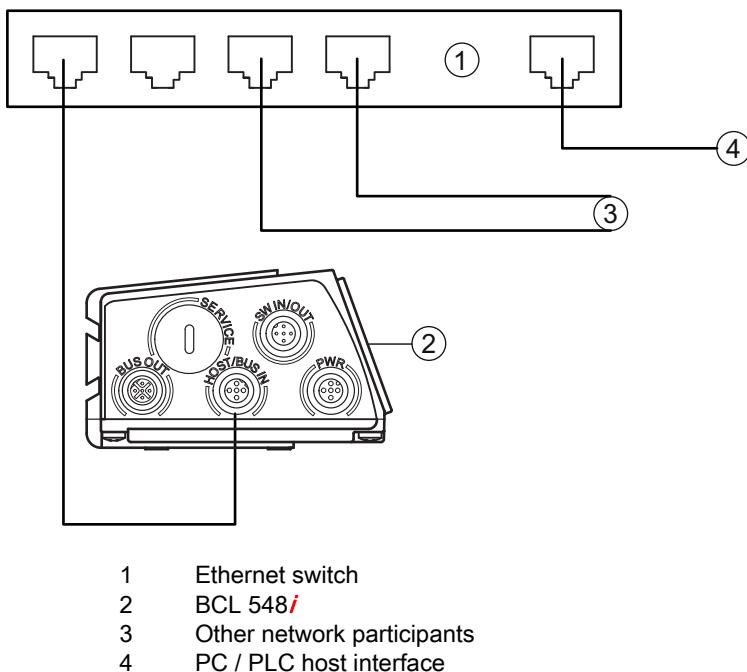


Figure 7.13: PROFINET-IO in a star topology

The innovative further development of the device with integrated switch functionality offers the option of networking multiple bar code readers of type BCL 548*i* with one another. In addition to the classic "star topology", a "linear topology" is thus also possible.

This makes wiring the network easy and inexpensive as participants are connected to one another in parallel.

The maximum length of a segment (connection from one participant to the next) is limited to 100 m.

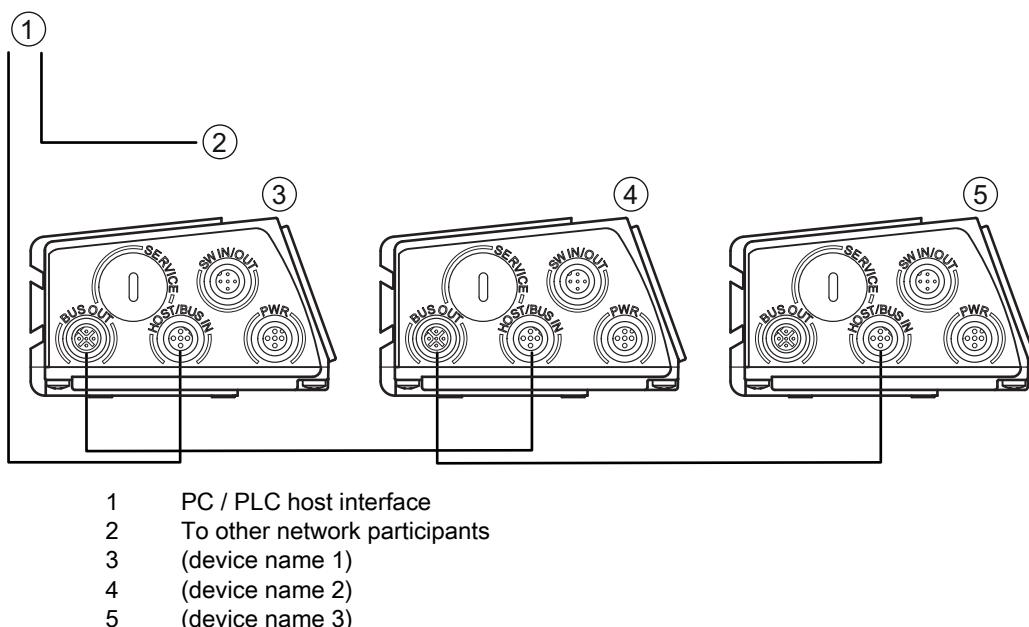


Figure 7.14: PROFINET-IO in a line topology

Up to 254 bar code readers can be networked. They must all be located in the same subnet.

To do this, the individual device name is assigned to each participating device through device naming, using the control's configuration tool. For specific information, please refer to section "Step 5 – Configuration of the device name – device naming" on page 67.

Information on the necessary configuration steps can be found in Chapter 10.

7.3.1 PROFINET-IO wiring

Table 7.6: Contact assignment of M12 PROFINET-IO connection cable

Pin	Name	Core color
1	TD+	Yellow
2	RD+	White
3	TD-	Orange
4	RD-	Blue
SH (thread)	FE	Bare

A Cat. 5 Ethernet cable should be used for wiring.

An M12-to-RJ45 adapter, "KDS ET M12 / RJ 45 W - 4P", is available that lets you connect standard network cables.

If no standard network cables are to be used (e.g. due to lacking IP... degree of protection), you can use the user-configurable cables on the device.

The individual devices in a linear topology are connected with the PROFINET cables.

If the desired cable lengths are unavailable, you can assemble the cables yourself. When doing so, make certain that you connect **TD+** on the M12 connector with **RD+** on the RJ-45 connector and **TD-** on the M12 connector with **RD-** on the RJ-45 connector, respectively, etc.

7.4 Cable lengths and shielding

↳ Observe the following maximum cable lengths and shielding types:

Table 7.7: Cable lengths and shielding

Connection	Interface	Max. cable length	Shielding
BCL – service	USB	3m	Shielding absolutely necessary acc. to USB specifications
BCL – host	PROFINET-IO RT	100m	Shielding absolutely required
Network from the first BCL to the last BCL	PROFINET-IO RT	The maximum segment length must not exceed 100 m for 100Base-TX Twisted Pair (min. Cat. 5)	Shielding absolutely required
BCL – power supply unit		30m	Not necessary
Switching input		10 m	Not necessary
Switching output		10 m	Not necessary

8 Menu description

After voltage is applied to the bar code reader, a startup screen is displayed for several seconds. The display then shows the bar code reading window with all status information.

8.1 The main menus

BCL548i SF 102
Leuze electronic
GmbH & Co. KG
SW: V 1.8.0 HW:3
SN: 1009A009815 001



Network settings
Channel 1:
Addr: 192.168.60.101
Mask: 255.255.255.0
Gateway: 0.0.0.0
DevName: BCL 548i



IO1 IO2 IO3
IO4 ATT ERR

12345678



Parameters 1
Parameter handling
Decoder table
Digital SWIO
Ethernet



Language selection
o Deutsch
● English
o Español
o Français
o Italiano



Service
Diagnosis
Status messages



Actions
o Start decoding
o Start alignment
o Start auto setup
o Start teach-in

Device information - main menu

This menu item contains detailed information on

- Device type
- Software version
- Hardware version
- Serial number

Main menu Display of the network settings

- Display of the network settings.

See "Ethernet" on page 53.

Main menu Bar code reading window

- Visualization of the read bar code information
- Status overview of the switching inputs/outputs
- Bar graphs for read quality of the current bar code.

See "Indicators in the display" on page 22.

Parameter - main menu

- Parameterization of the bar code reader.

See "Parameter menu" on page 48.

Language selection - main menu

- Selection of the display language.

See "Language selection menu" on page 54.

Service - main menu

- Scanner diagnostics and status messages

See "Service menu" on page 55.

Main menu Actions

- Various functions for scanner configuration and manual operation

See "Actions menu" on page 55.

NOTE	
	A detailed description of the individual parameters can be found in the description of the PROFINET-IO GSD modules (see chapter 10.6 "Overview of the project modules").

 CAUTION!	
	<p>Changes made via the display are overwritten!</p> <p>Device settings for operating the device on the PROFINET-IO are managed and configured exclusively by the PROFINET-IO controller (PLC).</p> <p>If parameters are changed via the display during bus operation, the device is separated from the PROFINET-IO at the moment parameter enabling is activated via the display. Parameters set by the PROFINET-IO are moved to the background, and changes to parameters can be made via the display. When parameter enabling is exited, the device is automatically reconnected to the PROFINET-IO. Upon connection to the PROFINET-IO, the device receives all parameters from the PROFINET-IO Controller (PLC).</p>

8.2 Parameter menu

Parameter handling

The **Parameter handling** submenu is used to lock and release the parameter input via the display and for resetting to default values.

Table 8.1: Parameter handling submenu

Level 3	Level 4	Level 5	Selection/configuration option <i>Description</i>	Standard
Parameter enable			OFF/ON <i>The standard setting (OFF) prevents unintended parameter changes. If parameter enabling is activated (ON), parameters can be changed manually. As long as parameter enabling is activated, the device is disconnected from the PROFINET-IO.</i>	OFF
Parameters to default			<i>By pressing the enter button  after selecting Parameters to default, all parameters are reset to their standard settings without any further security prompts. In this case, English is selected as the display language.</i>	

Decoder table

In the **Decoder table** submenu, 4 different code type definitions can be stored. Bar codes that have been read can only be decoded if they correspond to one of the definitions stored here.

Table 8.2: Decoder table submenu

Level 3	Level 4	Level 5	Selection/configuration option <i>Description</i>	Standard
Max. no. of labels			Value between 0 and 64 <i>The value set here specifies the maximum number of labels that should be detected for each reading gate.</i>	1
Decoder 1	Symbology (Code type)		No code Code 2/5 Interleaved Code 39 Code 32 Code UPC Code EAN Code 128 EAN Addendum Codabar Code 93 GS1 DataBar Omnidirectional GS1 DataBar Limited GS1 DataBar Expanded <i>If No code is configured, the current and all subsequent decoders are deactivated.</i>	Code 2/5i

Table 8.2: Decoder table submenu

Level 3	Level 4	Level 5	Selection/configuration option <i>Description</i>	Standard
	Number of digits	Interval mode	OFF/ON <i>With the ON setting, the values in digits 1 and 2 define a range of character numbers that are to be read.</i>	OFF
		Number of digits 1	0 to 64 characters <i>First decodable number of characters or lower range limit.</i>	10
		Number of digits 2	0 to 64 characters <i>Second decodable number of characters or upper range limit.</i>	0
		Number of digits 3	0 to 64 characters <i>Third decodable number of characters.</i>	0
		Number of digits 4	0 to 64 characters <i>Fourth decodable number of characters.</i>	0
		Number of digits 5	0 to 64 characters <i>Fifth decodable number of characters.</i>	0
	Reading reliability		Value from 2 to 100 <i>Number of scans required to reliably detect a label.</i>	4
	Check digit method		Standard No check <i>Depending on the symbology (code type) selected for the decoder, further calculation algorithms can be selected here. Check digit method used for the decoding of the barcode that has been read. If Standard is set, the check digit method intended for the respective code type is used.</i>	Standard
	Check digit transm.		Standard Not standard <i>Specifies whether the check digit is transmitted. Standard means that the transmission matches the standard intended for the respective code type.</i>	Standard
Decoder 2	Symbology		<i>Same as decoder 1</i>	Code 39
	Number of digits	Interval mode	OFF/ON	ON
		Number of digits 1	0 to 64 characters	4
		Number of digits 2	0 to 64 characters	30
		Number of digits 3	0 to 64 characters	0
		Number of digits 4	0 to 64 characters	0
		Number of digits 5	0 to 64 characters	0
	Reading reliability		Value from 2 to 100	4
	Check digit method		<i>Same as decoder 1</i>	Standard
	Check digit transm.		<i>Same as decoder 1</i>	Standard
Decoder 3	Symbology		<i>Same as decoder 1</i>	Code 128
	Number of digits	Interval mode	OFF/ON	ON
		Number of digits 1	0 to 64 characters	4
		Number of digits 2	0 to 64 characters	63
		Number of digits 3	0 to 64 characters	0
		Number of digits 4	0 to 64 characters	0
		Number of digits 5	0 to 64 characters	0
	Reading reliability		Value from 2 to 100	4
	Check digit method		<i>Same as decoder 1</i>	Standard
	Check digit transm.		<i>Same as decoder 1</i>	Standard
Decoder 4	Symbology		<i>Same as decoder 1</i>	Code UPC
	Number of digits	Interval mode	OFF/ON	OFF
		Number of digits 1	0 to 64 characters	8
		Number of digits 2	0 to 64 characters	0
		Number of digits 3	0 to 64 characters	0
		Number of digits 4	0 to 64 characters	0
		Number of digits 5	0 to 64 characters	0
	Reading reliability		Value from 2 to 100	4
	Check digit method		<i>Same as decoder 1</i>	Standard
	Check digit transm.		<i>Same as decoder 1</i>	Standard

Digital SWIO

The Digital SWIO submenu is used to configure the 4 switching inputs/outputs of the device.

Table 8.3: Digital SWIO submenu

Level 3	Level 4	Level 5	Selection/configuration option <i>Description</i>	Standard
Sw. input/ output 1	I/O mode		Input / Output / Passive <i>Determines the function of switching input/output 1. In the case of passive, the connection is on 0 V if the Inverted parameter is set to OFF, and on +UB if the Inverted parameter is set to ON.</i>	Input
	Switching input	Inverted	OFF / ON <i>OFF = activation of the switching input function upon high level at the switching input ON = activation of the switching input function upon low level at the switching input</i>	OFF
		Debounce time	Value from 0 to 1000 <i>Time in milliseconds for which the input signal must be present and stable.</i>	5
		Switch-on delay	Value from 0 to 65535 <i>Time in milliseconds between the end of the debounce time and activation of the function configured below.</i>	0
		Pulse duration	Value from 0 to 65535 <i>Minimum activation time in milliseconds for the function configured below.</i>	0
		Switch-off delay	Value from 0 to 65535 <i>Time in milliseconds for which the function configured below remains activated after the switching input signal is deactivated and the pulse duration has expired.</i>	0
		Function	No BCL 500 function Reading gate start/stop Reading gate stop Rd. gate start Teach reference code Autoconfig start/stop <i>The function set here is carried out after the switching input is activated.</i>	Reading gate start/stop

Table 8.3: Digital SWIO submenu

Level 3	Level 4	Level 5	Selection/configuration option <i>Description</i>	Standard
	Switching output	Inverted	OFF / ON <i>OFF = activated switching output upon high level</i> <i>ON = activated switching output upon low level</i>	OFF
		Signal delay	Value from 0 to 65535 <i>Time in milliseconds between activation function and switching of the switching output.</i>	0
		Pulse duration	Value from 0 to 65535 <i>Switch-on time of the switching output in milliseconds. If the Pulse duration is set to 0, the switching output is switched on via the Activation function and switched off via the Deactivation function.</i> <i>If the Pulse duration is greater than 0, the Deactivation function has no effect.</i>	400
		Activation function 1	No function Reading gate start Reading gate end Positive reference code comparison 1 Negative reference code comparison 1 Valid read result Invalid read result Device ready Device not ready Data transmission active Data transmission not active AutoCont. good quality AutoCont. bad quality Reflector detected Reflector not detected External event, pos. edge External event, neg. edge Device active Device standby No device error Device error Positive reference code comparison 2 Negative reference code comparison 2 <i>The function set here specifies which event activates the switching output.</i>	No function
		Deactivation function 1	See Activation function 1 for selection options <i>The function set here specifies the event that deactivates the switching output.</i>	No function
Sw. input/ output 2	I/O mode		Input / Output / Passive	Output
	Switching input	Inverted	OFF / ON	OFF
		Debounce time	Value from 0 to 1000	5
		Switch-on delay	Value from 0 to 65535	0
		Pulse duration	Value from 0 to 65535	0
		Switch-off delay	Value from 0 to 65535	0
		Function	<i>See switching input/output 1</i>	No function
	Switching output	Inverted	OFF / ON	OFF
		Signal delay	Value from 0 to 65535	0
		Pulse duration	Value from 0 to 65535	400
		Activation function 2	<i>See switching input/output 1</i>	Valid read result
		Deactivation function 2	<i>See switching input/output 1</i>	Reading gate start

Table 8.3: Digital SWIO submenu

Level 3	Level 4	Level 5	Selection/configuration option <i>Description</i>	Standard
Sw. input/ output 3	I/O mode Switching input	I/O mode	Input / Output / Passive	Input
		Inverted	OFF / ON	OFF
		Debounce time	Value from 0 to 1000	5
		Switch-on delay	Value from 0 to 65535	0
		Pulse duration	Value from 0 to 65535	0
		Switch-off delay	Value from 0 to 65535	0
		Function	<i>See switching input/output 1</i>	Reading gate start/stop
	Switching output	Inverted	OFF / ON	OFF
		Signal delay	Value from 0 to 65535	0
		Pulse duration	Value from 0 to 65535	400
		Activation function 3	<i>See switching input/output 1</i>	No function
		Deactivation func- tion 3	<i>See switching input/output 1</i>	No function
Sw. input/ output 4	I/O mode Switching input	I/O mode	Input / Output / Passive	Output
		Inverted	OFF / ON	OFF
		Debounce time	Value from 0 to 1000	5
		Switch-on delay	Value from 0 to 65535	0
		Pulse duration	Value from 0 to 65535	0
		Switch-off delay	Value from 0 to 65535	0
		Function	<i>See switching input/output 1</i>	No function
	Switching output	Inverted	OFF / ON	OFF
		Signal delay	Value from 0 to 65535	0
		Pulse duration	Value from 0 to 65535	400
		Activation function 4	<i>See switching input/output 1</i>	Invalid read result
		Deactivation func- tion 4	<i>See switching input/output 1</i>	Reading gate start

Ethernet

The **Ethernet** submenu is used to configure the TCP/IP and UDP protocols of the device.

NOTE

Note that the parameters described in the following are editable and may be overwritten by the dominant PLC data.

Table 8.4: Ethernet submenu

Level 3	Level 4	Level 5	Level 6	Selection/configuration option <i>Description</i>	Standard
Ethernet interface	IP address			The IP address can be set to any value in the format xxx.xxx.xxx.xxx. <i>Normally, the network administrator specifies the IP address that is to be set here. If DHCP is activated, the setting made here has no effect and the device is set to the values that it obtains from the DHCP server.</i>	192.168.060.101
				The gateway address can be set to any value in the format xxx.xxx.xxx.xxx. <i>The device communicates with participants in other subnets via the gateway. Splitting the read application over multiple subnets is rather uncommon; the setting of the gateway address, thus, usually has no meaning.</i>	000.000.000.000
	Net mask			The net mask can be set to any value in the format xxx.xxx.xxx.xxx. <i>Usually, the device is used in a private Class C network and the default setting can be accepted without change.</i> Attention: It is possible to enter any values for xxx.xxx.xxx.xxx. Only the values 255 or 000 are permissible for xxx, however. If other values are set, an error message appears upon restart of the device.	255.255.255.000
				Off/On <i>If DHCP is activated, the device obtains its settings for IP address, gateway and net mask from a DHCP server. The manual settings made above have no effect, but are retained and are again active if DHCP is deactivated.</i>	Off

Table 8.4: Ethernet submenu

Level 3	Level 4	Level 5	Level 6	Selection/configuration option <i>Description</i>	Standard
Host communication	TcpIP	Activated		Off/On <i>TCP/IP communication with the host is activated. TCP/IP and UDP can be operated in parallel to the PROFINET-IO!</i>	Off
		Mode		Server/client <i>Server defines the device as TCP server: The primary host system (PC / PLC as client) actively establishes the connection and the connected device waits for the connection to be set up. Under TcpIP Server->Port number, you must also specify the local port on which the device receives communication requests from a client application (host system). Client defines the device as TCP client: The device actively sets up the connection to the primary host system (PC / PLC as server). Under TcpIP Client, you must also specify the IP address of the server (host system) and the port number on which the server (host system) accepts a connection. In this case, the device now determines when and with whom a connection is established!</i>	Server
	TcpIP client	IP address		The IP address can be set to any value in the format xxx.xxx.xxx.xxx. <i>IP address of the host system with which the device exchanges data as TCP client.</i>	000.000.000.000
		Port number		The port number can be set to any value between 0 and 65535. <i>Port number of the host system with which the device exchanges data as TCP client.</i>	10000
		Timeout		The timeout can be set to any value between 100 and 60,000ms. <i>Time after which an attempt to establish a connection is automatically interrupted by the device if the server (host system) does not respond.</i>	1000ms
		Repetition time		The repetition time can be set to any value between 100 and 60,000ms. <i>Time after which another attempt is made to establish a connection.</i>	5000 ms
	TcpIP server	Port number		The port number can be set to any value between 0 and 65535. <i>Local port on which the device receives connection requests from a client application (host system) as TCP server.</i>	10000
UDP	Activated			Off/On <i>Activates the connection-free UDP protocol, which is suitable for e.g. transferring process data to the host. UDP and TCP/IP can be used in parallel. For network applications with changing partners or for only brief data transmissions, UDP is preferred as the connection-free protocol.</i>	Off
		IP address		IP address of the host to which data is to be sent. The IP address can be set to any value in the format xxx.xxx.xxx.xxx. <i>In the same way, the host system (PC / PLC) requires the set IP address of the device and the selected port number. By assigning these parameters, a socket is formed via which the data can be sent and received</i>	000.000.000.000
		Port number		Port number of the host to which data is to be sent. The port number can be set to any value between 0 and 65535.	10001

8.3 Language selection menu

Currently, there are 6 display languages available:

- German
- English
- Spanish
- French
- Italian
- Chinese

The display language and the language of the webConfig user interface are synchronized. The setting in the display affects the webConfig tool and vice versa.

NOTE



When operating the device on the PROFINET-IO, the language configured in the GSD file is used in the display.

8.4 Service menu

Diagnosis

This menu item is used exclusively for service purposes by Leuze electronic.

Status messages

This menu item is used exclusively for service purposes by Leuze electronic.


8.5 Actions menu

Start decoding

Here, you can perform a single reading via the display.

↳ Activate the single reading with the button and hold a bar code in the reading field of the device.

The laser beam is switched on and the following display appears:

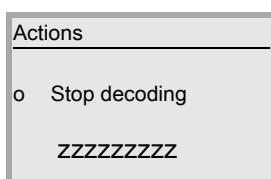


Once the bar code is detected, the laser beam is switched off again. The read result **zzzzzzzz** is shown directly in the display for about 1 s. After that, the Actions menu is displayed again.

Start alignment

The alignment function makes it easy to align the device by optically displaying the read quality.

↳ Activate the alignment function with the button and hold a bar code in the reading field of the device.

At first, the laser beam is switched on continuously, enabling you to position the bar code securely in the reading field. Once the bar code is read, the laser beam is switched off briefly and the following display appears:

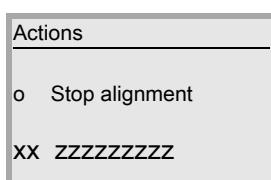

xx Read quality in % (scans with info)

zzzzzz Contents of the decoded bar code

Once the bar code has been detected, the laser beam starts to flash.

The flash frequency provides visual information on the read quality. The faster the laser beam flashes, the higher the read quality.

NOTE




In this mode, the bar code reader must reach at least 100 identical readings to obtain the result. The more readings are required, the lower the read quality.
The read quality is displayed via the bar graph.

Start auto setup

The auto setup function provides an easy option for configuring the code type and number of digits of Decoder 1.

↳ Use the button  to activate the auto-setup function and hold an unknown bar code in the reading beam of the device.

The following display appears:

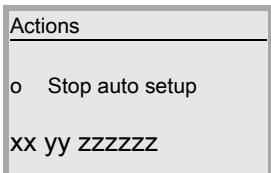

The following information is displayed:

xx Code type of the detected code (sets the code type of Decoder 1)

'01' 2/5 Interleaved

'02' Code 39

'03' Code 32

'06' UPC (A, E)

'07' EAN

'08' Code 128, EAN 128

'10' EAN Addendum

'11' Codabar

'12' Code 93

'13' GS1 Databar Omnidirectional

'14' GS1 Databar Limited

'15' GS1 Databar Expanded

yy Number of digits of the detected code (sets the number of digits of Decoder 1)


zzzzzz: Contents of the decoded label. A – appears if the label was not correctly read.

Start teach-in

The teach-in function can be used to conveniently read reference code 1.

↳ Use the button  to activate the teach-in function and hold a bar code which contains the content that you wish to store as the reference code in the reading beam of the device.

The following display appears:

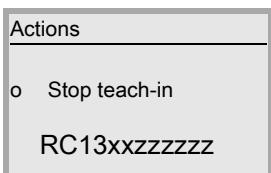

The following information is displayed:

RC13 Means that ReferenceCode number 1 is stored in RAM. This is always output

xx Defined code type (see auto setup)

z Defined code information (1 ... 63 characters)

8.6 Operation

Shown here is an example describing important operating procedures in detail.


NOTE




Use the navigation buttons to move through the menu. Activate the desired selection with the enter button .

Parameter enable


During normal operation parameters can be viewed only. If parameters need to be changed, the **ON** menu item in the **Parameter enabling** menu must be activated. To do this proceed as follows:

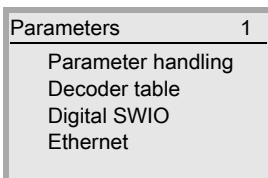


↳ In the Parameter menu, use the buttons to select the **Parameter handling** menu item.

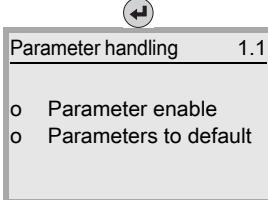

↳ Press the enter button to enter the **Parameter handling** menu.
↳ In the Parameter handling menu, use the buttons to select the **Parameter enable** menu item.

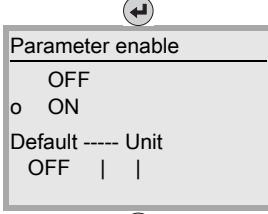

↳ Press the enter button to enter the **Parameter enable** menu.
↳ In the Parameter enable menu, use the buttons to select the **ON** menu item.

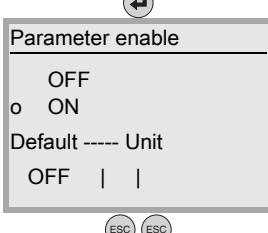

↳ Press the enter button to activate parameter enable.
↳ The PWR LED lights up red. You can now set individual parameters via the display.

↳ Press the ESC button twice to return to the main menu.

NOTE



If a password was stored, parameter enable is not possible until this password is entered; see "Password for parameter enable" on page 58.

⚠ CAUTION!



The device is deactivated on the PROFINET-IO when parameter enable is activated via the display. The device is reactivated on the PROFINET-IO after parameter enable is canceled.

NOTE



In the PROFINET-IO network, parameterization is performed exclusively via the PROFINET-IO controller.

Parameters set via the display when operating the device on the PROFINET-IO are overwritten by the parameters set in the GSD modules. For GSD modules which are not actively used on the PROFINET-IO, the default settings of the bar code reader apply, see "Overview of the project modules" on page 77. Thus, the PROFINET-IO presets values to all parameters.

 CAUTION!	
	<p>Changes made via the display are overwritten!</p> <p>Device settings for operating the device on the PROFINET-IO are managed and configured exclusively by the PROFINET-IO controller.</p> <p>If parameters are changed via the display during bus operation, the device is separated from the PROFINET-IO at the moment parameter enabling is activated via the display. Parameters set by the PROFINET-IO are moved to the background, and changes to parameters can be made via the display. When parameter enabling is exited, the device is automatically reconnected to the PROFINET-IO. Upon connection to the PROFINET-IO, the device receives all parameters from the PROFINET-IO Controller.</p>

Password for parameter enable

The password query is deactivated by default. To protect against unwanted changes, the password query can be activated. The preset password is **0000** and can be changed as necessary. To switch on password protection, proceed as follows:

Setting the password

NOTE	
	<p>In order to enter the password, parameter enabling must be activated.</p> <p>A selected password is saved with save.</p> <p>If the password is not known, the master password 2301 can always be used to enable the device.</p>

 CAUTION!	
	<p>When operating the device on the PROFINET, the password entered in the display has no effect. The PROFINET overwrites the password with the default settings.</p> <p>If a password is desired for PROFINET operation, it must be configured via module 62 (see "Module 62 – Display" on page 106).</p>

Network configuration

Further information on configuring PROFINET-IO can be found in chapter "Starting up the device - Configuration" on page 59.

9 Starting up the device – Leuze webConfig tool

With the **Leuze webConfig tool**, an operating-system independent, web-technology based, graphical user interface is available for configuring bar code readers of the BCL 500*/*series.

Through the use of HTTP as communication protocol and by using only standard technologies on the client side (HTML, JavaScript and AJAX), which are supported by all commonly used, modern browsers (e.g. **Mozilla Firefox** beginning with Version 2 or **Internet Explorer** beginning with Version 7.0), it is possible to operate the **Leuze webConfig tool** on any internet-ready PC.

9.1 Connecting the SERVICE USB interface

The connection to the SERVICE USB interface of the device is established via the PC-side USB interface using a special USB cable with 2 type A/A plugs.

9.2 Installing the required software

9.2.1 System requirements

NOTE	
 i	It is recommended to update the operating system regularly and to install the current Windows service packs.

Table 9.1: webConfig system requirements

Operating system	Windows 10 (recommended) Windows 8. 8.1 Windows 7
Computer	PC, laptop or tablet with USB interface, version 1.1 or higher
Graphics card	Min. resolution: 1280 x 800 pixels
Required disk space for USB driver	10 MB
Internet browser	Recommended is a current version of Mozilla Firefox Google Chrome Microsoft Edge Note: Other Internet browsers are possible but have not been tested with the current device firmware.

9.2.2 Installing the USB driver

In order for the device to be automatically detected by the connected PC, the **USB driver** must be installed **once** on your PC. To do this, you must have **administrator privileges**.

Please proceed according to the following steps:

- ↳ Start your PC with administrator privileges and log on.
- ↳ Load the CD included in the delivery contents of your device in the CD drive and start the setup.exe program.
- ↳ Alternatively, you can also download the setup program from the internet at www.leuze.com.
- ↳ Follow the instructions provided by the setup program.

Upon successful installation of the USB driver, an icon BCL 50xi  automatically appears on the desktop.

To check: In the Windows device manager, a device called "Leuze electronic, USB Remote NDIS Network Device" appears under the "Network adapter" device class following successful USB registration.

NOTE	
 i	If the installation failed, contact your network administrator: The settings of the firewall used may need to be adjusted.

9.3 Starting the webConfig tool

To start the **webConfig tool**, click the icon BCL 50xi located on the desktop. Make certain that the device is connected to the PC via the USB interface and that voltage is connected.

Or alternatively: Open a browser on your PC and enter the following address: **192.168.61.100**.

This is the default Leuze service address for communication with bar code readers of the BCL 500*i*series. In both cases, the following start page appears on your PC.

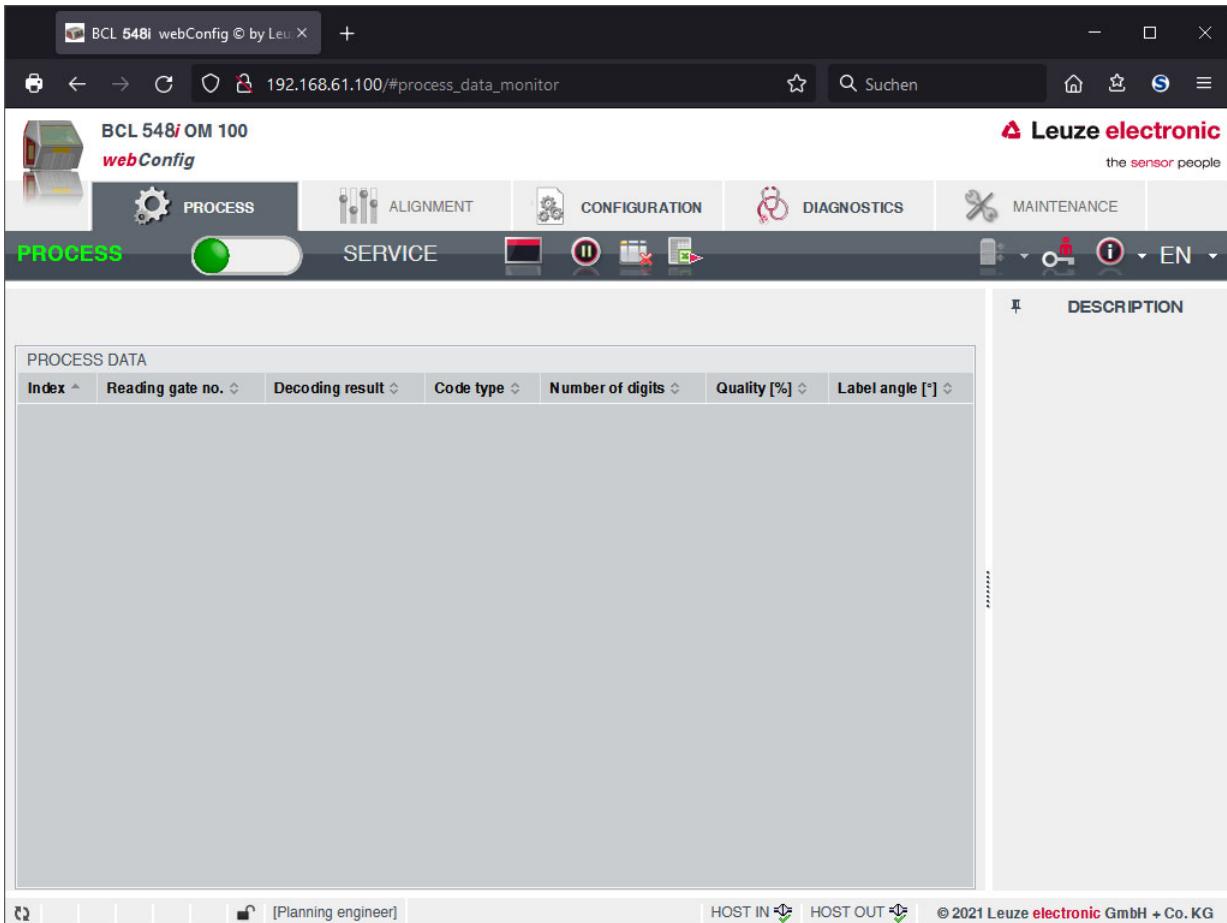


Figure 9.1: The start page of the webConfig tool

NOTE



The webConfig tool is completely contained in the firmware of the device. Depending on firmware version, the start page may vary from that shown above.

The individual parameters are – where useful – graphically displayed in order to better illustrate the meaning of what are often perceived as abstract parameters.

The result is an easy-to-use and practically-oriented user interface!

9.4 Short description of the webConfig tool

The webConfig tool has 5 main menus:

- **Process**
with the current read bar code information.
- **Alignment**
for manually starting read processes and for aligning the bar code reader. The results of the read processes are displayed immediately. As a result, this menu item can be used to determine the optimum installation location.
- **Configuration**
for adjusting decoding, for data formatting and output, switching inputs/outputs, communication parameters and interfaces, etc. ...
- **Diagnostics**
for event logging of warnings and errors
- **Maintenance**
for updating the firmware.

The user interface of the webConfig tool is largely self-explanatory.

9.4.1 Module overview in the Configuration menu

The adjustable parameters of the device are clustered in modules in the Configuration menu.

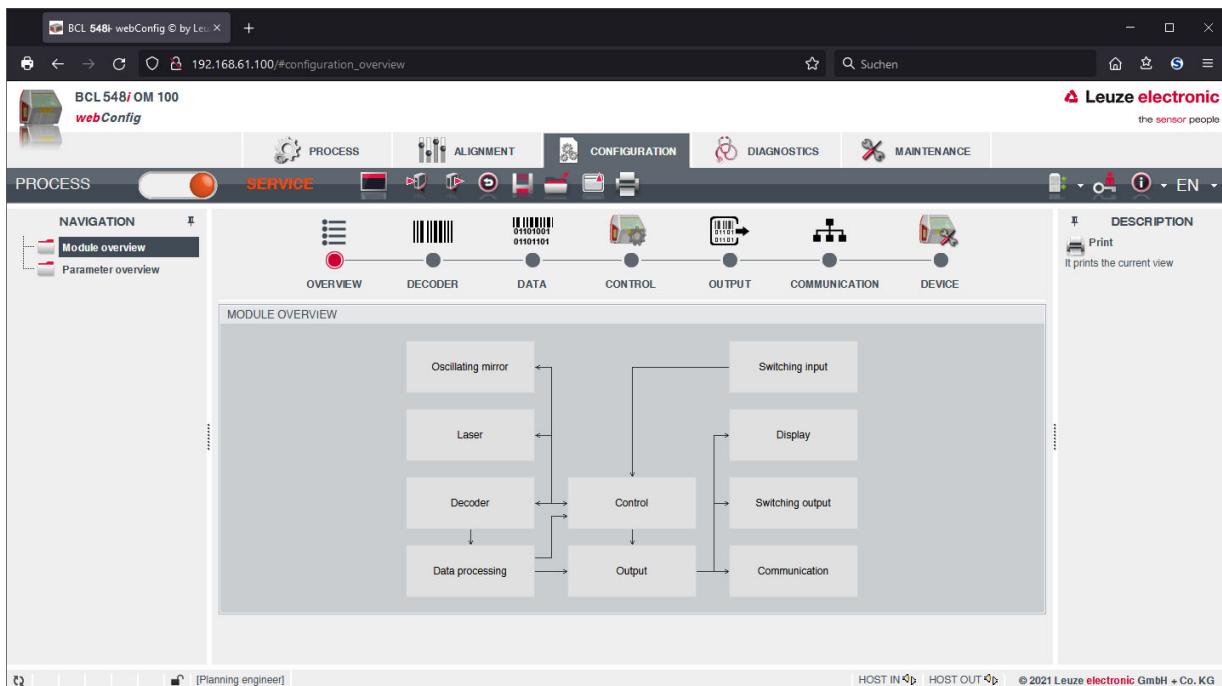


Figure 9.2: Module overview in the webConfig tool

NOTE	
i	The webConfig tool is completely contained in the firmware of the device. Depending on firmware version, the module overview may vary from that shown above.

The individual modules and their relationships to one another are graphically displayed in the module overview. The display is context sensitive, i.e. click a module to directly access the corresponding submenu.

An overview of the modules:

- **Decoder**

Definition of code types, code-type features and number of digits of the labels that are to be decoded

- **Data processing**

Filtering and processing of the decoded data

- **Output**

Sorting of the processed data and comparison with reference codes

- **Communication**

Formatting of the data for output via the communication interfaces

- **Control**

Activation/deactivation of decoding

- **Switching input**

Activation/deactivation of read processes

- **Switching output**

Definition of events which activate/deactivate the switching output

- **Display**

Formatting of the data for output on the display

- **Oscillating mirror (optional)**

Setting oscillating mirror parameters

The webConfig tool is available for all bar code readers of the BCL 500*/*series. Because configuration of the PROFINET-IO device is performed via the PROFINET-IO Controller, the module overview shown in the webConfig tool is, in this case, used only for displaying and checking the configured parameters.

The current configuration of your device is loaded upon startup of the webConfig tool. If you change the configuration via the control while the webConfig tool is running, you can use the  "Load parameter from device" button after making the changes to update the display in the webConfig tool. This button appears in the upper left in the center window area in all submenus of the Configuration main menu.

10 Starting up the device - Configuration

This chapter describes basic configuration steps which you can carry out either via the webConfig tool or the display.

Via the webConfig tool

The most convenient way to configure the device is via the webConfig tool. Only the webConfig tool gives you access to all settings of the device. To use the webConfig tool, you need to establish a USB connection between the device and a PC/laptop.

NOTE



Notes on use see chapter 9 "Starting up the device – Leuze webConfig tool".

Via display

The display offers basic configuration options for the device. Configuration via the display is appropriate if you want to configure simple reading tasks and you cannot or do not want to set up a USB connection between the device and a PC/laptop.

NOTE



Notes on use see chapter 3.5.2 "Status indicators and operation".

10.1 General information on the PROFINET-IO implementation

Various product variants of the BCL 500/*series* are available for connecting to different fieldbus systems such as PROFIBUS DP, PROFINET-IO, and Ethernet.

The device is designed as a PROFINET-IO device (acc. to IEEE 802.3). It supports a transmission rate of up to 100 Mbit/s (100Base TX/FX), full duplex, as well as auto-negotiation and auto-crossover.

The functionality of the device is defined via parameter sets which are clustered in modules. These modules are contained in a GSDML file.

Each device is sealed with a unique MAC-ID on delivery. This information is used to assign a unique, plant-specific device name (NameOfStation) to the device via the Discovery and Configuration Protocol (DCP). When configuring a PROFINET-IO system, the assignment of the device names to the configured IO devices creates a name-based relationship for the participating IO devices. (device naming).

The device features multiple M12 connectors / sockets for the electrical connection of the supply voltage, the interface and the switching inputs and outputs (see chapter 7 "Electrical connection").

The device supports:

- PROFIBUS-IO device functionality based on the PROFIBUS profile for identification systems
- Modular structure of the IO data
- PROFINET-IO RT (Real Time) communication
- Standard Fast Ethernet (100 Mbit/s) connections (M12 technology)
- Integrated Ethernet switch/ 2 Ethernet ports
- PROFINET-IO Conformance Class B (CC-B)
- Media Redundancy Protocol (MRP)
- I&M support: I&M 0-4
- Diagnostics / alarms

Identification and Maintenance functions

The device supports the base record I&M0:

Table 10.1: Base record I&M0

Content	Index	Data type	Description	Value
Header	0	10 bytes	Manufacturer specific Manufacturer specific	
MANUFACTURER_ID	10	UNSIGNED16	Leuze PNO manufacturer ID Leuze manufacturer ID	338
ORDER_ID	12	ASCII string 20 bytes	Leuze order no.	

Content	Index	Data type	Description	Value
SERIAL_NUMBER	32	ASCII string 16 bytes	Unique device serial number	Device-dependent
HARDWARE_REVISION	48	UNSIGNED16	Hardware revision number, e.g., "0...65535	Device-dependent
SOFTWARE_REVISION	50	1xCHAR, 3xUNSIGNED8	Software version number, e.g., V130 corresponds to "V1.3.0"	Device-dependent
REVISION_COUNTER	54	UNSIGNED16	Is incremented when updating individual modules. This function is not supported.	0
PROFILE_ID	56	UNSIGNED16	PROFIBUS application profile number	0xF600 (Generic Device)
PROFILE_SPECIFIC_TYPE	58	UNSIGNED16	Info about subchannels and submodules. Not relevant	0x01.0x01
IM_VERSION	60	2xUNSIGNED8	Implemented I&M version V 1.1	0x01.0x01
IM_SUPPORTED	62	Bit[16]	Optional I&M records available	0

The device supports further protocols and services for communication:

- TCP/IP (client / server)
- UDP
- DCP
- ARP
- PING

10.1.1 PROFINET-IO communication profile

The communication profile defines how participants serially transmit their data via the transmission medium.

The PROFINET-IO communication profile is designed for efficient data exchange on the field level. The data exchange with the devices is mainly cyclical. For the parameterization, operation, monitoring and alarm handling, however, acyclic communication services are also used.

Depending on the communication requirements, PROFINET-IO offers suitable protocols and transfer methods:

Real Time communication (RT) via prioritized Ethernet frames for

- Cyclical process data (I/O data stored in the I/O area of the control),
- Clock synchronization,
- Alarms,
- Neighborhood information,
- Address assignment/address resolution via DCP.

TCP/UDP/IP communication via standard Ethernet TCP/UDP/IP frames for

- Establishing communication and
- Acyclic data exchange, i.e. the transfer of various information types such as:
 - Parameters for the module parameterization while communication is being established
 - I&M 0-4 data (Identification & Maintenance functions)
 - Reading diagnostic information
 - Reading I/O data
 - Writing device data

10.1.2 Conformance Classes

PROFINET-IO devices are categorized into conformance classes to simplify the evaluation and selection of the devices for the users. The device can use an existing Ethernet network infrastructure and corresponds to Conformance Class B (CC-B). Thus, it supports the following features:

- Cyclical RT communication
- Acyclic TCP/IP communication
- Alarms/diagnosis
- Automatic address assignment
- I&M 0-4 functionality
- Neighborhood detection basic functionality
- FAST Ethernet 100 Base-TX/FX
- Convenient device exchange without engineering tools
- SNMP support
- Media Redundancy Protocol (MRP)

10.2 Measures to be performed prior to the initial commissioning

- ↳ Before commissioning, familiarize yourself with the operation and configuration of the device.
- ↳ Before connecting the supply voltage, recheck all connections and ensure that they have been properly made.
- ↳ Check the applied voltage. It must be in the range between +10V ... 30 V DC.

Connecting the functional earth FE

- ↳ Ensure that the functional earth (FE) is connected correctly.

NOTE	
 i	Unimpaired operation is only guaranteed when the functional earth is connected properly. All electrical disturbances (EMC couplings) are discharged via the functional earth connection.

10.3 Starting the device

- ↳ Connect the +10 ... 30VDC supply voltage (typ. +24VDC); the device starts up and the bar code reading window appears on the display.

By default, parameter enabling is deactivated and you cannot change any settings. If you wish to carry out the configuration via the display, you must activate parameter enabling (see chapter 8.6 "Operation", Parameter enable).

- ↳ First, you must now assign the device its individual name.

The PLC must communicate this device name to the participant during the device naming (see chapter 10.4.5 "Step 5 – Configuration of the device name – device naming").

10.4 Configuration steps for a Siemens Simatic S7 control

The following steps are necessary for commissioning with a Siemens S7 control:

1. Preparation of the control system (S7 PLC)
2. Installation of the GSD file
3. Hardware configuration of the S7 PLC
4. Transfer of the PROFINET-IO configuration to the IO Controller (S7 PLC)
5. Device naming
 - Configuration of the device name
 - Device naming
 - Assigning the device names to the configured IO devices (Figure 10.2)
 - Assignment of MAC address - IP address -individual device name (Figure 10.3)
6. Check device name

10.4.1 Step 1 – Preparing the control system (S7 PLC)

The first step involves the assignment of an IP address to the IO Controller (PLC - S7) and the preparation of the control for consistent data transmission.

NOTE



If an S7 control is used, you need to ensure that Simatic-Manager Version 5.4 + service pack 5 (V5.4+SP5) or higher is used.

10.4.2 Step 2 – Installation of the GSD file

For the subsequent configuration of the IO devices, e.g., BCL 548*F*, the corresponding GSD file must be loaded first. All data in modules required for operating the device is described in this file. These are input and output data and device parameters for the functioning of the device and the definition of the control and status bits.

↳ Install the GSD file associated with the device in the PROFINET-IO Manager of your control

General information on the GSD file

The term GSD stands for the textual description of a PROFINET-IO device model.

For the description of the more complex PROFINET-IO device model, the XML-based GSDML (Generic Station Description Markup Language) was introduced.

In the following, the terms "GSD" or "GSD file" always refer to the GSDML-based format.

The GSDML file can support an arbitrary number of languages in one file. Every GSDML file contains a version of the device model. This is also reflected in the file name.

File name structure

The file name of the GSD file is constructed according to the following rule:

- GSDML-[GSDML schema version]-Leuze-BCL 548*F*[Date].xml

Explanation:

- GSDML schema version:

Version identifier of the GSDML schema version used, e.g., V2.2

- Date:

Release date of the GSD file in the format yyyyymmdd.

This date also stands for the version identifier of the file.

Example:

- GSDML-V2.2-Leuze-BCL 548*F*20090503.xml

You can find the GSD file for the respective device model at www.leuze.com.

All data in modules required for operating the device is described in this file. These are input and output data and device parameters for the functioning of the device and the definition of the control and status bits.

If parameters are changed, e.g., in the project tool, these changes are stored on the PLC side in the project, not in the GSD file. The GSD file is a certified integral part of the device and must not be changed manually. The file is not changed by the system either.

The functionality of the device is defined via parameter sets. The parameters and their functions are structured in the GSD file using modules. A user-specific configuration tool is used during PLC program creation to integrate the required modules and configure them appropriately for their respective use. During operation of the device on the PROFINET-IO, all parameters are set to default values. If these parameters are not changed by the user, the device functions with the default settings delivered by Leuze electronic.

For the default settings of the device, please refer to the following module descriptions.

10.4.3 Step 3 – Hardware configuration of the S7 PLC: Configuration

For the configuration of the PROFINET-IO system using the HW Config of the SIMATIC Manager, insert the device into your project. An IP address is now assigned to a unique device name.

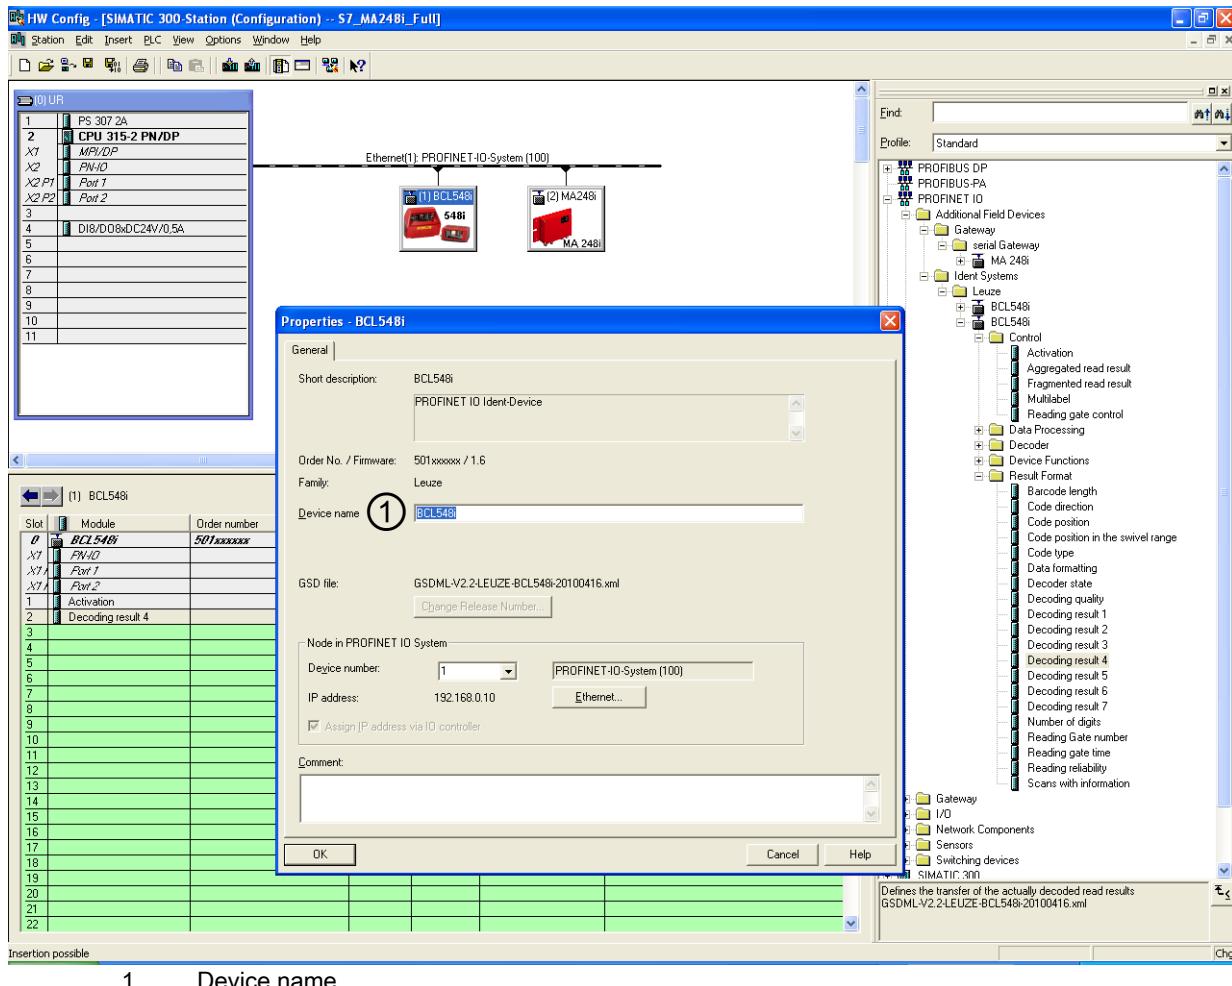


Figure 10.1: Assignment of the device names to IP addresses

10.4.4 Step 4 – Transfer of the configuration to the IO controller (S7 PLC)

After the correct transfer to the IO Controller (S7 PLC), the PLC automatically carries out the following activities:

- Check of device names
- Assignment of the IP addresses that were configured in the HW Config to the IO devices
- Establishment of a connection between the IO controller and configured IO devices
- Cyclical data exchange

NOTE



Participants that have not been named cannot be contacted yet at this point in time!

10.4.5 Step 5 – Configuration of the device name – device naming

The PROFINET-IO device has a unique MAC address that is part of the factory settings. You can find this on the name plate of the bar code reader.

This information is used to assign a unique, plant-specific device name (NameOfStation) to the device via the Discovery and Configuration Protocol (DCP).


The PROFINET-IO also uses the Discovery and Configuration Protocol (DCP) for the IP address assignment during each system boot-up if the IO device is located in the same subnet.

NOTE

All BCL 548/i participants in a PROFINET-IO network must be located in the same subnet!

Device naming

PROFINET-IO defines the "naming of the device" as the creation of a name-based relationship for a PROFINET-IO device.

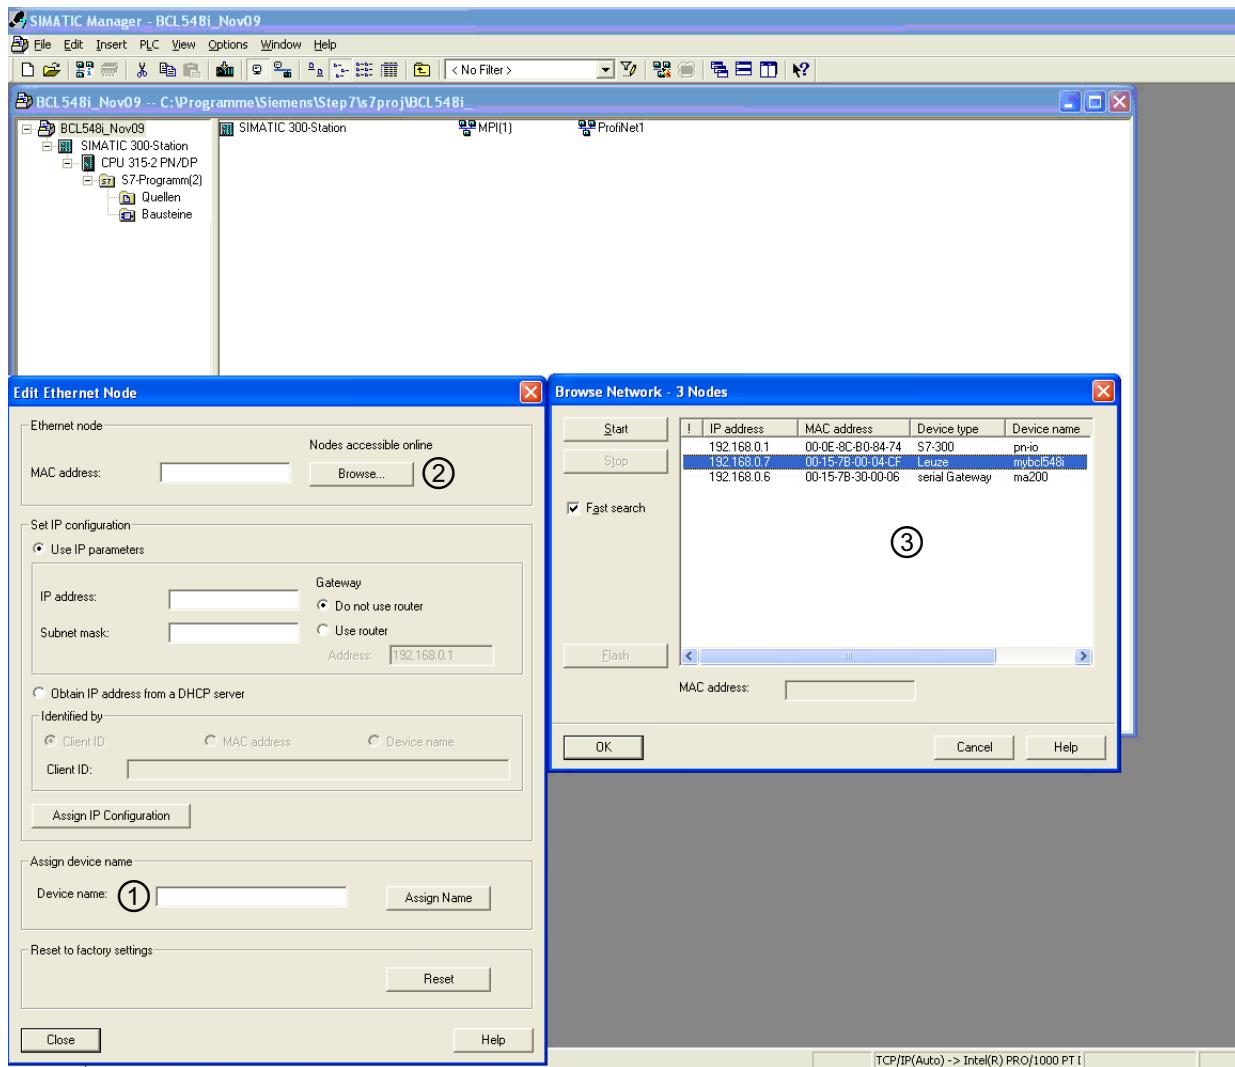Assigning the device names to the configured IO devices

- 1 Device name
- 2 Browse button
- 3 MAC address selection dialog

Figure 10.2: Assigning the device names to the configured IO devices


↳ Select the respective bar code scanner for the device naming based on its MAC address. The unique device name (which must match the participant in the HW Config) is then assigned to this participant.

NOTE

Multiple devices can be distinguished by the MAC addresses displayed. The MAC address may be found on the name plate of the respective bar code scanner.

Assignment of MAC address - IP address -individual device name

At this point, please assign an IP address (suggested by the PLC), a subnet mask and, if required, a router address, and assign this data to the named participant (device name).

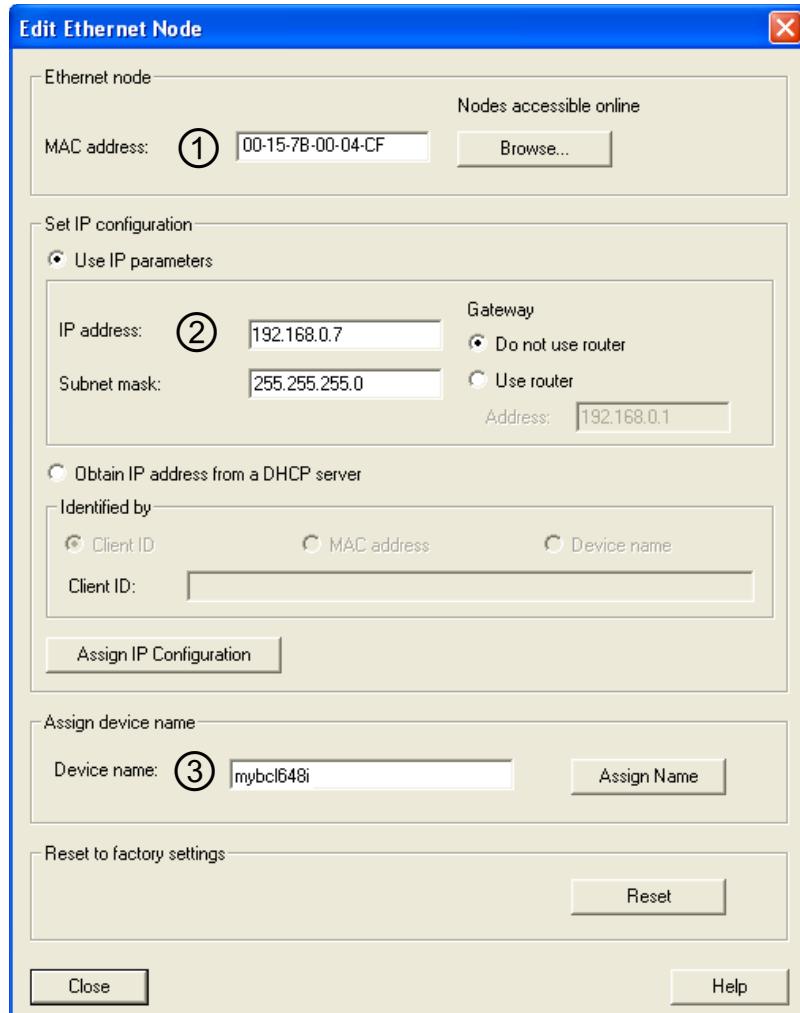

- 1 Ethernet participant
- 2 Set IP configuration
- 3 Device name

Figure 10.3: MAC address - IP address -individual device name

NOTE	
i	Multiple devices can be distinguished by the MAC addresses displayed. The MAC address may be found on the name plate of the respective bar code scanner.

From now on, and when programming, only the unique device name (max. 255 characters) is used.

10.4.6 Step 6 – Check device names

After completing the configuration phase, recheck the device names that have been assigned. Please ensure that these names are unique and that all participants are located in the same subnet.

10.4.7 Ethernet host communication

This chapter is only of interest if an additional IP address independent of the device name is to be established for an additional communication channel, e.g. TCP/ IP. The Ethernet host communication enables the configuration of connections to an external host system. Both UDP as well as TCP/IP (in either client or server mode) can be used. The connection-free UDP protocol is used primarily to transfer process data to the host (monitor operation). The connection-oriented TCP/IP protocol can also be used to transfer commands from the host to the device. With this connection, the data is backed up by the TCP/IP protocol itself.

If you would like to use the TCP/IP protocol, you must also define whether the device is to operate as a TCP client or as a TCP server.

Both protocols can be activated simultaneously and used in parallel.

↳ Contact your network administrator to determine which communication protocol is used.

10.4.8 Manual configuration of the IP address

If your system does not include a DHCP server or if the IP addresses of the devices are to be set permanently, proceed as follows:

↳ Have the network administrator specify the data for IP address, net mask and gateway address of the device.

↳ Set these values on the device:

In the webConfig tool

↳ In the main menu, select Configuration -> Communication -> Ethernet interface.

NOTE



If the setting is performed via the webConfig tool, the device must be restarted. The set IP address is only accepted and active after this restart.

Or alternatively in the display

NOTE



Use the navigation buttons to move through the menu. Activate the desired selection with the enter button .

↳ In the main menu, select the **Parameter** menu.

↳ Select the **Ethernet** menu item.

↳ Press the enter button to enter the menu.

↳ Select the **Ethernet interface** menu item.

↳ Press the enter button to enter the menu.

↳ Successively select the **IP address**, **Gateway** and **Net mask** menu items and set the desired values.

↳ Exit the menu by pressing the Escape button.

The **Configuration changed, system must be restarted** message appears.

↳ Confirm with **OK** to initiate a restart and activate the changed configuration.

10.4.9 Automatically setting the IP address

If your system includes a DHCP server which is to be used to assign the IP addresses, proceed as follows:

In the webConfig tool

↳ In the main menu, select Configuration -> Communication -> Ethernet -> DHCP.

Or alternatively in the display

↳ In the main menu, select the **Parameter** menu.

↳ Select the **Ethernet** menu item.

↳ Press the enter button to enter the menu.

↳ Select the **Ethernet interface** menu item.

- ↳ Press the enter button to enter the menu.
 - ↳ Select the **DHCP activated** menu item and set the desired value.
 - ↳ Exit the menu by pressing the Escape button.
- The **Configuration changed, system must be restarted** message appears.
- ↳ Confirm with **OK** to initiate a restart and activate the changed configuration.

NOTE

The device responds to ping commands. A simple test to determine whether the address assignment was successful is to enter the previously configured IP address in a ping command (e.g. ping 192.168.60.101 in a command line window under Windows).

10.4.10 Address Link Label

The *Address Link Label* is an additional stick-on label that is affixed to the device.

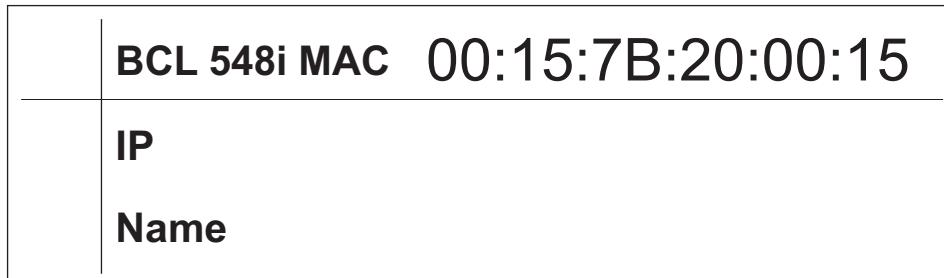


Figure 10.4: Example of an *Address Link Label*; the device type varies depending on the series

- The *Address Link Label* contains the MAC address (Media Access Control address) of the device and makes it possible to enter the IP address and the device name manually.
- The area of the *Address Link Label* on which the MAC address is printed can be separated from the remainder of the stick-on label if necessary using the perforation.
- The *Address Link Label* can be removed from the device and affixed in the installation and layout diagrams to designate the device.
 - Once it is affixed in the documents, the *Address Link Label* establishes a unique reference between the mounting location, the MAC address or the device, and the associated control program.
- The time-consuming searching, reading, and manually writing down of the MAC addresses of all devices installed in the system are eliminated.

NOTE

Each device with Ethernet interface is uniquely identified via the MAC address assigned during production. The MAC address is also listed on the name plate of the device.
If multiple devices are commissioned in a system, the MAC address of each installed device must be correctly assigned, e.g., during programming of the control.

- ↳ Remove the *Address Link Label* from the device.
- ↳ If necessary, add the IP address and the device name to the *Address Link Label*.
- ↳ Affix the "Address Link Label" in the documents, e.g., in the installation diagram, according to the position of the device.

10.4.11TCP/IP

↳ Activate the TCP/IP protocol.

↳ Set the TCP/IP mode of the device.

In TCP client mode, the device actively establishes the connection to the primary host system (PC / PLC as server). The device requires from the user the IP address of the server (host system) and the port number on which the server (host system) accepts a connection. In this case, the device determines when and with whom a connection is established!

↳ With a device as TCP client, also set the following values:

- IP address of the TCP server (normally the PLC/host computer)
- Port number of the TCP server
- Timeout for the wait time for an answer from the server
- Repetition time for renewed communication attempt following a timeout

In TCP server mode, the superior host system (PC/PLC) actively establishes the connection and the connected device waits for the connection to be set up. The TCP/IP stack must be informed by the user as to the local port of the device (port number) on which connection requests from a client application (host system) are to be received. If there is a connection request and a connection is established by the superior host system (PC / PLC as client), the device (server mode) accepts the connection. Data can then be sent and received.

↳ With a device as TCP server, also set the following values:

- Port number for the communication of the device with the TCP clients

The corresponding adjustment options can be found:

In the webConfig tool

↳ In the main menu, select Configuration -> Communication -> Host communication.

Or alternatively in the display

↳ In the main menu, select the **Parameter** menu.

↳ In the Parameter menu, select the **Ethernet** menu item.

↳ Press the enter button to enter the menu.

↳ Select the **Host communication** menu item.

↳ Press the enter button to enter the menu.

↳ Select the **TcpIP** menu item.

↳ Press the enter button to enter the menu.

↳ Successively select the **Activated**, **Mode** and **TcpIP Client** or **TcpIP Server** menu items and set the desired values.

↳ Exit the menu by pressing the Escape button.

The **Configuration changed, system must be restarted** message appears.

↳ Confirm with **OK** to initiate a restart and activate the changed configuration.

10.4.12UDP

The device requires from the user the IP address and the port number of the communication partner. In the same way, the host system (PC / PLC) now also requires the set IP address of the device and the selected port number. By assigning these parameters, a socket is formed via which the data can be sent and received.

↳ Activate the UDP protocol

↳ Also set the following values:

- IP address of the communication partner
- Port number of the communication partner

The corresponding adjustment options can be found:

In the webConfig tool

↳ In the main menu, select Configuration -> Communication -> Host communication.

Or alternatively in the display

- ↳ In the main menu, select the **Parameter menu**.
- ↳ In the Parameter menu, select the **Ethernet** menu item.
- ↳ Press the enter button to enter the menu.
- ↳ Select the **Host communication** menu item.
- ↳ Press the enter button to enter the menu.
- ↳ Select the **UDP** menu item.
- ↳ Press the enter button to enter the menu.
- ↳ Successively select the **Activated**, **IP address** and **Port number** menu items and set the desired values.
- ↳ Exit the menu by pressing the Escape button.
The **Configuration changed, system must be restarted** message appears.
- ↳ Confirm with **OK** to initiate a restart and activate the changed configuration.

NOTE

All other parameters required for the reading task, such as setting the code type and number of digits, etc., are set using the engineering tool of the PLC with the aid of the various available modules (see chapter 10.5).

10.5 Commissioning via the PROFINET-IO

10.5.1 General information

The device is designed as a modular field device. As is the case for PROFIBUS devices, the PROFINET-IO functionality of the device is defined via parameter sets that are combined in modules (slots) and sub-modules (sub-slots). The further addressing within subslots is then accomplished via an index. The modules are included in a XML-based GSD file, which is supplied as an integral part of the device. By using a user-specific configuration tool, such as, e.g., Simatic Manager for the programmable logic control by Siemens, the required modules are integrated into a project during commissioning and its settings and parameters are adjusted accordingly. These modules are provided by the GSD file.

NOTE

The reception of the input data and the sending of the output data are described from the perspective of the control (IO controller).
Further information see chapter 10.4 "Configuration steps for a Siemens Simatic S7 control". For the default settings of the device, please refer to the following module descriptions.

NOTE

Please note that the set data is overwritten by the PLC!
Some controls make available a so-called "universal module". This module must not be activated for the device!

From the perspective of the device, a distinction is made between PROFINET-IO parameters and internal parameters. PROFINET-IO parameters are all parameters that can be changed via the PROFINET-IO and are described in the following modules. Internal parameters, on the other hand, can only be changed via a service interface and retain their value even following a PROFINET-IO parameterization.

During the configuration phase, the BCL receives parameter telegrams from the IO controller (master). Before this is evaluated and the respective parameter values are set, all PROFINET-IO parameters are reset to default values. This ensures that the parameters of modules that are not selected are set to the default values.

10.5.2 Permanently defined parameters/device parameters

On the PROFINET-IO, parameters may be stored in modules or may be defined permanently in a PROFINET-IO participant.

Depending on the configuration tool, the permanently defined parameters are called common parameters or device-specific parameters.

These parameters must always be present. They are defined outside configuration modules and are thus connected to the base module (DAP: Device Access Point) that is addressed via Slot 0/Subslot 0.

In Simatic Manager, the permanently defined parameters are set via object properties of the device. The module parameters are set via the module list of the selected device. By selecting the project properties of a module, the respective parameters may be set if required.

The following list contains the device parameters that are permanently defined but are configurable. These parameters always exist and are available independent of the modules (DAP Slot 0/Subslot 0).

Table 10.2: Device parameters

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Profile number	Number of the activated profile. For devices, constant with value 0.	0	UNSIGNED8	0 ... 255	0	-
Code type 1	Released code type; no code means that all subsequent code tables are also deactivated. The valid number of digits also depends on the code type.	1.0 ... 1.5	BitArea	0: No code 1: 2/5 Interleaved 2: Code39 3: Code32 6: UPC, UPCE 7: EAN8, EAN13 8: Code128 10: EAN Addendum 11: Codabar 12: Code93 13: GS1 DataBar Omnidirectional 14: GS1 DataBar Limited 15: GS1 DataBar Expanded	1	-
Number-of-digits mode	Specifies how the subsequent numbers of digits are to be interpreted.	2.6	Bit	0: Enumeration 1 : Range	0	-
Number of digits 1	Decodable number of digits; in the case of a range, this number defines the lower limit. ^{a)}	2.0 ... 2.5	UNSIGNED8	0 ... 63	10	-
Number of digits 2	Decodable number of digits; in the case of a range, this number defines the upper limit.	3	UNSIGNED8	0 ... 63	0	-
Number of digits 3	Decodable number of digits in the enumeration mode.	4	UNSIGNED8	0 ... 63	0	-
Number of digits 4	Decodable number of digits in the enumeration mode.	5	UNSIGNED8	0 ... 63	0	-
Number of digits 5	Decodable number of digits in the enumeration mode.	6	UNSIGNED8	0 ... 63	0	-
Reading reliability	Min. reading reliability to be achieved in order to output a read code.	7	UNSIGNED8	1 ... 100	4	-
Check digit method	Used check digit procedure.	8.0 ... 8.6	BitArea	0: Standard check digit evaluation 1: No check digit verification 2: MOD10 Weight 3 3: MOD10 Weight 2 4: MOD10 Weight 4_9 5: MOD11 Cont 6: MOD43 7: MOD16	0	-
Check digit output	Turns the check digit output on or off.	8.7	Bit	Check digit output 0: Standard 1: Not standard	0	-
Code type 2	See code type 1	9.0 ... 9.5	BitArea	See code type 1	0	-
Number-of-digits mode 2	Specifies how the subsequent numbers of digits are to be interpreted.	10.6	Bit	0: Enumeration 1 : Range	0	-
Number of digits 2.1	Decodable number of digits; in the case of a range, this number defines the lower limit.	10.0 ... 10.5	UNSIGNED8	0 ... 63	0	-

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Number of digits 2.2	Decodable number of digits; in the case of a range, this number defines the upper limit.	11	UNSIGNED8	0 ... 63	0	-
Number of digits 2.3	Decodable number of digits in the enumeration mode.	12	UNSIGNED8	0 ... 63	0	-
Number of digits 2.4	Decodable number of digits in the enumeration mode.	13	UNSIGNED8	0 ... 63	0	-
Number of digits 2.5	Decodable number of digits in the enumeration mode.	14	UNSIGNED8	0 ... 63	0	-
Reading reliability 2	Min. reading reliability to be achieved in order to output a read code.	15	UNSIGNED8	1 ... 100	4	-
Check digit method 2	Used check digit procedure.	16.0...16.6	BitArea	0: Standard check digit evaluation 1: No check digit verification 2: MOD10 Weight 3 3: MOD10 Weight 2 4: MOD10 Weight 4_9 5: MOD11 Cont 6: MOD43 7: MOD16	0	-
Check digit output 2	Turns the check digit output on or off	16.7	Bit	Check digit output 0: Standard 1: Not standard	0	-
Code type 3	See code type 1	17.0 ... 17.5	BitArea	See code type 1	0	-
Number of digits mode 3	Specifies how the subsequent numbers of digits are to be interpreted.	18.6	Bit	0: Enumeration 1 : Range	0	-
Number of digits 3.1	Decodable number of digits; in the case of a range, this number defines the lower limit.	18.0 ... 18.5	UNSIGNED8	0 ... 63	0	-
Number of digits 3.2	Decodable number of digits; in the case of a range, this number defines the upper limit.	19	UNSIGNED8	0 ... 63	0	-
Number of digits 3.3	Decodable number of digits in the enumeration mode.	20	UNSIGNED8	0 ... 63	0	-
Number of digits 3.4	Decodable number of digits in the enumeration mode.	21	UNSIGNED8	0 ... 63	0	-
Number of digits 3.5	Decodable number of digits in the enumeration mode.	22	UNSIGNED8	0 ... 63	0	-
Reading reliability 3	Min. reading reliability to be achieved in order to output a read code.	23	UNSIGNED8	1 ... 100	4	-
Check digit method 3	Used check digit procedure.	24.0...24.6	BitArea	0: Standard check digit evaluation 1: No check digit verification 2: MOD10 Weight 3 3: MOD10 Weight 2 4: MOD10 Weight 4_9 5: MOD11 Cont 6: MOD43 7: MOD16	0	-
Check digit output 3	Turns the check digit output on or off	24.7	Bit	Check digit output 0: Standard 1: Not standard	0	-
Code type 4	See code type 1	25.0 ... 25.5	BitArea	See code type 1	0	-
Number-of-digits mode 4	Specifies how the subsequent numbers of digits are to be interpreted.	26.6	Bit	0: Enumeration 1 : Range	0	-
Number of digits 4.1	Decodable number of digits; in the case of a range, this number defines the lower limit.	26.0 ... 26.5	UNSIGNED8	0 ... 63	0	-
Number of digits 4.2	Decodable number of digits; in the case of a range, this number defines the upper limit.	27	UNSIGNED8	0 ... 63	0	-

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Number of digits 4.3	Decodable number of digits in the enumeration mode.	28	UNSIGNED8	0 ... 63	0	-
Number of digits 4.4	Decodable number of digits in the enumeration mode.	29	UNSIGNED8	0 ... 63	0	-
Number of digits 4.5	Decodable number of digits in the enumeration mode.	30	UNSIGNED8	0 ... 63	0	-
Reading reliability 4	Min. reading reliability to be achieved in order to output a read code.	31	UNSIGNED8	1 ... 100	4	-
Check digit method 4	Used check digit procedure.	32.0...32.6	BitArea	0: Standard check digit evaluation 1: No check digit verification 2: MOD10 Weight 3 3: MOD10 Weight 2 4: MOD10 Weight 4_9 5: MOD11 Cont 6: MOD43 7: MOD16	0	-
Check digit output 4	Turns the check digit output on or off	32.7	Bit	Check digit output 0: Standard 1: Not standard	0	-

a) Specifying a 0 for the number of digits means that this entry is ignored for the device.

Parameter length

33 bytes

Input data

None

Output data

None

Note on number of digits

If 0 is specified in a field for the number of digits, the corresponding parameter is ignored by the device firmware.

For a code table entry x, the two code lengths 10 and 12 are to be enabled. For this purpose, the following number of digit entries are necessary:

- Number of digits mode x = 0 (enumeration)
 - Number of digits x.1 = 10
 - Number of digits x.2 = 12
 - Number of digits x.3 = 0
 - Number of digits x.4 = 0
 - Number of digits x.5 = 0

10.6 Overview of the project modules

When using PROFINET-IO modules, the parameters are assembled dynamically, i.e., only the parameters that were selected by the activated modules are changed.

The BCL has parameters (device parameters) that must always be present. These parameters are defined outside of modules and are thus linked to the base module (DAP).

In the current version, a total of 60 modules are available for use. A **device module (DAP**, see chapter 10.5.2 "Permanently defined parameters/device parameters") is used for basic parameterization of the device and is permanently integrated into the project. Further modules may be included into the project according to requirements and application.

The modules fall into the following categories:

- Parameter module for the parameterization of the device.
- Status or control modules that influence the input/output data.
- Modules that may include both parameters and control or status information.

A PROFINET-IO module defines the existence and meaning of the input and output data. In addition, it defines the necessary parameters. The arrangement of the data within a module is defined.

The composition of the input/output data is defined via the module list.

The device interprets the incoming output data and triggers the appropriate reactions in the device. The interpreter for processing the data is adapted to the module structure during initialization.

The same applies for the input data. Using the module list and the defined module properties, the input data string is formatted and referenced to the internal data.

During cyclic operation, the input data is then passed on to the IO controller.

During the startup or initialization phase, the device sets the input data to an initial value (usually 0).

NOTE



The modules can be grouped together in any order in the engineering tool. Note, however, that many modules contain linked data (e.g., the decoding result modules 20-41). It is important to maintain the consistency of these data. The device offers different modules. Each of the modules may only be selected once; otherwise, the device ignores the configuration. The device checks its max. permissible number of modules. The control also reports an error if the input and output data across all selected modules exceed a total length of 1024 bytes. The specific limits of the individual modules of the device are declared in the GSD file.

The following module overview shows the characteristics of the individual modules:

Table 10.3: Module overview

Module	Description	Module identifier	Submodule identifier	Parameter	Output data	Input data
Device parameters	Module independent device parameters	1	0	33	0	0
Interface PN-IO	Ethernet interface description	1	1	0	0	0
Port 1	Ethernet Port 1	1	2	0	0	0
Port 2	Ethernet Port 2	1	3	0	0	0
Decoder						
Code table extension 1	Extension of the existing code table	1001	1	8	0	0
Code table extension 2	Extension of the existing code table	1002	1	8	0	0
Code table extension 3	Extension of the existing code table	1003	1	8	0	0
Code table extension 4	Extension of the existing code table	1004	1	8	0	0
Code type properties	The module permits changing the muted zones as well as the line-gap ratios	1005	1	6	0	0
Code reconstruction technology	Support of code reconstruction technology	1007	1	4	0	0
Control						
Activations	Control bits for activation of the standard reading operation	1010	1	1	0	1
Reading gate control	Extended control of the reading gate	1011	1	6	0	0
Multi-label	Output of several bar codes per reading gate	1012	1	2	1	0

Module	Description	Module identifier	Submodule identifier	Parameter	Output data	Input data
Fragmented read result	Transmission of the read results in the fragmented mode	1013	1	1	2	0
Interlinked read result	Interlinking of the individual read results within one reading gate	1014	1	1	0	0
Immediate output – reading gate	Immediate output of a read bar code in the reading gate	1015	1	0	0	0
Result format						
Decoder state	Status display – decoding	1020	1	0	1	0
Decoding result 1	Bar code information 4 bytes max.	1021	1	0	6	0
Decoding result 2	Bar code information 8 bytes max.	1022	1	0	10	0
Decoding result 3	Bar code information 12 bytes max.	1023	1	0	14	0
Decoding result 4	Bar code information 16 bytes max.	1024	1	0	18	0
Decoding result 5	Bar code information 20 bytes max.	1025	1	0	22	0
Decoding result 6	Bar code information 24 bytes max.	1026	1	0	26	0
Decoding result 7	Bar code information 28 bytes max.	1027	1	0	30	0
Decoding result 8	Bar code information 64 bytes max.	1028	1	0	66	0
Decoding result 9	Bar code information 128 bytes max.	1029	1	0	130	0
Decoding result 10	Bar code information 256 bytes max.	1048	1	0	259	0
Data formatting	Specification for formatting the data output	1030	1	23	0	0
Reading gate number	Number of the reading gate since system start-up	1031	1	0	2	0
Reading gate time	Time between opening and closing	1032	1	0	2	0
Code position	Relative position of the bar code label in the scanning beam	1033	1	0	2	0
Reading reliability	Calculated reading reliability for the transmitted bar code	1034	1	0	2	0
Scans per bar code	Number of scans between the first and the last time of detecting the bar code	1035	1	0	2	0
Scans with information	Number of scans with processed information	1036	1	0	2	0
Decoding quality	Quality of the read result	1037	1	0	1	0
Code direction	Orientation of the bar code	1038	1	0	1	0
Number of digits	Number of digits in the bar code	1039	1	0	1	0
Code type	Bar code type	1040	1	0	1	0
Code position in the swivel range	Code position in the swivel range of an oscillating mirror device	1041	1	0	2	0
Data Processing						
Characteristics filter	Parameterization of the characteristics filter	1050	1	0	0	0
Data filtering	Parameterization of the data filtering	1051	1	60	0	0
Segmentation acc. to the EAN process	Activation and parameterization of the segmentation acc. to the EAN process	1052	1	27	0	0
Segmentation via fixed positions	Activation and parameterization of the segmentation via fixed positions	1053	1	37	0	0
Segmentation acc. to identifier and separator	Activation and parameterization of the segmentation acc. to identifier and separator	1054	1	29	0	0
String handling parameter	Definition of placeholder characters for bar code segmentation, filtering, completion and reference code processing	1055	1	3	0	0
Device-Functions						
Device status	Display of the device status as well as control bits for reset and standby	1060	1	0	1	1
Laser control	Switch-on and switch-off positions of the laser	1061	1	4	0	0
Display	Display of parameter setting	1062	1	3	0	0
Alignment	Alignment mode	1063	1	0	1	1
Oscillating mirror	Parameterization of the oscillating mirror	1064	1	6	0	0
Deflecting mirror	Parameterization of the deflecting mirror	1065	1	2	0	0

Module	Description	Module identifier	Submodule identifier	Parameter	Output data	Input data
Switching inputs/ outputs SWIO or Device-IO						
Switching input/output SWIO1	Parameter settings SWIO1	1070	1	23	0	0
Switching input/output SWIO2	Parameter settings SWIO2	1071	1	23	0	0
Switching input/output SWIO3	Parameter settings SWIO3	1072	1	23	0	0
Switching input/output SWIO4	Parameter settings SWIO4	1073	1	23	0	0
SWIO status and control	Handling of switching input and switching output signals	1074	1	0	2	1
Data output						
Sorting	Sorting support	1080	1	3	0	0
Reference code comparator 1	Definition of the operation mode of reference code comparator 1	1081	1	8	0	0
Reference code comparator 2	Definition of the operation mode of reference code comparator 2	1082	1	8	0	0
Reference code comparison pattern 1	Definition of the 1st comparison pattern	1083	1	31	0	0
Reference code comparison pattern 2	Definition of the 2nd comparison pattern	1084	1	31	0	0
Special functions						
Status and control	Grouping of multiple status and control bits	1090	1	0	1	0
AutoReflAct	Automatic reflector activation	1091	1	2	0	0
AutoControl	Automatic monitoring of the reading properties	1092	1	3	1	0
Universal parameter module 1	Configuration of max. 3 parameters	1094	1	3		
Universal parameter module 2	Configuration of max. 3 parameters	1095	1	3		
Universal parameter module 3	Configuration of max. 3 parameters	1096	1	3		
multiScan over PROFINET						
multiScan master	Definition of the mode of operation of the multiScan master function	1100	1	10	0	0
multiScan slave addresses 1	Parameterization of the slave addresses for slaves 11-20	1101	1			
multiScan slave addresses 2	Parameterization of the slave addresses for slaves 21-32	1102	2			

NOTE

For the standard case, at least module 10 (activation) and one of modules 21 ... 29 (decoding result 1 ... 10) should be integrated.

10.7 Decoder modules

10.7.1 Modules 1-4 – Code table extensions 1 to 4

PROFINET-IO module identifier

Module-ID: 1001...1004

Submodule ID: 1

Description

The modules extend the code type tables of the device parameters and permit the additional definition of further 4 code types together with the respective number of digits.

Parameter

Table 10.4: Parameters for modules 1-4

Parameter	Description	Rel. addr.	Data type	Value range	Default	Unit
Code type	Released code type; no code means that all subsequent code tables are also deactivated. The valid number of digits also depends on the code type.	0.0 ... 0.5	BitArea	0: No code 1: 2/5 Interleaved 2: Code39 3: Code32 6: UPC, UPCE 7: EAN8, EAN13 8: Code128 10: EAN Addendum 11: Codabar 12: Code93 13: GS1 DataBar Omnidirectional 14: GS1 DataBar Limited 15: GS1 DataBar Expanded	0	-
Number of digits mode	Interpretation of the number of digits.	1.6	Bit	0: Enumeration 1 : Range	0	-
Number of digits 1 ^{a)}	Decodable number of digits; in the case of a range, this number defines the lower limit.	1.0 ... 1.5	UNSIGNED8	0 ... 63	0	-
Number of digits 2	Decodable number of digits; in the case of a range, this number defines the upper limit.	2	UNSIGNED8	0 ... 63	0	-
Number of digits 3	Decodable number of digits in the enumeration mode.	3	UNSIGNED8	0 ... 63	0	-
Number of digits 4	Decodable number of digits in the enumeration mode.	4	UNSIGNED8	0 ... 63	0	-
Number of digits 5	Decodable number of digits in the enumeration mode.	5	UNSIGNED8	0 ... 63	0	-
Reading reliability	Min. reading reliability to be achieved in order to output a read code.	6	UNSIGNED8	1 ... 100	4	-
Check digit method	Used check digit procedure.	7.0 ... 7.6	BitArea	0: Standard check digit evaluation 1: No check digit verification 2: MOD10 Weight 3 3: MOD10 Weight 2 4: MOD10 Weight 4_9 5: MOD11 Cont 6: MOD43 7: MOD16	0	-
Check digit output	Turns the check digit output on or off. Standard means that the check digit is transmitted according to the applicable standard for the selected code type. If no check digit transmission is intended for the selected code type, then Standard means that the check digit is not transmitted and Not Standard means that the check digit is transmitted anyway.	7.7	Bit	Check digit output 0: Standard 1: Not standard	0	-

a) Refer to the notice on the number of digits (see chapter 10.5.2 "Permanently defined parameters/device parameters").

Parameter length

8 bytes

Input data

None

Output data

None

10.7.2 Module 5 – Code type features (symbology)**PROFINET-IO module identifier**

Module ID: 1005

Submodule ID: 1

Description

The module defines extended features for various code types.

Parameter

Table 10.5: Parameters for module 5

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Maximum width deviation	Max. permitted width deviation of a character in percent of the directly adjacent character.	0	UNSIGNED8	0 ... 100	15	%
Code 39 max. element ratio	Permissible ratio between maximum and minimum element of Code 39.	1	UNSIGNED8	0 ... 255	8	-
Code 39 character gap	Permissible ratio for the gap between two characters for Code 39.	2	UNSIGNED8	0 ... 255	3	-
Codabar max. element ratio	Permissible ratio between maximum and minimum element of the Codabar code.	3	UNSIGNED8	0 ... 255	8	-
Codabar character gap	Permissible ratio for the gap between two characters for the Codabar code.	4	UNSIGNED8	0 ... 255	3	-
Codabar Monarch Mode	The decoding of a Monarch bar code as Codabar bar code can be switched on or off.	5.0	Bit	0: Off 1: On	0	-
Codabar start/stop character	Switches the transmission of a start and stop character for the Codabar code on and off.	5.1	Bit	0: Off 1: On	0	-
UPC-E extension	Switches the extension of a UPC-E code to a UPC-A result on and off.	5.4	Bit	0: Off 1: On	1	-
Code 128: activate EAN header	Switches the output of the EAN header on and off.	5.5	Bit	0: Off 1: On	0	-
Code 39 conversion	Defines the conversion method used for Code 39.	5.6 ... 5.7	BitArea	0: Standard (usual conversion method) 1: Standard ASCII (combination of standard method and ASCII method) 2: ASCII (This conversion method uses the entire ASCII character set)	0	-

Parameter length

6 byte

Input data

None

Output data

None

10.7.3 Module 7 – Code reconstruction technology

PROFINET-IO module identifier

Module ID: 1007

Submodule ID: 1

Description

Module for supporting the code reconstruction technology.

Parameter

Table 10.6: Parameters for module 7

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Maximum width ratio	The maximum width ratio is used to determine the light zones. The light zones identify the beginning or end of patterns.	0	UNSIGNED8	0 ... 255	13	-
Minimum number of elements	A pattern must have at least this minimum number of duo-elements, i.e. no patterns which have fewer duo-elements.	1 ... 2	UNSIGNED16	2 ... 400	6	-
Code fragment mode	This parameter can be used to switch CRT mode on and off.	3.0	Bit	0: Switched off 1: Switched on	1	-
Processing end at end of label	If this parameter is set, a decoded bar code is only completely decoded after the scanning beam has exited the entire bar code.	3.2	Bit	0: Switched off 1: Switched on	0	-

Parameter length

4 byte

Input data

None

Output data

None

NOTE



Processing end at end of label:

If this parameter is set, a decoded bar code is only completely decoded after the scanning beam has exited the entire bar code. This mode is useful if the quality of the bar code is to be assessed, since more scans are now available for the quality evaluation of the bar code. This parameter should be set if the AutoControl function is activated (see chapter 10.16.3 "Module 92 – AutoControl"). If the parameter is not set, the bar code is immediately decoded and processed further as soon as all necessary bar code elements are available.

10.8 Control modules

10.8.1 Module 10 – Activations

PROFINET-IO module identifier

Module ID: 1010

Submodule ID: 1

Description

The module defines the control signals for the reading operation of the bar code reader. It is possible to select between standard reading operation and handshake operation.

In handshake operation, the control must acknowledge the data reception via the ACK bit before the new data is written into the input area.

After acknowledging the last decoding result, the input data is reset (filled with zeros).

Parameter

Table 10.7: Parameters for module 10

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Mode	The parameter defines the mode in which the activation module is operated.	0	UNSIGNED8	0: Without ACK ^{a)} 1: With ACK ^{b)}	0	-

- a) corresponds to BCL34 module 18
 b) corresponds to BCL34 module 19

Parameter length

1 byte

Input data

None

Output data

Table 10.8: Output data for module 10

Output data	Description	Addr.	Data type	Value range	Initial value	Unit
Reading gate	Signal for activating the reading gate	0.0	Bit	1 -> 0: Reading gate off 0 -> 1: Reading gate active	0	-
	Free	0.1	Bit		0	-
	Free	0.2	Bit		0	-
	Free	0.3	Bit		0	-
Data acknowledgement	This control bit signals that the transmitted data have been processed by the master. Only relevant in handshake mode (with ACK).	0.4	Bit	0 -> 1: Data has been processed by the master 1 -> 0: Data has been processed by the master	0	-
Data reset	Deletes decoding results that may have been stored and resets the input data of all modules.	0.5	Bit	0 -> 1: Data reset	0	-
	Free	0.6	Bit			
	Free	0.7	Bit			

Output data length

1 byte consistent

NOTE

If several bar codes are decoded in sequence without the acknowledge mode having been activated, the input data of the result modules are overwritten with the respective most recently read decoding result.
 Thus, to avoid a data loss in the control in such a case, mode 1 (With ACK) should be activated. If multiple decoding results occur within one reading gate, it is possible - dependent on the cycle time - that only the last decoding result is visible on the bus. In this case, the acknowledge mode MUST be used. There is otherwise a risk of data loss.
 Multiple, individual decoding results may then occur within one reading gate if module 12 – Multi-label (see chapter 10.8.3) or one of the identifier modules (see chapter 10.11) is used.

Data reset behavior:

If the data reset control bit is activated, the following actions are carried out:

1. Deletion of decoding results that may still be stored.
2. Reset of module 13 - fragmented read result (see chapter 10.8.4), i.e., even a partially transmitted read result is deleted.
3. Deletion of the input data areas of all modules. Exception: The input data of module 60 - device status (see chapter 10.12.1) is not deleted. For the status byte of decoding result modules 20 ... 29 (see chapter 10.9.2), the two toggle bytes and the reading gate status remain unchanged.

10.8.2 Module 11 – Reading gate control**PROFINET-IO module identifier**

Module ID: 1011

Submodule ID: 1

Description

With the module, the reading gate control of the bar code reader can be adapted to the application. With different parameters from the bar code reader, a time-controlled reading gate may be created. In addition, it defines the internal criteria for the reading gate end and the completeness inspection.

Parameter

Table 10.9: Parameters for module 11

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Automatic reading gate repeat	The parameter defines the automatic repeat of reading gates.	0	Byte	0: No 1: Yes	0	-
Reading gate end mode/completeness mode	This parameter can be used to configure the completeness inspection.	1	Byte	0: Independent of decoding, i.e., the reading gate is not terminated prematurely. 1: Dependent on decoding, i.e., the reading gate is terminated if the configured number of bar codes to be decoded has been reached. ^{a)} 2: DigitRef table-dependent, i.e., the reading gate is terminated if each bar code stored in the code type table has been decoded. ^{b)} 3: Ident list dependent, i.e., the reading gate is terminated if each identifier stored in a list could be segmented via a respective bar code segmentation. ^{c)} 4: Reference code comparison, i.e., the reading gate is terminated if a positive reference code comparison has taken place. ^{d)}	1	-
Restart delay	The parameter specifies a time after which a reading gate is restarted. The device generates its own periodic reading gate. The configured time is active only if the automatic reading gate repeat is switched on.	2	UNSIGNED16	0 ... 65535	0	ms
Max. reading gate time when scanning	The parameter switches off the reading gate after the set time has elapsed, thus limiting the reading gate to the set period.	4	UNSIGNED16	1 ... 65535 0: Reading gate deactivation is switched off.	0	ms

a) see chapter 10.8.2 "Module 11 – Reading gate control"

b) Corresponds to the settings carried out via the device module (see chapter 10.5.2, see chapter 10.7.1).

c) see chapter 10.11, modules 52-54 Identifier filter string

d) see chapter 10.15.3, see chapter 10.15.4

Parameter length

6 byte

Input data

None

Output data

None

10.8.3 Module 12 – Multi-label**PROFINET-IO module identifier**

Module ID 1012

Submodule ID: 1

Description

The module defines extended features for various code types.

Parameter

Table 10.10: Parameters for module 12

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Minimum number of bar codes	Minimum number of different bar codes scanned for per reading gate.	0	UNSIGNED8	0 ... 64	0	-
Maximum number of bar codes	Maximum number of different bar codes scanned for per reading gate. Only if this number of bar codes has been reached, the reading gate is terminated prematurely. ^{a)}	1	UNSIGNED8	0 ... 64	1	-

a) see chapter 10.8.2, parameter "reading gate termination mode"

Parameter length

2 bytes

Input data

Table 10.11: Input data for module 12

Input data	Description	Addr.	Data type	Value range	Default	Unit
Number of decoding results	Number of decoding results which have not been fetched.	0	UNSIGNED8	0 ... 255	0	-

Input data length

1 byte

Output data

None

This module is used to set the maximum and minimum number of bar codes which are to be decoded within a reading gate.

If parameter "minimum number of bar codes" = 0, it is not taken into account at the decoder control. If it is not equal to 0, this means that the bar code reader expects a number of labels within the set range.

If the number of decoded bar codes is within the set limits, no additional "No Reads" are output.

NOTE

When using this module, the ACK mode should be activated (see chapter 10.8.1 "Module 10 – Activations", "Mode" parameter). Otherwise there is a risk of losing decoding results if the control is not fast enough.

10.8.4 Module 13 – Fragmented read result**PROFINET-IO module identifier**

Module ID: 1013

Submodule ID: 1

Description

The module defines the transfer of fragmented reading results. To occupy few I/O data, the read results may be split into several fragments with this module. The fragments can then be transmitted one after another with a handshake.

Parameter

Table 10.12: Parameters for module 13

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Fragment length	The parameter defines the maximum length of the bar code information per fragment.	0	UNSIGNED8	1 ... 128	1	-

Parameter length

1 byte

Input data

Table 10.13: Input data for module 13

Input data	Description	Addr.	Data type	Value range	Default	Unit
Fragment number	Current fragment number	0.0 ... 0.3	Bitarea	0 ... 15	0	-
Remaining fragments	Number of fragments which still have to be read for a complete result.	0.4 ... 0.7	Bitarea	0 ... 15	0	-
Fragment size	Fragment length, always corresponds to the configured fragment length, except for the last fragment.	1	UNSIGNED8	0 ... 128	0	-

Input data length

2 byte consistent

Output data

None

10.8.5 Module 14 – Interlinked read result**PROFINET-IO module identifier**

Module ID: 1014

Submodule ID: 1

Description

This module is used to switch to a mode in which all decoding results within one reading gate are combined into a single read result.

Parameter

Table 10.14: Parameters for module 14

Parameter	Description	Rel. addr.	Data type	Value range	Default	Unit
Separator character	This parameter is used to define a delimiter that is inserted between two individual decoding results.	0	UNSIGNED8	1 ... 255 0: No delimiter is used.	;	-

Parameter length

1 byte

Input data

None

Output data

None

NOTE	
	An interlinked read result also requires module 12 – Multi-label. In this mode, the additional information transmitted in modules 31ff relates to the last decoding result in the chain.

10.8.6 Module 15 – Immediate output – reading gate

PROFINET-IO module identifier

Module ID: 1015

Submodule ID: 1

Description

With the module, the reading gate control can be configured in such a way that decoded bar codes are output immediately, i.e., during the reading gate.

The module must be plugged in and configured (true/false).

Parameter

Table 10.15: Parameters for module 15

Parameter	Description	Rel. addr.	Data type	Value range	Default	Unit
Reading gate output mode	With this parameter, the immediate output of the reading gate is activated (= true) or deactivated (= false).	0	BOOL	1 -> Immediate output activated. 0 -> Immediate output deactivated.	False	-

Parameter length

1 byte

Input data

None

Output data

None

10.9 Result format

In the following, various modules for the output of decoding results are listed. They have the same structure but different output lengths. The PROFINET-IO module concept does not cater for modules of variable data length.

NOTE	
	Modules 20 ... 29 are, thus, to be understood as alternatives and should not be used in parallel. Modules 30 ... 41, on the other hand, can be freely combined with the decoding result modules.

10.9.1 Module 20 – Decoder state

PROFINET-IO module identifier

Module ID: 1020

Submodule ID: 1

Description

The module indicates the state of the decoding and of the automatic decoder configuration.

Parameter

None

Input data

Table 10.16: Input data for module 20

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Reading gate state	The signal indicates the current state of the reading gate ^{a)} .	0.0	Bit	0: Off 1: On	0	-
New result	The signal indicates whether a new decoding has occurred.	0.1	Bit	0: No 1: Yes	0	-
Result state	The signal indicates whether the bar code has been read successfully.	0.2	Bit	0: Successful reading 1: NOREAD	0	-
Further results in the buffer	The signal indicates whether further results are in the buffer.	0.3	Bit	0: No 1: Yes	0	-
Buffer overflow	The signal indicates that result buffers are occupied and the decoder rejects data.	0.4	Bit	0: No 1: Yes	0	-
New decoding	Toggle bit indicates whether decoding has occurred.	0.5	Bit	0->1: New result 1->0: New result	0	-
Result state	Toggle bit indicates that the bar code has not been read.	0.6	Bit	0->1: NOREAD 1->0: NOREAD	0	-
Waiting for acknowledgment	This signal represents the internal state of the control.	0.7	Bit	0: Base state 1: Control waiting for acknowledgment from the IO controller	0	-

a) Attention: This does not necessarily correspond to the state at the time the bar code is scanned

Input data length

1 byte

Output data

None

Comments

The following bits are constantly updated, i.e. they are updated immediately after the respective event occurs:

Reading gate state

- Further results in the buffer
- Buffer overflow
- Waiting for acknowledgment

All other flags refer to the currently output decoding result. If the input data is reset to the initial value, the following bits are deleted (see chapter 10.9.4 "Module 30 – Data formatting"):

- New result
- Result state

All others remain unchanged.

Data reset behavior:

Upon data reset the input data is deleted, except for the reading gate status and the two toggle bits (see chapter 10.8.1 "Module 10 – Activations").

10.9.2 Modules 21-29 – Decoding result**PROFINET-IO module identifier**

Module ID: 1021...1029

Submodule ID: 1

Description

The module defines the transfer of the actually decoded reading results. The data is transmitted consistently over the entire range.

Parameter

None

Input data

Table 10.17: Input data for module 21 ... 29

Module no.	Parameter	Description	Addr.	Data type	Value range	Default	Unit
21 ... 29	Reading gate state	The signal indicates the current state of the reading gate. ^{a)}	0.0	Bit	0: Off 1: On	0	-
21 ... 29	New result	Signal indicates whether a new decoding result is present.	0.1	Bit	0: No 1: Yes	0	-
21 ... 29	Result state	Signal indicates whether the bar code has been read successfully.	0.2	Bit	0: Successful reading 1: NOREAD	0	-
21 ... 29	Further results in the buffer	Signal indicates whether further results are in the buffer.	0.3	Bit	0: No 1: Yes	0	-
21 ... 29	Buffer overflow	Signal indicates that result buffers are occupied and the decoder rejects data.	0.4	Bit	0: No 1: Yes	0	-
21 ... 29	New result	Toggle bit indicates that a new decoding result is present.	0.5	Bit	0->1: New result 1->0: New result	0	-
21 ... 29	Result state	Toggle bit indicates that the bar code has not been read.	0.6	Bit	0->1: NOREAD 1->0: NOREAD	0	-
21 ... 29	Waiting for acknowledgment	This signal represents the internal state of the control.	0.7	Bit	0: Base state 1: Control waiting for acknowledgment from the IO controller	0	-
21 ... 29	Bar code data length	Data length of the actual bar code information. ^{b)}	1	UNSIGNED8	0-48	0	-
21	Data	Bar code information with a length of consistently 4 bytes.	2..	4x UNSIGNED8	0-FFh	0	-
22	Data	Bar code information with a length of consistently 8 bytes.	2..	8x UNSIGNED8	0-FFh	0	-
23	Data	Bar code information with a length of consistently 12 bytes.	2..	12x UNSIGNED8	0-FFh	0	-
24	Data	Bar code information with a length of consistently 16 bytes.	2..	16x UNSIGNED8	0-FFh	0	-
25	Data	Bar code information with a length of consistently 20 bytes.	2..	20x UNSIGNED8	0-FFh	0	-
26	Data	Bar code information with a length of consistently 24 bytes.	2..	24x UNSIGNED8	0-FFh	0	-
27	Data	Bar code information with a length of consistently 28 bytes.	2..	28x UNSIGNED8	0-FFh	0	-
28	Data	Bar code information with a length of consistently 64 bytes.	2..	64x UNSIGNED8	0-FFh	0	-
29	Data	Bar code information with a length of consistently 128 bytes.	2..	128x UNSIGNED8	0-FFh	0	-

a) Attention: This does not necessarily correspond to the state at the time the bar code is scanned

b) If the bar code information (bar code and, possibly, other items such as the check sum) fits in the selected module width, this value reflects the length of the transmitted data. A value larger than the module width indicates a loss of information caused by a module width which has been selected too small.

Input data

2 bytes consistently + 4..128 bytes of bar code information depending on the module

Output data

None

Comments

The remarks for module 20 – decoder state, apply in an analogous manner. In addition, all bytes beginning with address 1 are reset to the initial value.

NOTE	
	Shortening decoding results that are too long: If the bar code information (bar code possibly including supplementary information such as the check sum) does not fit in the selected module width, the decoding results are shortened. This shortening is either from the left or the right depending on the setting in module 30 – Data formatting. Shortening is indicated by the passed bar code data length.

10.9.3 Module 48 – Decoding result

PROFINET-IO module identifier

Module ID: 1048

Submodule ID: 1

Description

The module defines the transfer of the actually decoded reading results. The data is transmitted consistently over the entire range.

Parameter

None

Input data

Table 10.18: Input data for module 48

Module no.	Parameter	Description	Addr.	Data type	Value range	Default	Unit
48	Reading gate state	The signal indicates the current state of the reading gate.a)	0.0	Bit	0: Off 1: On	0	-
48	New result	Signal indicates whether a new decoding result is present.	0.1	Bit	0: No 1: Yes	0	-
48	Result state	Signal indicates whether the bar code has been read successfully.	0.2	Bit	0: Successful reading 1: NOREAD	0	-
48	Further results in the buffer	Signal indicates whether further results are in the buffer.	0.3	Bit	0: No 1: Yes	0	-
48	Buffer overflow	Signal indicates that result buffers are occupied and the decoder rejects data.	0.4	Bit	0: No 1: Yes	0	-
48	New result	Toggle bit indicates that a new decoding result is present.	0.5	Bit	0->1: New result 1->0: New result	0	-
48	Result state	Toggle bit indicates whether the bar code has not been read.	0.6	Bit	0->1: NOREAD 1->0: NOREAD	0	-
48	Waiting for acknowledgment	This signal represents the internal state of the control.	0.7	Bit	0: Base state 1: Control waiting for acknowledgment from the IO controller	0	-
48	Bar code data length	Data length of the actual bar code information. b)	1	UNSIGNED16	0-48	0	-
48	Data	Bar code information with a length of consistently up to 256 bytes.	3..	256x UNSIGNED8	0-FFh	0	-

a) Attention: This does not necessarily correspond to the state at the time the bar code is scanned

b) If the bar code information (bar code and, possibly, other items such as the check sum) fits in the selected module width, this value reflects the length of the transmitted data. A value larger than the module width indicates a loss of information caused by a module width which has been selected too small.

Input data

3 bytes consistently + 258 bytes of bar code information depending on the module

Output data

None

Comments

The remarks for module 20 – decoder state, apply in an analogous manner. In addition, all bytes beginning with address 1 are reset to the initial value.

NOTE

Shortening decoding results that are too long: If the bar code information (bar code possibly including supplementary information such as the check sum) does not fit in the selected module width, the decoding results are shortened. This shortening is either from the left or the right depending on the setting in module 30 – Data formatting.

Shortening is indicated by the passed bar code data length.

10.9.4 Module 30 – Data formatting

PROFINET-IO module identifier

Module ID: 1030

Submodule ID: 1

Description

The module defines the output string for the case that the device could not read a bar code. In addition, the initialization of the data fields and the definition of unused data ranges may be set.

Parameter

Table 10.19: Parameters for module 30

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Text in the case of misreading	The parameter defines the output characters if no bar code could be read.	0	STRING 20 characters Null terminated	1 ... 20 bytes of ASCII characters	63 ("?")	-
Decoding result at reading gate start	The parameter defines the state of the data at the start of the reading gate.	20.5	Bit	0: Input data remain on the old value 1: Input data is reset to the initial value	0	-
Data alignment	The parameter defines the alignment of the data in the result field ^{a)}	21.1	Bit	0: Left-justified 1: Right-justified	0	-
Fill mode	The parameter defines the fill mode for the not assigned data ranges	21.4 ... 21.7	Bitarea	0: No fill up 3: Fill up to the transmission length	3	-
Fill character	The parameter defines the character which is used for filling up the data ranges.	22	UNSIGNED8	0 ... FFh	0	-

a) and thus also controls possible shortening of a decoding result that is too large.

Parameter length

23 bytes

Input data

None

Output data

None

Comment

The "decoding result at reading gate start" parameter is only taken into account if the "Without ACK" mode is set (see chapter 10.8.1 "Module 10 – Activations").

NOTE

The text for erroneous readings does not permit the use of ASCII characters that cannot be displayed (<0x20h).

10.9.5 Module 31 – Reading gate number

PROFINET-IO module identifier

Module ID: 1031

Submodule ID: 1

Description

The module defines input data for the communication of the number of reading gates since system start.

Parameter

None

Input data

Table 10.20: Input data for module 31

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Reading gate number	The device transmits the current reading gate number. The reading gate number is initialized with the system start and is then incremented continuously. At 65535, an overflow occurs and the counter starts again from 0.	0 ... 1	UNSIGNED16	0 ... 65535	0	-

Input data length

2 byte consistent

Output data

None

10.9.6 Module 32 – Reading gate time

PROFINET-IO module identifier

Module ID: 1032

Submodule ID: 1

Description

This module returns the time between opening and closing of the last reading gate.

Parameter

None

Input data

Table 10.21: Input data for module 32

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Opening duration of the reading gate	Opening duration of the last reading gate in ms.	0 ... 1	UNSIGNED16	0 ... 65535 If the range is exceeded, the value remains at 65535	0	ms

Input data length

2 byte consistent

Output data

None

10.9.7 Module 33 – Code position

PROFINET-IO module identifier

Module ID: 1033

Submodule ID: 1

Description

The module defines input data for the communication of the relative bar code position in the laser beam.

Parameter

None

Input data

Table 10.22: Input data for module 33

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Code position	Relative position of the bar code in the scanner beam. The position is normalized to the zero position (middle position). Specified in 1/10 degrees.	0 ... 1	SIGNED16	±450	0	1/10 degree

Input data length

2 byte consistent

Output data

None

10.9.8 Module 34 – Reading reliability (equal scans)**PROFINET-IO module identifier**

Module ID: 1034

Submodule ID: 1

Description

The module defines the input data for the communication of the calculated reading reliability. The value refers to the currently output bar code.

Parameter

None

Input data

Table 10.23: Input data for module 34

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Reading reliability (equal scans)	Calculated reading reliability for the transmitted bar code.	0 ... 1	UNSIGNED16	0 ... 65535	0	-

Input data length

2 byte consistent

Output data

None

10.9.9 Module 35 – Bar code length**PROFINET-IO module identifier**

Module ID: 1035

Submodule ID: 1

Description

The module defines input data for the communication of the length of the currently output bar code.

Parameter

None

Input data

Table 10.24: Input data for module 35

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Bar code length	Length/duration of the currently output bar code, beginning with the code position specified in module 35 in 1/10 degrees.	0 ... 1	UNSIGNED16	1 ... 900	1	1/10 degree

Input data length

2 byte consistent

Output data

None

10.9.10 Module 36 – Scans with information**PROFINET-IO module identifier**

Module ID: 1036

Submodule ID: 1

Description

The module defines input data for the communication of the calculated number of scans which provided information contributing to the result of the bar code.

Parameter

None

Input data

Table 10.25: Input data for module 36

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Scans with information per bar code	See above	0 ... 1	UNSIGNED16	0 ... 65535	0	-

Input data length

2 byte consistent

Output data

None

10.9.11 Module 37 – Decoding quality**PROFINET-IO module identifier**

Module ID: 1037

Submodule ID: 1

Description

The module defines input data for the communication of the calculated decoding quality of the currently transmitted bar code.

Parameter

None

Input data

Table 10.26: Input data for module 37

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Decoding quality	Decoding quality of the transmitted bar code	0	UNSIGNED8	0 ... 100	0	1%

Input data length

1 byte consistent

Output data

None

10.9.12Module 38 – Code direction**PROFINET-IO module identifier**

Module ID: 1038

Submodule ID: 1

Description

The module defines input data for the communication of the detected code direction of the currently transmitted bar code.

Parameter

None

Input data

Table 10.27: Input data for module 38

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Code direction	Code direction of the transmitted bar code	0	UNSIGNED8	0: Normal 1: Inverted 2: Unknown	0	-

Input data length

1 byte

Output data

None

Comment:

A decoding result of type "No Read" has as code direction the value 2 = unknown!

10.9.13Module 39 – Number of digits**PROFINET-IO module identifier**

Module ID: 1039

Submodule ID: 1

Parameter

The module defines input data for the communication of the number of digits of the currently transmitted bar code.

Description

None

Input data

Table 10.28: Input data for module 39

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Number of digits	Number of digits of the transmitted bar code	0	UNSIGNED8	0 ... 48	0	-

Input data length

1 byte

Output data

None

10.9.14 Module 40 – Code type (symbology)**PROFINET-IO module identifier**

Module ID: 1040

Submodule ID: 1

Description

The module defines input data for the communication of the code type of the currently transmitted bar code.

Parameter

None

Input data

Table 10.29: Input data for module 40

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Code type (symbology)	Code type of the transmitted bar code	0	UNSIGNED8	0: No code 1: 2/5 Interleaved 2: Code39 6: UPC, UPCE 7: EAN8, EAN13 8: Code128, EAN128 10: EAN Addendum 11: Codabar 12: Code93 13: GS1 DataBar Omnidirectional 14: GS1 DataBar Limited 15: GS1 DataBar Expanded	0	-

Input data length

1 byte

Output data

None

10.9.15 Module 41 – Code position in the swivel range**PROFINET-IO module identifier**

Module ID: 1041

Submodule ID: 1

Description

The module defines input data for the communication of the relative bar code position in the swivel range of an oscillating mirror device.

Parameter

None

Input data

Table 10.30: Input data for module 41

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Position in the swivel range	Relative position of the bar code in the swivel range. The position is normalized to the zero position (middle position). Specified in 1/10 degrees.	0 ... 1	SIGNED16	-200 ... +200	0	1/10°

Input data length

2 bytes

Output data

None

10.10 Data Processing

10.10.1 Module 50 – Characteristics filter

PROFINET-IO module identifier

Module ID: 1050

Submodule ID: 1

Description

Parameterization of the characteristics filter. This filter can be used to set how bar codes with identical content are handled and what criteria are to be taken into account in determining the likeness.

Parameter

Table 10.31: Parameters for module 50

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Handling of identical bar code information	Determines how bar codes with the same content are to be managed	0	UNSIGNED8	0: All bar codes are stored and output. 1: Only non-identical bar code contents are output.	1	-
Comparison parameter - code type	If this criterion has been activated, the bar code type is used to determine whether the bar codes are identical.	1.0	Bit	0: Deactivated 1: Activated	1	-
Comparison parameter bar code content	If this criterion has been activated, the bar code content is used to determine whether the bar codes are identical.	1.1	Bit	0: Deactivated 1: Activated	1	-
Comparison parameter bar code direction	If this criterion has been activated, the bar code direction is used to determine whether the bar codes are identical.	1.2	Bit	0: Deactivated 1: Activated	1	-

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Comparison parameter scan position	If this parameter is not equal to 0, the bar code position in the scanning beam is used to determine whether identical bar codes have already been decoded. In this case, a +/- bandwidth in degrees must be specified, within which the same bar code is permitted to be in the scanning beam.	2 ... 3	UNSIGNED16	0 ... 450	0	1/10 degree
Comparison parameter oscillating mirror position	If this parameter is not equal to 0, the bar code position in the swivel range of the oscillating mirror is used to determine whether identical bar codes have already been decoded. A +/- bandwidth in degrees must then be specified, within which the same bar code is permitted to be in the oscillating mirror swivel range.	4 ... 5	UNSIGNED16	0 ... 200	0	1/10 degree
Comparison parameter scanning time info	If this parameter is not equal to 0, the decoding time (time at which the bar code was decoded) is used to determine whether identical bar codes have already been detected. Here, a difference time specified in milliseconds ensures that identical bar codes may only occur within this time.	6 ... 7	UNSIGNED16	0 ... 65535	0	ms

Parameter length

8byte

Input data

None

Output data

None

All comparison criteria are AND linked; this means all active comparisons must be fulfilled before the just-decoded bar code can be identified as already decoded and then deleted.

10.10.2 Module 51 – Data filtering**PROFINET-IO module identifier**

Module ID: 1051

Submodule ID: 1

Description

Parameterization of the data filter.

Parameter

Table 10.32: Parameters for module 51

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Bar code filter string 1	Filter expression 1	0	STRING 30 characters null terminated	1 ... 30 bytes of ASCII characters	*	-
Bar code filter string 2	Filter expression 2	30	STRING 30 characters null terminated	1 ... 30 bytes of ASCII characters	\00	-

Parameter length

60 bytes

Input data

None

Output data

None

Filter string

The filter string is used to define passthrough filters for bar codes.

Any number of '?' is permitted as placeholders for an arbitrary character at exactly this position. Also permitted are '*' as placeholders for a character sequence of arbitrary length, and an 'x' if the character at the respective position is to be deleted.

NOTE

ASCII characters that cannot be displayed (<0x20h) must not be used.

10.11 Identifier

The following modules can be used to specify the segmentation process to be used when extracting identifiers from the bar code data.

When a module is configured, the associated segmentation process is activated. If none of the modules is configured, no segmentation takes place.

Therefore, the modules can only be used one at a time and not simultaneously.

NOTE

When using one of the following modules, multiple results may occur within a reading gate. If there are multiple results, acknowledge mode must be used, data may otherwise be lost (see chapter 10.8.1 "Module 10 – Activations", "Mode" parameter and the additional notices)!

10.11.1 Module 52 – Segmentation according to the EAN process

PROFINET-IO module identifier

Module ID: 1052

Submodule ID: 1

Description

The module activates the segmentation according to the EAN process. The parameters specify the identifiers to be searched for and the output mode.

Parameter

Table 10.33: Parameters for module 52

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Identifier list						
Identifier 1	The identifier string is used for the identifier list and the filtering according to the segmentation.	0	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	**	-
Identifier 2	See identifier 1.	5	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	\0	-
Identifier 3	See identifier 1.	10	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	\0	-
Identifier 4	See identifier 1.	15	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	\0	-
Identifier 5	See identifier 1.	20	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	\0	-
Output with identifier	If this switch is not set, the output of the identifiers is suppressed. Only the data values that belong to the identifiers are displayed in this case.	25.0	Bit	0: Output of the identifiers is suppressed. 1: Identifiers are output.	1	-
Output delimiter	This delimiter, if not equal to 0, is inserted between the identifier and the associated data value in the output.	26	UNSIGNED8	0 ... 127	0	-

Parameter length

27 byte

Input data

None

Output data

None

Identifier string n (n = 1 ... 5)

The identifier string defines both the identifier list for the segmentation and the passthrough filter for the subsequent filtering.

The string may contain wildcards. Any number of '?' is permitted as placeholders for an arbitrary character at exactly that defined position.

Also permitted are '*' as placeholders for a character sequence of arbitrary length, and an 'x' if the character at the respective position is to be deleted. There are a total of 5 identifier strings.

An identifier with less than 5 characters must be null terminated. However, if the identifier string consists of exactly 5 characters, it does not have to be terminated.

NOTE



ASCII characters that cannot be displayed (<0x20h) must not be used in the identifier strings.

10.11.2 Module 53 – Segmentation via fixed positions

PROFINET-IO module identifier

Module ID: 1053

Submodule ID: 1

Description

The module activates the segmentation via fixed positions. The parameters specify the identifiers to be searched for, the output mode, and the positions.

Parameter

Table 10.34: Parameters for module 53

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Identifier list						
Identifier 1	The identifier string is used for the identifier list and the filtering according to the segmentation.	0	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	**	-
Identifier 2	See identifier 1.	5	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	\0	-
Identifier 3	See identifier 1.	10	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	\0	-
Identifier 4	See identifier 1.	15	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	\0	-
Identifier 5	See identifier 1.	20	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	\0	-
Identifier output						
Output with identifier	If this switch is not set, the output of the identifiers is suppressed. Only the data values that belong to the identifiers are displayed in this case.	25.0	Bit	0: Output of the identifiers is suppressed. 1: Identifiers are output.	1	-
Output delimiter	This delimiter, if not equal to 0, is inserted between the identifier and the associated data value in the output.	26	UNSIGNED8	0 ... 127	0	-
Fixed positions						
Start position of the 1st identifier	Specifies the position of the first character of the first identifier in the data string of the bar code. The first character in the bar code has position 1. If the parameter is = 0, it is deactivated.	27	UNSIGNED8	0 ... 127	0	-
Start position of the 1st data value	Specifies the position of the first character of the first data value in the data string of the bar code. The first character in the bar code has position 1. If the parameter is = 0, it is deactivated.	28	UNSIGNED8	0 ... 127	0	-
Start position of the 2nd identifier	Specifies the position of the first character of the second identifier in the data string of the bar code. The first character in the bar code has position 1. If the parameter is = 0, it is deactivated.	29	UNSIGNED8	0 ... 127	0	-
Start position of the 2nd data value	Specifies the position of the first character of the second data value in the data string of the bar code. The first character in the bar code has position 1. If the parameter is = 0, it is deactivated.	30	UNSIGNED8	0 ... 127	0	-

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Start position of the 3rd identifier	Specifies the position of the first character of the third identifier in the data string of the bar code. The first character in the bar code has position 1. If the parameter is = 0, it is deactivated.	31	UNSIGNED8	0 ... 127	0	-
Start position of the 3rd data value	Specifies the position of the first character of the third data value in the data string of the bar code. The first character in the bar code has position 1. If the parameter is = 0, it is deactivated.	32	UNSIGNED8	0 ... 127	0	-
Start position of the 4th identifier	Specifies the position of the first character of the fourth identifier in the data string of the bar code. The first character in the bar code has position 1. If the parameter is = 0, it is deactivated.	33	UNSIGNED8	0 ... 127	0	-
Start position of the 4th data value	Specifies the position of the first character of the fourth data value in the data string of the bar code. The first character in the bar code has position 1. If the parameter is = 0, it is deactivated.	34	UNSIGNED8	0 ... 127	0	-
Start position of the 5th identifier	Specifies the position of the first character of the fifth identifier in the data string of the bar code. The first character in the bar code has position 1. If the parameter is = 0, it is deactivated.	35	UNSIGNED8	0 ... 127	0	-
Start position of the 5th data value	Specifies the position of the first character of the fifth data value in the data string of the bar code. The first character in the bar code has position 1. If the parameter is = 0, it is deactivated.	36	UNSIGNED8	0 ... 127	0	-

Parameter length

37 bytes

Input data

None

Output data

None

Identifier string n (n = 1 ... 5)

The identifier string defines both the identifier list for the segmentation and the passthrough filter for the subsequent filtering.

The string may contain wildcards. Any number of '?' is permitted as placeholders for an arbitrary character at exactly that defined position.

Also permitted are '*' as placeholders for a character sequence of arbitrary length, and an 'x' if the character at the respective position is to be deleted. There are a total of 5 identifier strings.

An identifier with less than 5 characters must be null terminated. However, if the identifier string consists of exactly 5 characters, it does not have to be terminated.

NOTE

ASCII characters that cannot be displayed (<0x20h) must not be used in the identifier strings.

10.11.3 Module 54 – Segmentation according to identifier and separator

PROFINET-IO module identifier

Module ID: 1054

Submodule ID: 1

Description

This module activates the segmentation according to identifier and separator. The parameters specify the identifiers to be searched for, the output mode, and the parameters for the identifier/separator algorithm.

Parameter

Table 10.35: Parameters for module 54

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Identifier list						
Identifier 1	The identifier string is used for the identifier list and the filtering according to the segmentation.	0	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	**	-
Identifier 2	See identifier 1.	5	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	\0	-
Identifier 3	See identifier 1.	10	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	\0	-
Identifier 4	See identifier 1.	15	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	\0	-
Identifier 5	See identifier 1.	20	STRING 5 characters null terminated	1 ... 5 bytes of ASCII characters	\0	-
Identifier output						
Output with identifier	If this switch is not set, the output of the identifiers is suppressed. Only the data values that belong to the identifiers are displayed in this case.	25.0	Bit	0: Output of the identifiers is suppressed. 1: Identifiers are output.	1	-
Output delimiter	This delimiter, if not equal to 0, is inserted between the identifier and the associated data value in the output.	26	UNSIGNED8	0 ... 127	0	-
Segmentation acc. to identifier and separator						
Identifier length	Fixed length of all identifiers in the segmentation process. After this length, the text of the identifier ends and the associated data value starts. The end of the data value is determined by the separator.	27	UNSIGNED8	0 ... 255	0	-
Delimiter in the identifier/separator algorithm	The separator terminates the data value that follows its identifier directly after the identifier length. After the separator, the next identifier starts.	28	UNSIGNED8	0 ... 127	0	-

Parameter length

29 byte

Input data

None

Output data

None

Identifier string n (n = 1 ... 5)

The identifier string defines both the identifier list for the segmentation and the passthrough filter for the subsequent filtering.

The string may contain wildcards. Any number of '?' is permitted as placeholders for an arbitrary character at exactly that defined position.

Also permitted are "*" as placeholders for a character sequence of arbitrary length, and an 'x' if the character at the respective position is to be deleted. There are a total of 5 identifier strings.

An identifier with less than 5 characters must be null terminated. However, if the identifier string consists of exactly 5 characters, it does not have to be terminated.

NOTE



ASCII characters that cannot be displayed (<0x20h) must not be used in the identifier strings.

10.11.4 Module 55 – String handling parameters

PROFINET-IO module identifier

Module ID: 1055

Submodule ID: 1

Description

This module is used to configure placeholder characters for the bar code segmentation, filtering, termination, and reference code processing.

Parameter

Table 10.36: Parameters for module 55

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Wildcard character	This parameter is similar to the "don't care character" parameter. The difference between this and the "don't care character" is that all subsequent characters, and not only one character at a certain position, are disregarded until a character pattern is found in the string that follows the wildcard character pattern. This character has the same behavior as the wildcard character for the DIR command in the command line interpreter under Windows.	0	UNSIGNED8	32 ... 126	"*"	-
Don't care character	Placeholder character. Characters at the position of the placeholder character are not taken into account in a comparison. This permits certain areas to be masked.	1	UNSIGNED8	32 ... 126	'?'	-
Delete character	Delete character for bar code and identifier filtering (characters at the position of the delete character are deleted in a comparison. This permits certain areas to be deleted).	2	UNSIGNED8	32 ... 126	'x'	-

Parameter length

3 bytes

Input data

None

Output data

None

10.12 Device functions

10.12.1 Module 60 – Device status

PROFINET-IO module identifier

Module ID: 1060

Submodule ID: 1

Description

The module contains the display of the device status as well as control bits for triggering a reset or putting the device into standby mode.

Parameter

None

Input data

Table 10.37: Input data for module 60

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Device status	This byte represents the device status	0	UNSIGNED8	0: Device is ready 1: Initialization 10: Standby 11: Service 12: Diagnosis 13: Parameter enabled 15: Device is ready 0x80: Error 0x81: Warning	0	-

Input data length

1 byte

Output data

Table 10.38: Input data for module 60

Output data	Description	Addr.	Data type	Value range	Initial value	Unit
System reset	The control bit triggers a system reset if the level changes from 0 to 1	0.6	Bit	0: Run 0 -> 1: Reset	0	-
Standby	Activates the standby function	0.7	Bit	0: Standby off 1: Standby on	0	-

NOTE

Analogous to command H, activation of the system reset bit triggers a restart of all electronics, incl. a restart of the PROFINET-IO stack. I.e., the device restarts!

Output data length

1 byte

NOTE

When resetting the data the input data of this module is not deleted (see chapter 10.8.1 "Module 10 – Activations").

10.12.2 Module 61 – Laser control

PROFINET-IO module identifier

Module ID: 1061

Submodule ID: 1

Description

The module defines the switch-on and switch-off position of the laser.

Parameter

Table 10.39: Parameters for module 61

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Laser start position	This parameter defines the switch-on position of the laser in 1/10° increments within the visible range of the laser. The center of the reading field corresponds to the 0° position.	0 ... 1	UNSIGNED16	-450 ... +450	-450	1/10°
Laser stop position	This parameter defines the switch-off position of the laser in 1/10° increments within the visible range of the laser.	2 ... 3	UNSIGNED16	-450 ... +450	+450	1/10°

Parameter length

4 byte

Input data

None

Output data

None

10.12.3 Module 62 – Display**PROFINET-IO module identifier**

Module ID: 1062

Submodule ID: 1

Description

In this module, general parameters and parameters that relate to the operation and the display are set.

Parameter

Table 10.40: Parameters for module 62

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Language selection	Language selection for the display. A language selected via the display is overwritten by this parameter.	0.0 ... 0.2	Bit	1: English 2: German 3: Italian 4: French 5: Spanish	1	-
Display illumination	Off after 10 min., or permanently on.	0.3	Bit	0: Off after 10 min 1: Permanently on	0	-
Display contrast	Contrast setting of the display. The contrast changes under extreme ambient temperatures and can be adjusted with this parameter.	0.4 ... 0.5	Bit	0: Weak 1: Medium 2: Strong	1	-
Password protection	Password protection on/off	0.7	Bit	0: OFF 1: ON	0	-
Password	Password entry. Password is only active if password protection is on.	1 ... 2	UNSIGNED16	0000 ... 9999	0000	-

Parameter length

3 bytes

Input data

None

Output data

None

NOTE

When resetting the data the input data of this module is not deleted (see chapter 10.8.1 "Module 10 – Activations").

10.12.4 Module 63 – Alignment

PROFINET-IO module identifier

Module ID: 1063

Submodule ID: 1

Description

The module defines input and output data for the alignment mode of the device. The alignment mode is used for easy alignment of the device with the bar code. Using the transmitted decoding quality as a percentage, the optimum alignment can be easily selected. This module should not be used in connection with module 81 (AutoReflAct) as this may cause malfunctions.

Parameter

None

Input data

Table 10.41: Input data for module 63

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Decoding quality	Transmits the current decoding quality of the bar code located in the scanning beam	0	Byte	0 ... 100	0	Percent-age

Input data length

1 byte

Output data

Table 10.42: Output data for module 63

Output data	Description	Addr.	Data type	Value range	Initial value	Unit
Alignment mode	Signal activates and deactivates the alignment mode for optimum alignment of the device with the bar code	0.0	Bit	0 -> 1: On 1 -> 0: Off	0	-

Output data length

1 byte

10.12.5 Module 64 – Oscillating mirror

PROFINET-IO module identifier

Module ID: 1064

Submodule ID: 1

Description

Module for supporting the oscillating mirror.

Parameter

Table 10.43: Parameters for module 64

Parameter	Description	Rel. addr.	Data type	Value range	Default	Unit
Oscillation mode	This parameter defines the mode in which the oscillating mirror operates.	0.0 ... 0.1	UNSIGNED8	0: Single oscillation 1: Double oscillation 2: Continuous oscillation 3: Continuous oscillation, oscillating mirror moves to the start position at the end of the reading gate.	2	-
Decoding direction	Adjustment of the oscillating direction in which the bar codes to be read are to be decoded.	0.4 ... 0.5	BitArea	0: In both directions 1: During forward oscillation 2: During backward oscillation	0	-
Start position	Start position (opening angle) relative to the zero position of the swivel range.	1 ... 2	SIGNED16	-200 ... +200	200	1/10°
Stop position	Stop position (opening angle) relative to the zero position of the swivel range.	3 ... 4	SIGNED16	-200 ... +200	-200	1/10°
Oscillation frequency	Common value for forward and backward motion	5	UNSIGNED8	15 ... 116	48	°/s

Parameter length

6 byte

Input data

None

Output data

None

10.12.6 Module 65 – Deflecting mirror**PROFINET-IO module identifier**

Module ID: 1065

Submodule ID: 1

Description

Module for supporting the deflecting mirror.

Parameter

Table 10.44: Parameters for module 65

Parameter	Description	Rel. addr.	Data type	Value range	Default	Unit
Deflection angle	Lateral beam exit in degrees relative to the zero position	0 ... 1	SIGNED16	-100 ... +100	0	1/10°

Parameter length

2 bytes

Input data

None

Output data

None

10.13 Switching inputs/ outputs SWIO 1 ... 4

These modules define the mode of operation of the 4 digital switching inputs and outputs (I/Os). They are separated into individual modules for configuring the individual I/Os and a shared module for signaling the status and controlling all I/Os.

10.13.1 Parameters for operating as an output

Switch-on delay

With this setting, the output pulse can be delayed by the specified time (in ms).

Switch-on time

Defines the switch-on time period for the switching input. Any activated switch-off function then no longer has any function.

A value of 0 causes the output to be set statically; this means that the selected input function(s) activate the output, and the selected switch-off function(s) deactivate it again.

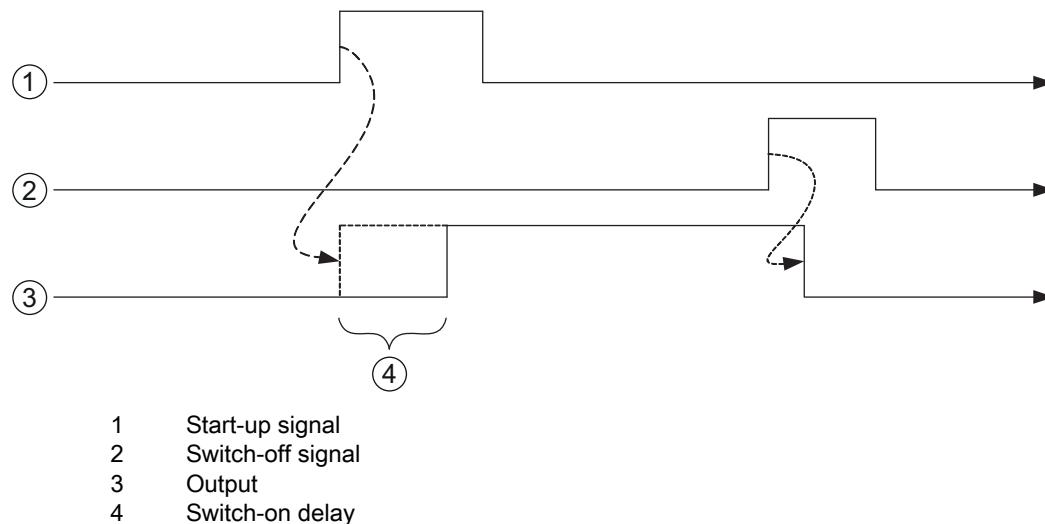


Figure 10.5: Example 1: Switch-on delay > 0 and switch-on time = 0

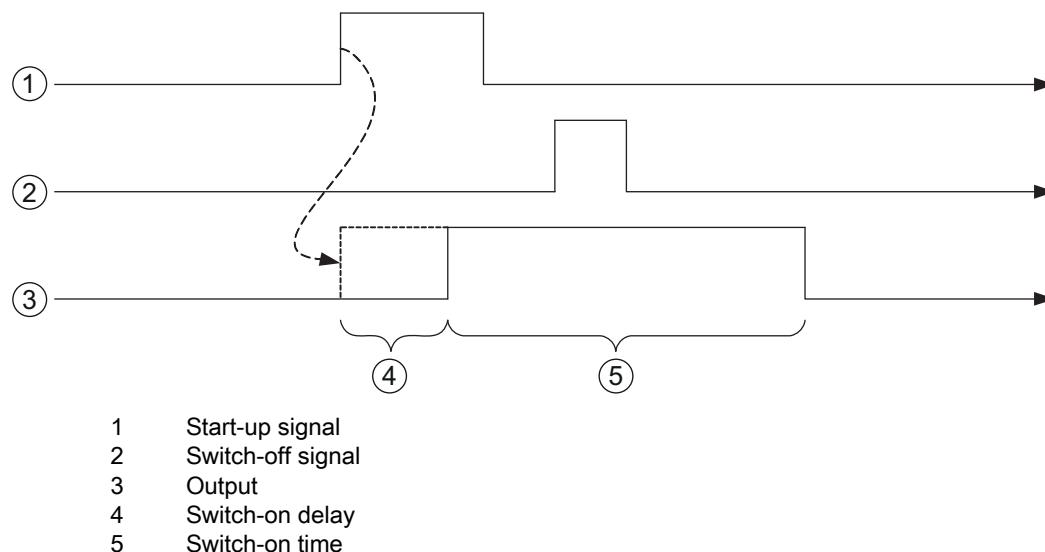


Figure 10.6: Example 2: Switch-on delay > 0 and switch-on time > 0

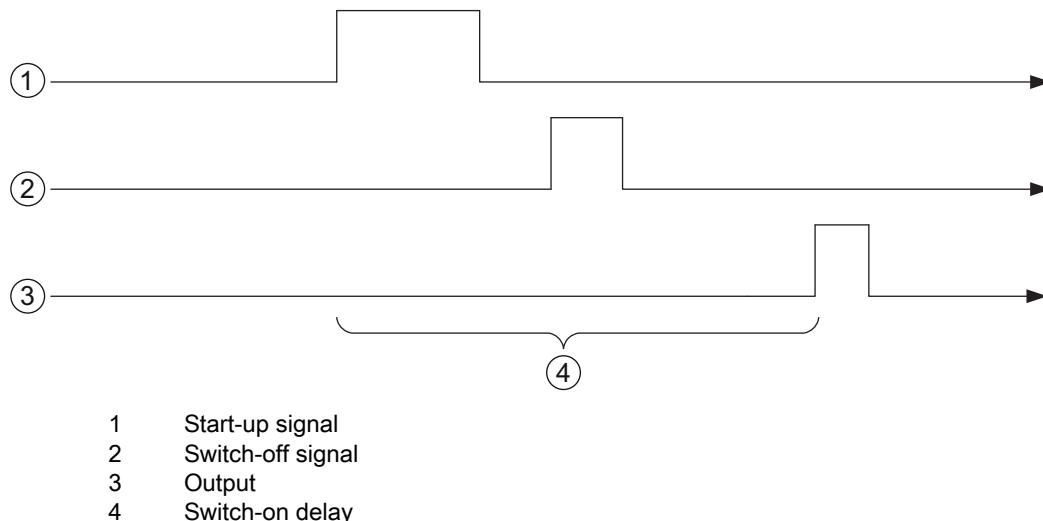


Figure 10.7: Example 3: Switch-on delay > 0 Switch-off signal prior to lapsing of the switch-on delay

If the output is again deactivated via the switch-off signal before the switch-on delay lapses, only a brief pulse appears at the output following the switch-on delay.

Comparison functionality

If, for example, the switching output is to be activated after four invalid read results, the comparative value is set to 4 and the switch-on function is configured to "invalid read result".

The comparison mode parameter can be used to define whether the switching output is activated only once in the case that the event counter and comparative value fulfill the "parity" condition, or if it is activated multiple times, on each successive event after the "parity" condition is met.

The event counter can always be reset with the I/O data in the I/O status and control module; furthermore, the reset mode parameter enables automatic resetting upon reaching the comparative value. Automatic resetting upon reaching the comparative value always results in the switching output being switched once independent of the comparison mode parameter.

The standard switch-off function at reading gate start is rather unsuited for this module since it causes the event counter to be reset on each reading gate start. Suitable as switch-off function for this example is the valid read result function; otherwise, all switch-off functions are deactivated.

10.13.2 Parameters for operating as an input

Debounce time

Parameter for setting the software debounce time for the switching input. The definition of a debounce time extends the signal transition time accordingly.

If the value of this parameter = 0, no debouncing takes place; otherwise, the configured value represents the duration in milliseconds for which the input signal must be present and stable.

Switch-on delay td_on

If the value of this parameter = 0, no switch-on delay occurs for the activation of the input function; otherwise, the configured value represents the time in milliseconds by which the input signal is delayed.

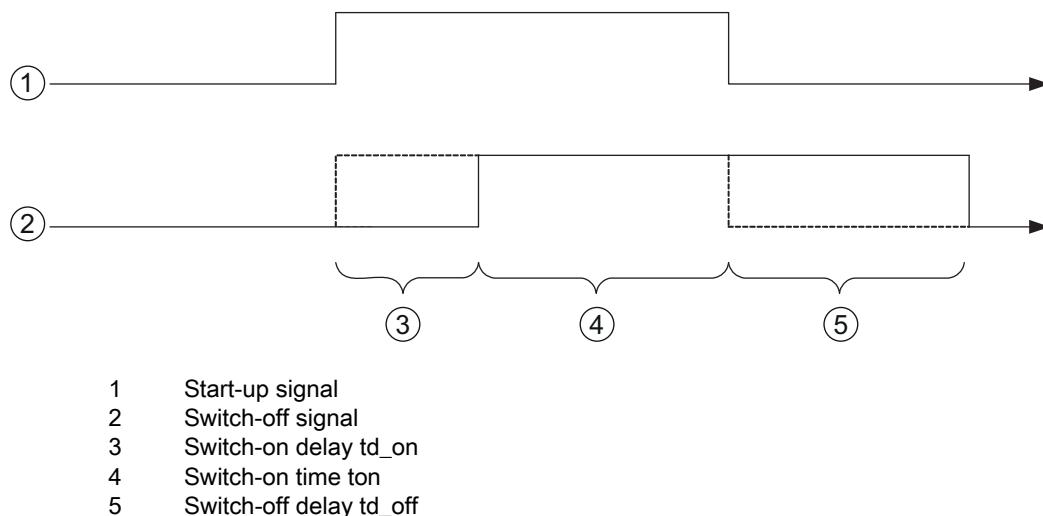


Figure 10.8: Switch-on delay in input mode

Switch-on time ton

This parameter specifies the min. activation duration for the selected input function in ms.

The actual activation duration is calculated from the switch-on time as well as the switch-off delay.

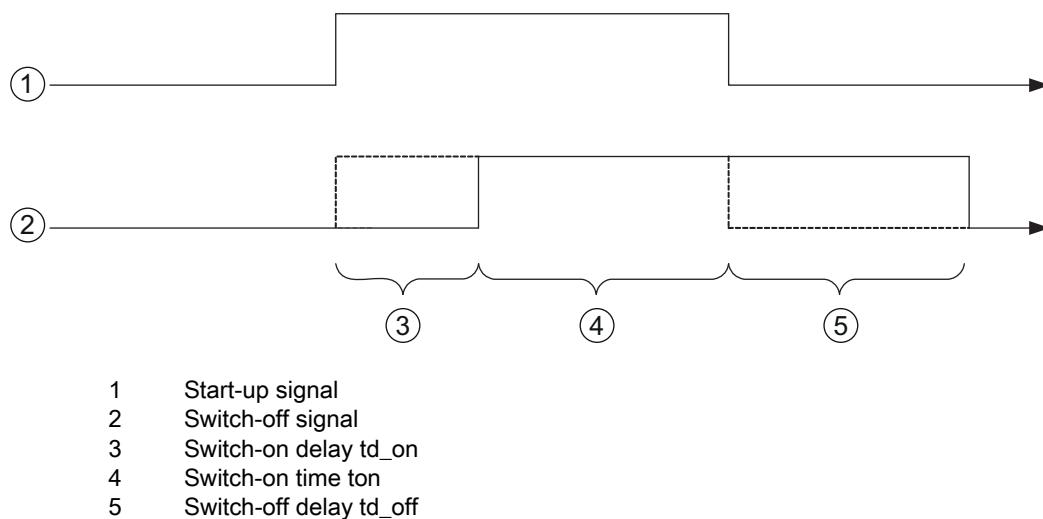


Figure 10.9: Switch-on time in input mode

Switch-off delay td_{off}

This parameter specifies the duration of the switch-off delay in ms.

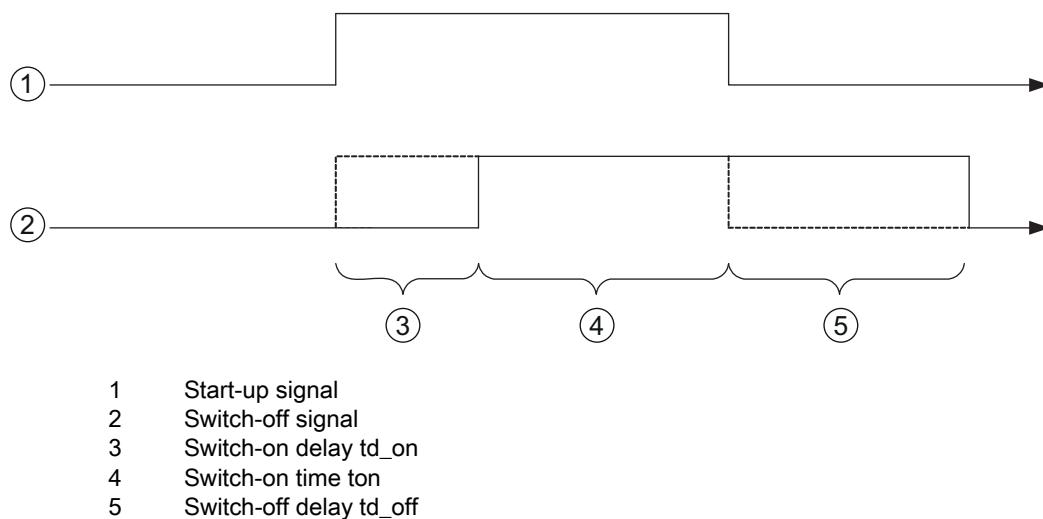


Figure 10.10: Switch-off delay in input mode

10.13.3 Switch-on and switch-off functions for operation as an output

The following options are available for switch-on and switch-off functions in the "output" operating mode:

Table 10.45: Switch-on/switch-off functions

Name	Value	Comment
No function	0	No functionality
Reading gate start	1	
Reading gate end	2	
Positive reference code comparison 1	3	
Negative reference code comparison 1	4	
Valid read result	5	
Invalid read result	6	
Device ready	7	The device is in a ready state.
Device not ready	8	The device is not yet ready (motor and laser are being activated).
Data transmission active	9	
Data transmission not active	10	
AutoControl good quality	13	
AutoControl bad quality	14	
Reflector detected	15	
Reflector not detected	16	
External event, pos. edge	17	In the PROFINET case, the external event is generated with the aid of module 74 – I/O status and control, see chapter 10.13.9 "Module 74 – SWIO status and control"
External event, neg. edge	18	See above
Device active	19	Decoding is currently being performed.
Device in standby mode	20	Motor and laser inactive.
No device error	21	No error detected.
Device error	22	Device is in an error state.
Positive reference code comparison 2	23	
Negative reference code comparison 2	24	

10.13.4 Input functions for operation as an input

Table 10.46: Input functions

Name	Value	Comment
No function	0	No functionality
Reading gate activation	1	
Reading gate deactivation only	2	
Reading gate activation only	3	
Reference bar code teach-in	4	
Start/Stop Autoconfiguration Mode	5	

10.13.5 Module 70 – Switching input/output SWIO1

PROFINET-IO module identifier

Module ID: 1070

Submodule ID: 1

Parameter

Table 10.47: Parameters for module 70 – Input/Output 1

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Function	This parameter defines whether I/O 1 functions as an input or as an output.	0.0	Bit	0: Input 1: Output	0	-
Mode of operation for configuration as an output						
Bias level	The parameter defines the DC bias level of the switching output and, thus, simultaneously whether the output is low-active (0) or high-active (1).	0.1	Bit	0: LOW (0V) 1: HIGH (+Ub)	0	-
Reserved	Free	0.2 ... 0.7				
Switch-on delay	With this parameter, the output pulse may be delayed by a set time period.	1	UNSIGNED16	0 ... 65535	0	ms
Switch-on time	The parameter defines the switch-on time period for the switching output. If the value is 0, the signal is static.	3	UNSIGNED16	0 ... 1300	400	ms
Switch-on function 1	This parameter specifies an event which can set the switching output.	5	UNSIGNED8	see table 10.45	0	-
Switch-on function 2	This parameter specifies an event which can set the switching output. Switch-on function 1 and switch-on function 2 are OR linked.	6	UNSIGNED8	see table 10.45	0	-
Switch-off function 1	This parameter specifies an event which can reset the switching output.	7	UNSIGNED8	see table 10.45	0	-
Switch-off function 2	This parameter specifies an event which can reset the switching output. Switch-off function 1 and switch-off function 2 are OR linked.	8	UNSIGNED8	see table 10.45	0	-
Comparative value (Event Counter)	If the number of activation events of the selected switch-on function reaches this comparative value, the switching output is activated. A deactivation event of the selected switch-off function resets the counter.	9	UNSIGNED16	0..65535	0	-
Comparison mode (Event Counter)	Specifies whether the switching output switches only on parity (once) or also in the event of greater or equal to (multiple times) after the comparative value is reached.	11	UNSIGNED8	0: SWOUT switches once 1: SWOUT switches several times	0	
Reset mode (Event Counter)	Specifies whether the counter (Event Counter) is reset only by the reset bit and the selected switch-off function, or if the counter should be automatically reset after the comparative value is reached.	12	UNSIGNED8	0: Reset bit and switch-off function 1: Comparative value reached	0	-
Mode of operation for configuration as an input						
Inversion	The parameter defines the logic of the incident signal. In case of an inversion, an external HIGH level is interpreted internally as a LOW level.	13.1	Bit	0: Normal 1: Inverted	0	-
Reserved	Free	13.2 ... 1 3.7				
Debounce time	The parameter defines a debounce time which is implemented in software.	14	UNSIGNED16	0 ... 1000	5	ms
Switch-on delay	The parameter influences the time behavior during switch-on.	16	UNSIGNED16	0 ... 65535	0	ms
Minimum switch-on time	The parameter defines a minimum time period before the signal is reset.	18	UNSIGNED16	0 ... 65535	0	ms
Switch-off delay	The parameter defines a time delay for the signal during switch-off.	20	UNSIGNED16	0 ... 65535	0	ms
Input function	The parameter specifies the function which is to be activated or deactivated by a status change in the signal.	22	UNSIGNED8	see table 10.46	1	-

Parameter length

23 bytes

Input data

None

Output data

None

Comment

The bias level also defines whether the output is low-active (0) or high-active (1).

Switching on an I/O configured as an output means switching to the active state; switching off, on the other hand, results in switching to the inactive or idle state.

10.13.6 Module 71 – Switching input/output SWIO2**PROFINET-IO module identifier**

Module ID: 1071

Submodule ID: 1

Parameter

Table 10.48: Parameters for module 71 – Input/Output 2

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Function	This parameter defines whether I/O 2 functions as an input or as an output.	0.0	Bit	0: Input 1: Output	1	-
Mode of operation for configuration as an output						
Bias level	The parameter defines the DC bias level of the switching output and, thus, simultaneously whether the output is low-active (0) or high-active (1).	0.1	Bit	0: LOW (0V) 1: HIGH (+Ub)	0	-
Reserved	Free	0.2 ... 0.7				
Switch-on delay	With this parameter, the output pulse may be delayed by a set time period.	1	UNSIGNED16	0 ... 65535	0	ms
Switch-on time	The parameter defines the switch-on time period for the switching output. If the value is 0, the signal is static.	3	UNSIGNED16	0 ... 1300	400	ms
Switch-on function 1	This parameter specifies an event which can set the switching output.	5	UNSIGNED8	see table 10.45	5	-
Switch-on function 2	This parameter specifies an event which can set the switching output. Switch-on function 1 and switch-on function 2 are OR linked.	6	UNSIGNED8	see table 10.45	0	-
Switch-off function 1	This parameter specifies an event which can reset the switching output.	7	UNSIGNED8	see table 10.45	0	-
Switch-off function 2	This parameter specifies an event which can reset the switching output. Switch-off function 1 and switch-off function 2 are OR linked.	8	UNSIGNED8	see table 10.45	0	-
Comparative value (Event Counter)	If the number of activation events of the selected switch-on function reaches this comparative value, the switching output is activated. A deactivation event of the selected switch-off function resets the counter.	9	UNSIGNED16	0..65535	0	-
Comparison mode (Event Counter)	Specifies whether the switching output switches only on parity (once) or also in the event of greater or equal to (multiple times) after the comparative value is reached.	11	UNSIGNED8	0: SWOUT switches once 1: SWOUT switches several times	0	-
Reset mode (Event Counter)	Specifies whether the counter (Event Counter) is reset only by the reset bit and the selected switch-off function, or if the counter should be automatically reset after the comparative value is reached.	12	UNSIGNED8	0: Reset bit and switch-off function 1: Comparative value reached	0	-

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Mode of operation for configuration as an input						
Inversion	The parameter defines the logic of the incident signal. In case of an inversion, an external HIGH level is interpreted internally as a LOW level.	13.1	Bit	0: Normal 1: Inverted	0	-
Reserved	Free	13.2 ... 1 3.7				
Debounce time	The parameter defines a debounce time which is implemented in software.	14	UNSIGNED16	0 ... 1000	5	ms
Switch-on delay	The parameter influences the time behavior during switch-on.	16	UNSIGNED16	0 ... 65535	0	ms
Minimum switch-on time	The parameter defines a minimum time period before the signal is reset.	18	UNSIGNED16	0 ... 65535	0	ms
Switch-off delay	The parameter defines a time delay for the signal during switch-off.	20	UNSIGNED16	0 ... 65535	0	ms
Input function	The parameter specifies the function which is to be activated or deactivated by a status change in the signal.		UNSIGNED8	see table 10.46	0	-

Parameter length

23 bytes

Input data

None

Output data

None

Comment

The bias level also defines whether the output is low-active (0) or high-active (1).

Switching on an I/O configured as an output means switching to the active state; switching off, on the other hand, results in switching to the inactive or idle state.

10.13.7 Module 72 – Switching input/output SWIO3**PROFINET-IO module identifier**

Module ID: 1072

Submodule ID: 1

Parameter

Table 10.49: Parameters for module 72 – Input/Output 3

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Function	This parameter defines whether I/O 3 functions as an input or as an output.	0.0	Bit	0: Input 1: Output	0	-
Mode of operation for configuration as an output						
Bias level	The parameter defines the DC bias level of the switching output and, thus, simultaneously whether the output is low-active (0) or high-active (1).	0.1	Bit	0: LOW (0V) 1: HIGH (+Ub)	0	-
Reserved	Free	0.2 ... 0.7				
Switch-on delay	With this parameter, the output pulse may be delayed by a set time period.	1	UNSIGNED16	0 ... 65535	0	ms
Switch-on time	The parameter defines the switch-on time period for the switching output. If the value is 0, the signal is static.	3	UNSIGNED16	0 ... 1300	400	ms
Switch-on function 1	This parameter specifies an event which can set the switching output.	5	UNSIGNED8	see table 10.45	0	-

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Switch-on function 2	This parameter specifies an event which can set the switching output. Switch-on function 1 and switch-on function 2 are OR linked.	6	UNSIGNED8	see table 10.45	0	-
Switch-off function 1	This parameter specifies an event which can reset the switching output.	7	UNSIGNED8	see table 10.45	0	-
Switch-off function 2	This parameter specifies an event which can reset the switching output. Switch-off function 1 and switch-off function 2 are OR linked.	8	UNSIGNED8	see table 10.45	0	-
Comparative value (Event Counter)	If the number of activation events of the selected switch-on function reaches this comparative value, the switching output is activated. A deactivation event of the selected switch-off function resets the counter.	9	UNSIGNED16	0..65535	0	-
Comparison mode (Event Counter)	Specifies whether the switching output switches only on parity (once) or also in the event of greater or equal to (multiple times) after the comparative value is reached.	11	UNSIGNED8	0: SWOUT switches once 1: SWOUT switches several times	0	-
Reset mode (Event Counter)	Specifies whether the counter (Event Counter) is reset only by the reset bit and the selected switch-off function, or if the counter should be automatically reset after the comparative value is reached.	12	UNSIGNED8	0: Reset bit and switch-off function 1: Comparative value reached	0	-

Mode of operation for configuration as an input

Inversion	The parameter defines the logic of the incident signal. In case of an inversion, an external HIGH level is interpreted internally as a LOW level.	13.1	Bit	0: Normal 1: Inverted	0	-
Reserved	Free	13.2 ... 13.7				
Debounce time	The parameter defines a debounce time which is implemented in software.	14	UNSIGNED16	0 ... 1000	5	ms
Switch-on delay	The parameter influences the time behavior during switch-on.	16	UNSIGNED16	0 ... 65535	0	ms
Minimum switch-on time	The parameter defines a minimum time period before the signal is reset.	18	UNSIGNED16	0 ... 65535	0	ms
Switch-off delay	The parameter defines a time delay for the signal during switch-off.	20	UNSIGNED16	0 ... 65535	0	ms
Input function	The parameter specifies the function which is to be activated or deactivated by a status change in the signal.	22	UNSIGNED8	see table 10.46	1	-

Parameter length

23 bytes

Input data

None

Output data

None

Comment

The bias level also defines whether the output is low-active (0) or high-active (1).

Switching on an I/O configured as an output means switching to the active state; switching off, on the other hand, results in switching to the inactive or idle state.

10.13.8 Module 73 – Switching input/output SWIO4**PROFINET-IO module identifier**

Module ID: 1073

Submodule ID: 1

Parameter

Table 10.50: Parameters for module 73 – Input/Output 4

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Function	This parameter defines whether I/O 4 functions as an input or as an output.	0.0	Bit	0: Input 1: Output	1	-
Mode of operation for configuration as an output						
Bias level	The parameter defines the DC bias level of the switching output and, thus, simultaneously whether the output is low-active (0) or high-active (1).	0.1	Bit	0: LOW (0V) 1: HIGH (+Ub)	0	-
Reserved	Free	0.2 ... 0.7				
Switch-on delay	With this parameter, the output pulse may be delayed by a set time period.	1	UNSIGNED16	0 ... 65535	0	ms
Switch-on time	The parameter defines the switch-on time period for the switching output. If the value is 0, the signal is static.	3	UNSIGNED16	0 ... 1300	400	ms
Switch-on function 1	This parameter specifies an event which can set the switching output.	5	UNSIGNED8	see chapter 10.13.3	6	-
Switch-on function 2	This parameter specifies an event which can set the switching output. Switch-on function 1 and switch-on function 2 are OR linked.	6	UNSIGNED8	see chapter 10.13.3	0	-
Switch-off function 1	This parameter specifies an event which can reset the switching output.	7	UNSIGNED8	see chapter 10.13.3	1	-
Switch-off function 2	This parameter specifies an event which can reset the switching output. Switch-off function 1 and switch-off function 2 are OR linked.	8	UNSIGNED8	see chapter 10.13.3	0	-
Comparative value (Event Counter)	If the number of activation events of the selected switch-on function reaches this comparative value, the switching output is activated. A deactivation event of the selected switch-off function resets the counter.	9	UNSIGNED16	0..65535	0	-
Comparison mode (Event Counter)	Specifies whether the switching output switches only on parity (once) or also in the event of greater or equal to (multiple times) after the comparative value is reached.	11	UNSIGNED8	0: SWOUT switches once 1: SWOUT switches several times	0	-
Reset mode (Event Counter)	Specifies whether the counter (Event Counter) is reset only by the reset bit and the selected switch-off function, or if the counter should be automatically reset after the comparative value is reached.	12	UNSIGNED8	0: Reset bit and switch-off function 1: Comparative value reached	0	-
Mode of operation for configuration as an input						
Inversion	The parameter defines the logic of the incident signal. In case of an inversion, an external HIGH level is interpreted internally as a LOW level.	13.1	Bit	0: Normal 1: Inverted	0	-
Reserved	Free	13.2 ... 13.7				
Debounce time	The parameter defines a debounce time which is implemented in software.	14	UNSIGNED16	0 ... 1000	5	ms
Switch-on delay	The parameter influences the time behavior during switch-on.	16	UNSIGNED16	0 ... 65535	0	ms

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Minimum switch-on time	The parameter defines a minimum time period before the signal is reset.	18	UNSIGNED16	0 ... 65535	0	ms
Switch-off delay	The parameter defines a time delay for the signal during switch-off.	20	UNSIGNED16	0 ... 65535	0	ms
Input function	The parameter specifies the function which is to be activated or deactivated by a status change in the signal.	22	UNSIGNED8	see chapter 10.13.3	0	-

Parameter length

23 bytes

Input data

None

Output data

None

Comment

The bias level also defines whether the output is low-active (0) or high-active (1).

Switching on an I/O configured as an output means switching to the active state; switching off, on the other hand, results in switching to the inactive or idle state.

10.13.9 Module 74 – SWIO status and control**PROFINET-IO module identifier**

Module ID: 1074

Submodule ID: 1

Description

Module for handling switching input and switching output signals.

Parameter

None

Input data

Table 10.51: Input data for module 74 Input/output status and control

Parameter	Description	Addr.	Data type	Value range	Initial value	Unit
State 1	Signal state of switching input or output 1	0.0	Bit	0..1	0	-
State 2	Signal state of switching input or output 2	0.1	Bit	0..1	0	-
State 3	Signal state of switching input or output 3	0.2	Bit	0..1	0	-
State 4	Signal state of switching input or output 4	0.3	Bit	0..1	0	-
Comparison state switching output 1 (Event Counter)	Indicates whether the event counter has exceeded the set comparative value. The bit is reset to the init. value by resetting the event counter.	1.0	Bit	0: Not exceeded 1: Exceeded	0	-
Switching output 1 Comparison state toggle bit (Event Counter)	If "SWOUT switches several times" was configured as comparison mode, this bit is toggled each time the event counter is exceeded. Indicates whether the event counter has reached the set comparative value.	1.1	Bit	0 -> 1: Event counter exceeded 1 -> 0: Event counter exceeded again	0	-
Comparison state switching output 2 (Event Counter)	Indicates whether the event counter has exceeded the set comparative value. The bit is reset to the init. value by resetting the event counter.	1.2	Bit	0: Not exceeded 1: Exceeded	0	-
Switching output 2 Comparison state toggle bit (Event Counter)	If "SWOUT switches several times" was configured as comparison mode, this bit is toggled each time the event counter is exceeded. Indicates whether the event counter has reached the set comparative value.	1.3	Bit	0 -> 1: Event counter exceeded 1 -> 0: Event counter exceeded again	0	-

Parameter	Description	Addr.	Data type	Value range	Initial value	Unit
Comparison state switching output 3 (Event Counter)	Indicates whether the event counter has exceeded the set comparative value. The bit is reset to the init. value by resetting the event counter.	1.4	Bit	0: Not exceeded 1: Exceeded	0	-
Switching output 3 Comparison state toggle bit (Event Counter)	If "SWOUT switches several times" was configured as comparison mode, this bit is toggled each time the event counter is exceeded. Indicates whether the event counter has reached the set comparative value.	1.5	Bit	0 -> 1: Event counter exceeded 1 -> 0: Event counter exceeded again	0	-
Comparison state switching output 4 (Event Counter)	Indicates whether the event counter has exceeded the set comparative value. The bit is reset to the init. value by resetting the event counter.	1.6	Bit	0: Not exceeded 1: Exceeded	0	-
Switching output 4 Comparison state toggle bit (Event Counter)	If "SWOUT switches several times" was configured as comparison mode, this bit is toggled each time the event counter is exceeded. Indicates whether the event counter has reached the set comparative value.	1.7	Bit	0 -> 1: Event counter exceeded 1 -> 0: Event counter exceeded again	0	-

Input data length:

2 bytes

Output data

Table 10.52: Output data for module 74 Input/output status and control

Output data	Description	Addr.	Data type	Value range	Initial value	Unit
Switching output 1	Sets the state of switching output 1	0.0	Bit	0: Switching output 0 1: Switching output 1	0	-
Switching output 2	Sets the state of switching output 2	0.1	Bit	0: Switching output 0 1: Switching output 1	0	-
Switching output 3	Sets the state of switching output 3	0.2	Bit	0: Switching output 0 1: Switching output 1	0	-
Switching output 4	Sets the state of switching output 4	0.3	Bit	0: Switching output 0 1: Switching output 1	0	-
Reset Event Counter Switching output 1	Sets the event counter of the activation function [AF] for switching output 1 back to zero.	0.4	Bit	0 -> 1: Perform reset 1 -> 0: No function	0	-
Reset Event Counter Switching output 2	Sets the event counter of the activation function [AF] for switching output 2 back to zero.	0.5	Bit	0 -> 1: Perform reset 1 -> 0: No function	0	-
Reset Event Counter Switching output 3	Sets the event counter of the activation function [AF] for switching output 3 back to zero.	0.6	Bit	0 -> 1: Perform reset 1 -> 0: No function	0	-
Reset Event Counter Switching output 4	Sets the event counter of the activation function [AF] for switching output 4 back to zero.	0.7	Bit	0 -> 1: Perform reset 1 -> 0: No function	0	-
	Reserved	1	Byte			

Output data length:

1 byte

10.14 Data output**10.14.1 Module 80 – Sorting****PROFINET-IO module identifier**

Module ID: 1080

Submodule ID: 1

Description

Module to support the sorting of the output data.

Parameter

Table 10.53: Parameters for module 80

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Sort criterion 1	Specifies the criterion according to which sorting takes place.	0.0 ... 0.6	BitArea	0: No sorting 1: Sorting according to scan number 2: Sorting according to position in the scanning beam 3: Sorting according to the oscillating mirror position 4: Sorting according to the decoding quality 5: Sorting according to the bar code length 6: Sorting according to the code type number 7: Sorting according to the decoding direction 8: Sorting according to the bar code content 9: Sorting according to time 10: Sorting according to scanning duration 11: Sorting according to the code list (in which the enabled bar codes are listed) 12: Sorting according to the identifier list	0	-
Sort direction 1	Specifies the sorting direction.	0.7	Bit	0: In ascending order 1: In descending order	0	-
Sort criterion 2	Specifies the criterion according to which sorting takes place.	1.0 ... 1.6	BitArea	See sorting criterion 1	0	-
Sort direction 2	Specifies the sorting direction.	1.7	Bit	See sorting direction 1	0	-
Sort criterion 3	Specifies the criterion according to which sorting takes place.	2.0 ... 2.6	BitArea	See sorting criterion 1	0	-
Sort direction 3	Specifies the sorting direction.	2.7	Bit	See sorting direction 1	0	-

Parameter length

3 bytes

Input data

None

Output data

None

10.15 Reference code comparison

The following modules can be used to support reference code comparison.

The reference code function compares the currently decoded read results with one or more stored comparison patterns. The function is split into two comparison units which can be configured independently of each other.

10.15.1 Module 81 – Reference code comparator 1

PROFINET-IO module identifier

Module ID: 1081

Submodule ID: 1

Description

The module defines the mode of operation of reference code comparator 1.

Parameter

Table 10.54: Parameters for module 81 – Reference code comparison

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Output function after reference bar code comparison	This parameter specifies the associated output linkage after a reference bar code comparison.	0	UNSIGNED8	0: No function 1: Comparison function 1 2: Comparison function 2 3: Comparison function 1 AND 2 4: Comparison function 1 OR 2	1	-
Linking logic for reference code output signal	This parameter specifies the linking logic for the reference code output signal.	1	UNSIGNED8	0: Length and type and ASCII 1: Length and (type or ASCII) 2: (Length or type) and ASCII 3: Length or type or ASCII	0	-
Output for reference code comparison	This parameter specifies whether a bar code length comparison should be carried out.	2	UNSIGNED8	0: Length ignored 1: Comparison o.k. if length not identical 2: Comparison o.k. if length identical.	2	-
Bar code type comparison	This parameter specifies whether a bar code type comparison should be carried out.	3	UNSIGNED8	0: Type ignored 1: Comparison o.k. if types not identical 2: Comparison o.k. if types identical.	2	-
Reference code ASCII comparison	This parameter specifies how the ASCII comparison should be carried out.	4	UNSIGNED8	0: No comparison 1: Bar code not identical to RC 2: Bar code identical to RC 3: Bar code greater than RC 4: Bar code greater than or equal to RC 5: Bar code less than RC 6: Bar code less than or equal to RC 7: RC1 less than or equal to bar code less than or equal to RC2 8: Bar code less than RC1 or bar code greater than RC2	2	-
Reference code comparison mode	This parameter determines how and which reference bar codes (RC) are to be used for the bar code comparison.	5	UNSIGNED8	0: Only the first RC is used for the comparison. 1: Only the second RC is used for the comparison. 2: RC 1 and 2 are used for the comparison. Both conditions for RC 1 and 2 must be satisfied for a positive comparison. 3: RC 1 and 2 are used for the comparison. One of the two conditions for reference bar codes 1 and 2 must be satisfied.	0	-
Bar code comparison mode	This parameter specifies which decoded bar codes are to be used for the reference bar code comparison.	6	UNSIGNED8	0: Only the first bar code is used for the comparison. 1: Only the second bar code is used for the comparison. 2: All bar codes are used for the comparison. All comparisons must be successful. 3: All bar codes are used for the comparison. One comparison must be successful.	3	-
Reference code completeness comparison	If this parameter is set, the basic condition for a positive reference code comparison is that all mandatory bar codes that are to be read within a reading gate were actually read. If this condition is not satisfied, no positive reference code comparison is achieved.	7.0	Bit	0: Completeness comparison switched off. 1: Completeness comparison switched on.	0	-

Parameter length

8byte

Input data

None

Output data

None

10.15.2 Module 82 – Reference code comparator 2**PROFINET-IO module identifier**

Module ID: 1082

Submodule ID: 1

Description

The module defines the mode of operation of reference code comparator 2.

Parameter

Table 10.55: Parameters for module 82 – Reference code comparison

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Output function after reference bar code comparison	This parameter specifies the associated output linkage after a reference bar code comparison.	0	UNSIGNED8	0: No function 1: Comparison function 1 2: Comparison function 2 3: Comparison function 1 AND 2 4: Comparison function 1 OR 2	1	-
Linking logic for reference code output signal	This parameter specifies the linking logic for the reference code output signal.	1	UNSIGNED8	0: Length and type and ASCII 1: Length and (type or ASCII) 2: (Length or type) and ASCII 3: Length or type or ASCII	0	-
Output for reference code comparison	This parameter specifies whether a bar code length comparison should be carried out.	2	UNSIGNED8	0: Length ignored 1: Comparison o.k. if length not identical 2: Comparison o.k. if length identical.	2	-
Bar code type comparison	This parameter specifies whether a bar code type comparison should be carried out.	3	UNSIGNED8	0: Type ignored 1: Comparison o.k. if types not identical 2: Comparison o.k. if types identical.	2	-
Reference code ASCII comparison	This parameter specifies how the ASCII comparison should be carried out.	4	UNSIGNED8	0: No comparison 1: Bar code not identical to RC 2: Bar code identical to RC 3: Bar code greater than RC 4: Bar code greater than or equal to RC 5: Bar code less than RC 6: Bar code less than or equal to RC 7: RC1 less than or equal to bar code less than or equal to RC2 8: Bar code less than RC1 or bar code greater than RC2	2	-
Reference code comparison mode	This parameter determines how and which reference bar codes (RC) are to be used for the bar code comparison.	5	UNSIGNED8	0: Only the first RC is used for the comparison. 1: Only the second RC is used for the comparison. 2: RC 1 and 2 are used for the comparison. Both conditions for RC 1 and 2 must be satisfied for a positive comparison. 3: RC 1 and 2 are used for the comparison. One of the two conditions for reference bar codes 1 and 2 must be satisfied.	0	-

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Bar code comparison mode	This parameter specifies which decoded bar codes are to be used for the reference bar code comparison.	6	UNSIGNED8	0: Only the first bar code is used for the comparison. 1: Only the second bar code is used for the comparison. 2: All bar codes are used for the comparison. All comparisons must be successful. 3: All bar codes are used for the comparison. One comparison must be successful.	3	-
Reference code completeness comparison	If this parameter is set, the basic condition for a positive reference code comparison is that all mandatory bar codes that are to be read within a reading gate were actually read. If this condition is not satisfied, no positive reference code comparison is achieved.	7.0	Bit	0: Completeness comparison switched off. 1: Completeness comparison switched on.	0	-

Parameter length

8byte

Input data

None

Output data

None

10.15.3 Module 83 – Reference code comparison pattern 1**PROFINET-IO module identifier**

Module ID: 1083

Submodule ID: 1

Description

This module can be used to define the 1st comparison pattern.

Parameter

Table 10.56: Parameters for module 83 – Reference code comparison pattern

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Code type comparison pattern 1	Specifies the type of the reference bar code.	0	UNSIGNED8	0: No code 1: 2/5 Interleaved 2: Code39 3: Code32 6: UPC, UPCE 7: EAN8, EAN13 8: Code128 10: EAN Addendum 11: Codabar 12: Code93 13: GS1 DataBar Omnidirectional 14: GS1 DataBar Limited 15: GS1 DataBar Omnidirectional Expanded	0	-

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Comparison pattern 1	Parameter string describing the content of the reference bar code. Note: You can also use the two placeholder characters that are stored in the "Wildcard character" and "Don't care character" parameters. If the string is empty, no comparison takes place. If the most recently stored character is the wildcard character, the comparison is only carried out up to the character before this wildcard character. In this way it is possible to switch off a comparison according to bar code length.	1	STRING 30 characters null terminated	1 ... 30 bytes of ASCII characters	\00	-

Parameter length

31 bytes

Input data

None

Output data

None

NOTE

The defined comparison pattern affects both reference code comparators (module 81 – reference code comparator 1 and module 82 – reference code comparator 2). ASCII characters that cannot be displayed (<0x20h) must not be used in the comparison pattern.

10.15.4 Module 84 – Reference code comparison pattern 2**PROFINET-IO module identifier**

Module ID: 1084

Submodule ID: 1

Description

This module can be used to define the 2nd comparison pattern.

Parameter

Table 10.57: Parameters for module 84 – Reference code comparison pattern

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Code type comparison pattern 2	Specifies the type of the reference bar code.	0	UNSIGNED8	0: No code 1: 2/5 Interleaved 2: Code39 3: Code32 6: UPC, UPCE 7: EAN8, EAN13 8: Code128 10: EAN Addendum 11: Codabar 12: Code93 13: GS1 DataBar Omnidirectional 14: GS1 DataBar Limited 15: GS1 DataBar Expanded	0	-

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Comparison pattern 2	Parameter string describing the content of the reference bar code. Note: You can also use the two placeholder characters that are stored in the "Wildcard character" and "Don't care character" parameters. If the string is empty, no comparison takes place. If the most recently stored character is the wildcard character, the comparison is only carried out up to the character before this wildcard character. In this way it is possible to switch off a comparison according to bar code length.	1	STRING 30 characters null terminated	1 ... 30 bytes of ASCII characters	\00	-

Parameter length

31 bytes

Input data

None

Output data

None

NOTE

The defined comparison pattern affects both reference code comparators (module 81 – reference code comparator 1 and module 82 – reference code comparator 2). ASCII characters that cannot be displayed (<0x20h) must not be used in the comparison pattern.

10.16 Special functions

10.16.1 Module 90 – Status and control

PROFINET-IO module identifier

Module ID: 1090

Submodule ID: 1

This module supplies various device status information to the PROFINET-IO master. Various functions of the device can be controlled via the master's output data.

Parameter

None

Input data

Table 10.58: Input data for module 90 – Status and control

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Reserved	Free	0.0	Bit		0	-
AutoRefl state	Signal state of the AutoRefl module	0.1	Bit	0: Reflector is recognized 1: Reflector is hidden	1	-
Auto Control result	Indicates whether the result of the Auto-Control function was a good or bad reading.	0.2	Bit	0: Quality good 1: Quality bad	0	-

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Reserved	Free	0.3	Bit		0	-
RefCode comparison state 1	The signal indicates whether the decoded bar code corresponds to the reference code with regard to the comparison criteria as defined in the comparison function 1. If it matches, the value 1 is output.	0.4 ... 0.5	Bit	0: Not equal 1: Equal 2: Unknown	2	-
RefCode comparison state 2	The signal indicates whether the decoded bar code corresponds to the reference code with regard to the comparison criteria as defined in the comparison function 2. If it matches, the value 1 is output.	0.6 ... 0.7	Bit	0: Not equal 1: Equal 2: Unknown	2	-

Input data length:

1 byte

Output data

None

10.16.2 Module 91 – AutoReflAct (automatic reflector activation)**PROFINET-IO module identifier**

Module ID: 1091

Submodule ID: 1

Description

The module defines the mode of operation of the diffuse laser sensor for controlling the reading gate.

The AutoReflAct function uses the scanning beam to simulate a photoelectric sensor and thus permits an activation without additional sensory mechanism. This is achieved by directing the scanner with reduced scanning beam towards a reflector mounted behind the conveyor path. As long as the scanner is targeted at the reflector, the reading gate remains closed. If, however, the reflector is blocked by an object such as a container with a bar code label, the scanner activates the read procedure, and the label on the container is read. When the path from the scanner to the reflector has cleared, the read procedure has completed and the scanning beam is reduced and again directed onto the reflector. The reading gate is closed.

Parameter

Table 10.59: Parameters for module 91 – AutoreflAct

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Mode	This parameter activates the function of the diffuse laser sensor. If "Autom. reading gate control" is set as the parameter value, the BCL activates the reading gate automatically if the reflector is obscured.	0	UNSIGNED8	0: Normal - AutoreflAct switched off. 1: Auto - AutoreflAct activated. Autom. reading gate control. 2: Manual - AutoreflAct activated. No reading gate control, signaling only.	0	-
Debouncing	The parameter defines the debounce time in scans for the reflector detection. With a motor speed of 1000, 1 scan corresponds to a debounce time of 1 ms.	1	UNSIGNED8	1 ... 16	5	-

Parameter length

2 bytes

Input data

None

Output data

None

10.16.3 Module 92 – AutoControl

PROFINET-IO module identifier

Module ID: 1092

Submodule ID: 1

Description

The module defines the mode of operation of the function AutoControl. The function monitors the quality of the decoded bar codes and compares these with a limit value. If the limit is reached, a status is set.

Parameter

Table 10.60: Parameters for module 92 – AutoControl

Parameter	Description	Addr.	Data type	Value range	Default	Unit
AutoControl enable	This parameter can be used to activate or deactivate the AutoControl function.	0	UNSIGNED8	0: Deactivated 1: Activated	0	-
Limit for reading quality	The parameter defines a threshold for the reading quality.	1	UNSIGNED8	0 ... 100	50	%
Sensitivity	With this parameter the sensitivity towards changes in the reading ability can be specified. The higher the value, the less influence a change of reading ability has.	2	UNSIGNED8	0 ... 255	0	-

Parameter length

3 bytes

Input data

Table 10.61: Input data for module 92 – AutoControl

Input data	Description	Addr.	Data type	Value range	Initial value	Unit
Scan quality	Represents the current average value of the scan quality (at the time of the last reading gate).	0	UNSIGNED8	0 ... 100	0	-

Input data

1 byte

Output data

None

NOTE



By means of the AutoControl function, it is possible to detect bar codes of decreasing quality and thus take appropriate measures before the label is no longer legible. With activated AutoControl function, note that the "Processing end at end of label" parameter in the CRT module should be set to allow for a better assessment of the bar code quality (see chapter 10.7.3 "Module 7 – Code reconstruction technology").

10.16.4 Module 94 – universal parameter module 1

PROFINET-IO module identifier

Module ID 1094

Submodule ID 1

Description

The module offers the possibility to optionally configure max. 3 parameters from the parameter address space of the device.

Parameter

Table 10.62: Parameter overview module 94 – universal parameter module 1

Parameter	Description	Rel. addr.	Data type	Value range	Default	Unit
Parameter address 1	Address of the parameter	0	UNSIGNED16	0 ... 9999	0	-
Parameter length 1	User data length of the parameter	2	UNSIGNED8	0 ... 32	0	-
Parameter data 1	Parameter data	3	UNSIGNED8[32]	-	-	-
Parameter address 2	Address of the parameter	35	UNSIGNED16	0 ... 9999	0	-
Parameter length 2	User data length of the parameter	37	UNSIGNED8	0 ... 32	0	-
Parameter data 2	Parameter data	38	UNSIGNED8[32]	-	-	-
Parameter address 3	Address of the parameter	70	UNSIGNED16	0 ... 9999	0	-
Parameter length 3	User data length of the parameter	72	UNSIGNED8	0 ... 32	0	-
Parameter data 3	Parameter data	73	UNSIGNED8[32]	-	-	-
Parameter length		105	Byte			

Input data

None

Output data

None

NOTE



This module can be used to transfer three arbitrary start-up parameters to the device. The user himself is responsible for ensuring that the corresponding parameter data and addresses match the used device type (cf. corresponding device documentation). Moreover, he must ensure than none of the parameters used by the other PROFINET modules are used in this universal module. This could have unforeseeable consequences. Each specifiable parameter consists of an address, a length of the transferred user data bytes starting at this address and max. 32 usable parameter bytes. Address = 0 or length = 0 means that the parameter is not activated in the device. Unlike all other modules with start-up parameters, the parameters from this module are NOT reset to default values each time a new connection is established. Example: Setting the optimization for low bar heights with a BCL 548/
Address = 0027
Parameter length = 1
Parameter user data = 0 (CoreOff)

10.16.5 Module 95 – universal parameter module 2

PROFINET-IO module identifier

Module ID 1095

Submodule ID 1

Description

The module offers the possibility to optionally configure max. 3 parameters from the parameter address space of the device.

Parameter

Table 10.63: Parameter overview module 95 - universal parameter module 2

Parameter	Description	Rel. addr.	Data type	Value range	Default	Unit
Parameter address 1	Address of the parameter	0	UNSIGNED16	0 ... 9999	0	-
Parameter length 1	User data length of the parameter	2	UNSIGNED8	0 ... 32	0	-
Parameter data 1	Parameter data	3	UNSIGNED8[32]	-	-	-
Parameter address 2	Address of the parameter	35	UNSIGNED16	0 ... 9999	0	-
Parameter length 2	User data length of the parameter	37	UNSIGNED8	0 ... 32	0	-
Parameter data 2	Parameter data	38	UNSIGNED8[32]	-	-	-
Parameter address 3	Address of the parameter	70	UNSIGNED16	0 ... 9999	0	-
Parameter length 3	User data length of the parameter	72	UNSIGNED8	0 ... 32	0	-
Parameter data 3	Parameter data	73	UNSIGNED8[32]	-	-	-
Parameter length			105	Byte		

Input data

None

Output data

None

NOTE

This module can be used to transfer three arbitrary start-up parameters to the device. The user himself is responsible for ensuring that the corresponding parameter data and addresses match the used device type (cf. corresponding device documentation). Moreover, he must ensure than none of the parameters used by the other PROFINET modules are used in this universal module. This could have unforeseeable consequences. Each specifiable parameter consists of an address, a length of the transferred user data bytes starting at this address and max. 32 usable parameter bytes. Address = 0 or length = 0 means that the parameter is not activated in the device. Unlike all other modules with start-up parameters, the parameters from this module are NOT reset to default values each time a new connection is established. Example:
Setting the optimization for low bar heights with a BCL 548/
Address = 0027
Parameter length = 1
Parameter user data = 0 (CoreOff)

10.16.6 Module 96 – universal parameter module 3**PROFINET-IO module identifier**

Module ID 1096

Submodule ID 1

Description

The module offers the possibility to optionally configure max. 3 parameters from the parameter address space of the device.

Parameter

Table 10.64: Parameter overview module 96 - universal parameter module 3

Parameter	Description	Rel. addr.	Data type	Value range	Default	Unit
Parameter address 1	Address of the parameter	0	UNSIGNED16	0 ... 9999	0	-
Parameter length 1	User data length of the parameter	2	UNSIGNED8	0 ... 32	0	-
Parameter data 1	Parameter data	3	UNSIGNED8[32]	-	-	-
Parameter address 2	Address of the parameter	35	UNSIGNED16	0 ... 9999	0	-
Parameter length 2	User data length of the parameter	37	UNSIGNED8	0 ... 32	0	-
Parameter data 2	Parameter data	38	UNSIGNED8[32]	-	-	-
Parameter address 3	Address of the parameter	70	UNSIGNED16	0 ... 9999	0	-
Parameter length 3	User data length of the parameter	72	UNSIGNED8	0 ... 32	0	-
Parameter data 3	Parameter data	73	UNSIGNED8[32]	-	-	-
Parameter length				105	Byte	

Input data

None

Output data

None

NOTE

This module can be used to transfer three arbitrary start-up parameters to the device. The user himself is responsible for ensuring that the corresponding parameter data and addresses match the used device type (cf. corresponding device documentation).

Moreover, he must ensure than none of the parameters used by the other PROFINET modules are used in this universal module. This could have unforeseeable consequences.

Each specifiable parameter consists of an address, a length of the transferred user data bytes starting at this address and max. 32 usable parameter bytes.

Address = 0 or length = 0 means that the parameter is not activated in the device.

Unlike all other modules with start-up parameters, the parameters from this module are NOT reset to default values each time a new connection is established.

Example:

Setting the optimization for low bar heights with a BCL 548/*red*

Address = 0027

Parameter length = 1

Parameter user data = 0 (CoreOff)

10.16.7 Module 100 – multiScan master**PROFINET-IO module identifier**

Module ID: 1100

Submodule ID: 1

Description

The module defines the mode of operation of the function multiScan master.

The multiScan master performs the control function in the multiScan network. It starts the decoding, accepts the decoding results of the assigned slave (node 1 ... node 32) and links these to the final decoding result. This result is then passed on to the host via the host interface. The complete multiScan unit behaves as a logical bar code reader relative to the control.

Parameter

Table 10.65: Parameters for module 100 – multiScan master

Parameter	Description	Addr.	Data type	Value range	Default	Unit
Reserved		0.7	Bit	TBD	0	-
Reserved		0.0 to 1.7	Bit	TBD	0	-
Slave UDP port #	Port number for the UDP communication with the slave participants	2	Unsigned16	0-0xffff	10003	-

Parameter	Description	Addr.	Data type	Value range	Default	Unit
multiScan slave node 1	IP address node 1	4	IP_ADDRESS		0.0.0.0	-
multiScan slave node 2	IP address node 2	19	IP_ADDRESS		0.0.0.0	-
multiScan slave node 3	IP address node 3	34	IP_ADDRESS		0.0.0.0	-
multiScan slave node 4	IP address node 4	49	IP_ADDRESS		0.0.0.0	-
multiScan slave node 5	IP address node 5	64	IP_ADDRESS		0.0.0.0	-
multiScan slave node 6	IP address node 6	79	IP_ADDRESS		0.0.0.0	-
multiScan slave node 7	IP address node 7	94	IP_ADDRESS		0.0.0.0	-
multiScan slave node 8	IP address node 8	109	IP_ADDRESS		0.0.0.0	-
multiScan slave node 9	IP address node 9	124	IP_ADDRESS		0.0.0.0	-
multiScan slave node 10	IP address node 10	139	IP_ADDRESS		0.0.0.0	-

Parameter length

154 bytes

Input data

Table 10.66: Input data for module 100

Input data	Description	Addr.	Data type	Value range	Default	Unit
MoE network status ^{a)}	General status of the MoE network	0	Unsigned8	0-0xff	0	-
Slave status ^{b)}	Status of slave participants 1-8	1	Unsigned8	Bit-coded per slave	0	-
	Status of slave participants 9-16	2	Unsigned8	Bit-coded per slave	0	-
	Status of slave participants 17-23	3	Unsigned8	Bit-coded per slave	0	-
	Status of slave participants 24-32	4	Unsigned8	Bit-coded per slave	0	-

- a) Signals the status of the complete network. States: 0x00 initial status, not ready; 0x01 network ready; additional states TBD. The "Network ready" network status is only signaled if all configured slaves are ready, see "Slave status".
- b) For each slave participant, one bit signals the network status of the respective slave. Value 0 means "Not ready"; value 1 represents the "Ready" status.

Output data

None

Output data length

0 byte

NOTE

The presence of this module activates the multiScan master mode and sets all necessary master communication parameters. In this case, the master IP address corresponds to the PROFINET-IO device, i.e., its own IP address.

Data format of the IP_ADDRESS:

The IP address is entered as a string in the usual IP-V4 notation, e.g., 192.168.0.1. In addition, it is permissible to enter a 0 for the default setting.

IP_ADDRESS = 0 means that the node is deactivated, i.e., the entry is ignored. The slave enable parameter is automatically set according to the IP address setting during the PNIO configuration phase.

10.16.8 Module 101 – multiScan slave addresses 1**PROFINET-IO module identifier**

Module ID: 1101

Submodule ID: 1

Description

Additional module for the parameterization of the slave addresses for slaves 11-20.

Parameter

Table 10.67: Parameters for module 101 – multiScan slave addresses 1

Parameter	Description	Addr.	Data type	Value range	Default	Unit
multiScan slave node 11	IP address node 11	0	IP_ADDRESS		0.0.0.0	-
multiScan slave node 12	IP address node 12	15	IP_ADDRESS		0.0.0.0	-
multiScan slave node 13	IP address node 13	30	IP_ADDRESS		0.0.0.0	-
multiScan slave node 14	IP address node 14	45	IP_ADDRESS		0.0.0.0	-
multiScan slave node 15	IP address node 15	60	IP_ADDRESS		0.0.0.0	-
multiScan slave node 16	IP address node 16	75	IP_ADDRESS		0.0.0.0	-
multiScan slave node 17	IP address node 17	90	IP_ADDRESS		0.0.0.0	-
multiScan slave node 18	IP address node 18	105	IP_ADDRESS		0.0.0.0	-
multiScan slave node 19	IP address node 19	120	IP_ADDRESS		0.0.0.0	-
multiScan slave node 20	IP address node 20	135	IP_ADDRESS		0.0.0.0	-

Parameter length

150 bytes

Input data

None

Output data

None

Data format of the IP_ADDRESS:

The IP address is entered as a string in the usual IP-V4 notation, e.g., 192.168.0.1. In addition, it is permissible to enter a 0 for the default setting.

IP_ADDRESS = 0 means that the node is deactivated, i.e., the entry is ignored. The slave enable parameter is automatically set according to the IP address setting during the PNIO configuration phase.

10.16.9 Module 102 – multiScan slave addresses 2**PROFINET-IO module identifier**

Module ID: 1102

Submodule ID: 1

Description

Additional module for the parameterization of the slave addresses for slaves 21-32.

Parameter

Parameter analogous to module 101.

Parameter length

180 bytes

Input data

None

Output data

None


10.17 Example configuration: Indirect activation via the PLC

10.17.1 Task

- Reading of a 10-digit code in 2/5 Interleaved format
- Activation of the device via the PLC

Code sample

Code 2/5 Interleaved 10 digits with check digit

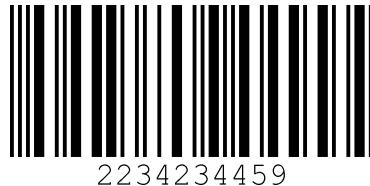

10.17.2 Procedure

Hardware, connections

The following connections must have been established:

- Voltage supply (PWR)
- PROFINET-IO (HOST/BUS) In

Required modules

Include the following modules in your project:

- Module 1010 – Activations
- Module 1023 – Decoding result 12 bytes

Parameter settings

No parameters need to be set separately. The standard parameter set provides all required functions.

Flow charts

Table 10.68: Successful reading

PLC	Photoelectric sensor	BCL	Description
Time M 1010 bit 0.0 0 -> 1			The photoelectric sensor is interrupted.
			Activation bit 0.0 is set to 1. This activates the reading gate.
	M 1023 bit 0.1 from 0 -> 1 M 1023 bit 0.2 = 0 M 1023 byte 1 = data length M 1023 byte 2 to 12: result		The bar codes that have been read are processed and transmitted by module 1023: Reading concluded bit 0.1 = 1 and bar code not decoded bit 0.2 = 0. The data length is entered in byte 1, in this case 9 decimal. The decoding result is transmitted in the following 11 bytes.
Internal processing	M 1010 bit 0.0 1 -> 0		Internal data processing. Activation bit 0.0 is reset to 0.

Table 10.69: Unsuccessful reading

PLC	Photoelectric sensor	BCL	Description
Time	Photoelectric sensor from 0 - > 1 M 1010 bit 0.0 0 -> 1 Photoelectric sensor from 1 - > 0 M 1010 bit 0.0 0 -> 1	M 1023 bit 0.1 from 0 -> 1 M 1023 bit 0.2 from 0 -> 1 M 1023 byte 1 = data length M 1023 byte 2 = result	The photoelectric sensor is interrupted.
			Activation bit 0.0 is reset to 1.
			The reading gate elapses without read result.
			Activation bit 0.0 is reset to 0.
			The module decoding state signals: Reading concluded bit 0.1 = 1 and bar code not decoded bit 0.2 = 1.
			The data length 1 is entered in byte 1. The result hex 3F (? = no read) is transmitted.
	Internal processing		Internal processing of the data and signaling of the non-reading.


10.18 Example configuration: Direct activation via the switching input

10.18.1 Task

- Module 1010 – Activations
- Module 1023 – Decoding result 12 bytes

Code sample

Code 2/5 Interleaved 12 digits with check digit

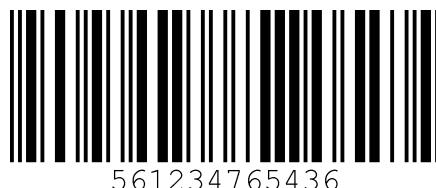

10.18.2 Procedure

Hardware, connections

The following connections must have been established:

- Voltage supply (PWR)
- PROFINET-IO (HOST/BUS) In
- Photoelectric sensor at SWIO1

Required modules

Include the following modules in your project:

- Module 1023 – Decoding result 12 bytes

Parameter settings of the device parameters

Table 10.70: Device parameters for example configuration 2

Byte	Description	Default value	Change value to:
1	Code type 1	0	01: 2/5 Interleaved
4	Number of digits 3	0	12

Flow charts

Table 10.71: Successful reading

PLC	Photoelectric sensor	BCL	Description
Time	Photoelectric sensor from 0 -> 1 M 1023 bit 0.1 from 0 -> 1 M 1023 bit 0.2 = 0 M 1023 byte 1 = data length M 1023 byte 2 to 12 = result		The photoelectric sensor is interrupted. The signal of the switching output of the photoelectric sensor is present at the switching input of the device and activates the scanner.
			The bar codes that have been read are processed and transmitted by module 1023: Reading concluded bit 0.1 = 1 and bar code not decoded bit 0.2 = 0. The data length is entered in byte 1, in this case 11 decimal. The decoding result is transmitted in the following 11 bytes.
Internal processing	Photoelectric sensor from 1 -> 0		Internal data processing.
			The beam of the photoelectric sensor is cleared and sets the switching input of the device to 0. This deactivates the scanner.

Table 10.72: Unsuccessful reading

PLC	Photoelectric sensor	BCL	Description
Time	Photoelectric sensor from 0 -> 1		The photoelectric sensor is interrupted. The signal of the switching output of the photoelectric sensor is present at the switching input of the device and activates the scanner.
	Photoelectric sensor from 1 -> 0		The beam of the photoelectric sensor is cleared before a read result is present. The photoelectric sensor sets the switching input of the device to 0 and deactivates the scanner.
	M 1023 bit 0.1 from 0 -> 1 M 1023 bit 0.2 from 0 -> 1 M 1023 byte 1 = 1 M 1023 byte 2 = result		The module decoding state signals: Reading concluded bit 0.1 = 1 and bar code not decoded bit 0.2 = 1. The data length 1 is entered in byte 1. The result hex 3F (? = no read) is transmitted.
Internal processing			Internal data processing.

11 Online commands

11.1 Overview of commands and parameters

Online commands can be used to send commands directly to the device for control and configuration.

For this purpose, the device must be connected to a host- or service computer via the interface. The commands described can be sent either via the host or the service interface.

Online commands

With the commands, you can:

- control/decode.
- read/write/copy parameters.
- carry out an automatic configuration.
- teach-in/set reference codes.
- call up error messages.
- call up statistical device information.
- carry out a software reset in order to reinitialize the device.

Syntax

Online commands consist of one or two ASCII characters followed by command parameters.

No separation characters may be entered between the command and the command parameter(s). Both small and capitalized letters can be used.

Example:

Command 'CA': autoConfig function
 Parameter '+': Activation
 Transmitted is: 'CA+'

Notation

Commands, command parameters and returned data are enclosed between single quotation marks '' in the text of this manual.

Most "online" commands are acknowledged by the device and any requested data returned. For commands that are not acknowledged, command execution can be observed or monitored directly on the device.

11.1.1 General online commands

Software version number

Command	'V'
Description	Requests device version information
Parameters	No
Acknowledgment	'BCL 500i SM 100 V 1.3.8 2008-02-15' The first line contains the device type, followed by the device version number and version date. (The data which is actually displayed may vary from the values given here.)

NOTE



This command returns the major release number of the software packet. This major release number also appears on the display during start-up.
 This command can be used to check whether the connected host or service computer is properly connected and configured. If you do not receive an acknowledgment, please check interface connections, protocol and service switches.

Software reset

Command	'H'
Description	Carries out a software reset. The device is restarted and reinitialized, leaving it in the same state as when the supply voltage is switched on.
Parameters	No
Acknowledgment	'S' (start character)

Code recognition

Command	'CC'
Description	Detects an unknown bar code and outputs number of digits, code type, and code information to the interface, without storing the bar code in the parameter memory.
Parameters	No
Acknowledgment	<p>'xx yy zzzzzz'</p> <p>xx: Number of digits of the read code yy: Code type of the read code '01' 2/5 Interleaved '02' Code 39 '03' Code 32 '06' UPC (A, E) '07' EAN '08' Code 128, EAN 128 '10' EAN Addendum '11' Codabar '12' Code 93 '13' GS1 Databar Omnidirectional '14' GS1 Databar Limited '15' GS1 Databar Expanded zzzzzz: Contents of the decoded label. A – appears if the label was not correctly read.</p>

autoConfig

Command	'CA'
Description	Activates or deactivates the 'autoConfig' function. Certain label reading parameters are programmed automatically in the setup by the labels which the device reads while the autoConfig function is active.
Parameters	<p>'+' Activates 'autoConfig' '/' Rejects the last code read '-' Deactivates 'autoConfig' and stores the decoded data in the current parameter set</p>
Acknowledgment	<p>'CSx'</p> <p>x Status '0' Valid 'CA' command '1' Invalid command '2' autoConfig could not be activated '3' autoConfig could not be deactivated '4' Result could not be deleted</p>
Description	<p>'xx yy zzzzzz'</p> <p>xx Number of digits of the read code yy Code type of the read code '01' 2/5 Interleaved '02' Code 39 '03' Code 32 '06' UPC (A, E) '07' EAN '08' Code 128, EAN 128 '10' EAN Addendum '11' Codabar '12' Code 93 '13' GS1 Databar Omnidirectional '14' GS1 Databar Limited '15' GS1 Databar Expanded zzzzzz: Contents of the decoded label. A – appears if the label was not correctly read.</p>

Alignment mode

Command	'JP'
Description	This command simplifies mounting and alignment of the device. After activating the function with JP+ , the device continuously supplies status information to the serial interfaces. With this online command, the scanner is set to terminate the decoding after 100 successfully decoded labels and output the status information. Subsequently, the read process is reactivated automatically. In addition to the output of the status information, the laser beam is used to display the reading quality. Depending on how many read results could be extracted, the duration of the laser's "OFF" time increases. If the reading quality is high, the laser beam flashes in brief, regular intervals. The worse the decoder decodes, the longer the pauses become during which the laser is switched off. The flashing intervals become more and more irregular because the laser may, in total, be active for longer to extract more labels. The duration of the pauses has been stepped in such a way that they can be distinguished by the eye.
Parameters	'+' Starts the adjustment mode. '-' Ends the adjustment mode.
Acknowledgment	'yyy_zzzzzz' yyy: Read quality in %. A high process availability is ensured at read qualities > 75 %. zzzzzz: Bar code information.

Manual definition of the reference code

Command	'RS'
Description	This command can be used to define a new reference code in the device by means of direct input via the serial interface. The data is saved in the parameter set according to your input under reference code 1 through 2 and stored in the working buffer for direct further processing.
Parameters	'RSyvxzxxxxxxxx' y, v, x and z are placeholders (variables) for the actual input. y Defined reference code no. '1' (code 1) '2' (code 2) v Storage location for reference code: '0' RAM+EEPROM, '3' RAM only xx Defined code type (see command 'CA') z Defined code information (1 ... 63 characters)
Acknowledgment	'RSx' x Status '0' Valid 'Rx' command '1' Invalid command '2' Insufficient memory for reference code '3' Reference code has not been saved '4' Reference code invalid
Example	Entry = 'RS130678654331' (Code 1 (1), RAM only (3), UPC (06), code information)

Reference code teach-in

Command	'RT'
Description	This command enables a reference code to be defined quickly by reading an example label.
Parameters	'RTy' y Function '1' Defines reference code 1 '2' Defines reference code 2 '+' Activates the definition of reference code 1 up to the value of Parameter no_of_labels '-' Ends the teach event

Command	'RT'
Acknowledgment	The device first responds with the command 'RS' and corresponding status (see command RS). After a bar code has been read, it sends the result in the following format: 'RCyxxxxxxxx' y, v, x and z are placeholders (variables) for the actual input. y Defined reference code no. '1' (code 1) '2' (code 2) v Storage location for reference code '0' RAM+EEPROM, '3' RAM only xx Defined code type (see command 'CA') z Defined code information (1 ... 63 characters)

NOTE

With this function, only code types are recognized that are identified using the 'autoConfig' function or which were set in the set-up.

⚠ After each reading via an 'RTy' command, explicitly switch off the function again since failure to do so will interfere with other commands as well as prevent execution of a new 'RTx' command.

Reading a reference code

Command	'RR'
Description	The command reads out the reference code defined in the device. If no parameters are specified, all defined codes are output.
Parameters	<Reference code number> '1' ... '2' value range of reference codes 1 to 2
Acknowledgment	If no reference codes are defined, the device responds with the 'RS' command and corresponding status (see command RS). For valid codes, the output corresponds to the following format: 'RCyxxxxxxxx' y, v, x and z are placeholders (variables) for the actual input. y Defined reference code no. '1' (code 1) '2' (code 2) v Storage location for reference code '0' RAM+EEPROM, '3' RAM only xx Defined code type (see command 'CA') z Defined code information (1 ... 63 characters)

11.1.2 Online commands for system control**Activating sensor input**

Command	'+'
Description	The command activates decoding. This command is used to activate the reading gate. It remains active until it is deactivated by one of the following criteria: <ul style="list-style-type: none">• Deactivation by a manual command• Deactivation by a switching input• Deactivation upon reaching the specified read quality (equal scans)• Deactivation by timeout• Deactivation upon reaching a preset number of scans without information.
Parameters	No
Acknowledgment	None

Deactivating sensor input

Command	'-'
Description	The command activates decoding. This command can be used to deactivate the reading gate. Following deactivation, the read result is output. Because the reading gate was manually deactivated and, thus, no GoodRead criterion was met, a NoRead is output.
Parameters	No
Acknowledgment	None

System boot-up

Command	'SON'
Description	System boot-up: changes the device from standby mode back to operating mode. The polygon wheel motor is started, the device works as usual.
Parameters	No
Acknowledgment	'S' (start character)

System standby

Command	'SOS'
Description	System standby: puts the device in standby mode. The device cannot be triggered, and the polygon wheel motor is stopped.
Parameters	No
Acknowledgment	None

11.1.3 Online commands for configuring the switching inputs/outputs**Activate switching output**

Command	'OA'
Description	The switching outputs 1 - 4 can be activated with this command. The respective port must have been configured as a switching output. The logic state is output, i.e., an inverted logic is taken into account (e.g., inverted logic and a state of High corresponds to a voltage of 0V at the switching output).
Parameters	'OA<a>' <a> Selected switching output [1..4], unit [dimensionless]
Acknowledgment	None

Query the state of the switching outputs

Command	'OA'
Description	This command may be used to query the states of the switching inputs and outputs that are configured as a switching output and that have been set via commands. The logic state is output, i.e., an inverted logic is taken into account (e.g., inverted logic and a state of High corresponds to a voltage of 0V at the switching output).
Parameters	'OA'
Acknowledgment	'OA S1=<a>;S2=<a>[;S3=<a>][;S4=<a>]' <a> State of the switching outputs '0' Low '1' High 'I' Configuration as switching input 'P' Passive configuration

Set the state of the switching outputs

Command	'OA'
Description	This command is used to set the states of the switching inputs/outputs that are configured as a switching output. The logic state is specified, i.e., an inverted logic is taken into account (e.g., inverted logic and a state of High corresponds to a voltage of 0V at the switching output). The values of the switching inputs/outputs that are not configured as switching outputs are ignored. You may also use only a selection of the existing switching inputs/outputs as long as these are listed in ascending order.
Parameters	'OA [S1=<a>][;S2=<a>][;S3=<a>][;S4=<a>]' <a> State of the switching output '0' Low '1' High
Acknowledgment	'OA=<aa>'

Command	'OA'
<aa>	Status acknowledgment, unit [dimensionless]
'00'	Ok
'01'	Syntax error
'02'	Parameter error
'03'	Other error

Deactivate switching output

Command	'OD'
Description	The switching outputs 1 - 4 can be deactivated with this command. The respective port must have been configured as a switching output. The logic state is output, i.e., an inverted logic is taken into account (e.g., inverted logic and a state of High corresponds to a voltage of 0V at the switching output).
Parameters	'OD<a>' <a> Selected switching output [1..4], unit [dimensionless]
Acknowledgment	None

Query the configuration of the switching inputs/outputs

Command	'OF'
Description	This command is used to query the configuration of the switching inputs/outputs 1 to 4.
Parameters	'OF?'
Acknowledgment	'OF S1=<a>;S2=<a>[;S3=<a>][;S4=<a>]' <a> Function of the switching input/ output, unit [dimensionless] 'I' Switching input 'O' Switching output 'P' Passive

Configure the switching inputs/outputs

Command	'OF'
Description	This command is used to configure the function of the switching inputs/outputs 1 to 4. You may also use only a selection of the existing switching inputs/outputs as long as these are listed in ascending order.
Parameters	'OF [S1=<a>][;S2=<a>][;S3=<a>][;S4=<a>]' <a> Function of the switching input/ output, unit [dimensionless] 'I' Switching input 'O' Switching output 'P' Passive
Acknowledgment	'OF=<bb>' <bb> Status acknowledgment '00' Ok '01' Syntax error '02' Parameter error '03' Other error

11.1.4 Online commands for the parameter set operations**Copying parameter set**

Command	'PC'
Description	This command can only be used to copy parameter sets in their entirety. This can be used to replicate the three parameter sets default , permanent and operating parameters on the basis of one another. In addition, this command also be used to restore the factory settings.
Parameters	'PC<Source type><Target type>' <Source type> Parameter data set that is to be copied, unit [dimensionless] '0' Parameter data set in permanent memory '2' Default or factory parameter set

Command	'PC'
	<p>'3' Operating parameter data set in volatile memory</p> <p><Target type> Parameter set into which the data is to be copied, unit [dimensionless]</p> <p>'0' Parameter data set in permanent memory</p> <p>'3' Operating parameter data set in volatile memory</p> <p>Permissible combinations here include:</p> <p>'03' Copying the data set from the permanent memory to the operating parameter data set</p> <p>'30' Copying the operating parameter data set to the permanent parameter set memory</p> <p>'20' Copying the default parameters to the permanent memory and to the main memory</p>
Acknowledgment	<p>'PS=<aa>'</p> <p><aa> Status acknowledgment, unit [dimensionless]</p> <p>'00' Ok</p> <p>'01' Syntax error</p> <p>'02' Impermissible command length</p> <p>'03' Reserved</p> <p>'04' Reserved</p> <p>'05' Reserved</p> <p>'06' Impermissible combination, source type - target type</p>

Requesting parameter data set from device

Command	'PR'
Description	The parameters of the device are grouped together in a parameter set and permanently stored in memory. There is one parameter set in permanent memory and one operating parameter set in volatile memory; in addition, there is a default parameter set (factory parameter set) for initialization. This command can be used to edit the first two parameter sets (in permanent and volatile memory). A check sum can be used for reliable parameter transfer.
Parameters	<p>'PR<BCC type><PS type><Address><Data length>[<BCC>]'</p> <p><BCC type> Check-digit function during transmission, unit [dimensionless]</p> <p>'0' Not used</p> <p>'3' BCC mode 3</p> <p><PS type> Memory from which the values are to be read, unit [dimensionless]</p> <p>'0' Parameter values stored in the flash memory</p> <p>'1' Reserved</p> <p>'2' Default values</p> <p>'3' Operating values in RAM</p> <p><Address> Relative address of the data within the data set</p> <p>'aaaa' Four-digit, unit [dimensionless]</p> <p><Data length> Length of the parameter data to be transferred</p> <p>'bbbb' Four-digit, unit [length in bytes]</p> <p><BCC> Check sum calculated as specified under BCC type</p>

Command	'PR'
Acknowledgment positive	<p>PT<BCC type><PS type><Status><Start> <Address parameter value><Address+1 parameter value>...[;<Address><Address parameter value>][<BCC>]</p> <p><BCC type> Check-digit function during transmission, unit [dimensionless]</p> <p>'0' Not used '3' BCC mode 3</p> <p><PS type> Memory from which the values are to be read, unit [dimensionless]</p> <p>'0' Parameter values stored in the flash memory '2' Default values '3' Operating values in RAM</p> <p><Status> Mode of parameter processing, unit [dimensionless]</p> <p>'0' No further parameters '1' Additional parameters follow</p> <p><Start> Relative address of the data within the data set, 'aaaa' Four-digit, unit [dimensionless]</p> <p><P.value A.> Parameter value of the parameter stored at this address; the parameter set data 'bb' is converted from HEX format to a 2-byte ASCII-format for transfer.</p> <p><BCC> Check sum calculated as specified under BCC type</p>
Acknowledgment negative	<p>'PS=<aa>'</p> <p>Parameter reply:</p> <p><aa> Status acknowledgment, unit [dimensionless]</p> <p>'01' Syntax error '02' Impermissible command length '03' Impermissible value for checksum type '04' Invalid check sum received '05' Impermissible number of data requested '06' Requested data does not (any longer) fit in the transmission buffer '07' Impermissible address value '08' Read access after end of data set '09' Impermissible QPF data set type</p>

Determining parameter set difference to default parameters

Command		'PD'
Description		<p>This command outputs the difference between the default parameter set and the operating parameter set or the difference between the default parameter set and the permanent parameter set.</p> <p>Comment: The reply supplied by this command can e.g. be directly used for programming a device with factory settings, whereby this device receives the same configuration as the device on which the PD-sequence was executed.</p>
Parameters	<p>'PD<P.set1><P.set2>'</p> <p><P.set1> Parameter data set that is to be copied, unit [dimensionless]</p> <p>'0' Parameter data set in permanent memory</p> <p>'2' Default or factory parameter set</p> <p><P.set2> Parameter set into which the data is to be copied, unit [dimensionless]</p> <p>'0' Parameter data set in permanent memory</p> <p>'3' Operating parameter data set in volatile memory</p> <p>Permissible combinations here include:</p> <p>'20' Output of the parameter differences between the default and the permanently saved parameter set</p> <p>'23' Output of the parameter differences between the default parameter set and the operating parameter set saved in volatile memory</p> <p>'03' Output of the parameter differences between the permanent parameter set and the operating parameter set saved in volatile memory</p>	
Acknowledgment positive	<p>PT<BCC><PS type><Status><Adr.><P.value adr.><P.valueAdr.+1>... [;<Adr.><P.value adr.>]</p> <p><BCC></p> <p>'0' No check digits</p> <p>'3' BCC mode 3</p> <p><PS type></p> <p>'0' Values stored in flash memory</p> <p>'3' Operating values stored in RAM</p> <p><Status></p> <p>'0' No further parameters</p> <p>'1' Additional parameters follow</p> <p><Adr.> Relative address of the data within the data set</p> <p>'aaaa' Four-digit, unit [dimensionless]</p> <p><P.value> Parameter value of the -bb- parameter stored at this address. The parameter set data is converted from HEX format to a 2-byte-ASCII format for transfer.</p>	
Acknowledgment negative	<p>'PS=<aa>'</p> <p><aa> Status acknowledgment, unit [dimensionless]</p> <p>'0' No difference</p> <p>'1' Syntax error</p> <p>'2' Impermissible command length</p> <p>'6' Impermissible combination, parameter set 1 and parameter set 2</p> <p>'8' Invalid parameter set</p>	

Writing parameter set

Command	'PT'
Description	The parameters of the device are grouped together in a parameter set and permanently stored in memory. There is one parameter set in permanent memory and one operating parameter set in volatile memory; in addition, there is a default parameter set (factory parameter set) for initialization. This command can be used to edit the first two parameter sets (in permanent and volatile memory). A check sum can be used for reliable parameter transfer.
Parameters	<p>PT<BCC type><PS type><status><addr.><P. value addr.> <P. value addr+1>...[;<addr.><P. value addr.>][<BCC>]</p> <p><BCC type> Check-digit function during transmission, unit [dimensionless] '0' No check digits '3' BCC mode 3</p> <p><PS type> Memory from which the values are to be read, unit [dimensionless] '0' Parameter values stored in the flash memory '3' Operating values stored in RAM</p> <p><Status> Mode of parameter processing, without function here, unit [dimensionless] '0' No reset after parameter change, no further parameters '1' No reset after parameter change, additional parameters follow '2' With reset after parameter change, no further parameters '6' Set parameters to factory setting, no further parameters '7' Set parameters to factory settings, lock all code types; the code-type setting must follow in the command!</p> <p><Addr.> Relative address of the data within the data set, 'aaaa' Four-digit, unit [dimensionless]</p> <p><P.value> Parameter value of the -bb- parameter stored at this address. The parameter set data is converted from HEX format to a 2-byte-ASCII format for transfer.</p> <p><BCC> Check sum calculated as specified under BCC type</p>
Acknowledgment	'PS=<aa>' Parameter reply: <p><aa> Status acknowledgment, unit [dimensionless] '01' Syntax error '02' Impermissible command length '03' Impermissible value for checksum type '04' Invalid check sum received '05' Impermissible data length '06' Invalid data (parameter limits violated) '07' Invalid start address '08' Invalid parameter set '09' Invalid parameter type</p>

12 Care, maintenance and disposal

Usually, the bar code reader does not require any maintenance by the operator.

12.1 Cleaning

↳ In the event of dust build-up, clean the device with a soft cloth; use a cleaning agent (commercially available glass cleaner) if necessary.

NOTE	
	Do not use aggressive cleaning agents such as thinner or acetone for cleaning the device. Use of improper cleaning agents can damage the optical window.

12.2 Repairs, servicing

Repairs to the device must only be carried out by the manufacturer.

↳ Contact your Leuze distributor or service organization should repairs be required.
The addresses can be found in Chapter 14.

NOTE	
	When sending devices to Leuze electronic for repair, please provide an accurate description of the error.

12.3 Disposing

↳ For disposal observe the applicable national regulations regarding electronic components.

13 Diagnostics and troubleshooting

For the PROFINET-IO, there are two different options for diagnosis.

Event-related diagnosis

PROFINET-IO transmits events within an automation process as alarms that must be acknowledged by the application process.

The following events are possible:

- Process alarms: Events that originate from the process and are reported to the control.
- Diagnostic alarms: Events that indicate the malfunctioning of an IO device.
- Maintenance alarms: Transmission of information to avoid the failure of a device through preventive maintenance work.
- Manufacturer-specific diagnostics

To identify the alarms uniquely, they are always reported via a slot/subslot. The user can prioritize diagnostic and process alarms differently.

State-related diagnosis

In addition, all alarms are also entered into the diagnostics buffer. This can be read out by a superior instance via acyclic read services.

A further option to report malfunctioning or status changes in a field device to a plant control is to enter low-priority diagnostic or status messages into the diagnostic buffer only instead of actively reporting them to the primary control.

This option can also be used for preventive maintenance or for low-priority warnings, for example.

The device uses the event-related diagnosis for high-priority events/errors and the state-related diagnosis for preventive maintenance and the signaling of low-priority events or warnings.

The following alarms and diagnostics messages are supported:

Table 13.1: Alarm and diagnostic messages

Diagnosis	Description	BCL 500/ category	API/ Slot/ Subslot	Type	Coming/going	Comment
Parameter error	Error in the module parameterization.	Error	0/n ^{a)} /0	Diagnostics alarm ^{b)}	Coming only	
Configuration error	Error in the configuration of a module.	Error	0/n/0	Diagnostics alarm	Coming only	
Output Update Ignore Warning	The received output data could not be processed.	Warning	0/n/0	Diagnostic message	-	Output data buffer overflow
Temperature warning	The device temperature exceeds the threshold value.	-	0/0/0	Process alarm	Coming/going	Device-related
Laser	The laser operating hour counter has exceeded the threshold value.	Status	0/0/0	Preventive maintenance	-	Device-related/preventive maintenance
Device error	A manufacturer-specific critical device error has occurred. ^{c)}	Error	0/0/0	Diagnostics alarm Manufacturer-specific	Coming only	Continued process operation of the device is not possible. This is also indicated by the activation of the Error LED.
Fatal Error	A fatal error has occurred. This has caused a software reset.	Fatal Error ^{d)}	0/0/0	Status message	-	Device-related

a) n = module number

b) Only diagnostics or process alarms actually trigger the transmission of an alarm. All other types (preventive maintenance and status messages) only lead to an entry into the diagnostics buffer and are thus part of the state-based diagnostics.

c) Collective diagnostic message for critical device errors.

d) In the case of a fatal error, the device carries out a software reset. After the warm start, the ErrorManager signals the error to the PROFINET application and enters it as status message into the diagnostics buffer.

Error category

The error category is relevant for prioritizing the alarm or the diagnostics message but is not transmitted.

Table 13.2: Error categories

Error category	Alarm type	PWR LED
STATUS/INFO	Status message	Off
WARNING	Status message	Flashes
ERROR	Diagnostics alarm	On
FATAL ERROR	Diagnostics alarm	On ^{a)}

a) The device carries out a software reset.

13.1 General causes of errors

Table 13.3: General causes of errors

Error	Possible error cause	Measures
Status LED PWR		
Off	<ul style="list-style-type: none"> No supply voltage connected to the device Hardware error 	<ul style="list-style-type: none"> Check supply voltage Send device to customer service
Orange, continuous light	Device in service mode	<ul style="list-style-type: none"> Reset service mode with webConfig tool or display
Red, flashing	Warning	<ul style="list-style-type: none"> Query diagnostic data and carry out the resulting measures
Red, continuous light	Error: no function possible	<ul style="list-style-type: none"> Internal device error, send in device
Status LED NET		
Off	<ul style="list-style-type: none"> No supply voltage connected to the device Device not yet recognized by the PROFINET-IO Hardware error 	<ul style="list-style-type: none"> Check supply voltage Send device to customer service Send device to customer service
Orange, flashing	<ul style="list-style-type: none"> Topology error detected Deviating target/actual topology 	<ul style="list-style-type: none"> Check interface
Red, flashing	Communication error: Parameterization or configuration failed, IO error: No data exchange	<ul style="list-style-type: none"> Check interface Can be corrected by resetting
Red, continuous light	Communication error on the PROFINET-IO: No communication to IO Controller established ("no data exchange")	<ul style="list-style-type: none"> Check interface Cannot be corrected by resetting Send device to customer service

13.2 Interface errors

Table 13.4: Interface error

Error	Possible error cause	Measures
No communication via USB service interface	<ul style="list-style-type: none"> Incorrect interconnection cable Connected device is not recognized 	<ul style="list-style-type: none"> Check interconnection cable Install USB driver
No communication via PROFINET-IO BUS status LED, red, continuous light	<ul style="list-style-type: none"> Incorrect wiring Different protocol settings Protocol not released Wrong termination Wrong device name set Incorrect configuration 	<ul style="list-style-type: none"> Check wiring Check protocol settings Activate TCP/IP or UDP Check termination Check device name Check configuration of the device in the configuration tool
Sporadic errors at the PROFINET-IO	<ul style="list-style-type: none"> Incorrect wiring Effects due to EMC Overall network expansion exceeded 	<ul style="list-style-type: none"> Check wiring In particular, check wire shielding Check the cable used Check shielding (shield covering in place up to the clamping point) Check grounding concept and connection to functional earth (FE) Avoid EMC coupling caused by power cables laid parallel to device lines. Check max. network expansion as a function of the max. cable lengths

14 Support

Service hotline

You can find the contact information for the hotline in your country on our website www.leuze.com under **Contact & Support**.

Repair service and returns

Defective devices are repaired in our service centers competently and quickly. We offer you an extensive service packet to keep any system downtimes to a minimum. Our service center requires the following information:

- Your customer number
- Product description or part description
- Serial number or batch number
- Reason for requesting support together with a description

Please register the merchandise concerned. Simply register return of the merchandise on our website www.leuze.com under **Contact & Support > Repair Service & Returns**.

To ensure quick and easy processing of your request, we will send you a returns order with the returns address in digital form.

What to do should servicing be required?

NOTE	
 i	<p>Please use this chapter as a master copy should servicing be required.</p> <p>☞ Enter the contact information and fax this form together with your service order to the fax number given below.</p>

Customer data (please complete)

Device type:	
Serial number:	
Firmware:	
Display messages:	
Status of LEDs:	
Error description	
Company:	
Contact person/department:	
Phone (direct dial):	
Fax:	
Street / no.:	
ZIP code / City:	
Country:	

Leuze Service fax number:

+49 7021 573 - 199

15 Technical data

15.1 General specifications of the bar code readers

15.1.1 Line scanner

Table 15.1: Technical data of the BCL 548/*i*/line scanners without heating

Type	BCL 548/<i>i</i> PROFINET-IO
Design	Line scanner without heating
Optical data	
Light source	Laser diode $\lambda = 655\text{ nm}$ (red light)
Beam exit	At the front
Max. output power (peak)	2 mW
Pulse duration	<150 μs
Scanning rate	1000 scans/s (adjustable in the range 800 ... 1200 scans/s)
Beam deflection	Via rotating polygon wheel
Useful opening angle	Max. 60°
Optics models / resolution	High Density (N): 0.25 ... 0.5mm Medium Density (M): 0.35 ... 0.8 mm Low Density (F): 0.5 ... 1.0 mm Ultra Low Density (L): 0.7 ... 1.0 mm
Reading distance	See reading field curves
Laser class	1 acc. to IEC 60825-1:2014 / EN 60825-1:2014+A11:2021 and U.S. 21 CFR 1040.10 with Laser Notice No. 56
Bar code data	
Code types	2/5 Interleaved, Code 39, Code 128, EAN 128, EAN / UPC, Codabar, Code 93, GS1 DataBar Omnidirectional
Bar code contrast (PCS)	$\geq 60\%$
Ambient light tolerance	2000 lx (on the bar code)
Number of bar codes per scan	6
Electrical data	
Interface type	2x PROFINET-IO on 2x M12 (D)
Protocols	PROFINET-IO RT-communication DCP TCP/IP (Client/ Server) / UDP
Baud rate	10/100 MBaud
Data formats	
Service interface	USB 1.1 compatible, A-coded
Switching input / switching output	4 switching inputs/outputs, freely programmable functions - Switching input: 10 ... 30 V DC depending on supply voltage, I max. = 8 mA - Switching output: 10 ... 30VDC depending on supply voltage, I max. = 60mA (short-circuit proof) Switching inputs/outputs protected against polarity reversal!

Type	BCL 548/ PROFINET-IO
Design	Line scanner without heating
Operating voltage	10 ... 30 V DC (Class II, protection class III)
Power consumption	Max. 10 W
Operating and display elements	
Display	Monochromatic graphical display, 128 x 64 pixel, with background lighting
Keyboard	4 buttons
LEDs	2 LEDs for power (PWR) and bus state (BUS), two-colored (red/green)
Mechanical data	
Degree of protection	IP 65 (with screwed-on M12 connectors or mounted caps)
Weight	1.1 kg
Dimensions (H x W x D)	63 x 123.5 x 106.5 mm
Housing	Diecast aluminum
Environmental data	
Operating temperature range	0 °C ... -40 °C
Storage temperature range	-20 °C ... +70 °C
Air humidity	Max. 90 % rel. humidity, non-condensing
Vibration	IEC 60068-2-6, test Fc
Shock	IEC 60068-2-27, test Ea
Continuous shock	IEC 60068-2-29, test Eb
Electromagnetic compatibility	EN 55022; IEC 61000-6-2 (contains IEC 61000-4-2, -3, -4, -5 and -6) ^{a)}

a) This is a Class A product. In a domestic environment this product may cause radio interference, in which case the operator may be required to take adequate measures.

⚠ CAUTION!	
	For UL applications, use is only permitted in Class 2 circuits in accordance with the NEC (National Electric Code). The bar code readers are designed in accordance with protection class III for supply by PELV (protective extra-low voltage with reliable disconnection).

15.1.2 Oscillating-mirror scanner

Technical data same as for line scanner without heating, however with the following differences:

Table 15.2: Technical data of the BCL 548*i*/oscillating-mirror scanners with heating

Type	BCL 548 <i>i</i> PROFINET-IO
Design	Oscillating-mirror scanner without heating
Optical data	
Beam exit	Lateral zero position at an angle of 90°
Beam deflection	Via rotating polygon wheel (horizontal) and stepping motor with mirror (vertical)
Oscillation frequency	0 ... 10 Hz (adjustable, max. frequency is dependent on set swivel angle)
Max. swivel angle	±20° (adjustable)
Reading field height	See reading field curves
Electrical data	
Power consumption	Max. 14 W
Mechanical data	
Weight	1.5 kg
Dimensions (H x W x D)	84 x 173 x 147 mm

15.2 Heating models of the bar code readers

The bar code readers of the BCL 500*i* series are optionally available as models with integrated heating. In this case, heating is permanently installed ex works. Self-installation on-site by the user is not possible!

Features

- Integrated heating (permanently installed)
- Extends the application range of the device to -35 °C
- Supply voltage 24VDC ±20%
- Enabling the device through an internal temperature switch (switch-on delay about 30 min for 24 V DC and minimum ambient temperature of -35 °C)
- Necessary conductor cross-section for the voltage supply: at least 0.75 mm²; the use of preassembled cables is, thus, not possible

Structure

The heating consists of two parts:

- The front cover heater
- The housing heater

Function

When the 24 V DC supply voltage is applied to the device, a temperature switch initially only connects the heating to electrical power (front cover heater and housing heater). During the heating phase (around 30 min), when the inside temperature rises above 15 °C, the temperature switch connects the device to the supply voltage. This is followed by the self test and the changeover to read operation. The "PWR" LED lights up showing overall readiness for operation.

When the inside temperature reaches approx. 18 °C, another temperature switch turns the housing heater off and, if necessary, back on again (if the inside temperature drops below 15 °C). This does not interrupt the read operation. The front cover heater remains activated until an inside temperature of 25 °C is reached. At temperatures above this, the front cover heater switches off and, with a switching hysteresis of 3 °C, back on again at an inside temperature below 22 °C.

Mounting location**NOTE**

The mounting location is to be selected such that it does not expose the device with heating directly to a cold air stream. To achieve an optimal heating effect, the device should be mounted so that it is thermally isolated.

Electrical connection

The required wire cross section of the connection cable for the voltage supply must be at least 0.75 mm².

⚠ CAUTION!

The voltage supply must not be looped through from one device to the next.

Power consumption

The energy requirement depends on the model:

- the line scanner with heating typically consumes 40 W and a maximum of 50 W power.
- the line scanner with oscillating mirror and heating typically consumes 60 W and a maximum of 75 W.

These values are based on operation with unconnected switching outputs.

15.2.1 Line scanner with heater

Technical data same as for line scanner without heating, however with the following differences:

Table 15.3: Technical data of the BCL 548/*line scanners with heating*

Type	BCL 548/ PROFINET-IO
Design	Line scanner with heater
Electrical data	
Operating voltage	24VDC ±20 %
Power consumption	Max. 50 W
Structure of the heating	Housing heating and separate heating of the optics glass
Warmup time	Min. 30 min at +24 V DC and an ambient temperature of -35 °C
Min. conductor cross section	Conductor cross section of at least 0.75 mm ² for the supply-voltage line. Wiring through of the voltage supply to multiple heating devices is not permissible. Standard, M12 preassembled cable not usable (insufficient conductor cross section)
Environmental data	
Operating temperature range	-35 °C ... +40 °C
Storage temperature range	-20 °C ... +70 °C

15.2.2 Oscillating-mirror scanner with heating

Technical data same as for line scanner without heating, however with the following differences:

Table 15.4: Technical data of the BCL 548/*i*/oscillating-mirror scanners with heating

Type	BCL 548/ <i>i</i> PROFINET-IO
Design	Oscillating-mirror scanner with heating
Optical data	
Useful opening angle	Max. 50°
Max. swivel angle	±12° (adjustable)
Electrical data	
Operating voltage	24VDC ±20 %
Power consumption	Max. 75 W
Structure of the heating	Housing heating and separate heating of the optics glass
Warmup time	Min. 30 min at +24 V DC and an ambient temperature of -35 °C
Min. conductor cross section	Conductor cross section of at least 0.75 mm ² for the supply-voltage line. Wiring through of the voltage supply to multiple heating devices is not permissible. Standard, M12 preassembled cable not usable (insufficient conductor cross section)
Environmental data	
Operating temperature range	-35 °C ... +40 °C
Storage temperature range	-20 °C ... +70 °C

15.3 Dimensioned drawings

15.3.1 Line scanner with / without heating

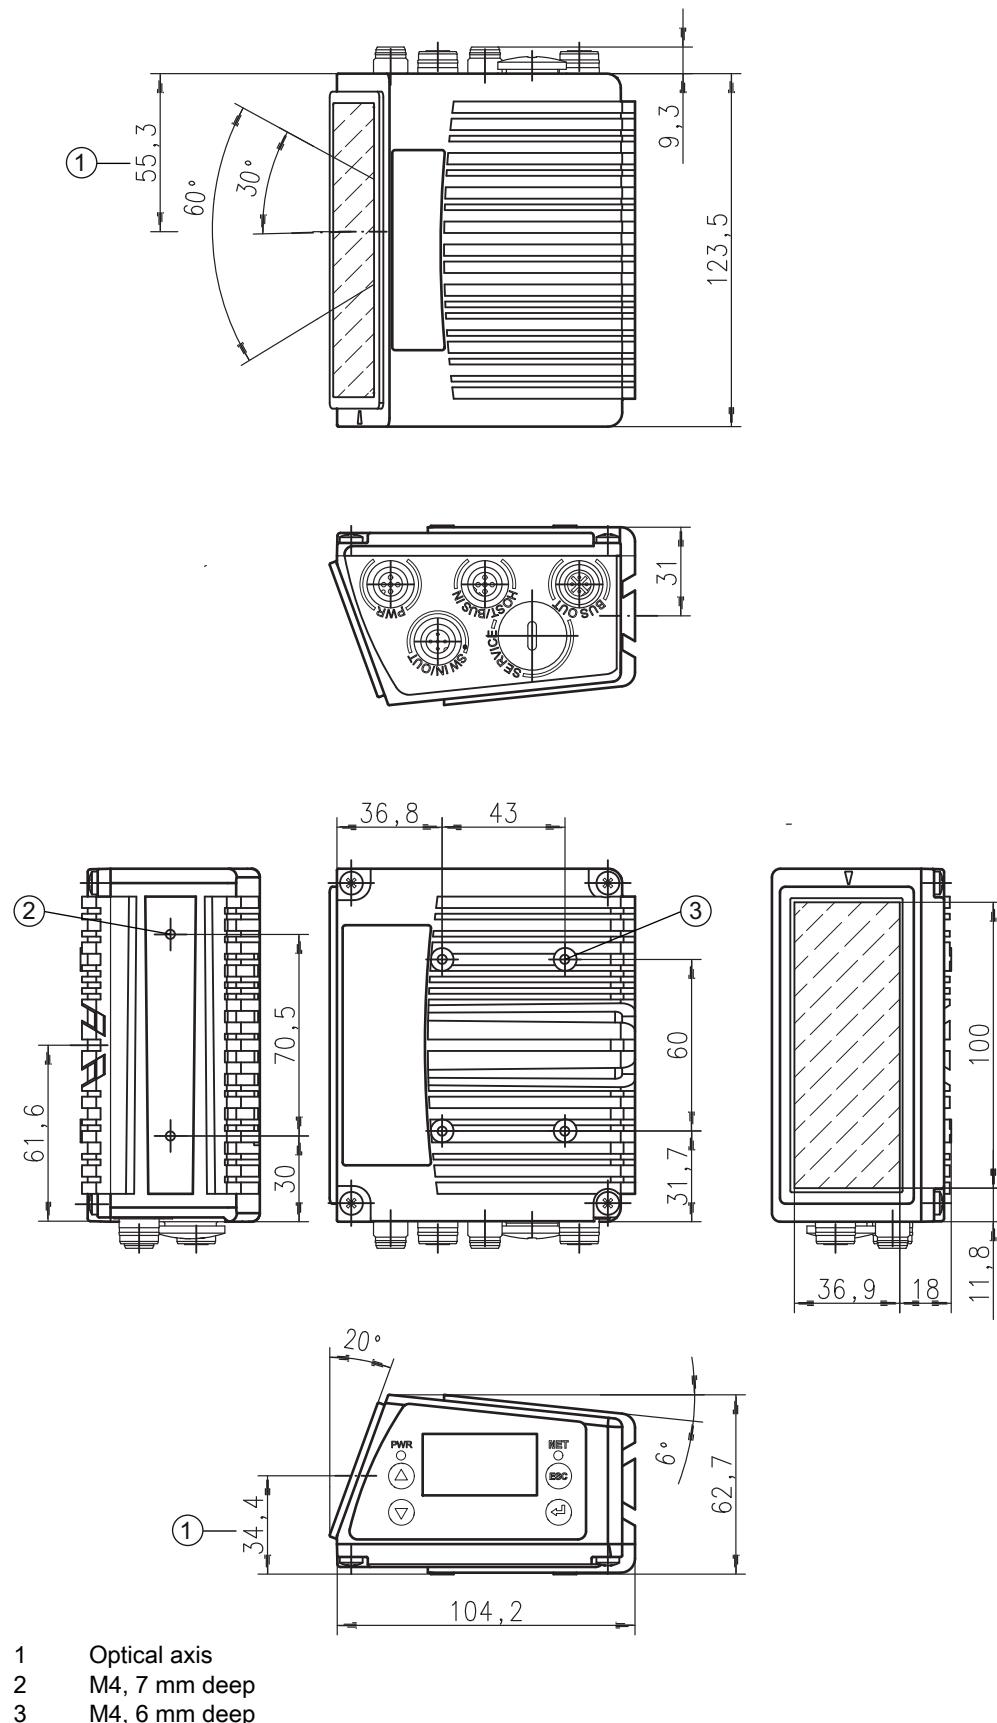


Figure 15.1: Dimensioned drawing - line scanner

15.3.2 Oscillating-mirror scanner with/without heating


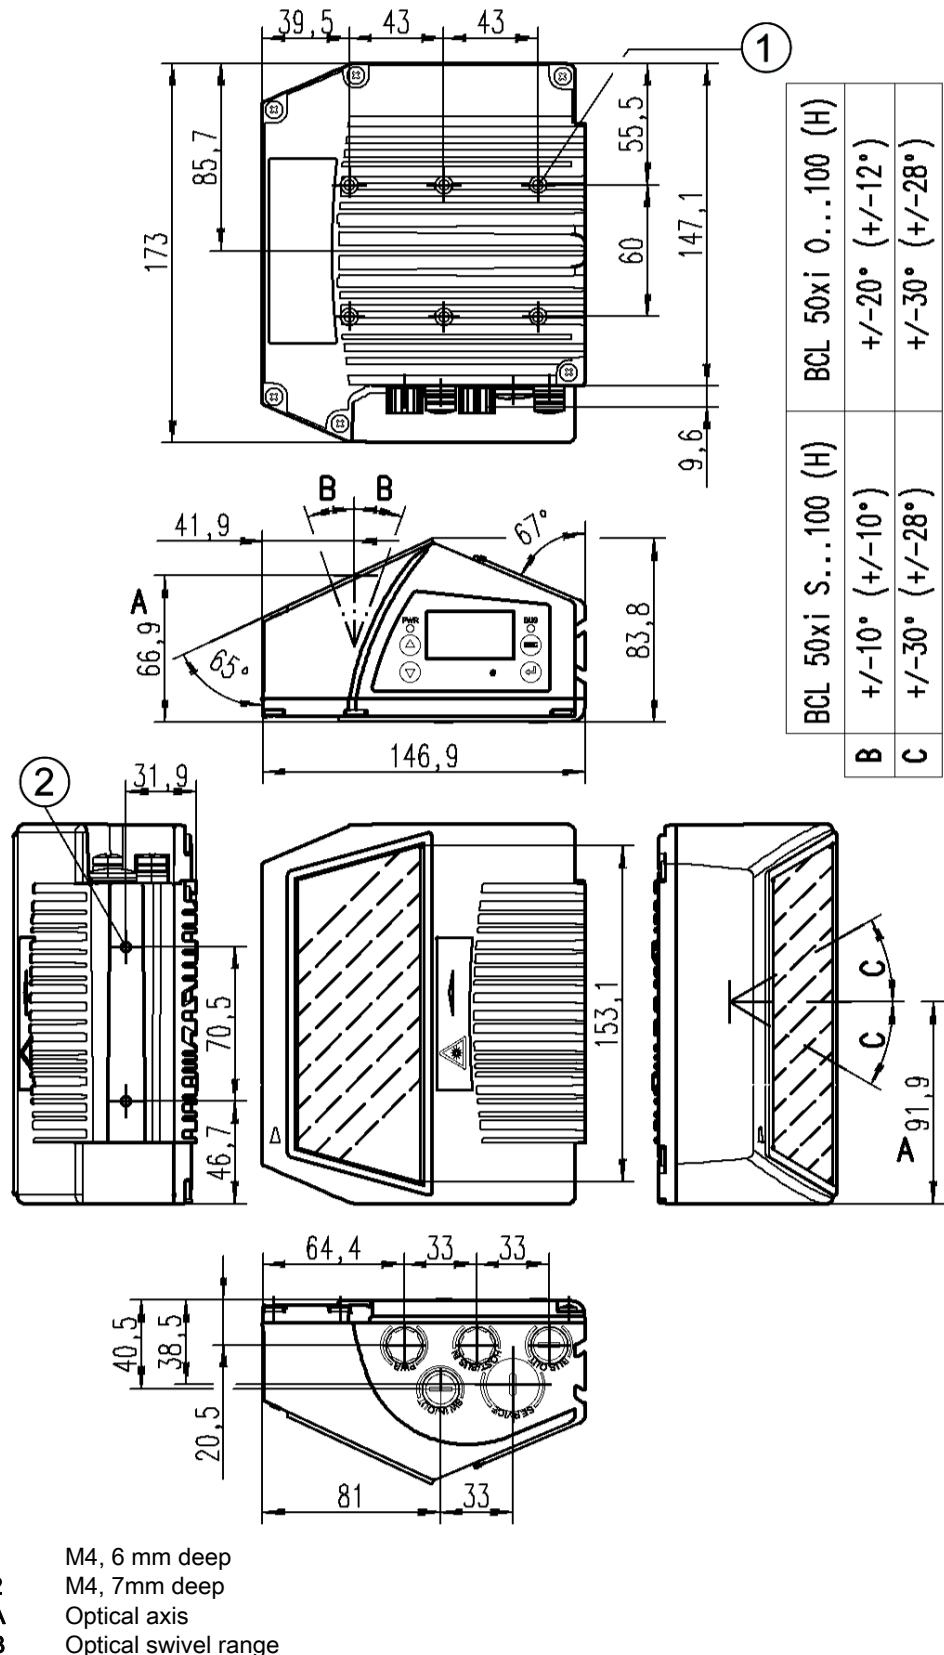



Figure 15.2: Dimensioned drawing of oscillating-mirror scanner

15.4 Dimensioned drawings: Accessories

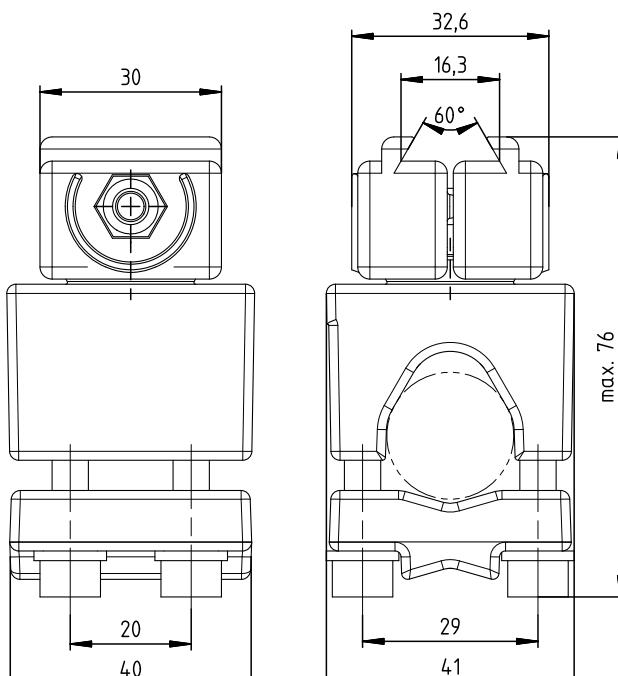

A Holder, turnable 360°
B Rods, Ø 16 ... 20 mm

Figure 15.3: BT 56 mounting device

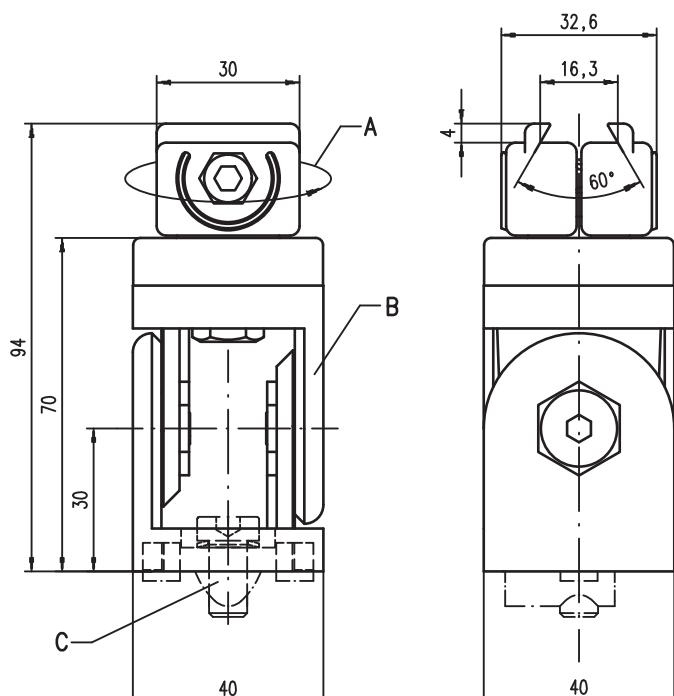

A Holder, turnable 360°
B ITEM joint, adjustable ± 90°
C M8x16 screwable cylinder, M8 serrated washer, M8 sliding block, connectors for ITEM profile (2x)

Figure 15.4: BT 59 mounting device

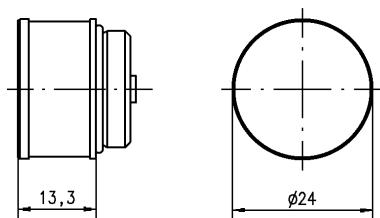


Figure 15.5: External parameter memory

15.5 Reading field curves / optical data

Bar code characteristics

NOTE



Please note that the size of the bar code module influences the maximum reading distance and the width of the reading field. Therefore, when selecting a mounting location and/or the bar code label, take into account the different reading characteristics of the scanner with various bar code modules.



M Module: The narrowest line or space of a bar code in mm

Z_B Wide character: Wide bars and gaps are a multiple (ratio) of the module.

Module x Ratio = Z_B (Normal Ratio 1 : 2.5)

B_Z Quiet zone: The quiet zone should be at least 10 times the module, but not less than 2.5mm.

L Code length: The length of the bar code in mm including the start and stop characters. The quiet zone is included depending on the code definition.

S Bar length: height of the elements in mm

Figure 15.6: The most important characteristics of a bar code

The range in which the bar code can be read by the device (the so-called reading field) depends on the quality of the printed bar code and its dimensions.

Therefore, above all, the module of a bar code is decisive for the size of the reading field.

NOTE



A rule of thumb: The smaller the module of the bar code is, the smaller the maximum reading distance and reading field width will be.

15.6 Reading field curves

NOTE



Please notice that the real reading fields are also influenced by factors such as labeling material, printing quality, reading angle, printing contrast etc., and may thus deviate from the reading fields specified here.

The zero position of the reading distance always refers to the front edge of the housing of the beam exit and is shown in Figure 15.7 for the two housing types of the device.

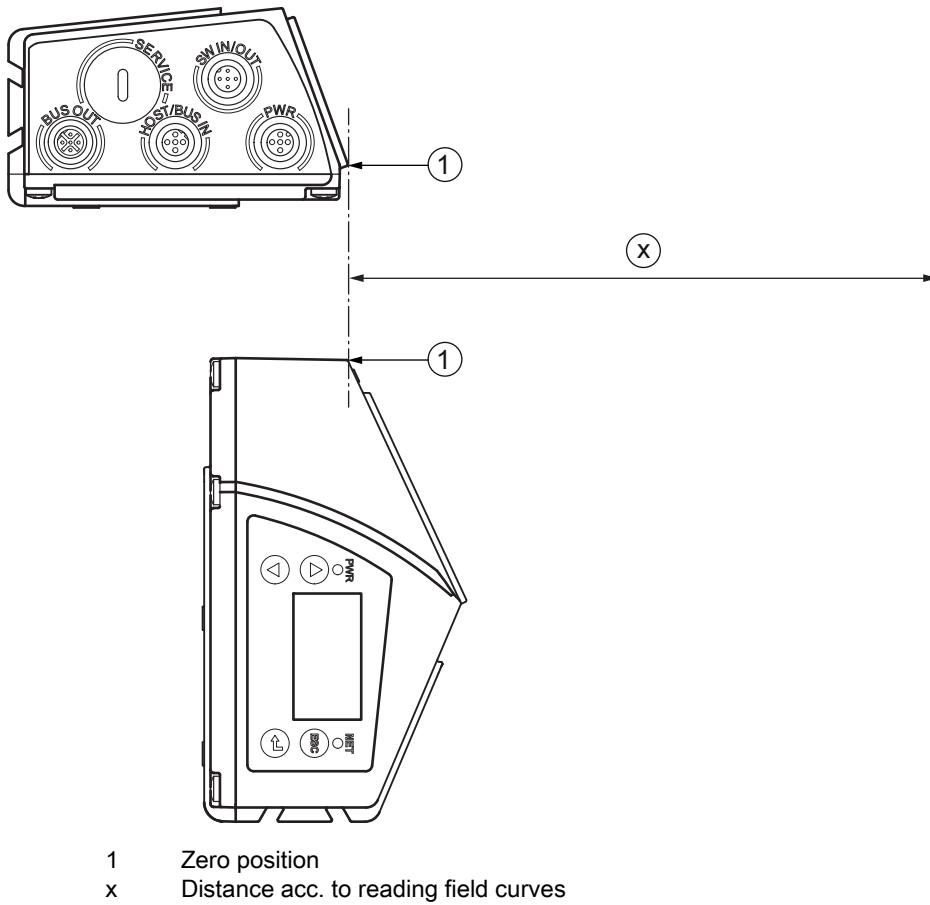


Figure 15.7: Zero position of the reading distance

Reading conditions for the reading field curves

Bar code type	2/5 Interleaved
Ratio	1:2.5
ANSI specification	Class A
Reading rate	> 75%

Table 15.5: Reading conditions

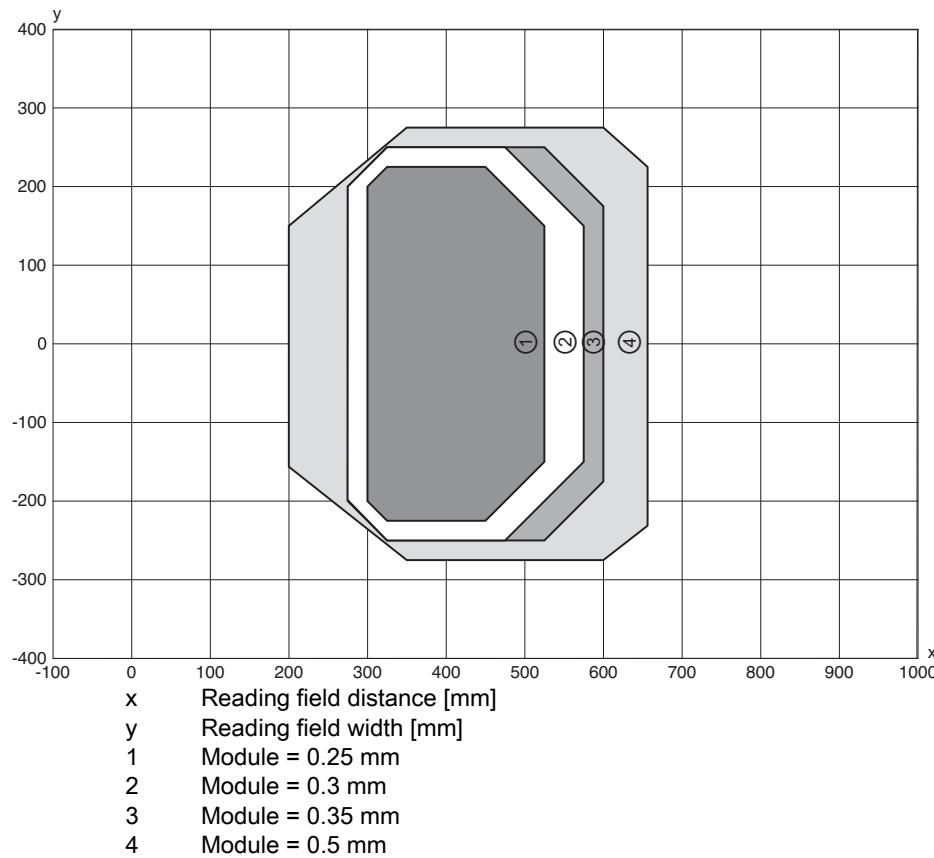
15.6.1 High Density (N) - optics: BCL 548/*i*/SN 102

Figure 15.8: "High Density" reading field curve for line scanner

The reading field curve applies for the reading conditions stated in Table 15.5.

15.6.2 High Density (N) - optics: BCL 548/*i*ON 100

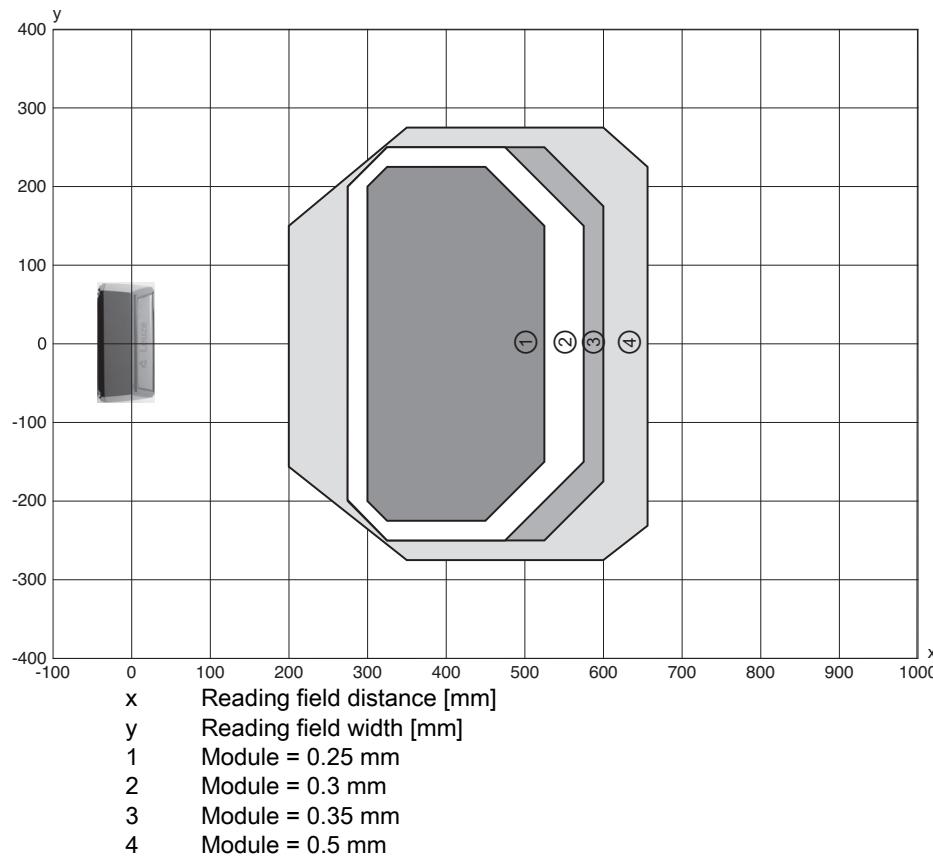


Figure 15.9: "High Density" reading field curve for oscillating-mirror scanners

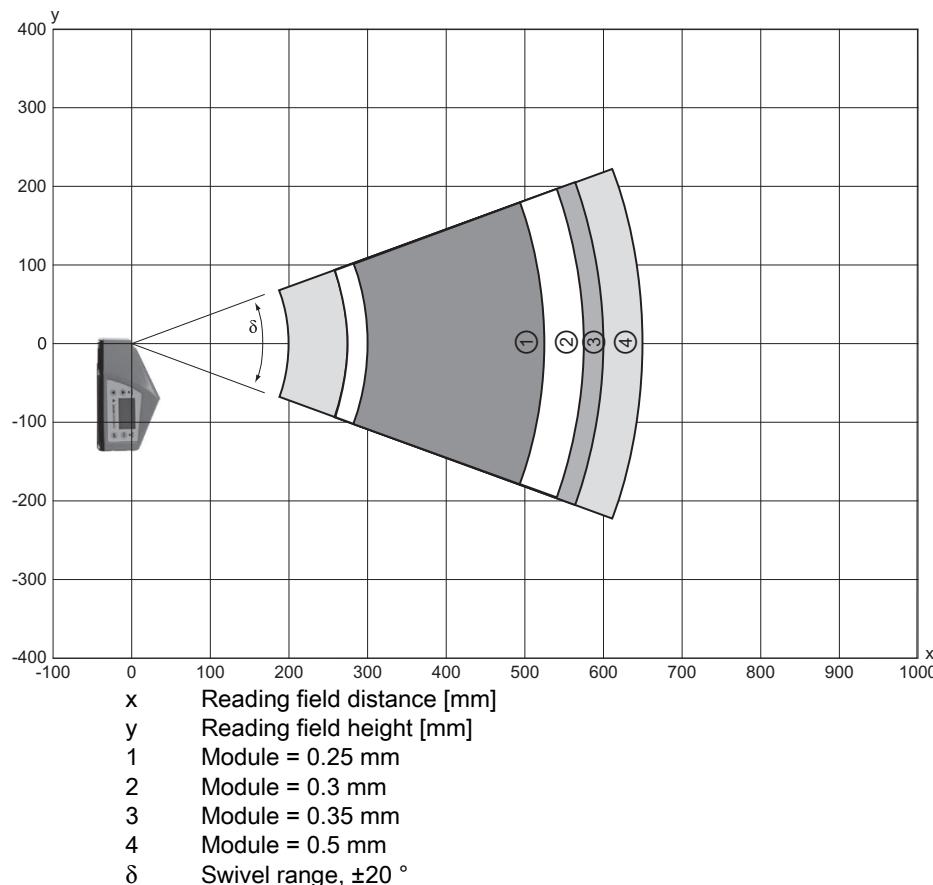


Figure 15.10: Lateral "High Density" reading field curve for oscillating-mirror scanners

The reading field curves apply for the reading conditions stated in Table 15.5.

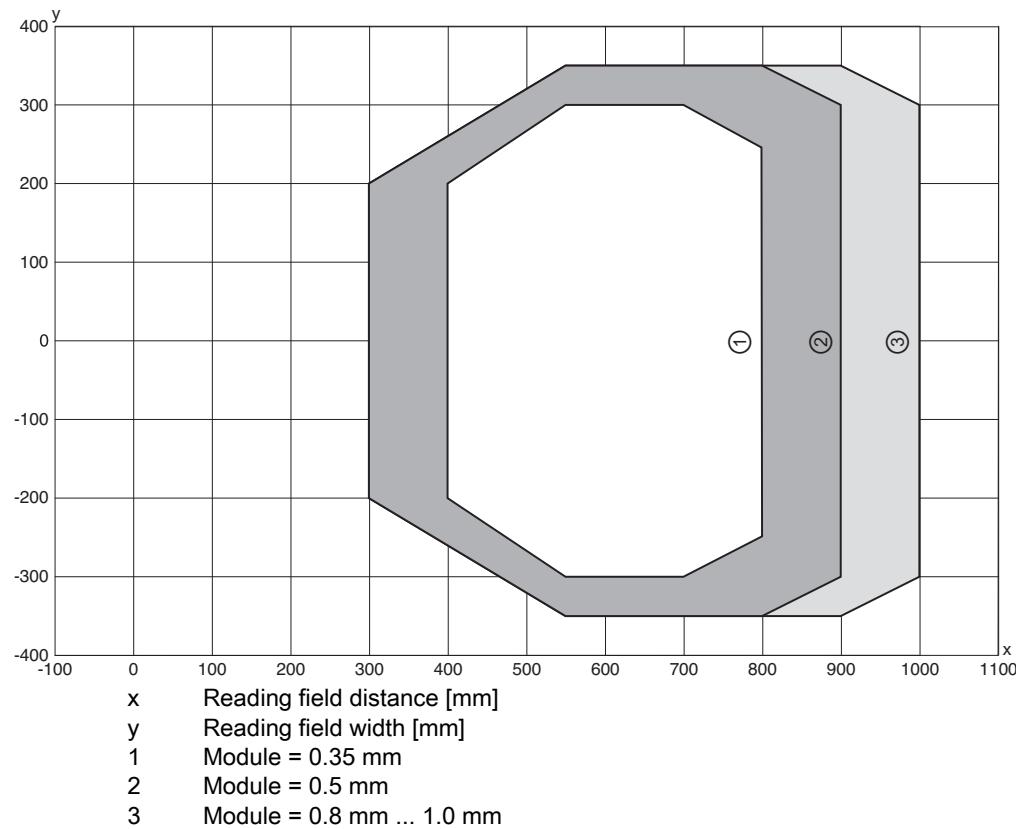
15.6.3 Medium Density (M) - optics: BCL 548*/*SM 102

Figure 15.11: "Medium Density" reading field curve for line scanner

The reading field curves apply for the reading conditions stated in Table 15.5.

15.6.4 Medium Density (M) - optics: BCL 548*/*OM 100

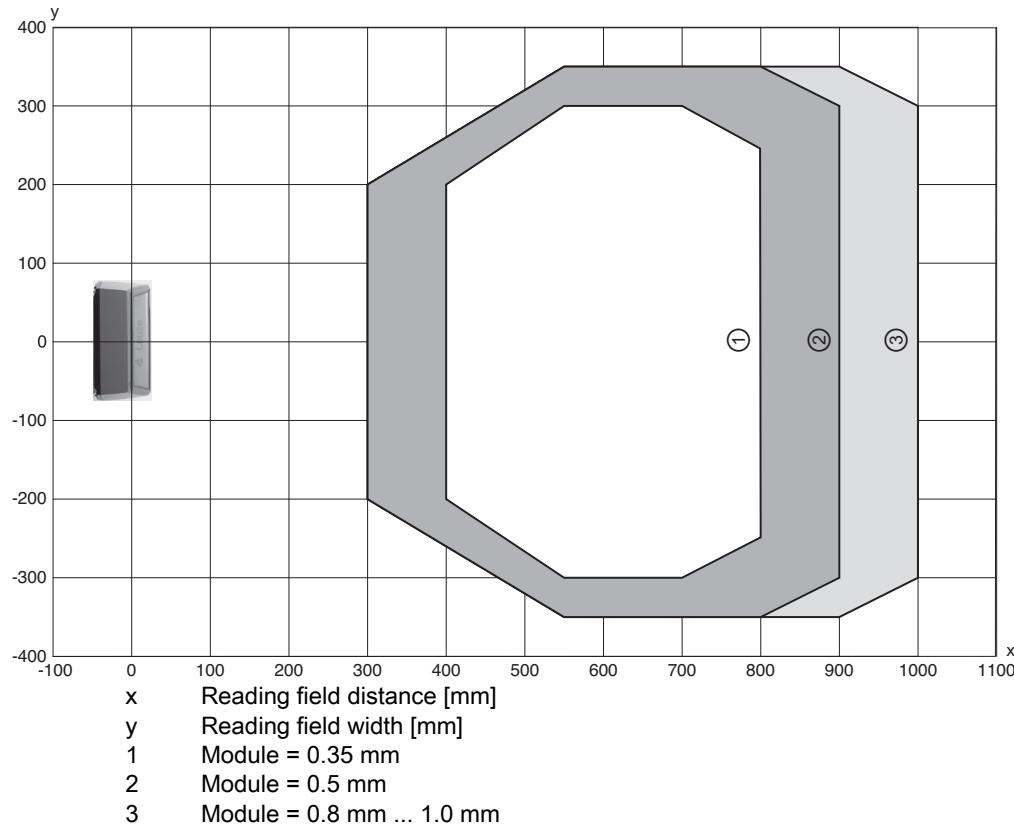


Figure 15.12: "Medium Density" reading field curve for oscillating-mirror scanners

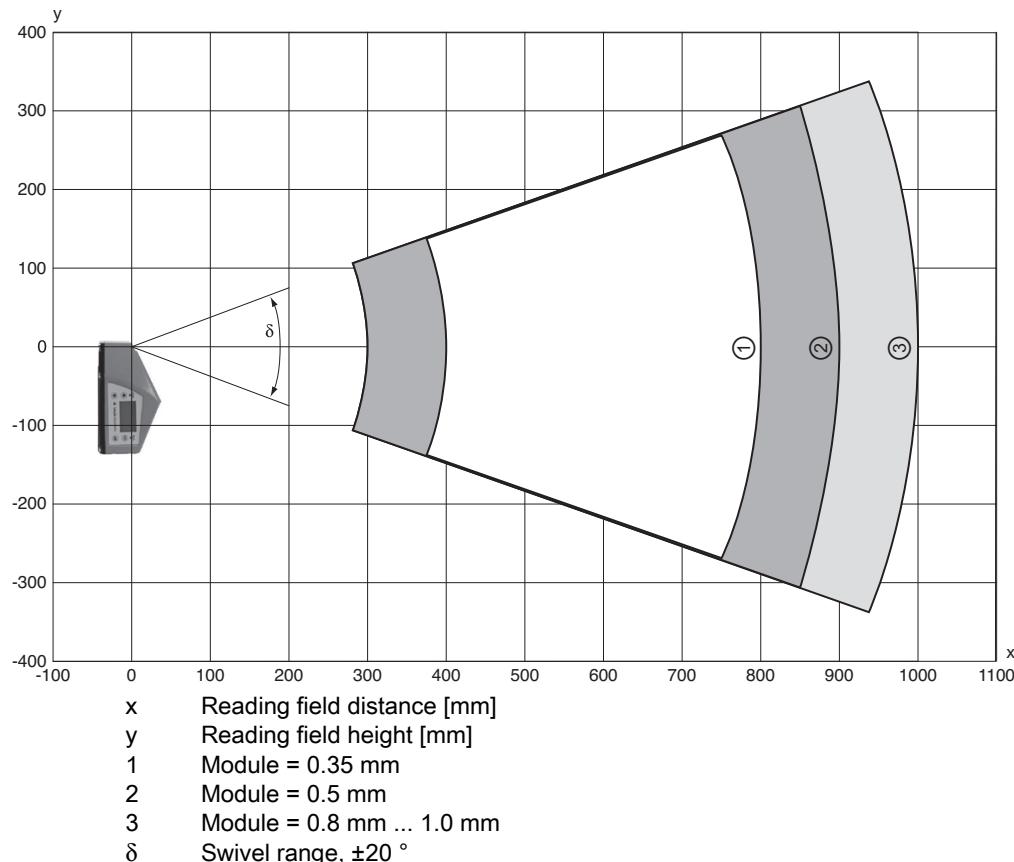


Figure 15.13: Lateral "Medium Density" reading field curve for oscillating-mirror scanners

The reading field curves apply for the reading conditions stated in Table 15.5.

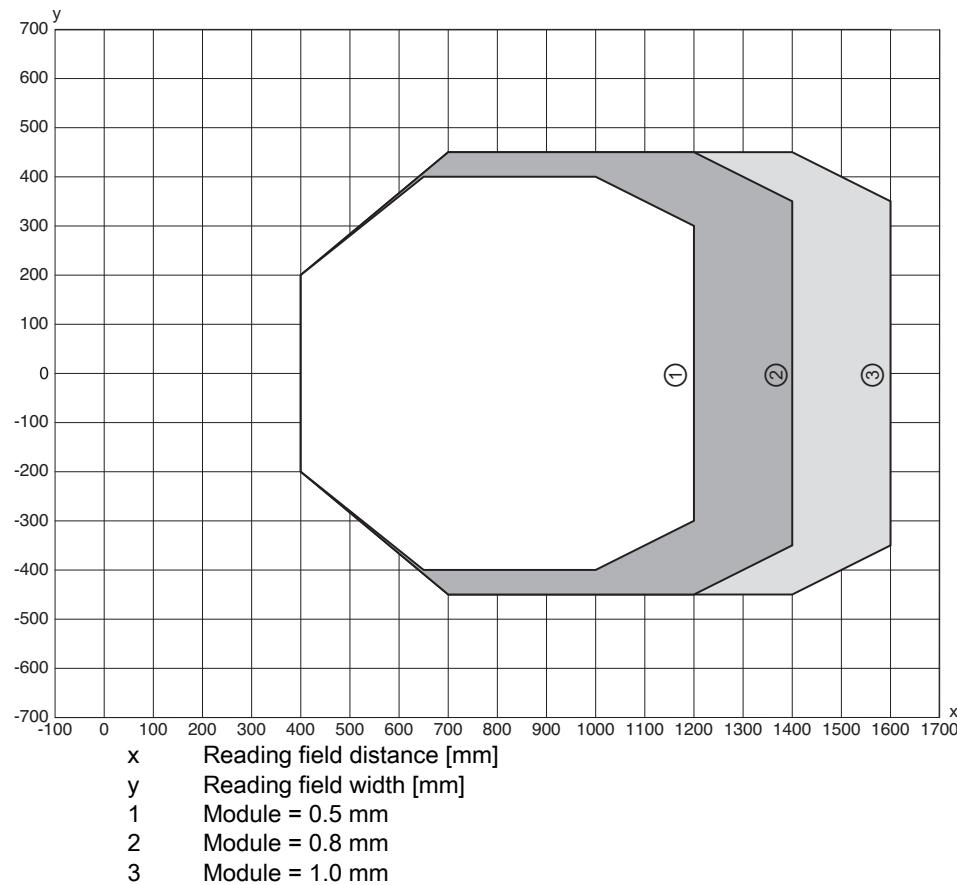
15.6.5 Low Density (F) - optics: BCL 548/SF 102

Figure 15.14: "Low Density" reading field curve for line scanner

The reading field curves apply for the reading conditions stated in Table 15.5.

15.6.6 Low Density (F) - optics: BCL 548/OF 100

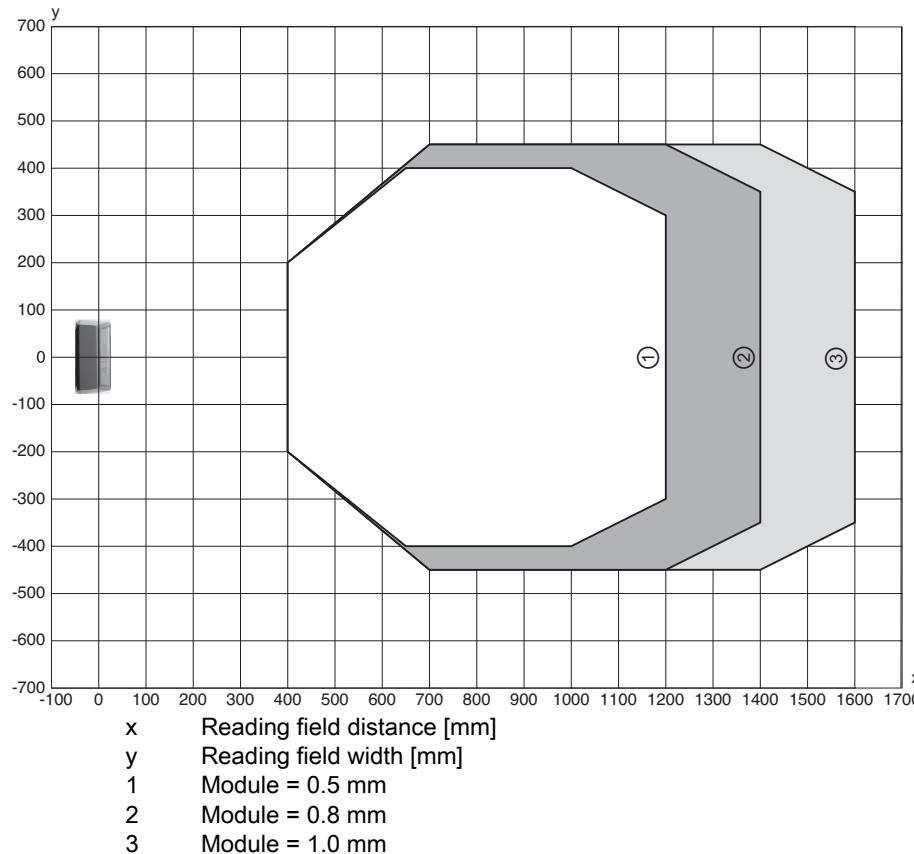


Figure 15.15: "Low Density" reading field curve for oscillating-mirror scanners

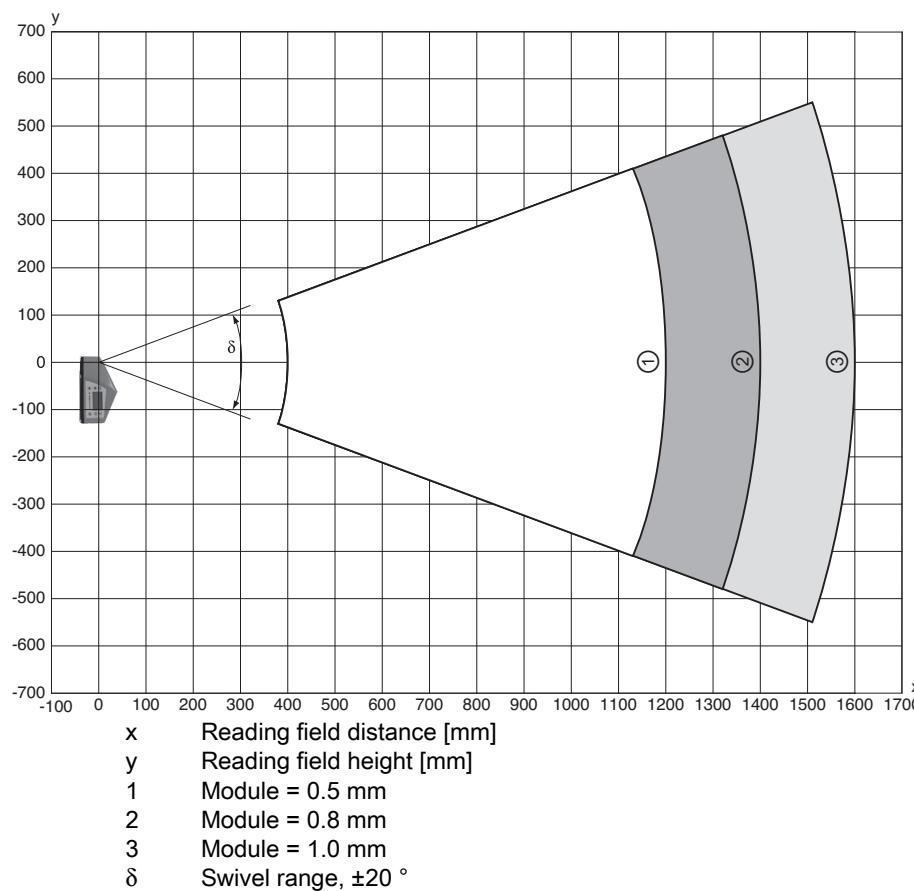


Figure 15.16: Lateral "Low Density" reading field curve for oscillating-mirror scanners

The reading field curves apply for the reading conditions stated in Table 15.5.

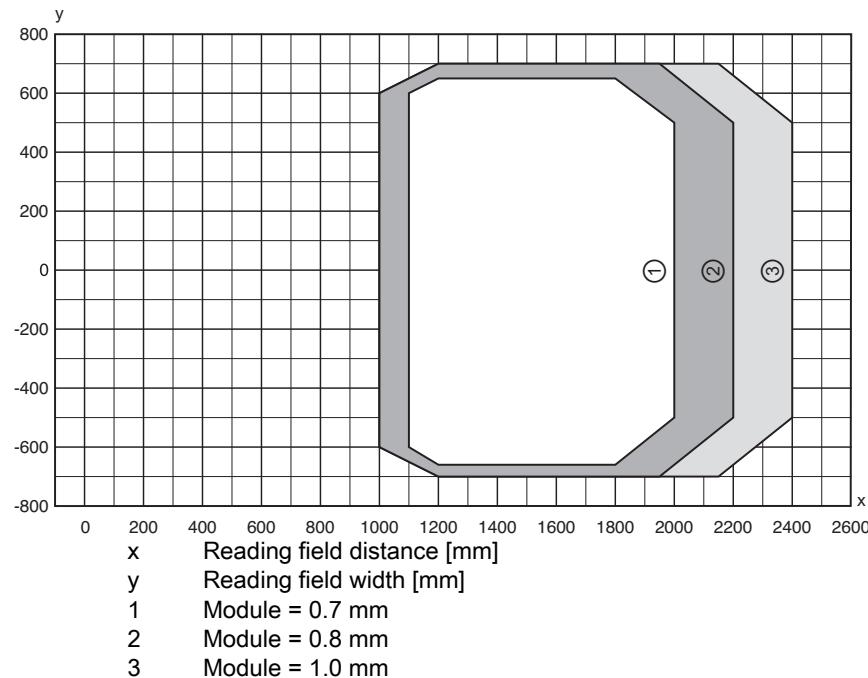
15.6.7 Ultra Low Density (L) - optics: BCL 548/*SL* 102

Figure 15.17: "Ultra Low Density" reading field curve for line scanner

The reading field curves apply for the reading conditions stated in Table 15.5.

15.6.8 Ultra Low Density (L) - optics: BCL 548/OL 100


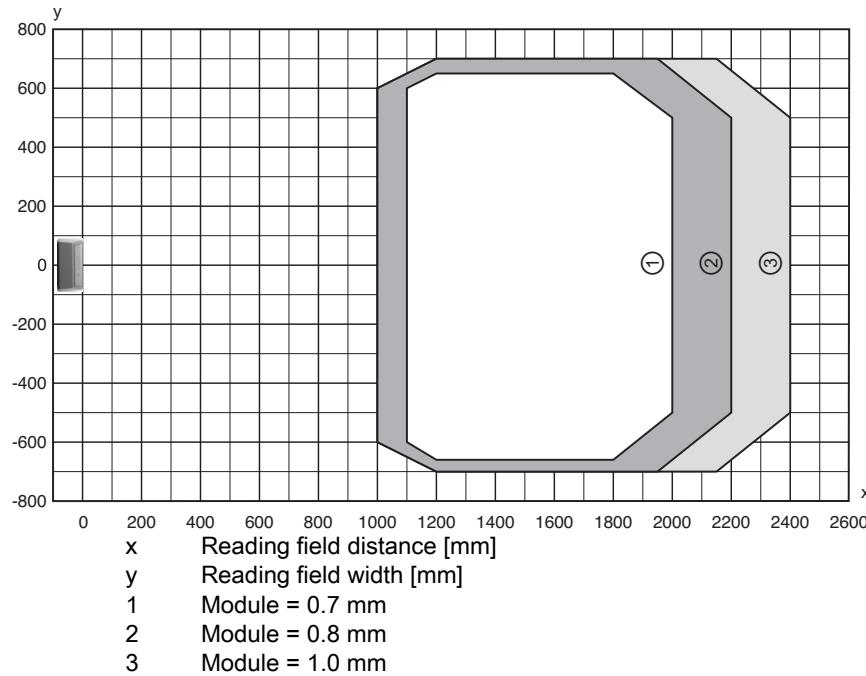


Figure 15.18: "Ultra Low Density" reading field curve for oscillating-mirror scanners

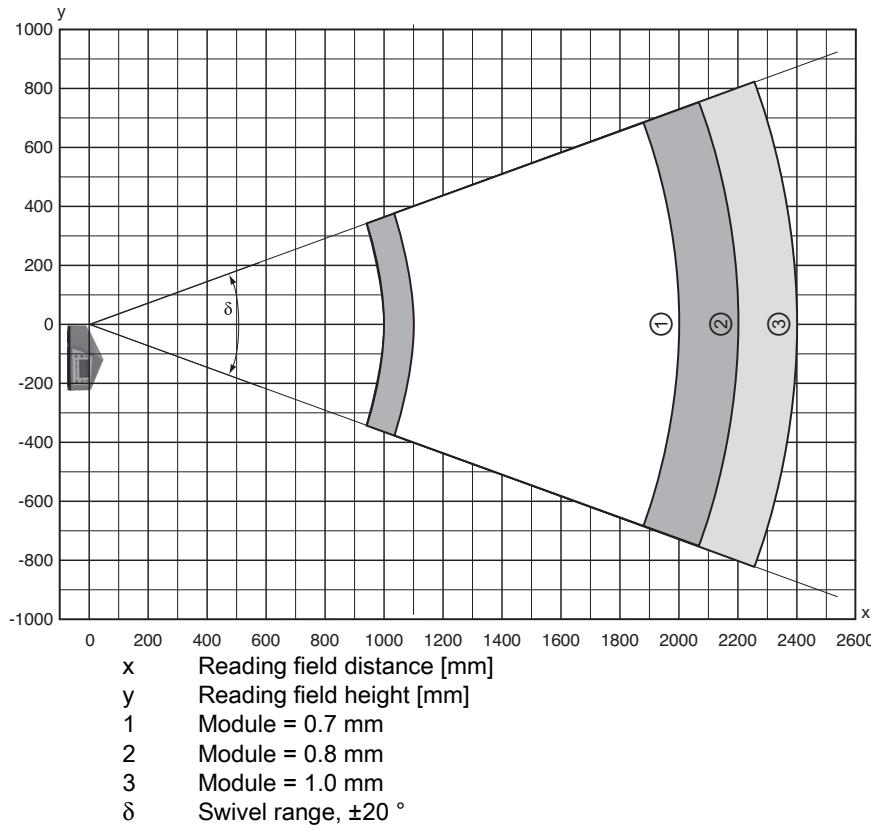

The reading field curves apply for the reading conditions stated in Table 15.5.

15.7 Reading field curves for heating devices

The reading field curves of the heating devices differ to some extent from the normal reading curves due to the optics heating and are somewhat reduced in the reading field width as well as in the reading field height!

- The maximum opening angle for all oscillating mirror devices of the BCL 500*i*/series is reduced to $\pm 28^\circ$ (without heating = $\pm 30^\circ$).
- In addition, the maximum swivel range for all oscillating mirror devices of the BCL 500*i*/series is reduced to $\pm 12^\circ$ (without heating = $\pm 20^\circ$).
- The reading field curves and opening angles are unchanged for all line scanners with heating of the BCL 500*i*/series.

For details, please refer to the following reading field curves for the heating devices.

15.7.1 High Density (N) - optics: BCL 548*i*/SN 102 H

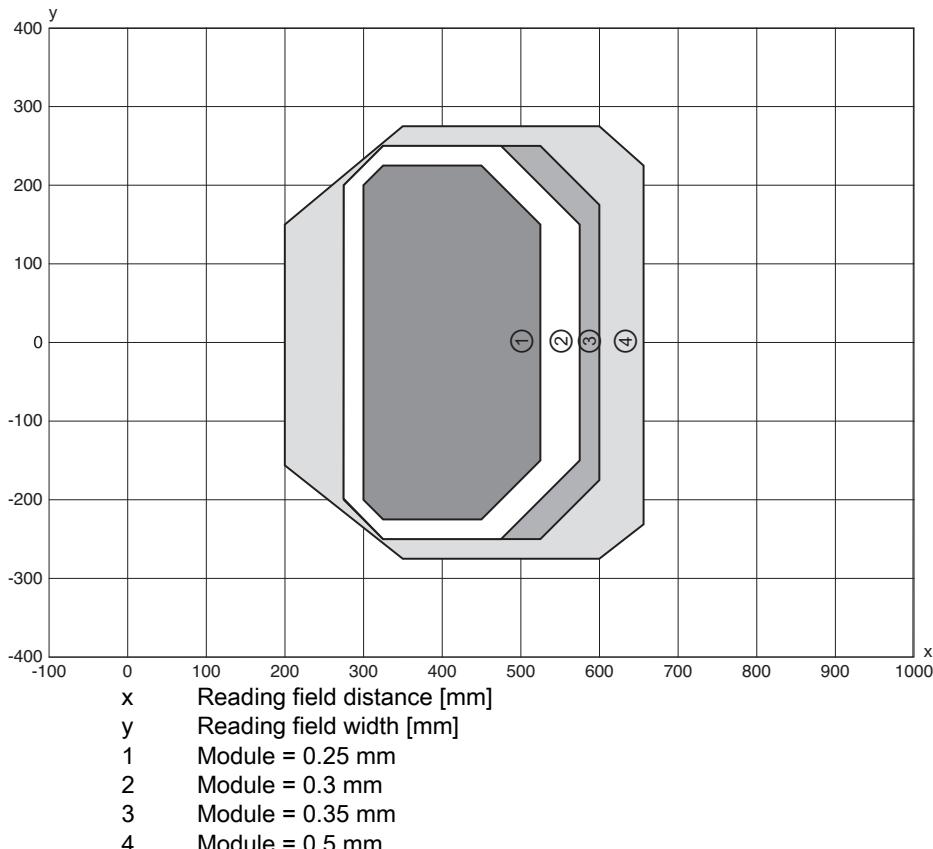


Figure 15.20: "High Density" reading field curve for line scanner with heating

The reading field curve applies for the reading conditions stated in Table 15.5.

15.7.2 High Density (N) - optics: BCL 548*/*ON 100 H

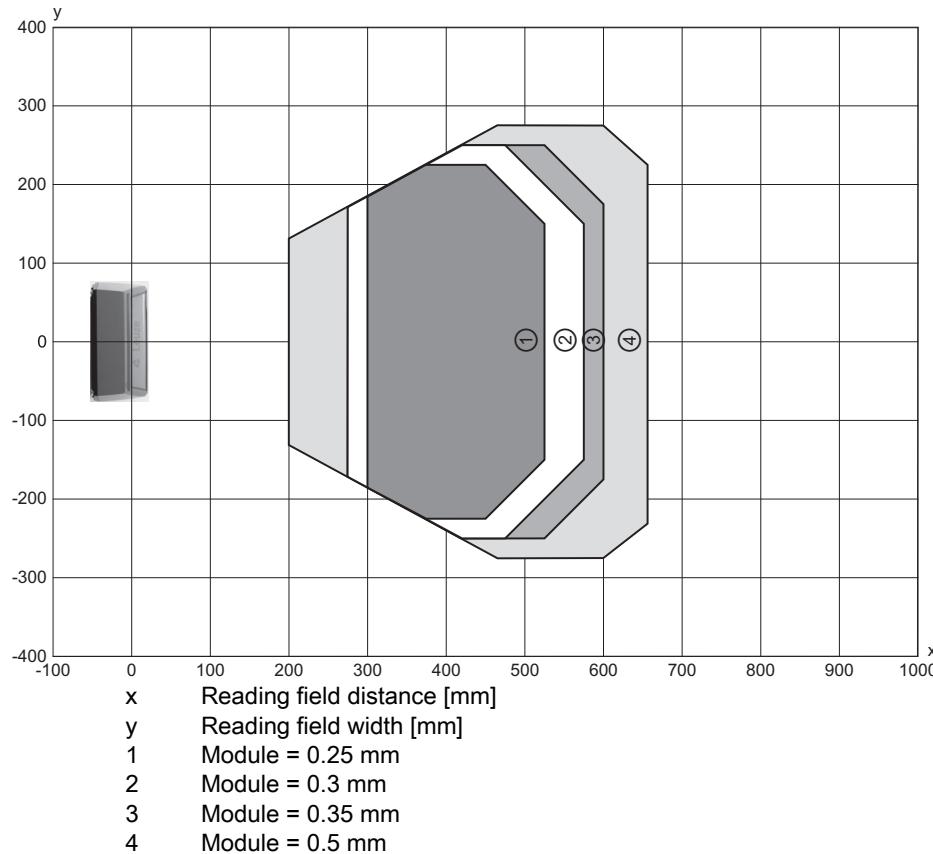


Figure 15.21: "High Density" reading field curve for oscillating-mirror scanners with heating

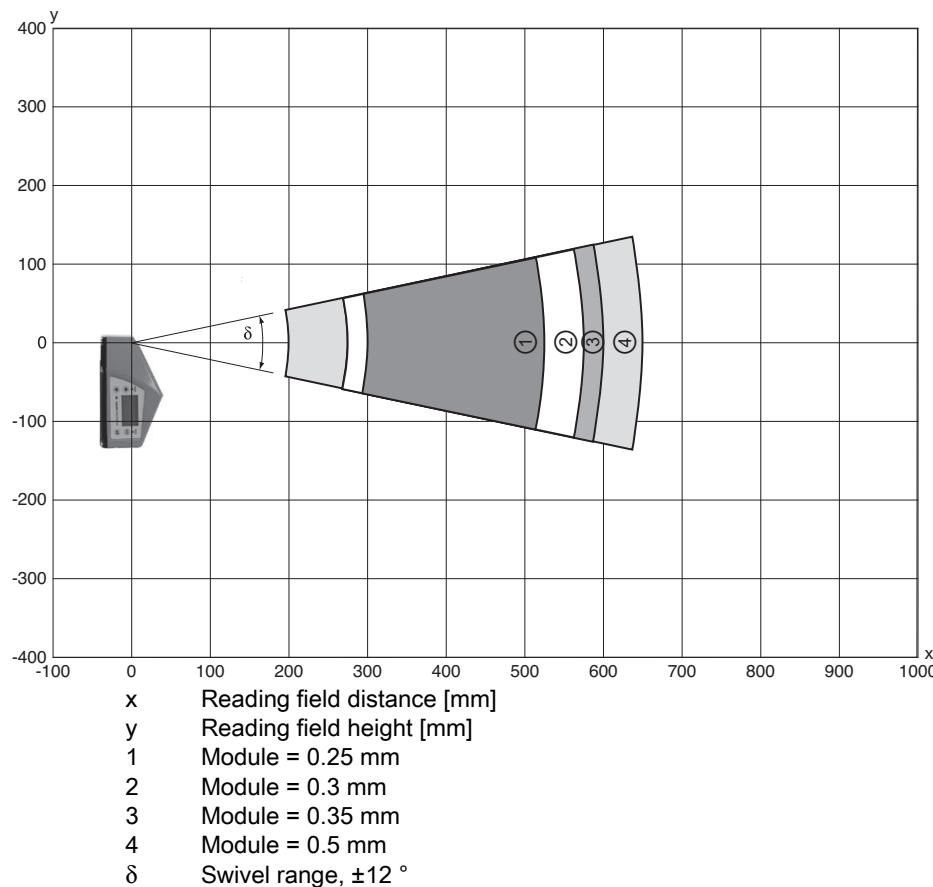


Figure 15.22: Lateral "High Density" reading field curve for oscillating-mirror scanners with heating

The reading field curves apply for the reading conditions stated in Table 15.5.

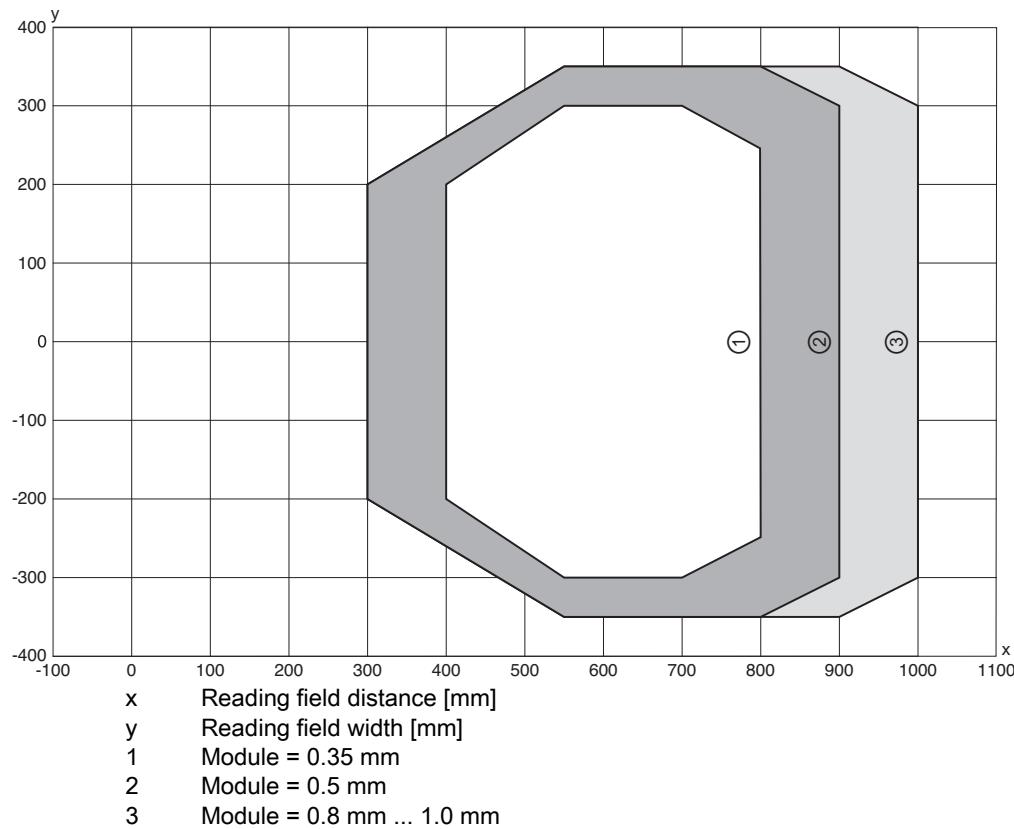
15.7.3 Medium Density (M) - optics: BCL 548*/*SM 102 H

Figure 15.23: "Medium Density" reading field curve for line scanner with heating

The reading field curves apply for the reading conditions stated in Table 15.5.

15.7.4 Medium Density (M) - optics: BCL 548*/*OM 100 H

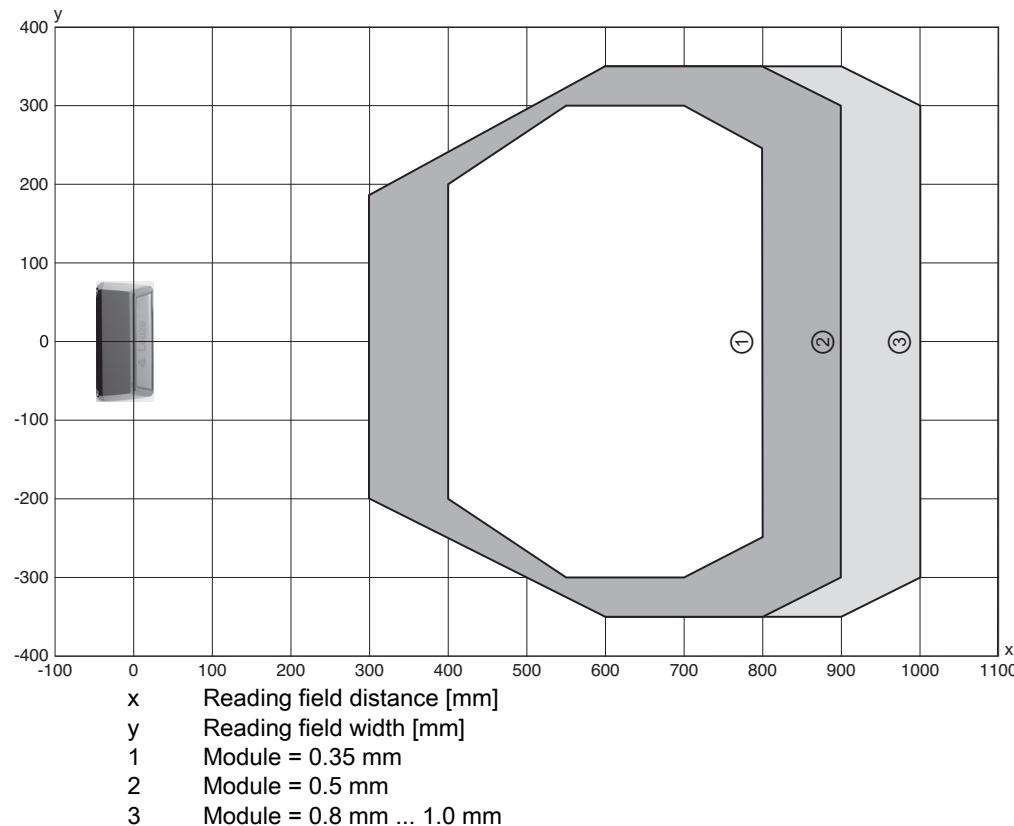


Figure 15.24: "Medium Density" reading field curve for oscillating-mirror scanners with heating

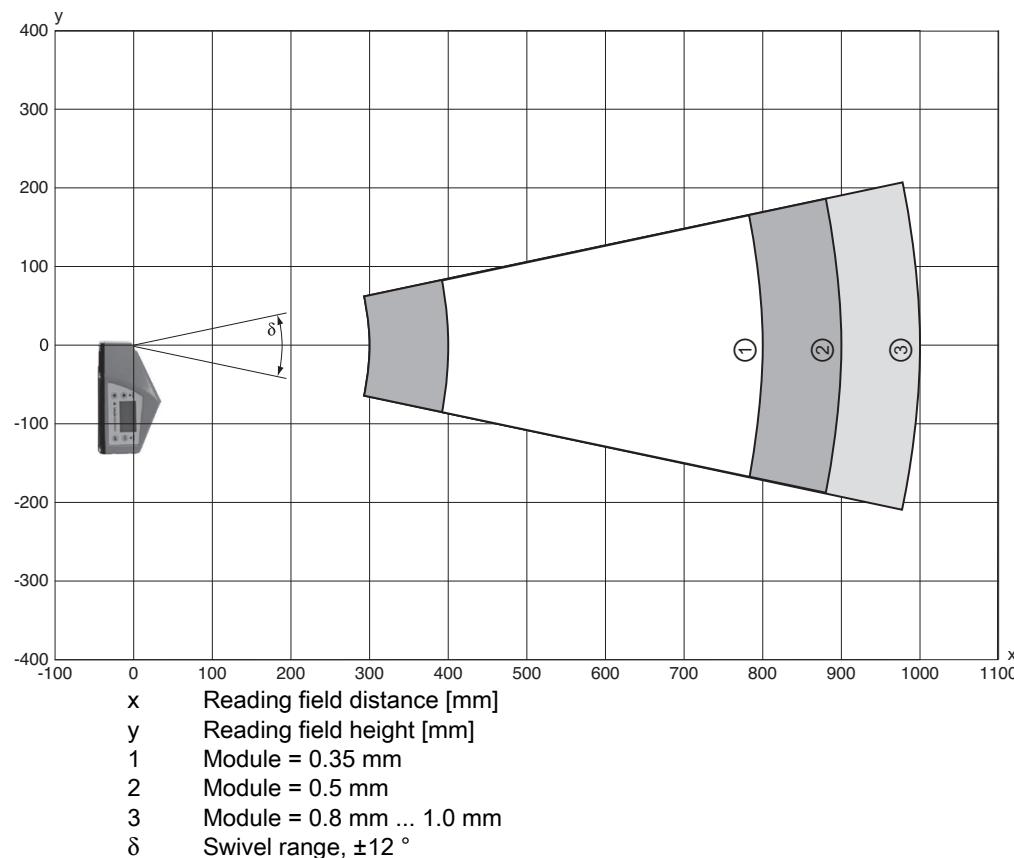


Figure 15.25: Lateral "Medium Density" reading field curve for oscillating-mirror scanners with heating

The reading field curves apply for the reading conditions stated in Table 15.5.

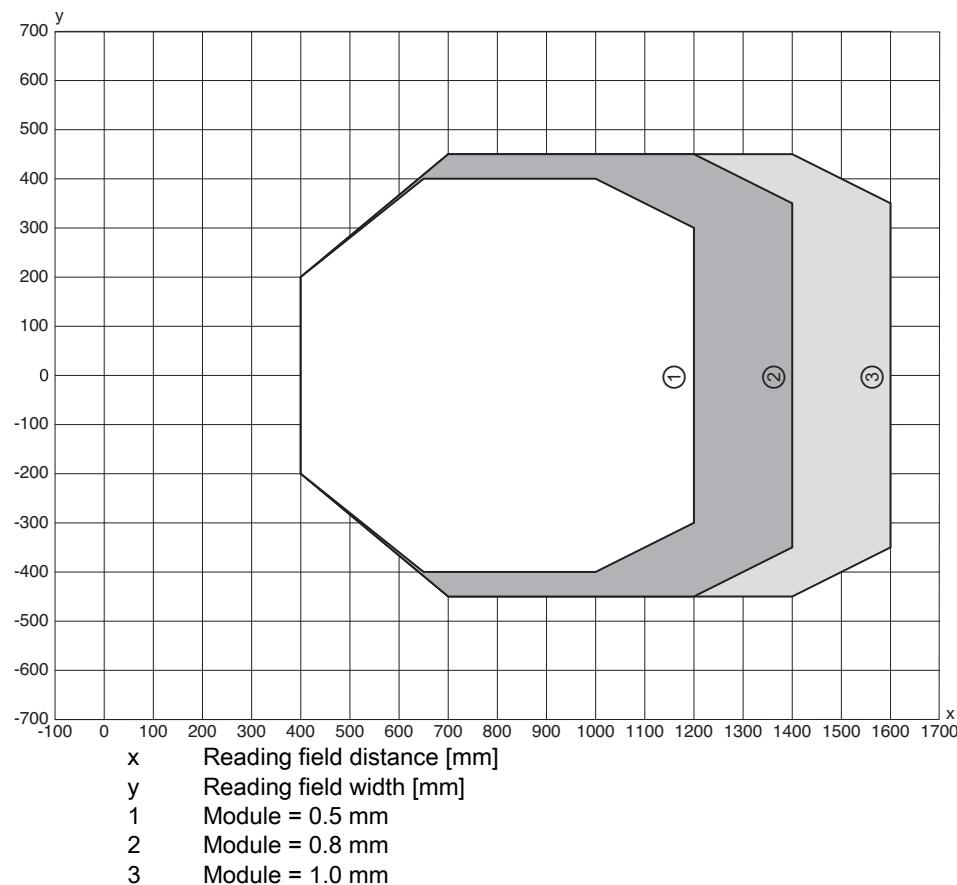
15.7.5 Low Density (F) - optics: BCL 548/SF 102 H

Figure 15.26: "Low Density" reading field curve for line scanner with heating

The reading field curves apply for the reading conditions stated in Table 15.5.

15.7.6 Low Density (F) - optics: BCL 548/OF 100 H

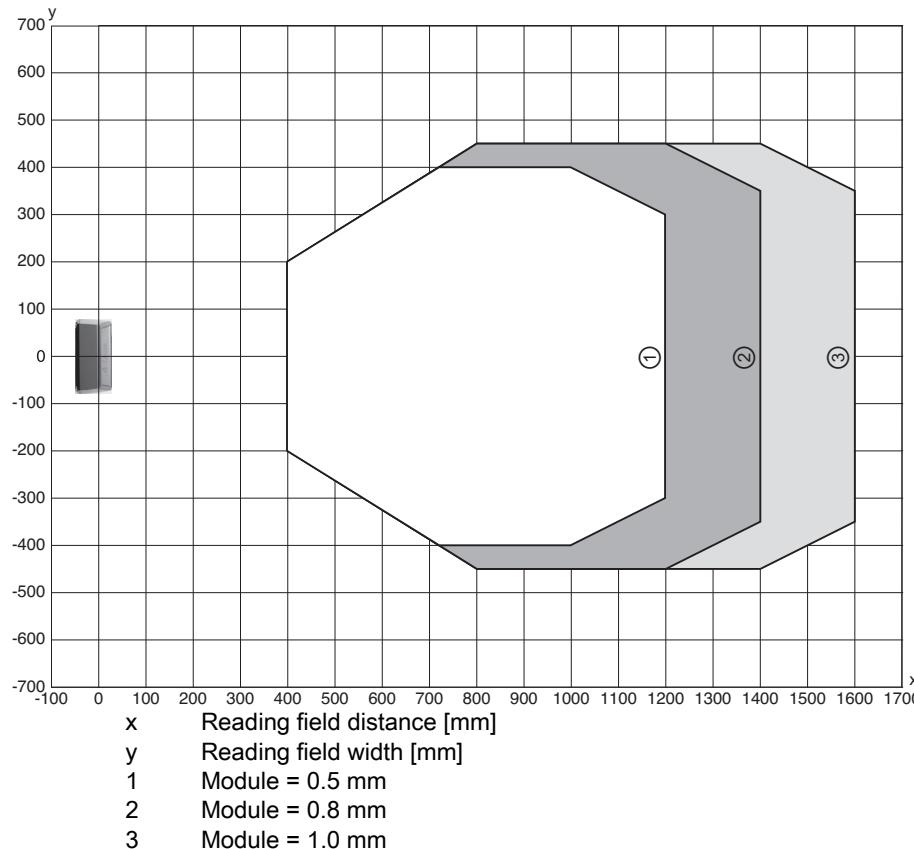


Figure 15.27: "Low Density" reading field curve for oscillating-mirror scanners with heating

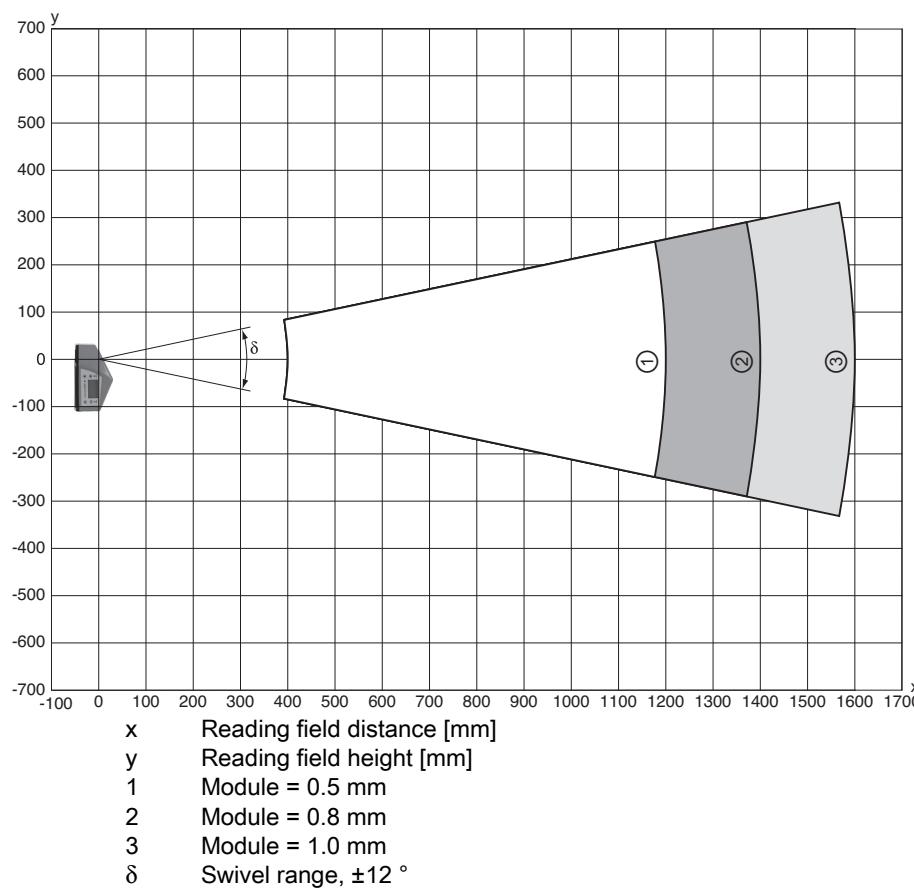


Figure 15.28: Lateral "Low Density" reading field curve for oscillating-mirror scanners with heating

The reading field curves apply for the reading conditions stated in Table 15.5.

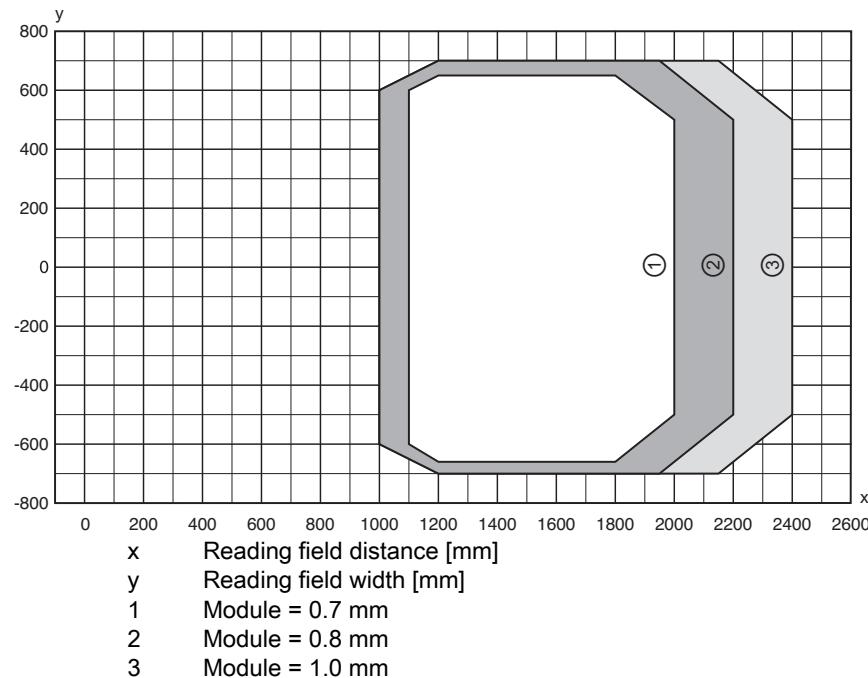
15.7.7 Ultra Low Density (L) - optics: BCL 548/SL 102 H****

Figure 15.29: "Ultra Low Density" reading field curve for line scanner with heating

The reading field curves apply for the reading conditions stated in Table 15.5.

15.7.8 Ultra Low Density (L) - optics: BCL 548/OL 100 H

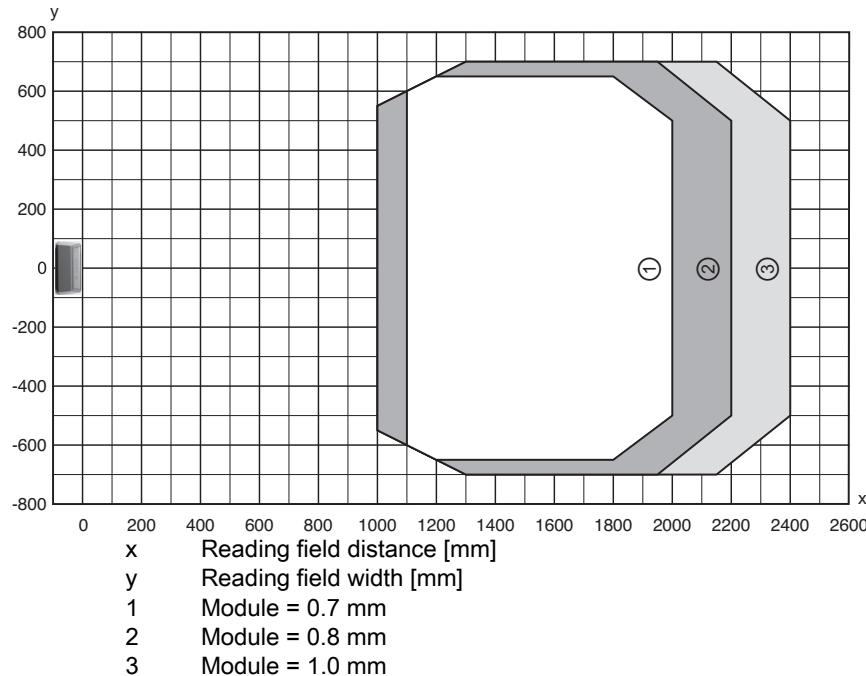


Figure 15.30: "Ultra Low Density" reading field curve for oscillating-mirror scanners with heating

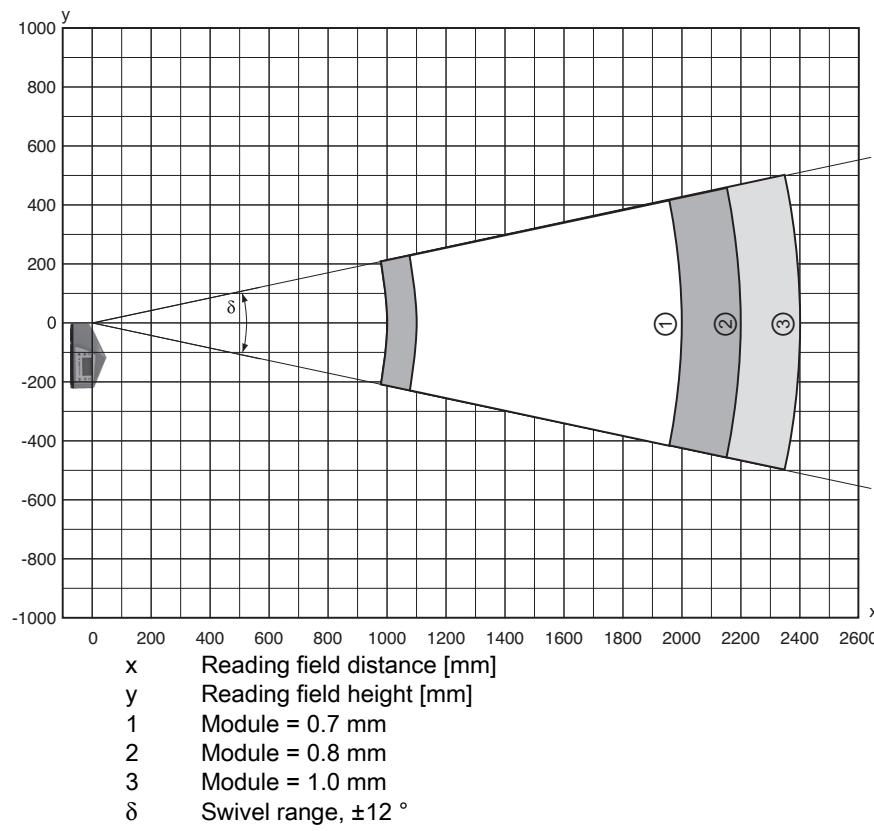


Figure 15.31: Lateral "Ultra Low Density" reading field curve for oscillating-mirror scanners with heating

The reading field curves apply for the reading conditions stated in Table 15.5.

16 Order guide and accessories

16.1 Part number code

Table 16.1: Part number code

BCL	5	00	/	O	M	100	H	
Heating option								H = With heating
Beam exit	0							Lateral
	2							At the front
Optics								
	N							High Density (close)
	M							Medium Density (medium distance)
	F							Low Density (large distance)
	L							Ultra Low Density (very large distances)
Scanning principle								
	S							Line scanner (single line)
	O							Oscillating-mirror scanner
/= integrated fieldbus technology								
Interface								
	00							RS 232/RS 422/RS 485 (multiNet master)
	01							RS 485 (multiNet slave)
	04							PROFIBUS DP
	08							ETHERNET TCP/IP, UDP
	48							PROFINET-IO RT
	58							Ethernet/IP
Series: BCL5xx/								
BCL Bar code reader								

16.2 Overview of BCL 548*/types*

PROFINET-IO to 2x M12 D-coded

Table 16.2: Overview of BCL 548*/types*

Type designation	Description	Part no.
High Density optics (m = 0.25 ... 0.5mm)		
BCL 548/SN 102	Line scanner, front beam exit	50113183
BCL 548/ON 100	Oscillating-mirror scanner	50113199
BCL 548/SN 102 H	Line scanner, front beam exit, with heating	50113184
BCL 548/ON 100 H	Oscillating-mirror scanner with heating	50113200
Medium Density optics (m = 0.35 ... 1.0mm)		
BCL 548/SM 102	Line scanner, front beam exit	50113187
BCL 548/OM 100	Oscillating-mirror scanner	50113201
BCL 548/SM 102 H	Line scanner, front beam exit, with heating	50113188
BCL 548/OM 100 H	Oscillating-mirror scanner with heating	50113202
Low Density optics (m = 0.5 ... 1.0mm)		
BCL 548/SF 102	Line scanner, front beam exit	50113195
BCL 548/OF 100	Oscillating-mirror scanner	50113205
BCL 548/SF 102 H	Line scanner, front beam exit, with heating	50113196
BCL 548/OF 100 H	Oscillating-mirror scanner with heating	50113206
Ultra Low Density optics (m = 0.7 ... 1.0mm)		
BCL 548/SL 102	Line scanner, front beam exit	50113191
BCL 548/OL 100	Oscillating-mirror scanner	50113203
BCL 548/SL 102 H	Line scanner, front beam exit, with heating	50113192
BCL 548/OL 100 H	Oscillating-mirror scanner with heating	50113204

16.3 Accessories

Table 16.3: Accessories – Connectors

Type designation	Description	Part no.
KD 095-5A	M12 socket for voltage supply	50020501
KS 095-4A	M12 connector for SW IN/OUT	50040155
D-ET1	RJ45 connector for user-configuration	50108991
KDS ET M12 / RJ 45 W - 4P	Converter from M12, D-coded, to RJ 45 socket	50109832
S-M12A-ET	Ethernet connector, M12 axial. Connector, 4-pin, D-coded	50112155

Table 16.4: Accessories – Cables

Type designation	Description	Part no.
KB USB-Service	USB service cable	50107726

Table 16.5: Accessories – External parameter memory

Type designation	Description	Part no.
USB Memory Set	External USB parameter memory	50108833

Table 16.6: Mounting device accessories

Type designation	Description	Part no.
BT 56	Mounting device for rod	50027375
BT 59	Mounting device for ITEM	50111224

Table 16.7: Accessory - Reflector for AutoReflAct

Type designation	Description	Part no.
Reflective tape no. 4 / 100 x 100 mm	Reflective tape as reflector for AutoReflAct operation	50106119

17 Appendix

17.1 ASCII character set


ASCII	Dec.	Hex.	Oct.	Designation	Meaning
NUL	0	00	0	ZERO	Zero
SOH	1	01	1	START OF HEADING	Start of heading
STX	2	02	2	START OF TEXT	Start of text characters
ETX	3	03	3	END OF TEXT	Last character of text
EOT	4	04	4	END OF TRANSMISS.	End of transmission
ENQ	5	05	5	ENQUIRY	Request for data trans.
ACK	6	06	6	ACKNOWLEDGE	Positive acknowledgment
BEL	7	07	7	BELL	Bell signal
BS	8	08	10	BACKSPACE	Backspace
HT	9	09	11	HORIZ. TABULATOR	Horizontal tabulator
LF	10	0A	12	LINE FEED	Line feed
VT	11	0B	13	VERT. TABULATOR	Vertical tabulator
FF	12	0C	14	FORM FEED	Form feed
CR	13	0D	15	CARRIAGE RETURN	Carriage return
SO	14	0E	16	SHIFT OUT	Shift out
SI	15	0F	17	SHIFT IN	Shift in
DLE	16	10	20	DATA LINK ESCAPE	Data link escape
DC1	17	11	21	DEVICE CONTROL 1	Device control character 1
DC2	18	12	22	DEVICE CONTROL 2	Device control character 2
DC3	19	13	23	DEVICE CONTROL 3	Device control character 3
DC4	20	14	24	DEVICE CONTROL 4	Device control character 4
NAK	21	15	25	NEG. ACKNOWLEDGE	Negative acknowledge
SYN	22	16	26	SYNCHRONOUS IDLE	Synchronization
ETB	23	17	27	EOF TRANSM. BLOCK	End of data transmission block
CAN	24	18	30	CANCEL	Invalid
EM	25	19	31	END OF MEDIUM	End of medium
SUB	26	1A	32	SUBSTITUTE	Substitution
ESC	27	1B	33	ESCAPE	Escape
FS	28	1C	34	FILE SEPARATOR	File separator
GS	29	1D	35	GROUP SEPARATOR	Group separator
RS	30	1E	36	RECORD SEPARATOR	Record separator
US	31	1F	37	UNIT SEPARATOR	Unit separator
SP	32	20	40	SPACE	Space character
!	33	21	41	EXCLAMATION POINT	Exclamation point
"	34	22	42	QUOTATION MARK	Quotation mark
#	35	23	43	NUMBER SIGN	Number sign
\$	36	24	44	DOLLAR SIGN	Dollar sign
%	37	25	45	PERCENT SIGN	Percent sign
&	38	26	46	AMPERSAND	Ampersand
'	39	27	47	APOSTROPHE	Apostrophe
(40	28	50	OPEN. PARENTHESIS	Open parenthesis
)	41	29	51	CLOS. PARENTHESIS	Closed parenthesis
*	42	2A	52	ASTERISK	Asterisk
+	43	2B	53	PLUS	Plus sign
,	44	2C	54	COMMA	Comma
-	45	2D	55	HYPHEN (MINUS)	Hyphen
.	46	2E	56	PERIOD (DECIMAL)	Period (decimal)
/	47	2F	57	SLANT	Slant
0	48	30	60	0	Number
1	49	31	61	1	Number
2	50	32	62	2	Number

ASCII	Dec.	Hex.	Oct.	Designation	Meaning
3	51	33	63	3	Number
4	52	34	64	4	Number
5	53	35	65	5	Number
6	54	36	66	6	Number
7	55	37	67	7	Number
8	56	38	70	8	Number
9	57	39	71	9	Number
:	58	3A	72	COLON	Colon
;	59	3B	73	SEMICOLON	Semicolon
<	60	3C	74	LESS THAN	Less than
=	61	3D	75	EQUALS	Equals
>	62	3E	76	GREATER THAN	Greater than
?	63	3F	77	QUESTION MARK	Question mark
@	64	40	100	COMMERCIAL AT	Commercial AT
A	65	41	101	A	Capital letter
B	66	42	102	B	Capital letter
C	67	43	103	C	Capital letter
D	68	44	104	D	Capital letter
E	69	45	105	E	Capital letter
F	70	46	106	F	Capital letter
G	71	47	107	G	Capital letter
H	72	48	110	H	Capital letter
I	73	49	111	I	Capital letter
J	74	4A	112	J	Capital letter
K	75	4B	113	K	Capital letter
L	76	4C	114	L	Capital letter
M	77	4D	115	M	Capital letter
N	78	4E	116	N	Capital letter
O	79	4F	117	O	Capital letter
P	80	50	120	P	Capital letter
Q	81	51	121	Q	Capital letter
R	82	52	122	R	Capital letter
S	83	53	123	S	Capital letter
T	84	54	124	T	Capital letter
U	85	55	125	U	Capital letter
V	86	56	126	V	Capital letter
W	87	57	127	W	Capital letter
X	88	58	130	X	Capital letter
Y	89	59	131	Y	Capital letter
Z	90	5A	132	Z	Capital letter
[91	5B	133	OPENING BRACKET	Opening bracket
\	92	5C	134	REVERSE SLANT	Reverse slant
]	93	5D	135	CLOSING BRACKET	Closing bracket
^	94	5E	136	CIRCUMFLEX	Circumflex
_	95	5F	137	UNDERSCORE	Underscore
'	96	60	140	GRAVE ACCENT	Grave accent
a	97	61	141	a	Lower case letter
b	98	62	142	b	Lower case letter
c	99	63	143	c	Lower case letter
d	100	64	144	d	Lower case letter
e	101	65	145	e	Lower case letter
f	102	66	146	f	Lower case letter
g	103	67	147	g	Lower case letter
h	104	68	150	h	Lower case letter
i	105	69	151	i	Lower case letter

ASCII	Dec.	Hex.	Oct.	Designation	Meaning
j	106	6A	152	j	Lower case letter
k	107	6B	153	k	Lower case letter
l	108	6C	154	l	Lower case letter
m	109	6D	155	m	Lower case letter
n	110	6E	156	n	Lower case letter
o	111	6F	157	o	Lower case letter
p	112	70	160	p	Lower case letter
q	113	71	161	q	Lower case letter
r	114	72	162	r	Lower case letter
s	115	73	163	s	Lower case letter
t	116	74	164	t	Lower case letter
u	117	75	165	u	Lower case letter
v	118	76	166	v	Lower case letter
w	119	77	167	w	Lower case letter
x	120	78	170	x	Lower case letter
y	121	79	171	y	Lower case letter
z	122	7A	172	z	Lower case letter
{	123	7B	173	OPENING BRACE	Opening brace
	124	7C	174	VERTICAL LINE	Vertical line
}	125	7D	175	CLOSING BRACE	Closing brace
~	126	7E	176	TILDE	Tilde
DEL	127	7F	177	DELETE (RUBOUT)	Delete

17.2 Bar code samples

17.2.1 Module 0.3

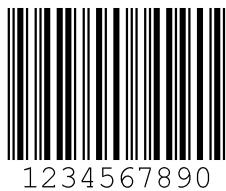

1234567890

Figure 17.1: Code type 01: Interleaved 2 of 5



135AC

Figure 17.2: Code type 02: Code 39



Figure 17.3: Code type 06: UPC-A



Figure 17.4: Code type 07: EAN 8

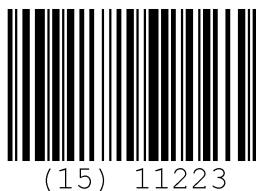


Figure 17.5: Code type 08: EAN 128

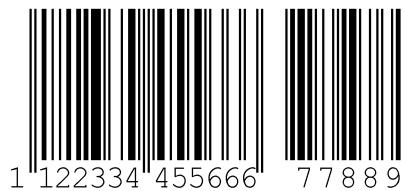


Figure 17.6: Code type 10: EAN 13 Add-on

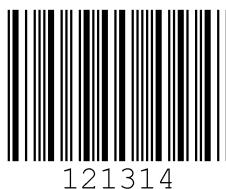


Figure 17.7: Code type 11: Codabar



Figure 17.8: Code 128

17.2.2 Module 0.5

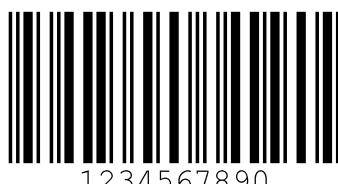


Figure 17.9: Code type 01: Interleaved 2 of 5

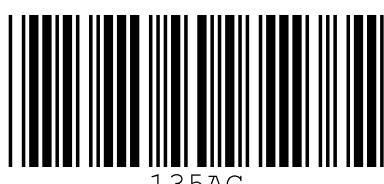


Figure 17.10: Code type 02: Code 39



Figure 17.11: Code type 06: UPC-A

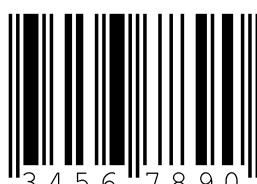


Figure 17.12: Code type 07: EAN 8



Figure 17.13: Code type 08: EAN 128



Figure 17.14: Code type 10: EAN 13 Add-on

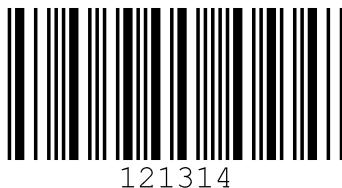


Figure 17.15: Code type 11: Codabar

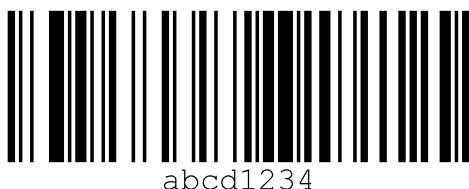


Figure 17.16: Code 128

Level 1	Level 2	Level 3	Level 4	Level 5	Selection/configuration option	Detailed information on
					④ : Selection ④ : Selection ④ : Back	
Device information						see page 47
Bar code reading window						see page 20
Parameter	④ Parameter handling ④ Decoder table	④ Parameter enable ④ Parameters to default ④ Max. no. of labels ④ Decoder 1-4 ④ Symbology ④ Number of digits ④ Reading reliability ④ Check digit method ④ Check digit transm.		OFF/ON All parameters are reset to their factory settings Set the number of labels to be decoded (0 to 64) Code type: no code / Code 2/5 Interleaved / Code 39 / Code 32 / Code UPC / Code EAN / Code 128 / EAN Addendum / Codabar / Code 93 / GS1 DataBar Omnidirectional / GS1 DataBar Limited / GS1 DataBar Expanded OFF / ON for specification of a range of the number of digits 0 ... 64 characters 2 ... 100 When decoding used check digit methods Check digit transmission standard-compliant / non standard-compliant		see page 48
	④ Digital SWIO	④ Switching input / output 1-4	④ I/O mode ④ Switching input ④ Switching output	Input / Output / Passive Inverted Debounce time Switch-on delay Pulse duration Switch-off delay Function	OFF / ON 0 ... 1000ms 0 ... 65535ms 0 ... 65535ms 0 ... 65535ms Function executed when the switching input is activated	see page 50
	④ Ethernet	④ Ethernet interface ④ Host communication	④ IP address ④ Gateway ④ Net mask ④ DHCP activated ④ TCP/IP ④ UDP	Address of the device Gateway for the device Net mask for the subnet of the device Off/On Activated Mode Keep-alive interval TCP/IP client TCP/IP server	Address of the device Gateway for the device Net mask for the subnet of the device Off/On Off/On Server/client mode of TCP/IP communication of the device Monitoring of communication of a network participant using a sign-of-life Further host settings: IP addr., port number, timeout, repetition time Port number of the device for TCP/IP queries	see page 53
Language selection	④				Deutsch / English / Español / Français / Italiano	see page 54
Service	④ Diagnosis ④ Status messages				Number of readings, reading gates, reading rate / non-reading rate etc. Only for use by Leuze personnel for service purposes	see page 55

Actions	(Start decoding	Stop decoding		Performs a single read operation	see page 55
	(Start alignment	Stop alignment		Alignment aid (alignment mode)	
	(Start auto setup	Stop auto setup		Automatic determination of code type and number of digits	
	(Start teach-in	Stop teach-in		Teach-in one reference code	
	(Start code recognition	Stop code recognition		Teach-in one reference code	