


Translation of original operating instructions

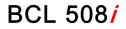

Bar code readers



© 2024 Leuze electronic GmbH + Co. KG In der Braike 1 D-73277 Owen / Germany Phone: +49 7021 573-0 Fax: +49 7021 573-199 http://www.leuze.com info@leuze.de



The main menus	BCL508i SF 102 Leuze electronic GmbH & Co. KG SW: V 1.8.0 HW:3 SN: 1009A009815 001 Network settings Channel 1: Addr: 192.168.60.101 Mask: 255.255.255.0 Gateway: 0.0.0	 Device information - main menu Information about Device type Software version Hardware version Serial number Main menu Display of the network settings Display of the network settings. See "Ethernet" on page 50.
	() ()	Main menu Bar code reading window Visualization of the read bar code information. See "Indicators in the display" on page 19.
Device buttons: Navigate upward/sideways Navigate downward/sideways (SSCAPE leave (APPE) (Confirm	Parameter Parameter handling Decoder table Digital SWIO Ethernet	Parameter - main menu Parameterization of the bar code reader. See "Parameter menu" on page 46.
_	Language selection o Deutsch • English o Español o Français o Italiano	Language selection - main menu Selection of the display language. See "Language selection menu" on page 51.
Input of values 12 <- 0123456789	Service Diagnosis Status messages	Service - main menu Scanner diagnostics and status messages. See "Service menu" on page 52.
Image: Harmonic field Delete character Image: Harmonic field Enter digit Save + Image: Save input Save input	Actions o Start decoding o start alignment o Start auto setup o Start teach-in	Main menu Actions Various functions for scanner configuration and manual oper- ation. See "Actions menu" on page 52.
Off Devi	ice OFF ice ok, initialization phase ice ok	Off No supply voltage Flashes green Initialization Green, continuous Operation ok light



Flashes red

light

Orange, continuous light

Service mode

Device ok, warning set Red, continuous Device error



Flashes orange

Flashes red Red, continuous light

Communication error Network error

Timeout

1 General information		eral information
	1.1	Explanation of symbols 11
	1.2	Declaration of Conformity
2	Safe	ety
	2.1	Intended use
	2.2	Foreseeable misuse
	2.3	Competent persons
	2.4	Exemption of liability
	2.5	Laser safety notices
3	Devi	ice description
	3.1	Device overview
	3.2	Performance characteristics
	3.3	Device construction
	3.4	Connection technology
	3.5	Display elements
	3.5.1	Structure of the control panel
	3.5.2	Status indicators and operation 19
	3.5.3	
	3.6	Control buttons
	3.7	External parameter memory 21
4	Fund	ctions
	4.1	autoReflAct
	4.2	Reference codes
	4.3	autoConfig
	4.4	Heating
5	Rea	ding techniques
	5.1	Line scanner (single line)
	5.2	Line scanner with oscillating mirror
	5.3	Omnidirectional reading
	5.4	Leuze multiScan over Ethernet/PROFINET
6	Mou	nting
	6.1	Device arrangement
	6.1.1 6.1.2	Selecting a mounting location 29 Avoiding total reflection – Line scanner 29
	6.1.3	
	6.1.4	Mounting location
	6.1.5	6 6
	6.1.6	5
	6.2	Installing the external parameter memory
7	Elec	trical connection
	7.1	Safety notices for the electrical connection
	7.2	Electrical connection of the device
	7.2.1	PWR – Voltage supply and switching inputs/outputs 3 and 4
	7.2.2 7.2.3	
	7.2.4	

	7.2.5 BUS OUT	41
	7.3 Ethernet topologies	
	7.4 Cable lengths and shielding	
8	Menu description	45
	8.1 The main menus	45
	8.2 Parameter menu	46
	8.3 Language selection menu	51
	8.4 Service menu	
	8.5 Actions menu	
	8.6 Operation	54
9	Starting up the device – Leuze webConfig tool	55
•	9.1 Connecting the SERVICE USB interface	
	9.2 Installing the required software	
	9.2.1 System requirements	
	9.2.2 Installing the USB driver	
	9.3 Starting the webConfig tool	
	9.4 Short description of the webConfig tool.	
	9.4.1 Module overview in the Configuration menu	57
10	Starting up the device - Configuration	59
	10.1 Measures to be performed prior to the initial commissioning	
	10.2 Starting the device	
	10.3 Setting the communication parameters	59
	10.3.1 Manual configuration of the IP address	
	10.3.2 Automatically setting the IP address 10.3.3 Address Link Label	
	10.3.4 Ethernet host communication	
	10.3.5 TCP/IP	
	10.3.6 UDP	
	10.4 Further settings	
	10.4.1Decoding and processing the read data10.4.2Control of the decoding	
	10.4.3 Control of the switching outputs	
	10.5 Transmitting configuration data	64
	10.5.1 Via the webConfig tool	
	10.5.2 With the external parameter memory	65
11	Online commands	66
	11.1 Overview of commands and parameters	66
	11.1.1 General online commands	
	11.1.2 Online commands for system control	
	11.1.3 Online commands for configuring the switching inputs/outputs.11.1.4 Online commands for the parameter set operations.	
12	Care, maintenance and disposal	
	12.1 Cleaning	
	12.2 Repairs, servicing	
	12.3 Disposing	76
13	Diagnostics and troubleshooting	77
	13.1 General causes of errors	

	13.2 Interface errors	77
14	Support	78
15	Technical data 15.1 General specifications of the bar code readers. 15.1.1 Line scanner 15.1.2 Oscillating-mirror scanner 15.2 Heating models of the bar code readers. 15.2.1 Line scanner with heater 15.2.2 Oscillating-mirror scanner with heating 15.3.1 Line scanner with / without heating 15.3.2 Oscillating-mirror scanner with/without heating. 15.3.4 Dimensioned drawings 15.3.5 Reading field curves / optical data. 15.6 Reading field curves / optical data. 15.6.2 High Density (N) - optics: BCL 508/SN 102 15.6.3 Medium Density (M) - optics: BCL 508/SN 102 15.6.4 Medium Density (M) - optics: BCL 508/SM 102 15.6.5 Low Density (M) - optics: BCL 508/SM 102 15.6.6 Low Density (F) - optics: BCL 508/SK 102 15.6.7 Ultra Low Density (L) - optics: BCL 508/OF 100 15.7 Reading field curves for heating devices 15.7.1 High Density (N) - optics: BCL 508/SL 102 15.6.8 Ultra Low Density (L) - optics: BCL 508/SM 102 H 15.7.2 High Density (M) - optics: BCL 508/SN 102 H	79 79 81 82 83 84 85 86 87 88 80 91 92 93 94 95 96 97 97 98 90 100 101 102 103
16	16.1 Part number code 16.2 Overview of BCL 508/types 16.3 Accessories	105 106
17		107 109 109

Table 1.1:	Warning symbols and signal words	11
Table 1.2:	Other symbols	
Figure 2.1:	Attaching stick-on labels with warning notices	
	(top: with oscillating mirror, bottom: line scanners)	14
Figure 3.1:	Line scanner and oscillating-mirror scanner	15
Figure 3.2:	Device construction	17
Figure 3.3:	Location of the electrical connections	18
Figure 3.4:	Structure of the control panel	18
Table 3.1:	Status displays of the switching inputs/outputs	19
Table 3.2:	Status display of the USB interface	19
Table 3.3:	Link status of the Ethernet interface	19
Figure 4.1:	Possible bar code orientation	22
Figure 4.2:	Reflector arrangement for autoReflAct	23
Figure 5.1:	Deflection principle for the line scanner	25
Figure 5.2:	Deflection principle for the line scanner with oscillating mirror add-on	26
Figure 5.3:	Principle arrangement for omnidirectional reading	27
Figure 5.4:	Scanner arrangement with the multiScan function	28
Figure 6.1:	Total reflection – line scanner	30
Figure 6.2:	Total reflection – oscillating-mirror scanner	30
Figure 6.3:	Reading angle for the line scanner	31
Figure 7.1:	Location of the electrical connections	33
Figure 7.2:	Connections of the device	34
Figure 7.3:	PWR, M12 connector (A-coded)	35
Table 7.1:	Pin assignments - PWR	35
Figure 7.4:	Switching input connection diagram SWIO_3 and SWIO_4	36
Figure 7.5:	Switching output connection diagram SWIO_3 / SWIO_4	36
Figure 7.6:	Service, USB, type A	37
Table 7.2:	Pin assignments of SERVICE – USB interface	37
Figure 7.7:	SW IN/OUT, M12 socket (A-coded)	38
Table 7.3:	Pin assignment SW IN/OUT	38
Figure 7.8:	Switching input connection diagram SWIO_1 and SWIO_2	38
Figure 7.9:	Switching output connection diagram SWIO_1 / SWIO_2	39
Figure 7.10:	Host/BUS IN, M12 socket (D-coded)	40
Table 7.4:	Pin assignment HOST / BUS IN	40
Figure 7.11:	HOST / BUS IN cable assignments on RJ-45	40
Figure 7.12:	M12 socket (D-coded)	41
Table 7.5:	Pin assignment BUS OUT	41
Figure 7.13:	Ethernet in a star topology	42
Figure 7.14:	Ethernet in a linear topology	43
Table 7.6:	Contact assignment of M12 Ethernet connection cable	43
Table 7.7:	Cable lengths and shielding	44
Table 8.1:	Parameter handling submenu	46
Table 8.2:	Decoder table submenu	46
Table 8.3:	Digital SWIO submenu	48
Table 8.4:	Ethernet submenu	50
Table 9.1:	webConfig system requirements	55
Figure 9.1:	The start page of the webConfig tool	56
Figure 9.2:	Module overview in the webConfig tool	57

Figure 10.1:	Example of an Address Link Label, the device type varies depending on the	
	series	61
Table 13.1:	General causes of errors	77
Table 13.2:	Interface error	77
Table 15.1:	Technical data of the BCL 508/line scanners without heating	79
Table 15.2:	Technical data of the BCL 508/oscillating-mirror scanners with heating	81
Table 15.3:	Technical data of the BCL 508/line scanners with heating	82
Table 15.4:	Technical data of the BCL 508/oscillating-mirror scanners with heating	83
Figure 15.1:	Dimensioned drawing - line scanner	84
Figure 15.2:	Dimensioned drawing of oscillating-mirror scanner	85
Figure 15.3:	BT 56 mounting device	86
Figure 15.4:	BT 59 mounting device	86
Figure 15.5:	External parameter memory	87
Figure 15.6:	The most important characteristics of a bar code	87
Figure 15.7:	Zero position of the reading distance	88
Table 15.5:	Reading conditions	88
Figure 15.8:	"High Density" reading field curve for line scanner	89
Figure 15.9:	"High Density" reading field curve for oscillating-mirror scanners	90
Figure 15.10:	Lateral "High Density" reading field curve for oscillating-mirror scanners	90
Figure 15.11:	"Medium Density" reading field curve for line scanner	91
Figure 15.12:	"Medium Density" reading field curve for oscillating-mirror scanners	92
Figure 15.13:	Lateral "Medium Density" reading field curve for oscillating-mirror scanners	92
Figure 15.14:	"Low Density" reading field curve for line scanner	93
Figure 15.15:	"Low Density" reading field curve for oscillating-mirror scanners	94
Figure 15.16:	Lateral "Low Density" reading field curve for oscillating-mirror scanners	94
Figure 15.17:	"Ultra Low Density" reading field curve for line scanner	95
Figure 15.18:	"Ultra Low Density" reading field curve for oscillating-mirror scanners	96
Figure 15.19:	Lateral "Ultra Low Density" reading field curve for oscillating-mirror scanners	96
Figure 15.20:	"High Density" reading field curve for line scanner with heating	97
Figure 15.21:	"High Density" reading field curve for oscillating-mirror scanners with heating	98
Figure 15.22:	Lateral "High Density" reading field curve for oscillating-mirror scanners with	
	heating	98
Figure 15.23:	"Medium Density" reading field curve for line scanner with heating	99
Figure 15.24:	"Medium Density" reading field curve for oscillating-mirror scanners with heating	. 100
Figure 15.25:	Lateral "Medium Density" reading field curve for oscillating-mirror scanners with	
	heating	. 100
Figure 15.26:	"Low Density" reading field curve for line scanner with heating	. 101
Figure 15.27:	"Low Density" reading field curve for oscillating-mirror scanners with heating	. 102
Figure 15.28:	Lateral "Low Density" reading field curve for oscillating-mirror scanners with	
	heating	. 102
Figure 15.29:	"Ultra Low Density" reading field curve for line scanner with heating	. 103
Figure 15.30:	"Ultra Low Density" reading field curve for oscillating-mirror scanners with	
	heating	. 104
Figure 15.31:	Lateral "Ultra Low Density" reading field curve for oscillating-mirror scanners with	
	heating	. 104
Table 16.1:	Part number code	. 105
Table 16.2:	Overview of BCL 508/types	. 105
Table 16.3:	Accessories – Connectors	. 106
Table 16.4:	Accessories – Cables	. 106

Table 16.5:	Accessories – External parameter memory	106
Table 16.6:	Mounting device accessories	106
Table 16.7:	Accessory - Reflector for AutoReflAct	106
Figure 17.1:	Code type 01: Interleaved 2 of 5	109
Figure 17.2:	Code type 02: Code 39	109
Figure 17.3:	Code type 06: UPC-A	109
Figure 17.4:	Code type 07: EAN 8	110
Figure 17.5:	Code type 08: EAN 128	110
Figure 17.6:	Code type 10: EAN 13 Add-on	110
Figure 17.7:	Code type 11: Codabar	110
Figure 17.8:	Code 128	110
Figure 17.9:	Code type 01: Interleaved 2 of 5	111
Figure 17.10:	Code type 02: Code 39	111
Figure 17.11:	Code type 06: UPC-A	111
Figure 17.12:	Code type 07: EAN 8	111
Figure 17.13:	Code type 08: EAN 128	111
Figure 17.14:	Code type 10: EAN 13 Add-on	111
Figure 17.15:	Code type 11: Codabar	112
Figure 17.16:	Code 128	

1 General information

1.1 Explanation of symbols

Table 1.1: Warning symbols and signal words

▲ CAUTION!



This symbol precedes text messages which must strictly be observed. Failure to observe the provided instructions could lead to personal injury or damage to equipment.



This symbol warns of possible danger caused by hazardous laser radiation.

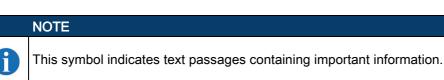


Table 1.2: Other symbols

¢	Symbol for action steps	
	Text passages with this symbol instruct you to perform actions.	

1.2 Declaration of Conformity

The bar code readers of the BCL 500/series have been developed and manufactured in accordance with the applicable European standards and directives.

The BCL 500/series is "UL LISTED" according to American and Canadian safety standards and fulfills the requirements of Underwriter Laboratories Inc. (UL).





The manufacturer of the product, Leuze electronic GmbH & Co KG in D-73277 Owen, possesses a certified quality assurance system in accordance with ISO 9001.



2 Safety

The bar code readers of the BCL 500/series were developed, manufactured and tested in accordance with the applicable safety standards. They correspond to the state of the art.

2.1 Intended use

The device is designed as a stationary high-speed scanner with integrated decoder for all common bar codes for automatic object detection.

Areas of application

The device is specially designed for the following areas of application:

- · Object identification on fast-moving conveyor lines
- Omnidirectional reading



Comply with conditions and regulations!

Observe the locally applicable legal regulations and the rules of the employer's liability insurance association.

2.2 Foreseeable misuse

Any use other than that defined under "Intended use" or which goes beyond that use is considered improper use.

In particular, use of the device is not permitted in the following cases:

- · in rooms with explosive atmospheres
- · in circuits which are relevant to safety
- for medical purposes

▲ CAUTION!
Do not modify or otherwise interfere with the device!
Do not carry out modifications or otherwise interfere with the device.
The device must not be tampered with and must not be changed in any way.
The device must not be opened. There are no user-serviceable parts inside.
Repairs must only be performed by Leuze electronic GmbH + Co. KG.

2.3 Competent persons

Connection, mounting, commissioning and adjustment of the device must only be carried out by competent persons.

Prerequisites for competent persons:

- They have a suitable technical education.
- They are familiar with the rules and regulations for occupational safety and safety at work.
- They are familiar with the technical description of the device.
- They have been instructed by the responsible person on the mounting and operation of the device.

Certified electricians

Electrical work must be carried out by a certified electrician.

Due to their technical training, knowledge and experience as well as their familiarity with relevant standards and regulations, certified electricians are able to perform work on electrical systems and independently detect possible dangers.

In Germany, certified electricians must fulfill the requirements of accident-prevention regulations DGUV V3 (e.g. electrician foreman). In other countries, there are respective regulations that must be observed.


2.4 Exemption of liability

Leuze electronic GmbH + Co. KG is not liable in the following cases:

- The device is not being used properly.
- Reasonably foreseeable misuse is not taken into account.
- Mounting and electrical connection are not properly performed.
- Changes (e.g., constructional) are made to the device.

2.5 Laser safety notices

▲ ATTENTION, LASER RADIATION – CLASS 1 LASER PRODUCT
The device satisfies the requirements of IEC 60825-1:2014 / EN 60825-1:2014+A11:2021 safety regulations for a product of laser class 1 and complies with 21 CFR 1040.10 except for conformance with IEC 60825-1 Ed. 3., as described in Laser Notice No. 56, dated May 8, 2019.
Observe the applicable statutory and local laser protection regulations.
rightarrow The device must not be tampered with and must not be changed in any way.
There are no user-serviceable parts inside the device.
CAUTION! Opening the device may result in hazardous radiation exposure!
Repairs must only be performed by Leuze electronic GmbH + Co. KG.

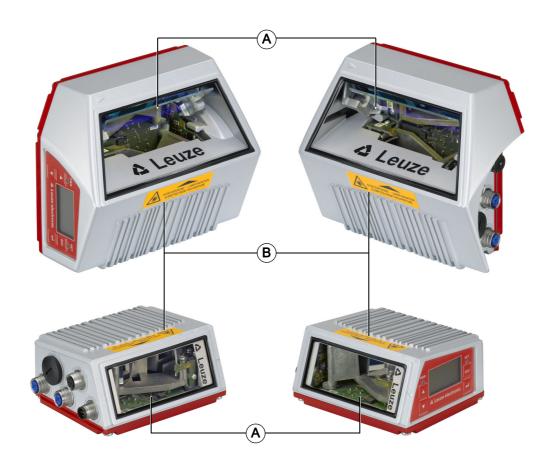



- A Laser aperture
- B Laser warning sign
- Figure 2.1: Attaching stick-on labels with warning notices (top: with oscillating mirror, bottom: line scanners)

Leuze

3 Device description

3.1 Device overview

Bar code readers of the BCL 500/series are high-speed scanners with integrated decoder for all commonly used bar codes, e.g. 2/5 Interleaved, Code 39, Code 128, EAN 8/13 etc., as well as codes from the GS1 DataBar family.

Bar code readers of the BCL 500/ series are available in various optics models as well as line scanners, line scanners with oscillating mirrors and also optionally as heated models.



1 Oscillating-mirror scanner

2 Line scanner

Figure 3.1: Line scanner and oscillating-mirror scanner

The extensive options for device configuration via display or software enable adaptation to a multitude of reading tasks. Due to the large reading distance combined with the great depth of field and a very compact construction, the device is ideally suited for package and pallet transportation systems. In general, the bar code readers of the BCL 500/series are designed for the conveyor and storage technology market. The interfaces (**RS 232**, **RS 485** and **RS 422**) integrated in the various device models and the fieldbus systems (**PROFIBUS DP**, **PROFINET-IO**, **Ethernet** and **Ethernet IP**) of the BCL 500/series bar code readers offer optimum connection to the superior host system.


3.2 Performance characteristics

- Integrated fieldbus connectivity = *i*-> Plug-and-Play fieldbus coupling and easy networking
- · Numerous interface variants facilitate connection to the superior systems
 - RS 232, RS 422 as well as with integrated multiNet plus master
 - RS 485 and multiNet plus slave
- · Alternatively, various fieldbus systems, such as
 - PROFIBUS DP
 - PROFINET-IO
 - Ethernet TCP/IP, UDP
 - Ethernet/IP
- Integrated code reconstruction technology (CRT) enables the identification of soiled or damaged bar codes
- · Maximum depth of field and reading distances from 200 mm to 2400 mm
- · Large optical opening angle and, thus, large reading field width
- · High scanning rate of 800 / 1200 scans/s for fast reading tasks
- · Intuitive, backlit, multi-language display with user-friendly menu navigation
- Integrated USB 1.1 service interface
- · Adjustment of all device parameters with a web browser
- · Connection options for an external parameter memory
- · Easy alignment and diagnostics functions



- M 12 connections with Ultra-Lock [™] technology
- · Four freely programmable switching inputs/outputs for the activation or signaling of states
- Automatic monitoring of the read quality with autoControl
- Automatic recognition and setting of the bar code type using autoConfig
- Reference code comparison
- Optional heating models to -35°C
- Heavy-duty housing of degree of protection IP 65

3.3 **Device construction**

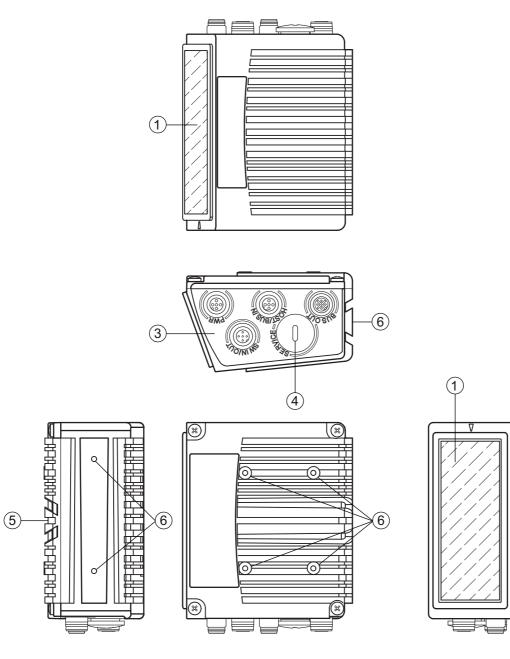



- 1
- Reading window Control panel with display, LEDs and buttons 2
- 3 M12 connection technology
- 4 5 USB interface
- Dovetail mounting
- 6 M4 mounting thread






3.4 Connection technology

The bar code readers are connected using variously coded M12 connectors. This ensures unique connection assignments.

The additional USB interface is used for configuring the device.

For the locations of the individual device connections, please refer to the device detail shown below.

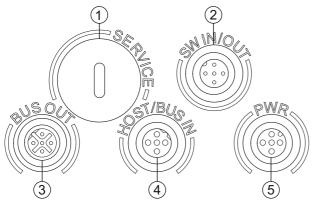


- 1 Service, USB socket, type A
- 2 SW IN/OUT, M12 socket (A-coded)
- 3 BUS OUT, M12 socket (D-coded)
- 4 Host/BUS IN, M12 socket (D-coded)
- 5 PWR, M12 connector (A-coded)

Figure 3.3: Location of the electrical connections

3.5 Display elements

3.5.1 Structure of the control panel

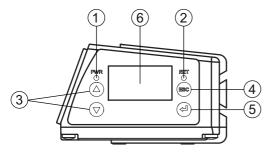

- 1 PWR LED
- 2 NET LED
- 3 Navigation buttons
- 4 Escape button
- 5 Enter button
- 6 Display

Figure 3.4: Structure of the control panel



3.5.2 Status indicators and operation

Indicators in the display

 Table 3.1:
 Status displays of the switching inputs/outputs

- **IO1** Switching input or switching output 1 active (function dependent on set parameterization). Default: Switching input with the "Reading gate activation" function
- **IO2** Switching input or switching output 2 active (function dependent on set parameterization). Default: Input with the "Teach-in" function
- **IO3** Switching input or switching output 3 active (function dependent on set parameterization). Default: Switching input with the "Reading gate activation" function
- **IO4** Switching input or switching output 4 active (function dependent on set parameterization). Default: Switching output with the "No read" function
- ATT Warning (Attention)
- ERR Internal device error (Error) -> The device must be sent in for inspection

Bar graph

The read quality is shown on a scale of 0 - 100 %. The quality is evaluated based on the "Equal Scans" of the read result configured in the bar code reader.

Table 3.2: Status display of the USB interface

USB The device is connected to a PC via the USB interface.

MS An external parameter memory is properly connected to the USB interface of the device.

Read result

The read bar code information is displayed.

Link states

Table 3.3: L	ink status of the	Ethernet interface
--------------	-------------------	--------------------

- LNK0 Physical connection to the HOST / BUS IN port
- LNK1 Physical connection to the BUS OUT port

3.5.3 LED status indicators

PWR LED

PWR	Off	Device OFFNo supply voltage
PWR	Flashes green	 Device ok, initialization phase No bar code reading possible Voltage connected Self test running Initialization running
PWR	Green, continuous light	Device okBar code reading possibleSelf test successfully finished

· Device monitoring active



PWR	Orange, continuous light	 Service mode Bar code reading possible Configuration via the USB service interface Configuration via the display No data on the host interface 				
PWR	Flashes red	Device ok, warning setBar code reading possibleTemporary operating fault				
PWR	Red, continuous light	Device error / parameter enableNo bar code reading possible				
NET L	.ED					
NET O	Off	No supply voltageNo communication possibleEthernet protocols not released				
NĘT - Ŏ	Flashes green	InitializationOf the device, establishing communication				
NET	Green, continuous light	Operation okNetwork mode okConnection and communication to Host established				
	Flashes orange	Timeout				
	Flashes red	Communication errorTemporary connection errorIf DHCP is active, no address could be obtained				
NET	Red, continuous light	Network errorNetwork errorNo connection establishedNo communication possible				
Control buttons						
	Up	Navigate upward/sideways.				
	Down	Navigate downward/sideways.				
ESC	ESC	Exit menu item.				
ł	ENTER	Confirm/enter value, change menu levels.				

Navigating within the menus

The menus within a level are selected with the up/down buttons (a) (v). The selected menu item is activated with the enter button (d). Press the ESC button (c) to move up one menu level. When one of the buttons is actuated, the display illumination is activated for 10min.

3.6



Setting values

If input of a value is possible, the display looks like this:


<- 0123456789 save Default Unit					

Use the \land \checkmark and \checkmark buttons to set the desired value. An accidental, incorrect entry can be corrected by selecting -I and then pressing \checkmark .

Then use the () buttons to select **save** and save the set value by pressing ().

Selecting options

If options can be selected, the display looks like this:

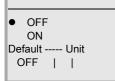

Select the desired option with the v buttons. Activate the option by pressing .

3.7 External parameter memory

The optionally available external parameter memory – based on a USB memory stick (compatible with version 1.1) – is housed in an external hood with integrated connectors which cover the USB service interface when installed (IP 65).

The external parameter memory makes it easy and reduces the time needed to replace a device on site by providing a copy of the current parameter set of the device. This eliminates the need to configure the exchanged device manually.

The delivery contents of the external parameter memory include the hood with integrated connectors with unscrewable cover and the USB memory stick.

For transferring the configuration with the aid of the external parameter memory see chapter 6.2.

NOTE

i

To mount, the cover of the service interface must be unscrewed. Then take the USB memory stick and plug it into the USB connection on the device. Then, take the connector hood of the USB memory stick and screw this over the plugged-in USB memory stick onto the service interface to close the system and ensure degree of protection IP 65.



4 Functions

General information

The integrated fieldbus connectivity = /contained in the bar code readers of the BCL 500/series facilitates the use of identification systems which function without connection unit or gateways. The integrated fieldbus interface considerably simplifies handling. The Plug-and-Play concept enables easy networking and very simple commissioning: Directly connect the respective fieldbus and all parameterization is performed with no additional software.

For decoding bar codes, the bar code readers of the BCL 500/ series make available the proven **CRT decoder** with code reconstruction technology:

The proven code reconstruction technology (**CRT**) enables bar code readers of the BCL 500*i* series to read bar codes with a small bar height, as well as bar codes with a damaged or soiled print image.

With the aid of the **CRT decoder**, bar codes can also be read without problem in other demanding situations, such as with a large tilt angle (azimuth angle or even twist angle).

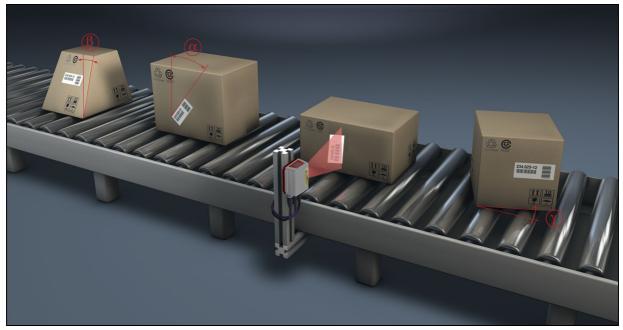


Figure 4.1: Possible bar code orientation

The device can be operated and configured using the integrated webConfig tool via the USB service interface; alternatively, the bar code readers can be adjusted using configuration commands via the host/ service interface.

The device needs a suitable activation to start a read process as soon as an object is in the reading field. This opens a time window (reading gate) in the device for the read process during which the bar code reader has time to detect and decode a bar code.

In the basic setting, triggering takes place through an external reading cycle signal. Alternative activation options include online commands via the host interface and the **autoReflAct** function.

Through the read operation, the device collects additional useful pieces of data for diagnostics which can also be transmitted to the host. The quality of the read operation can be inspected using the **alignment mode** which is integrated in the webConfig tool.

A multi-language display with buttons is used to operate the device as well as for visualization purposes. Two LEDs provide additional optical information on the current operating state of the device.

The four freely configurable switching inputs/outputs SWIO 1 ... SWIO 4 can be assigned various functions and control e.g. activation of the device or external devices, such as a PLC.

System, warning and error messages provide assistance in setup/troubleshooting during commissioning and read operation.

4.1 autoReflAct

autoReflAct stands for **auto**matic **Refl**ector **Act**ivation and permits an activation without additional sensors. This is achieved by directing the scanner with reduced scanning beam towards a reflector mounted behind the conveyor path. As long as the scanner is targeted at the reflector, the reading gate remains closed. If, however, the reflector is blocked by an object such as a container with a bar code label, the scanner acti-

vates the read procedure, and the label on the container is read. When the path from the scanner to the reflector has cleared, the read procedure has completed and the scanning beam is reduced and again directed onto the reflector. The reading gate is closed.

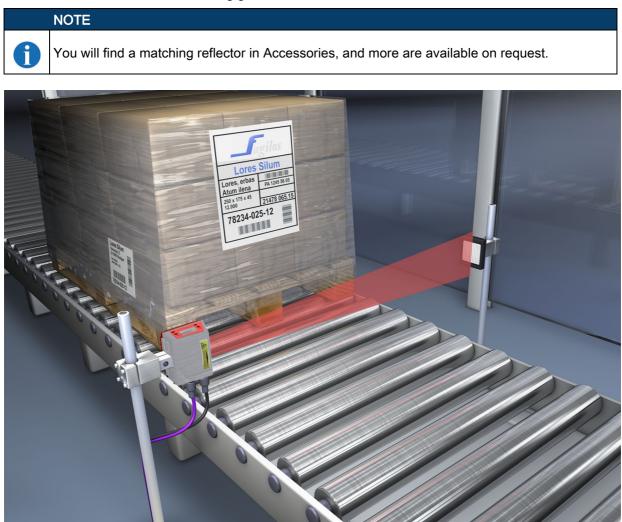


Figure 4.2: Reflector arrangement for autoReflAct

The **autoReflAct** function uses the scanning beam to simulate a photoelectric sensor and thus permits an activation without additional sensors.

4.2 Reference codes

The device offers the possibility of storing one or two reference codes.

It is possible to store the reference codes by means of teach-in (display command), via the webConfig tool or via online commands.

The device can compare read bar codes with one and/or both reference codes and execute user-configurable functions depending on the comparison result.

4.3 autoConfig

With the autoConfig function, the device offers an extremely simple and convenient configuration option to users who only want to read one code type (symbology) with one number of digits at a time.

After starting the autoConfig function via the display, switching input or from a superior control, it is sufficient to position a bar code label with the desired code type and number of digits in the reading field of the device.

Afterward, bar codes with the same code type and number of digits are recognized and decoded.

Detailed information on this topic can be found in Chapter 10 "Starting up the device - Configuration" on page 62.



4.4 Heating

For low-temperature applications to min. -35°C (e.g. in cold storage), the bar code readers of the BCL 500*i* series can optionally be permanently fitted with a built-in heating and these bar code readers purchased as separate device models.

Leuze

5 Reading techniques

5.1 Line scanner (single line)

A line (scan line) scans the label. Due to the opt. opening angle, the reading field width is dependent on the read distance. Through the movement of the object, the entire bar code is automatically transported through the scan line.

The integrated code reconstruction technology permits twisting of the bar code (tilt angle) within certain limits. These are dependent on the transport speed, the scanning rate of the scanner and the bar code properties.

Areas of application of the line scanner

The line scanner is used:

- When the bars of the bar code are printed in the conveying direction ('ladder arrangement').
- With bar codes having very short bar lengths.
- When the ladder code is turned out of the vertical position (tilt angle).
- When the reading distance is large.



Figure 5.1: Deflection principle for the line scanner



5.2 Line scanner with oscillating mirror

The oscillating mirror deflects the scan line additionally to both sides across the scan direction at a randomly adjustable oscillation frequency. In this way, the device can also scan larger areas or spaces for bar codes. The reading field height (and the scan line length useful for evaluation) depends on the reading distance due to the optical opening angle of the oscillating mirror.

Areas of application of the line scanner with oscillating mirror

For line scanners with oscillating mirror, oscillation frequency, start/stop position etc. are adjustable. It is used:

- When the position of the label is not fixed, e.g. on pallets various labels can, thus, be detected at various positions.
- When the bars of the bar code are printed perpendicular to the conveying direction ("picket fence arrangement").
- When reading stationary objects.
- When the bar code is turned out of the horizontal position.
- When the reading distance is large.
- When a large reading field (reading window) has to be covered.



Figure 5.2: Deflection principle for the line scanner with oscillating mirror add-on



5.3 Omnidirectional reading

In order to read arbitrarily oriented bar codes on an object, at least 2 bar code readers are necessary. If the bar code is not printed over-square, i.e. bar length > code length, bar code readers with integrated code reconstruction technology are necessary.

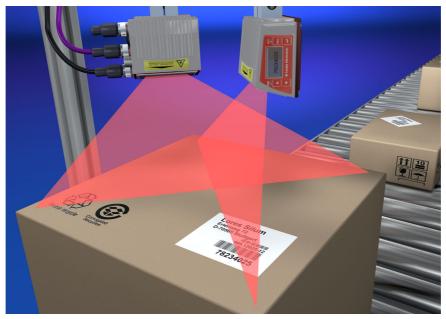


Figure 5.3: Principle arrangement for omnidirectional reading

Ĭ



5.4 Leuze multiScan over Ethernet/PROFINET

The multiScan over Ethernet/PROFINET operating mode links individual bar code readings from multiple bar code scanners into a single decoding result. This is used, for example, on a packet conveyor system on which the label can be affixed on either the right or left side, thereby requiring two read stations. To prevent the host from having to always process two readings for a single packet, i.e. a decoding result and a No Read, a multiScan arrangement is used which transmits only one reading from the two read stations to the host; this single reading is transmitted by the multiScan master.

NOTE

Thus, from the perspective of the host, the scanner network appears to be just a single bar code reader!

For this purpose one multiScan master and one or more multiScan slaves are connected together via Ethernet/PROFINET.

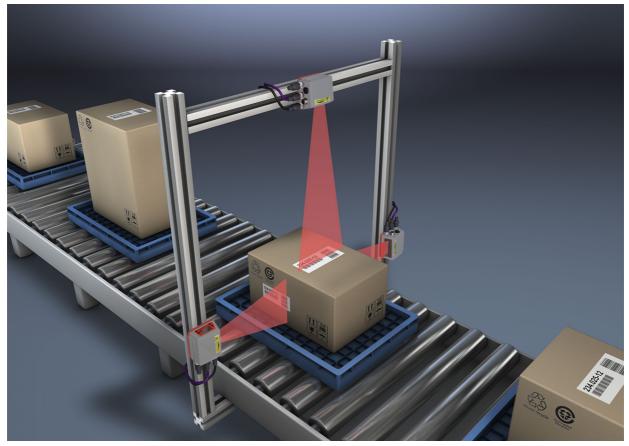


Figure 5.4: Scanner arrangement with the multiScan function

NOTE

The multiScan function for Ethernet/PROFINET is possible for a minimum of 2 and a maximum of 32 devices!



6 Mounting

The bar code readers can be mounted in different ways:

- Using two M4x6 screws on the rear of the device or using four M4x6 screws on the bottom of the device (see figure 3.2).
- Using a BT 56 mounting device on the two fastening grooves (see figure 15.3).
- Using a BT 59 mounting device on the two fastening grooves (see figure 15.4).

6.1 Device arrangement

6.1.1 Selecting a mounting location

In order to select the right mounting location, several factors must be considered:

- Size, orientation, and position tolerance of the bar codes on the objects to be scanned.
- The reading field of the device in relation to the bar code module width.
- The resulting minimum and maximum reading distance from the respective reading field (see chapter 15.5 "Reading field curves / optical data").
- The permissible cable lengths between the device and the host system depending on which interface is used.
- The correct time for data output. The device should be positioned in such a way that, taking into consideration the time required for data processing and the conveyor belt speed, there is sufficient time to e.g. initiate sorting operations on the basis of the read data.
- The display and control panel should be very visible and accessible.
- For configuring and commissioning with the webConfig tool, the USB interface should be easily accessible.


For specific information, please refer to Chapter 5.

NOTE			
The beam of the device exits:			
 Parallel to the housing base in the case of the line scanner 			
Perpendicular to the housing base in the case of the oscillating mirror			
In each case, the housing base is the black area.			
The best read results are obtained when:			
 The device is mounted in such a way that the scanning beam is incident on the bar code at an angle of inclination greater than ±10° 15° to vertical. 			
 The reading distance lies in the middle area of the reading field. 			
 The bar code labels are of good print quality and have good contrast ratios. 			
 You do not use high-gloss labels. 			
There is no direct sunlight.			

6.1.2 Avoiding total reflection - Line scanner

The bar code label must be positioned at an angle of inclination greater than $\pm 10^{\circ} \dots 15^{\circ}$ from vertical in order to avoid total reflection of the laser beam (see Figure 6.1)!

Total reflection occurs whenever the laser light of the bar code reader is directly incident on the surface of the bar code at an angle of 90°. The light directly reflected by the bar code may overload the bar code reader and thereby cause non-readings!

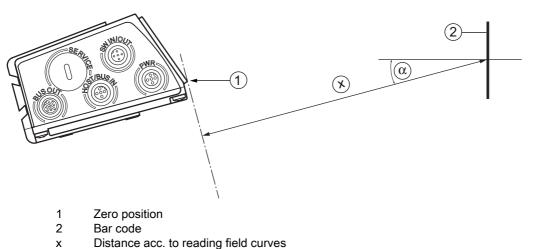

α ±10...15°


Figure 6.1: Total reflection – line scanner


6.1.3 Avoiding total reflection - oscillating-mirror scanner

For the device with oscillating mirror, the laser beam exits at an angle of 90° to vertical.


Furthermore, the swivel range of ±20° (±12° for devices with heating) is to be taken into account.

This means that in order to be on the safe side and to avoid total reflection, the device with oscillating mirror must be inclined upward or downward $20^{\circ} \dots 30^{\circ}!$

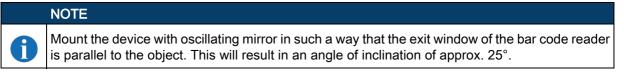

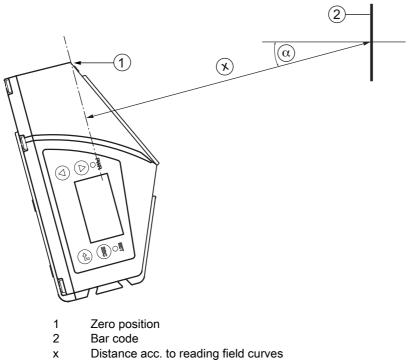

α ±25°

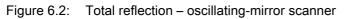



6.1.4 Mounting location

b When choosing the mounting location, observe the following:

- Maintaining the required environmental conditions (temperature, humidity).
- Possible soiling of the reading window due to liquids, abrasion by boxes, or packaging material residues.
- Lowest possible chance of damage to the device by mechanical collision or jammed parts.
- Possible extraneous light (no direct sunlight or sunlight reflected by the bar code).

6.1.5 Devices with integrated heating

b When mounting devices with integrated heating, also observe the following points:

- Mount the device in a way which provides maximum thermal isolation, e.g. using rubber-bonded metal.
- Mount in such a way that the device is protected from draft and wind; mount additional shields if necessary.

NOTE

i


When installing the device in a protective housing, it must be ensured that the scanning beam can exit the protective housing without obstruction.

6.1.6 Possible read angles between device and bar code

The optimum alignment of the device is accomplished when the scan line scans the bar code bars almost at a right angle (90°). All reading angles that are possible between the scan line and bar code must be taken account (Figure 6.3).



- α Azimuth angle (tilt)
- β Inclination angle (pitch)
- γ Angle of rotation (skew)

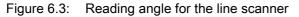

NOTE

In order to avoid total reflection, the angle of rotation g should be greater than 10°.



6.2 Installing the external parameter memory

b Remove the cover of the USB connection on the device.

Insert the USB memory stick into the USB connection and then cover it with the connector hood to ensure degree of protection IP 65.

The USB memory stick can be inserted regardless of whether or not the device is connected to supply voltage.

- After the USB memory stick has been inserted and supply voltage applied, the following message appears on the display.
 - Memory stick connected: Export internal configuration?

Use the navigation buttons to select OK and activate with the enter button .


The configuration is now transferred to the external parameter memory and is from now on updated immediately when the configuration is changed via display or online commands.

 The display of MS under the device address indicates that the USB memory stick is correctly connected and functional.

Replacing a defective device

♦ Uninstall the defective device.

- Semove the external parameter memory from the defective device by unscrewing the protection hood.
- b Mount the external parameter memory on the new device.
- ♦ Install and start up the new device.
- The following message appears on the display again:
 - Memory stick connected: Export internal configuration?
- b Use the navigation buttons (A) to select Cancel and activate with the enter button (4).

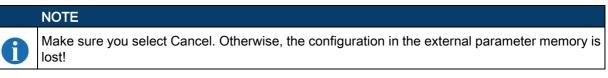

The configuration is now imported from the external parameter memory and the device is immediately operational without any further configuration.

Ĭ



7 Electrical connection

The bar code readers of this series are connected using variously coded M12 connectors. This ensures unique connection assignments.

The additional USB interface is used for configuring the device.

For the locations of the individual device connections, please refer to the device detail shown below.

NOTE

The corresponding mating connectors and preassembled cables are available as accessories for all connections. For additional information, refer to Section 16.3 and Section 7.4.





Figure 7.1: Location of the electrical connections

7.1 Safety notices for the electrical connection

 trolled emission of laser radiation from the device. The housing of the device contains no p that need to be adjusted or maintained by the user. Before connecting the device, be sure that the supply voltage agrees with the value printed the name plate. Connection of the device and cleaning must only be carried out by a qualified electrician. Ensure that the functional earth (FE) is connected correctly. Unimpaired operation is only g anteed when the functional earth is connected properly. 			
the name plate. Connection of the device and cleaning must only be carried out by a qualified electrician. Ensure that the functional earth (FE) is connected correctly. Unimpaired operation is only g anteed when the functional earth is connected properly.		Do not open the device yourself under any circumstances! There is otherwise a risk of uncon- trolled emission of laser radiation from the device. The housing of the device contains no parts that need to be adjusted or maintained by the user.	
Ensure that the functional earth (FE) is connected correctly. Unimpaired operation is only ganteed when the functional earth is connected properly.		Before connecting the device, be sure that the supply voltage agrees with the value printed on the name plate.	
anteed when the functional earth is connected properly.		Ensure that the functional earth (FE) is connected correctly. Unimpaired operation is only guar	
It faults cannot be cleared, the device should be switched of and protected against accide		If faults cannot be cleared, the device should be switched off and protected against accidental	
use.		use.	



ĭ

▲ CAUTION!

For UL applications, use is only permitted in Class 2 circuits in accordance with the NEC (National Electric Code). The bar code readers are designed in accordance with protection class III for supply by PELV (protective extra-low voltage with reliable disconnection).

NOTE

Degree of protection IP65 is achieved only if the connectors and caps are screwed into place!



7.2 Electrical connection of the device


The device is equipped with four M12 plugs/sockets which are A- and D-coded, and a USB socket of type A.

The voltage supply (**PWR**) as well as the four freely configurable switching inputs/outputs (**SW IN/OUT** and **PWR**) are connected there.

"HOST / BUS IN" is available as an Ethernet interface for connecting to the host system.

By means of the implemented switch function in the device, an additional second "**BUS OUT**" Ethernet interface is available for creating a scanner network (linear topology).

An USB connection is used as a "SERVICE" interface.

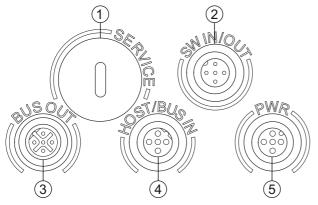

- 1 Service, USB socket, type A
- 2 SW In/Out, M12 socket (A-coded)
- 3 BUS OUT, M12 socket (D-coded)
- 4 Host/BUS IN, M12 socket (D-coded)
- 5 PWR, M12 connector (A-coded)

Figure 7.2: Connections of the device

Voltage supply and switching inputs/outputs

The voltage supply (10 ... 30 V DC) is connected at the PWR / SWIO M12 plug.

Available on the PWR M12 connector and on the SW IN/OUT M12 socket are four freely programmable switching inputs/outputs that can be individually adapted to the respective application (see Section 7.2.1 and Section 7.2.3).

Standalone operation in Ethernet network

During stand-alone operation of the device, the host interface of the superior system is connected to HOST/BUS IN. A star structure (Ethernet structure) is thus possible. Please be certain to select the correct protocol for the connected components.

Network mode in Ethernet network

In network mode, the superior system (PC/PLC) is connected to the host interface of the device. With the aid of the switch integrated in the device, the bus connection to the next participant, e.g. another device, can be made directly via the BUS OUT socket!

NOTE

ĭ

The device does not have its own built-in DHCP server. Please make certain that each participant in the Ethernet has its own unique IP address. This can be set by a DHCP server in the superior system or through manual address assignment.

7.2.1 PWR - Voltage supply and switching inputs/outputs 3 and 4

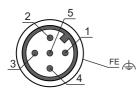


Figure 7.3: PWR, M12 connector (A-coded)

Table 7.1: Pin assignments - PWR

Pin	Name	Comment
1	VIN	Positive supply voltage +10 +30 V DC
2	SWIO_3	Configurable switching input / output 3
3	GND	Negative supply voltage 0 V DC
4	SWIO_4	Configurable switching input / output 4
5	FE	Functional earth
Thread	FE	Functional earth (housing)

Supply voltage

i

Connecting the functional earth FE

Ensure that the functional earth (FE) is connected correctly. Unimpaired operation is only guaranteed when the functional earth is connected properly. All electrical disturbances (EMC couplings) are discharged via the functional earth connection.

Switching input/output

NOTE

The device is equipped with four freely programmable, opto-decoupled switching inputs and outputs SWIO_1 ... SWIO_4.

The switching inputs can be used to activate various internal functions of the device (decoding, autoConfig, ...). The switching outputs can be used to signal the state of the device and to implement external functions independent of the superior control.

The two switching inputs/outputs SWIO_1 and SWIO_2 are located on the SW IN/OUT M12 socket and are described in Section 7.2.3. The other two (SWIO_3 and SWIO_4) of the four freely configurable switching inputs/outputs are located on the PWR M12 connector.


NOTE

Ĭ

It is generally possible to set the respective function as input or output via the display or with the aid of the **webConfig** configuration tool.


Described in the following is the external wiring for use as a switching input or output; the respective function assignments to the switching inputs/outputs can be found in Chapter 10.

Function as switching input

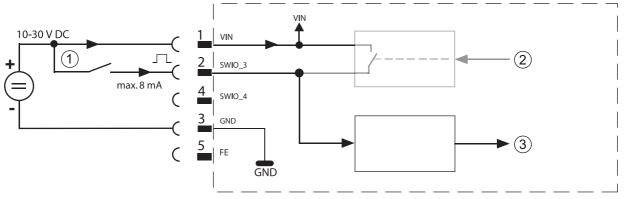


- 1 Switching input
- 2 Switching output from controller (deactivated)
- 3 Switching input to controller

Figure 7.4: Switching input connection diagram SWIO_3 and SWIO_4

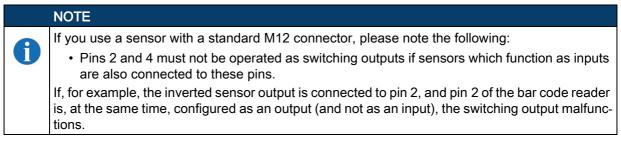



Function as switching output

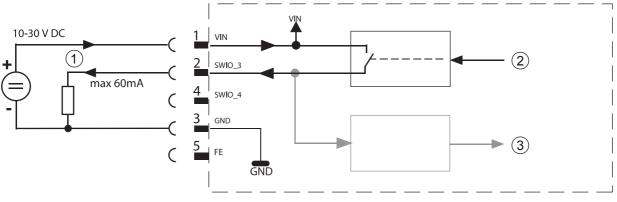

- 1 Switching output
- 2 Switching input from controller
- 3 Switching output to controller (deactivated)

Figure 7.5: Switching output connection diagram SWIO_3 / SWIO_4

▲ CAUTION!

Each configured switching output is short-circuit proof! Do not load the respective switching output of the device with more than 60 mA at +10 \dots +30 V DC in normal operation!

NOTE

Both switching inputs/outputs SWIO_3 and SWIO_4 are configured by default in such a way that:

- Switching input SWIO_3 activates the reading gate
- Switching output SWIO_4 switches on "No Read."

i

7.2.2 SERVICE – USB interface (type A)



Figure 7.6: Service, USB, type A

Table 7.2: Pin assignments of SERVICE – USB interface

Pin	Name	Comment
1	VB	Positive supply voltage +5 V DC
2	D-	Data -
3	D+	Data +
4	GND	Ground

$\underline{\mathbb{N}}$	CAUTION!	
--------------------------	----------	--

Maximum load of the +5 V DC supply voltage of the USB interface is 200 mA!

Ensure adequate shielding.

The entire interconnection cable must absolutely be shielded acc. to the USB specifications. Cable length must not exceed 3 m.

♥ Use the Leuze-specific USB service cable (see chapter 16 "Order guide and accessories") for the connection and use a service PC to configure.



NOTE

IP 65 is achieved only if the connectors and caps are screwed into place. Alternatively, a parameter memory in the form of a USB memory stick certified by Leuze electronic GmbH + Co. can be connected to the provided USB service interface. With this Leuze memory stick, degree of protection IP 65 is also ensured.

7.2.3 SW IN/OUT – Switching input/switching output

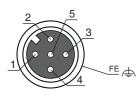


Figure 7.7: SW IN/OUT, M12 socket (A-coded)


Pin	Name	Comment
1	VOUT	Voltage supply for sensor system (VOUT identical to VIN at PWR IN)
2	SWIO_1	Configurable switching input / output 1
3	GND	GND for the sensor system
4	SWIO_2	Configurable switching input / output 2
5	FE	Functional earth
Thread	FE	Functional earth (housing)

The device is equipped with four freely programmable, opto-decoupled switching inputs and outputs SWIO_1 ... SWIO_4.

The two switching inputs/outputs SWIO_1 and SWIO_2 are located on the SW IN/OUT M12 socket. The other two (SWIO_3 and SWIO_4) of the four freely configurable switching inputs/outputs are located on the PWR M12 connector and are described in Chapter 7.2.1.

Described in the following is the external wiring for use as a switching input or output; the respective function assignments to the switching inputs/outputs can be found in Chapter 10.

Function as switching input

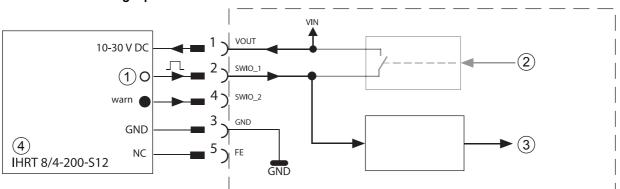

- 1 Output
- 2 Switching output from controller (deactivated)
- 3 Switching input to controller
- 4 Diffuse reflection sensor


Figure 7.8: Switching input connection diagram SWIO_1 and SWIO_2

	NOTE
0	 If you use a sensor with a standard M12 connector, please note the following: Pins 2 and 4 must not be operated as switching outputs if sensors which function as inputs are also connected to these pins. If, for example, the inverted sensor output is connected to pin 2, and pin 2 of the bar code reader is, at the same time, configured as an output (and not as an input), the switching output malfunc-
	tions.

▲ CAUTION!

The maximum input current must not exceed 8 mA!

Function as switching output

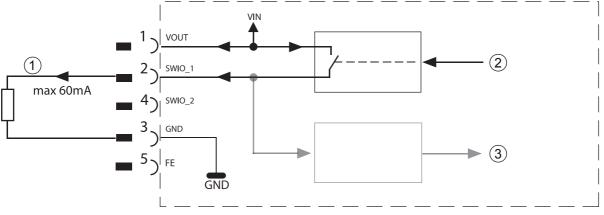

- 1 Switching output
- 2 Switching output from controller
- 3 Switching input to controller (deactivated)

Figure 7.9: Switching output connection diagram SWIO_1 / SWIO_2

Each configured switching output is short-circuit proof! Do not load the respective switching output of the device with more than 60 mA at +10 ... +30 V DC in normal operation!

NOTE

f

By default, the two switching inputs/outputs SWIO_1 and SWIO_2 are configured so that they function as **switching inputs**.

- Switching input SWIO_1 activates the start reading gate function
- Switching input SWIO_2 activates the reference code teach-in function

The functions of the individual switching inputs/outputs are programmed via the display or via parameterization in the **webConfig** tool under the Switching input or Switching output heading. For further information, see also Chapter 10 "Starting up the device - Configuration" on page 59.

7.2.4 HOST / BUS IN

The device makes an Ethernet interface available as host interface.


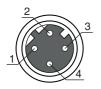


Figure 7.10: Host/BUS IN, M12 socket (D-coded)

Pin	Name	Comment
1	TD+	Transmit Data +
2	RD+	Receive Data +
3	TD-	Transmit Data -
4	RD-	Receive Data -
Thread	FE	Functional earth (housing)

Ethernet cable assignments

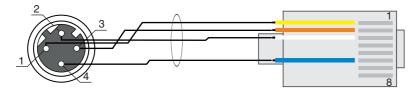

1 Twisted pair

Figure 7.11: HOST / BUS IN cable assignments on RJ-45

	NOTE		
1	Information on assignment and the core colors can be found in Table 7.6.		
	♥ Ensure adequate shielding.		
	The entire interconnection cable must be shielded and earthed. The RD+/RD- and TD+/TD- wires must be stranded in pairs.		

Use CAT 5 cables for the connection.



7.2.5 BUS OUT

To set up an Ethernet network with other participants in a linear topology, the device provides an additional Ethernet interface. The use of this interface drastically reduces the cabling requirements, as only the first device requires a direct connection to the switch, via which it can communicate with the host. All other devices are connected in series to the first device; see Figure 7.14.

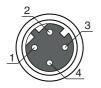


Figure 7.12: M12 socket (D-coded)

Table 7.5:	Pin assignment BUS OUT
------------	------------------------

Pin	Name	Comment
1	TD+	Transmit Data +
2	RD+	Receive Data +
3	TD-	Transmit Data -
4	RD-	Receive Data -
Thread	FE	Functional earth (housing)

If you use ready-made cables, note the following:

▲ CAUTION!
♥ Ensure adequate shielding.
The entire interconnection cable must be shielded and earthed. The signal lines must be stranded in pairs.
∜ Use CAT 5 cables for the connection.

NOTE

i

For use as stand-alone device or as the last participant in a linear topology, termination on the BUS OUT socket is not mandatory!



7.3 Ethernet topologies

Various product variants of the BCL 500/series are available for connecting to different fieldbus systems such as PROFIBUS DP, PROFINET-IO, and Ethernet.

The device is designed as an Ethernet device (acc. to IEEE 802.3) with a standard baud rate of 10/100 Mbit. A fixed MAC ID is assigned to each device by the manufacturer; this address cannot be changed. The device automatically supports the transmission rates of 10 Mbit/s (10Base T) and 100 Mbit/s (10Base TX), as well as auto-negotiation and auto-crossover.

The device features multiple M12 connectors / sockets for the electrical connection of the supply voltage, the interface and the switching inputs and outputs.

The device supports the following protocols and services:

- TCP/IP (client / server)
- UDP
- DHCP
- ARP
- PING

For communication with the superior host system, the corresponding TCP/IP protocol (client/server mode) or UDP must be selected.

Ethernet – star topology

The device can be operated as a single device (stand-alone) in an Ethernet star topology with individual IP address.

The IP address can either be set permanently via display or webConfig tool or assigned dynamically via a DHCP server.

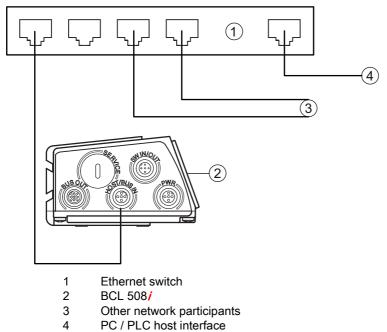


Figure 7.13: Ethernet in a star topology




Ethernet – linear topology

The innovative further development of the device with integrated switch functionality offers the option of connecting multiple bar code readers of this type to one another without direct connection to a switch. In addition to the classic star topology, a linear topology is thus also possible.

This makes wiring the network easy and inexpensive as slaves are looped through to one another in parallel.

Each participant in this network requires its own unique IP address which must be assigned via the display or webConfig tool; alternatively, the DHCP method can also be used.

The maximum length of a segment (connection from the hub to the last participant) is limited to 100m.

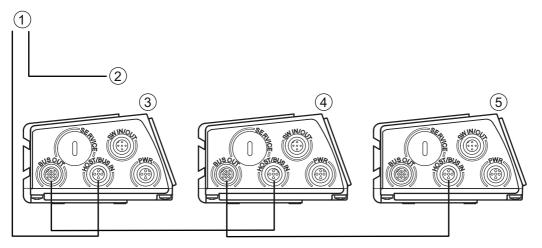

- 1 PC / PLC host interface
- 2 To other network participants
- 3 IP address: 192.168.0.xxx
- 4 IP address: 192.168.0.yyy
- 5 IP address: 192.168.0.zzz

Figure 7.14: Ethernet in a linear topology

7.3.1 Ethernet wiring

Table 7.6:	Contact assignment of M12 Ethernet connection cable
------------	---

Pin	Name	Core color
1	TD+	Yellow
2	RD+	White
3	TD-	Orange
4	RD-	Blue
SH (thread)	FE	Bare

A Cat. 5 Ethernet cable should be used for wiring.

For the connection on the device, a "KDS ET M12 / RJ 45 W - 4P" adapter is available into which the standard network cables can be plugged.

If no standard network cables are to be used (e.g. due to lacking IP... degree of protection), you can use the user-configurable cables on the device.

The individual devices in a linear topology are connected with the Ethernet cables.

If the desired cable lengths are unavailable, you can assemble the cable yourself. When doing so, make certain that you connect TD+ on the M12 connector with RD+ on the RJ-45 connector and TD- on the M12 connector with RD- on the RJ-45 connector, respectively, etc.

7.4 Cable lengths and shielding

Connection	Interface	Max. cable length	Shielding
BCL – service	USB	3m	Shielding absolutely neces- sary acc. to USB specifica- tions
BCL – host	Ethernet	100m	Shielding absolutely required
Network from the first BCL to the last BCL	Ethernet	The maximum segment length must not exceed 100 m for 100Base-TX Twisted Pair (min. Cat. 5)	Shielding absolutely required
BCL – power sup- ply unit		30m	Not necessary
Switching input		10 m	Not necessary
Switching output		10 m	Not necessary

Table 7.7:Cable lengths and shielding



8 Menu description

After voltage is applied to the bar code reader, a startup screen is displayed for several seconds. The display then shows the bar code reading window with all status information.

8.1 The main menus

SW: V 1.8.0

Network settings

Channel 1:

101 102 103

IO4 ATT ERR

Parameters

Addr:

BCL508i SF 102 Leuze electronic

GmbH & Co. KG

SN: 1009A009815 001

Mask: 255.255.255.0 Gateway: 0.0.0.0

Parameter handling Decoder table

HW-3

192.168.60.101

LNKØ

1

12345678

Device information - main menu

This menu item contains detailed information on

- Device type
- · Software version
- Hardware version
- Serial number

Main menu Display of the network settings

· Display of the network settings.

See "Ethernet" on page 50.

Main menu Bar code reading window

- Visualization of the read bar code information
- Status overview of the switching inputs/outputs
- Bar graphs for read quality of the current bar code.

See "Indicators in the display" on page 19.

Parameter - main menu

• Parameterization of the bar code reader. See "Parameter menu" on page 46.



Digital SWIO Ethernet

- o Espanoi o Français
- o Italiano

Service Diagnosis Status messages



Actions

- o Start decoding
- o Start alignment
- o Start auto setup
- o Start teach-in

Language selection - main menu

· Selection of the display language.

See "Language selection menu" on page 51.

Service - main menu

• Scanner diagnostics and status messages See "Service menu" on page 52.

Main menu Actions

• Various functions for scanner configuration and manual operation See "Actions menu" on page 52.



	NOTE
0	The display offers only limited configuration options. The configurable parameters are described in this chapter. Only the webConfig tool provides complete configuration options and is largely self-explanatory. For the use of webConfig tool see chapter 9. Notes on commissioning via the webConfig tool see chapter 10.

8.2 Parameter menu

Parameter handling

The **Parameter handling** submenu is used to lock and release the parameter input via the display and for resetting to default values.

Level 3	Level 4	Level 5	Selection/configuration option <i>Description</i>	Standard
Parame- ter enable			OFF/ON The standard setting (OFF) prevents unintended parameter changes. If parameter enabling is activated (ON), parameters can be changed man- ually.	OFF
Parame- ters to default			By pressing the enter button after selecting Parameters to default , all parameters are reset to their standard settings without any further security prompts. In this case, English is selected as the display language.	

Table 8.1:	Parameter handling submenu
------------	----------------------------

Decoder table

In the **Decoder table** submenu, 4 different code type definitions can be stored. Bar codes that have been read can only be decoded if they correspond to one of the definitions stored here.

Level 3	Level 4	Level 5	Selection/configuration option Description	Standard
Max. no. of labels			Value between 0 and 64 <i>The value set here specifies the maximum number of</i> <i>labels that should be detected for each reading gate.</i>	1
Decoder 1	Symbology (Code type)		No code Code 2/5 Interleaved Code 39 Code 32 Code UPC Code EAN Code 128 EAN Addendum Codabar Code 93 GS1 DataBar Omnidirectional GS1 DataBar Limited GS1 DataBar Expanded <i>If No code is configured, the current and all subsequent decoders are deactivated.</i>	Code 2/5i

Table 8.2: Decoder table submenu

Leuze

Menu description

Level 3	Level 4	Level 5	Selection/configuration option <i>Description</i>	Standard
	Number of digits	Interval mode	OFF/ON With the ON setting, the values in digits 1 and 2 define a range of character numbers that are to be read.	OFF
		Number of digits 1	0 to 64 characters <i>First decodable number of characters or lower range limit.</i>	10
		Number of digits 2	0 to 64 characters Second decodable number of characters or upper range limit.	0
		Number of digits 3	0 to 64 characters <i>Third decodable number of characters.</i>	0
		Number of digits 4	0 to 64 characters Fourth decodable number of characters.	0
		Number of digits 5	0 to 64 characters <i>Fifth decodable number of characters.</i>	0
	Reading reliability		Value from 2 to 100 <i>Number or scans required to reliably detect a label.</i>	4
	Check digit method		Standard No check Depending on the symbology (code type) selected for the decoder, further calculation algorithms can be selected here. Check digit method used for the decoding of the bar code that has been read. If Standard is set, the check digit method intended for the respective code type is used.	Standard
	Check digit transm.		Standard Not standard <i>Specifies whether the check digit is transmitted.</i> Stan- dard <i>means that the transmission matches the stan- dard intended for the respective code type.</i>	Standard
Decoder 2	Symbology		Same as decoder 1	Code 39
	Number of digits	Interval mode	OFF/ON	ON
		Number of digits 1	0 to 64 characters	4
		Number of digits 2		30
		Number of digits 3		0
		Number of digits 4		0
	D	Number of digits 5	0 to 64 characters	0
	Reading reliability		Value from 2 to 100	4
	Check digit method Check digit transm.		Same as decoder 1 Same as decoder 1	Standard Standard
ecoder 3	Symbology		Same as decoder 1	Code 128
5000010	Number of digits	Interval mode	OFF/ON	ON
		Number of digits 1	0 to 64 characters	4
		Number of digits 2		63
		Number of digits 3	0 to 64 characters	0
		Number of digits 4	0 to 64 characters	0
		Number of digits 5	0 to 64 characters	0
	Reading reliability		Value from 2 to 100	4
	Check digit method		Same as decoder 1	Standard
	Check digit transm.		Same as decoder 1	Standard
ecoder 4	Symbology		Same as decoder 1	Code UPC
	Number of digits	Interval mode	OFF/ON	OFF
		Number of digits 1	0 to 64 characters	8
		Number of digits 2		0
		Number of digits 3	0 to 64 characters	0
		Number of digits 4	0 to 64 characters 0 to 64 characters	0
	Reading reliability	Number of digits 5	Value from 2 to 100	4
	Check digit method		Same as decoder 1	4 Standard
	Check digit method		Came as decoder 1	Chandland

Table 8.2:Decoder table submenu

Check digit transm.

Same as decoder 1

Standard



Digital SWIO

The **Digital SWIO** submenu is used to configure the 4 switching inputs/outputs of the device.

Table 8.3:Digital SWIO submenu

Level 3	Level 4	Level 5	Selection/configuration option Description	Standard
Sw. input/ output 1	I/O mode		Input / Output / Passive Determines the function of switching input/output 1. In the case of passive, the connection is on 0 V if the Inverted parameter is set to OFF , and on +UB if the Inverted parameter is set to ON .	Input
	Switching input	Inverted	OFF / ON <i>OFF</i> = activation of the switching input function upon high level at the switching input <i>ON</i> = activation of the switching input function upon low level at the switching input	OFF
		Debounce time	Value from 0 to 1000 <i>Time in milliseconds for which the input signal must be present and stable.</i>	5
		Switch-on delay	Value from 0 to 65535 <i>Time in milliseconds between the end of the debounce time and</i> <i>activation of the function configured below.</i>	0
		Pulse duration	Value from 0 to 65535 Minimum activation time in milliseconds for the function configured below.	0
		Switch-off delay	Value from 0 to 65535 Time in milliseconds for which the function configured below remains activated after the switching input signal is deactivated and the pulse duration has expired.	0
		Function	No BCL 500 <i>I</i> function Reading gate start/stop Reading gate stop Rd. gate start Teach reference code Autoconfig start/stop <i>The function set here is carried out after the switching input is acti-</i> <i>vated.</i>	Reading gate start/stop

Menu description

Level 3

Leuze Selection/configuration option Standard Description OFF / ON OFF OFF = activated switching output upon high level

	output	Inverted	OFF / ON OFF = activated switching output upon high level	OFF
			ON = activated switching output upon low level	
		Signal delay	Value from 0 to 65535 <i>Time in milliseconds between activation function and switching of the switching output.</i>	0
		Pulse duration	Value from 0 to 65535 Switch-on time of the switching output in milliseconds. If the Pulse duration is set to 0, the switching output is switched on via the Acti- vation function and switched off via the Deactivation function. If the Pulse duration is greater than 0, the Deactivation function has no effect.	400
		Activation function 1	No function Reading gate start Reading gate end Positive reference code comparison 1 Negative reference code comparison 1 Valid read result Invalid read result Device ready Device not ready Data transmission active Data transmission not active AutoCont. good quality AutoCont. bad quality Reflector detected Reflector not detected External event, pos. edge External event, neg. edge Device active Device standby No device error Positive reference code comparison 2 Negative reference code comparison 2 <i>The function set here specifies which event activates the switching output.</i>	No function
		Deactivation func- tion 1	See Activation function 1 for selection options The function set here specifies the event that deactivates the switching output.	No function
•	I/O mode		Input / Output / Passive	Output
output 2	Switching	Inverted	OFF / ON	OFF
	input	Debounce time	Value from 0 to 1000	5
		Switch-on delay	Value from 0 to 65535	0
		Pulse duration	Value from 0 to 65535	0
		Switch-off delay	Value from 0 to 65535	0
		Function	See switching input/output 1	No function
	Switching	Inverted	OFF / ON	OFF
	output	Signal delay	Value from 0 to 65535	0
		Pulse duration	Value from 0 to 65535	400
			See switching input/output 1	Valid read result
		Deactivation func- tion 2	See switching input/output 1	Reading gate start

Digital SWIO submenu Table 8.3:

Level 5

Inverted

Level 4

Switching

Level 3	Level 4	Level 5	Selection/configuration option Description	Standard
Sw. input/	I/O mode		Input / Output / Passive	Input
output 3	Switching	Inverted	OFF / ON	OFF
	input	Debounce time	Value from 0 to 1000	5
		Switch-on delay	Value from 0 to 65535	0
		Pulse duration	Value from 0 to 65535	0
		Switch-off delay	Value from 0 to 65535	0
		Function	See switching input/output 1	Reading gate start/stop
	Switching	Inverted	OFF / ON	OFF
	output	Signal delay	Value from 0 to 65535	0
		Pulse duration	Value from 0 to 65535	400
		Activation function 3	See switching input/output 1	No function
		Deactivation func- tion 3	See switching input/output 1	No function
Sw. input/	I/O mode		Input / Output / Passive	Output
output 4	Switching input	Inverted	OFF / ON	OFF
		Debounce time	Value from 0 to 1000	5
		Switch-on delay	Value from 0 to 65535	0
		Pulse duration	Value from 0 to 65535	0
		Switch-off delay	Value from 0 to 65535	0
		Function	See switching input/output 1	No function
	Switching	Inverted	OFF / ON	OFF
	output	Signal delay	Value from 0 to 65535	0
		Pulse duration	Value from 0 to 65535	400
		Activation function 4	See switching input/output 1	Invalid read result
		Deactivation func- tion 4	See switching input/output 1	Reading gate start

Table 8.3: Digital SWIO submenu

Ethernet

The **Ethernet** submenu is used to configure the TCP/IP and UDP protocols of the device.

Level 3	Level 4	Level 5	Level 6	Selection/configuration option Description	Standard
Ethernet interface	IP address			The IP address can be set to any value in the format xxx.xxx.xxx. Normally, the network administrator specifies the IP address that is to be set here. If DHCP is activated, the setting made here has no effect and the device is set to the values that it obtains from the DHCP server.	192.168.060.101
	Gateway			The gateway address can be set to any value in the format xxx.xxx.xxx. The BCL 508 <i>i</i> communicates with participants in other sub- nets via the gateway. Splitting the read application over mul- tiple subnets is rather uncommon; the setting of the gateway address, thus, usually has no meaning.	000.000.000.000
	Net mask			The net mask can be set to any value in the format xxx.xxx.xxx. Usually, the device is used in a private Class C network and the default setting can be accepted without change. Attention : It is possible to enter any values for xxx.xxx.xxx. Only the values 255 or 000 are permissible for xxx, however. If other values are set, an error message appears upon restart of the BCL 508 <i>i</i> .	255.255.255.000
	DHCP activated			Off/On If DHCP is activated, the device obtains its settings for IP address, gateway and net mask from a DHCP server. The manual settings made above have no effect, but are retained and are again active if DHCP is deactivated.	Off

Menu description

Leuze

Level 3 Level 4		Level 5	Level 6	Selection/configuration option <i>Description</i>	Standard	
Host com- munica- tion	TcpIP	Activated		Off/On TCP/IP communication with the host is activated.	Off	
		Mode		Server/client Server defines the device as TCP server: The primary host sys- tem (PC / PLC as client) actively establishes the connection and the connected device waits for the connection to be set up. Under TcpIP Server -> Port number, you must also specify the local port on which the device receives communication requests from a client application (host system). Client defines the device as TCP client: The device BCL 508i actively sets up the connection to the primary host system (PC / PLC as server). Under TcpIP Client, you must also specify the IP address of the server (host system) and the port number on which the server (host system) accepts a connection. In this case, the device now determines when and with whom a con- nection is established!	Server	
		TcpIP client	IP address	The IP address can be set to any value in the format xxx.xxx.xxx. IP address of the host system with which the device exchanges data as TCP client.	000.000.000.000	
			Port num- ber	The port number can be set to any value between 0 and 65535. Port number of the host system with which the device exchanges data as TCP client.	10000	
			Timeout	The timeout can be set to any value between 100 and 60,000 ms. <i>Time after which an attempt to establish a connection is auto- matically interrupted by the device if the server (host system)</i> <i>does not respond.</i>	1000ms	
			Repetition time	The repetition time can be set to any value between 100 and 60,000 ms. <i>Time after which another attempt is made to establish a connection.</i>	5000 ms	
		TcpIP server	Port num- ber	The port number can be set to any value between 0 and 65535. Local port on which the device receives connection requests from a client application (host system) as TCP server.	10000	
	UDP	Activated		Off/On Activates the connection-free UDP protocol, which is suitable for e.g. transferring process data to the host. UDP and TCP/ IP can be used in parallel. For network applications with changing partners or for only brief data transmissions, UDP is preferred as the connection- free protocol.	Off	
		IP address		IP address of the host to which data is to be sent. The IP address can be set to any value in the format xxx.xxx.xxx. In the same way, the host system (PC / PLC) requires the set IP address of the device and the selected port number. By assigning these parameters, a socket is formed via which the data can be sent and received	000.000.000.000	
		Port number		Port number of the host to which data is to be sent. The port number can be set to any value between 0 and 65535.	10001	

Table 8.4: Ethernet submenu

8.3 Language selection menu

Currently, there are 6 display languages available:

- German
- English
- · Spanish
- French
- Italian
- Chinese

The display language and the language of the webConfig user interface are synchronized. The setting in the display affects the webConfig tool and vice versa.



8.4 Service menu

Diagnosis

This menu item is used exclusively for service purposes by Leuze electronic.

Status messages

This menu item is used exclusively for service purposes by Leuze electronic.

8.5 Actions menu

Start decoding

Here, you can perform a single reading via the display.

Activate the single reading with the button 🕑 and hold a bar code in the reading field of the device.

The laser beam is switched on and the following display appears:

Actions			
o	Stop decoding		
	<u>ZZZZZZZZ</u>		

Once the bar code is detected, the laser beam is switched off again. The read result **zzzzzzzz** is shown directly in the display for about 1 s. After that, the Actions menu is displayed again.

Start alignment

The alignment function makes it easy to align the device by optically displaying the read quality.

Activate the alignment function with the button 🕑 and hold a bar code in the reading field of the device.


At first, the laser beam is switched on continuously, enabling you to position the bar code securely in the reading field. Once the bar code is read, the laser beam is switched off briefly and the following display appears:

Actions			
0	Stop alignment		
xx	777777777		

xxRead quality in % (scans with info)zzzzzzContents of the decoded bar code

Once the bar code has been detected, the laser beam starts to flash.

The flash frequency provides visual information on the read quality. The faster the laser beam flashes, the higher the read quality.

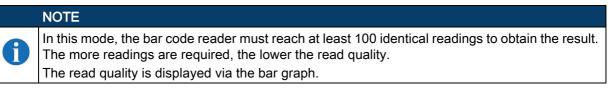

Start auto setup

The auto setup function provides an easy option for configuring the code type and number of digits of **Decoder 1**.

Use the button 🕑 to activate the auto-setup function and hold an unknown bar code in the reading beam of the device.

The following display appears:

Actions			
o	Stop auto setup		
xx yy zzzzz			



The following information is displayed:

- xx Code type of the detected code (sets the code type of Decoder 1)
 - '01' 2/5 Interleaved
 - '02' Code 39
 - '03' Code 32
 - '06' UPC (A, E)
 - '07' EAN
 - '08' Code 128, EAN 128
 - '10' EAN Addendum
 - '11' Codabar
 - '12' Code 93
 - '13' GS1 Databar Omnidirectional
 - '14' GS1 Databar Limited
 - '15' GS1 Databar Expanded
 - Number of digits of the detected code (sets the number of digits of Decoder 1)
- zzzzzz: Contents of the decoded label. A appears if the label was not correctly read.

Start teach-in

уу

The teach-in function can be used to conveniently read reference code 1.

Use the button 🕑 to activate the teach-in function and hold a bar code which contains the content that you wish to store as the reference code in the reading beam of the device.

The following display appears:

Actions

o Stop teach-in

RC13xxzzzzzz

The following information is displayed:

- RC13 Means that ReferenceCode number 1 is stored in RAM. This is always output xx Defined code type (see auto setup)
- **z** Defined code information (1 ... 63 characters)



8.6 Operation

Shown here is an example describing important operating procedures in detail.

NOTE



Use the navigation buttons **(**) to move through the menu. Activate the desired selection with the enter button **(**).

Parameter enable

During normal operation parameters can be viewed only. If parameters need to be changed, the **ON** menu item in the **Parameter enabling** menu must be activated. To do this proceed as follows:

Parameters 1 Parameter handling Decoder table Digital SWIO Ethernet	In the Parameter menu, use the ▲ buttons to select the Parameter han- dling menu item.
Image: A start of the start	Series Press the enter button to enter the Parameter handling menu.
Parameter handling 1.1	In the Parameter handling menu, use the so buttons to select the Parame- ter enable menu item.
o Parameter enableo Parameters to default	
(1)	♥ Press the enter button to enter the Parameter enable menu.
Parameter enable OFF o ON	In the Parameter enable menu, use the ▲ buttons to select the ON menu item.
Default Unit OFF	
•	by Press the enter button to activate parameter enable.
Parameter enable OFF o ON	Step PWR LED lights up red. You can now set individual parameters via the display.
Default Unit	
OFF	
(ESC) (ESC)	$\ensuremath{\mathfrak{b}}$ Press the ESC button twice to return to the main menu.

Network configuration

Information on network configuration can be found in chapter "Starting up the device - Configuration" on page 59.

9 Starting up the device – Leuze webConfig tool

With the **Leuze webConfig tool**, an operating-system independent, web-technology based, graphical user interface is available for configuring bar code readers of the BCL 500/series.

Through the use of HTTP as communication protocol and by using only standard technologies on the client side (HTML, JavaScript and AJAX), which are supported by all commonly used, modern browsers (e.g. **Mozilla Firefox** beginning with Version 2 or **Internet Explorer** beginning with Version 7.0), it is possible to operate the **Leuze webConfig tool** on any internet-ready PC.

9.1 Connecting the SERVICE USB interface

The connection to the SERVICE USB interface of the device is established via the PC-side USB interface using a special USB cable with 2 type A/A plugs.

9.2 Installing the required software

9.2.1 System requirements

 NOTE

 It is recommended to update the operating system regularly and to install the current Windows service packs.

Table 9.1:	webConfig system	requirements
------------	------------------	--------------

Operating system	Windows 10 (recommended) Windows 8. 8.1 Windows 7
Computer	PC, laptop or tablet with USB interface, version 1.1 or higher
Graphics card	Min. resolution: 1280 x 800 pixels
Required disk space for USB driver	10 MB
Internet browser	Recommended is a current version of Mozilla Firefox Google Chrome Microsoft Edge Note: Other Internet browsers are possible but have not been tested with the current device firmware.

9.2.2 Installing the USB driver

In order for the device to be automatically detected by the connected PC, the **USB driver** must be installed **once** on your PC. To do this, you must have **administrator privileges**.

Please proceed according to the following steps:

- Start your PC with administrator privileges and log on.
- Load the CD included in the delivery contents of your device in the CD drive and start the setup.exe program.
- Alternatively, you can also download the setup program from the internet at www.leuze.com.
- ♦ Follow the instructions provided by the setup program.

Upon successful installation of the USB driver, an icon BCL 50xi automatically appears on the desktop. **To check**: In the Windows device manager, a device called "Leuze electronic, USB Remote NDIS Network Device" appears under the "Network adapter" device class following successful USB registration.

NOTE

If the installation failed, contact your network administrator: The settings of the firewall used may need to be adjusted.

9.3 Starting the webConfig tool

To start the **webConfig tool**, click the icon BCL 50xi a located on the desktop. Make certain that the device is connected to the PC via the USB interface and that voltage is connected.

Or alternatively: Open a browser on your PC and enter the following address: 192.168.61.100.

This is the default Leuze service address for communication with bar code readers of the BCL 500/series. In both cases, the following start page appears on your PC.

-	BCL 508i webConfig©bj	y Leu: × +						·—·	
⇔ ←	\rightarrow C O B	192.168.61.100/#pro	ocess_data_mon		☆	Q Suchen		ක ප	S ≡
	BCL 508 <mark>i</mark> OM 100 webConfig						4	Leuze ele the s	ectronic ensor people
	PROCESS	ALIC	INMENT		Ø.	DIAGNOSTICS	Ж ма	INTENANCE	
PROCE	ss 🕚	SERVIC	E	0 🖳 🖡			-	•	• EN •
							ź	DESCRI	PTION
PROCES	S DATA								
Index *	Reading gate no. 🗘	Decoding result \Diamond	Code type 🗘	Number of digits 🗘	Quality [%] 🗘	Label angle [°	¢		
							1		
							1		
0	_	[Planning engineer]			HOST IN 😍	HOST OUT 😍	© 2021 Leuze	electronic Gmb	H + Co. KG

Figure 9.1: The start page of the webConfig tool

	NOTE
1	The webConfig tool is completely contained in the firmware of the device. Depending on firm- ware version, the start page may vary from that shown above.

The individual parameters are – where useful – graphically displayed in order to better illustrate the meaning of the what are often perceived as abstract parameters.

The result is an easy-to-use and practically-oriented user interface!



9.4 Short description of the webConfig tool

The webConfig tool has 5 main menus:

Process

with the current read bar code information.

Alignment

for manually starting read processes and for aligning the bar code reader. The results of the read processes are displayed immediately. As a result, this menu item can be used to determine the optimum installation location.

Configuration

for adjusting decoding, for data formatting and output, switching inputs/outputs, communication parameters and interfaces, etc. ...

Diagnostics

for event logging of warnings and errors

Maintenance

for updating the firmware.

The user interface of the webConfig tool is largely self-explanatory.

9.4.1 Module overview in the Configuration menu

The adjustable parameters of the device are clustered in modules in the Configuration menu.

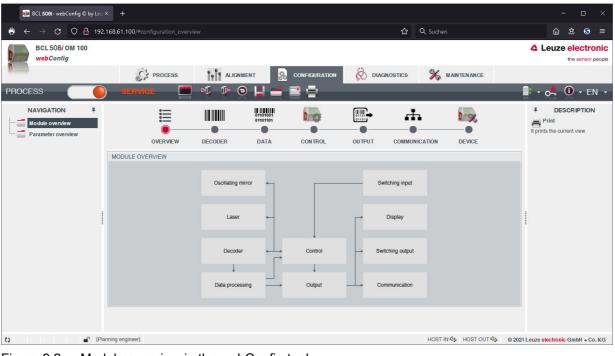


Figure 9.2: Module overview in the webConfig tool

 NOTE

 Image: The webConfig tool is completely contained in the firmware of the device. Depending on firmware version, the module overview may vary from that shown above.

The individual modules and their relationships to one another are graphically displayed in the module overview. The display is context sensitive, i.e. click a module to directly access the corresponding submenu.



An overview of the modules:

- **Decoder** Definition of code types, code-type features and number of digits of the labels that are to be decoded
- Data processing
 Filtering and processing of the decoded data
- **Output** Sorting of the processed data and comparison with reference codes
- Communication
 Eormatting of the data for output via the communication interfaces
- Formatting of the data for output via the communication interfaces
- Control
 Activation/deactivation of decoding
- Switching input Activation/deactivation of read processes
- Switching output Definition of events which activate/deactivate the switching output
- **Display** Formatting of the data for output on the display
- Oscillating mirror (optional) Setting oscillating mirror parameters

The webConfig tool is available for all bar code readers of the BCL 500/series.

10 Starting up the device - Configuration

This chapter describes basic configuration steps which you can carry out either via the webConfig tool or the display.

Via the webConfig tool

The most convenient way to configure the device is via the webConfig tool. Only the webConfig tool gives you access to all settings of the device. To use the webConfig tool, you need to establish a USB connection between the device and a PC/laptop.



Notes on use see chapter 9 "Starting up the device - Leuze webConfig tool".

Via display

Ĭ

ĭ

The display offers basic configuration options for the device. Configuration via the display is appropriate if you want to configure simple reading tasks and you cannot or do not want to set up a USB connection between the device and a PC/laptop.

NOTE

Notes on use see chapter 3.5.2 "Status indicators and operation".

10.1 Measures to be performed prior to the initial commissioning

before commissioning, familiarize yourself with the operation and configuration of the device.

- Before connecting the supply voltage, recheck all connections and ensure that they have been properly made.
- ♦ Check the applied voltage. It must be in the range between +10V ... 30 V DC.

Connecting the functional earth FE

b Ensure that the functional earth (FE) is connected correctly.

NOTE

Unimpaired operation is only guaranteed when the functional earth is connected properly. All electrical disturbances (EMC couplings) are discharged via the functional earth connection.

10.2 Starting the device

ĭ

Connect the +10 ... 30VDC supply voltage (typ. +24VDC); the device starts up and the bar code reading window appears on the display.

By default, parameter enabling is deactivated and you cannot change any settings. If you wish to carry out the configuration via the display, you must activate parameter enabling (see chapter 8.6 "Operation", Parameter enable).

As a first step, you need to set the communication parameters of the device.

You can make the necessary settings via the display or via the webConfig tool. The settings made by means of the webConfig tool are described here only briefly.

10.3 Setting the communication parameters

With the communication parameters, you determine how data is exchanged between device and host system, monitor PCs etc.

The communication parameters are independent of the topology in which the device is operated (see chapter 7.3 "Ethernet topologies").

10.3.1 Manual configuration of the IP address

If your system does not include a DHCP server or if the IP addresses of the devices are to be set permanently, proceed as follows:

- Have the network administrator specify the data for IP address, net mask and gateway address of the device.
- Set these values on the device:

In the webConfig tool

♥ In the main menu, select Configuration -> Communication -> Ethernet interface.

NOTE

If the setting is made via the webConfig tool, then this becomes active following a transfer to the device. A restart is not required!

Or alternatively in the display

NOTE



Ĭ

Use the navigation buttons (to move through the menu. Activate the desired selection with the enter button ().

In the main menu, select the Parameter menu.

- Select the Ethernet menu item.
- ♥ Press the enter button to enter the menu.
- Select the Ethernet interface menu item.
- ♥ Press the enter button to enter the menu.
- Successively select the IP address, Gateway and Net mask menu items and set the desired values.
- ✤ Exit the menu by pressing the Escape button.

The Configuration changed, system must be restarted message appears.

Sconfirm with **OK** to initiate a restart and activate the changed configuration.

10.3.2 Automatically setting the IP address

If your system includes a DHCP server which is to be used to assign the IP addresses, proceed as follows:

In the webConfig tool

♦ In the main menu, select Configuration -> Communication -> Ethernet -> DHCP.

Or alternatively in the display

- ✤ In the main menu, select the Parameter menu.
- ♦ Select the **Ethernet** menu item.
- Press the enter button to enter the menu.
- ♦ Select the Ethernet interface menu item.
- ♦ Press the enter button to enter the menu.
- Select the **DHCP activated** menu item and set the desired value.
- ✤ Exit the menu by pressing the Escape button.

The Configuration changed, system must be restarted message appears.

Sconfirm with **OK** to initiate a restart and activate the changed configuration.

NOTE

The device responds to ping commands. A simple test to determine whether the address assignment was successful is to enter the previously configured IP address in a ping command (e.g. ping 192.168.60.101 in a command line window under Windows).

10.3.3 Address Link Label

The Address Link Label is an additional stick-on label that is affixed to the device.

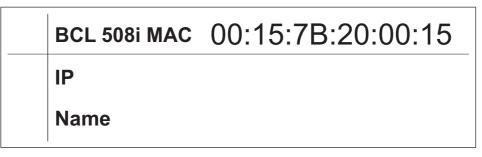


Figure 10.1: Example of an Address Link Label; the device type varies depending on the series

• The *Address Link Label* contains the MAC address (Media Access Control address) of the device and makes it possible to enter the IP address and the device name manually.

The area of the *Address Link Label* on which the MAC address is printed can be separated from the remainder of the stick-on label if necessary using the perforation.

- The *Address Link Label* can be removed from the device and affixed in the installation and layout diagrams to designate the device.
- Once it is affixed in the documents, the *Address Link Label* establishes a unique reference between the mounting location, the MAC address or the device, and the associated control program. The time-consuming searching, reading, and manually writing down of the MAC addresses of all devices installed in the system are eliminated.

NOTE

i

Each device with Ethernet interface is uniquely identified via the MAC address assigned during production. The MAC address is also listed on the name plate of the device.

If multiple devices are commissioned in a system, the MAC address of each installed device must be correctly assigned, e.g., during programming of the control.

- ⇔ Remove the *Address Link Label* from the device.
- If necessary, add the IP address and the device name to the Address Link Label.
- Affix the "Address Link Label" in the documents, e.g., in the installation diagram, according to the position of the device.

10.3.4 Ethernet host communication

The Ethernet host communication enables the configuration of connections to an external host system. Both UDP as well as TCP/IP (in either client or server mode) can be used. The connection-free UDP protocol is used primarily to transfer process data to the host (monitor operation). The connection-oriented TCP/IP protocol can also be used to transfer commands from the host to the device. With this connection, the data is backed up by the TCP/IP protocol itself.

If you would like to use the TCP/IP protocol, you must also define whether the device is to operate as a TCP client or as a TCP server.

Both protocols can be activated simultaneously and used in parallel.

NOTE

Contact your network administrator to determine which communication protocol is used

10.3.5 TCP/IP

Ĭ

♦ Activate the TCP/IP protocol.

♦ Set the TCP/IP mode of the device.

In TCP client mode, the device actively establishes the connection to the primary host system (PC / PLC as server). The device requires from the user the IP address of the server (host system) and the port

number on which the server (host system) accepts a connection. In this case, the device determines when and with whom a connection is established!

b With a device as TCP client, also set the following values:

- IP address of the TCP server (normally the PLC/host computer)
- Port number of the TCP server
- · Timeout for the wait time for an answer from the server
- Repetition time for renewed communication attempt following a timeout

In TCP server mode, the superior host system (PC/PLC) actively establishes the connection and the connected device waits for the connection to be set up. The TCP/IP stack must be informed by the user as to the local port of the device (port number) on which connection requests from a client application (host system) are to be received. If there is a connection request and a connection is established by the superior host system (PC / PLC as client), the device (server mode) accepts the connection. Data can then be sent and received.

♥ With a device as TCP server, also set the following values:

• Port number for the communication of the device with the TCP clients

The corresponding adjustment options can be found:

In the webConfig tool

In the main menu, select Configuration -> Communication -> Host communication.

Or alternatively in the display

♦ In the main menu, select the **Parameter menu**.

- ♦ In the Parameter menu, select the **Ethernet** menu item.
- Press the enter button to enter the menu.
- Select the Host communication menu item.
- Press the enter button to enter the menu.
- Select the **TcpIP** menu item.
- Press the enter button to enter the menu.
- Successively select the Activated, Mode and TcpIP Client or TcpIP Server menu items and set the desired values.
- ✤ Exit the menu by pressing the Escape button.

10.3.6 UDP

The device requires from the user the IP address and the port number of the communication partner. In the same way, the host system (PC / PLC) now also requires the set IP address of the device and the selected port number. By assigning these parameters, a socket is formed via which the data can be sent and received.

♦ Activate the UDP protocol

- ♦ Also set the following values:
 - · IP address of the communication partner
- · Port number of the communication partner

The corresponding adjustment options can be found:

In the webConfig tool

♥ In the main menu, select Configuration -> Communication -> Host communication.

Or alternatively in the display

♦ In the main menu, select the **Parameter menu**.

- ✤ In the Parameter menu, select the Ethernet menu item.
- Press the enter button to enter the menu.
- Select the Host communication menu item.
- Press the enter button to enter the menu.
- Select the UDP menu item.



- ♥ Press the enter button to enter the menu.
- Successively select the Activated, IP address and Port number menu items and set the desired values.
- ♥ Exit the menu by pressing the Escape button.

10.4 Further settings

After the basic configuration of the operating mode and the communication parameters, you need to carry out further settings.

10.4.1 Decoding and processing the read data

The device offers the following possibilities:

- Setting the number of labels to be decoded for each reading gate (0 ... 64). This is done via the Max. no. of labels parameter.
- Definition of up to 8 different code types (4 different types if configured via the display). Labels that match one of the defined code types are decoded. Further parameters can be set for each code type:
 - Code type (symbology)
 - Number of digits: either up to 5 different numbers of digits (e.g., 10, 12, 16, 20, 24), or a range (Interval mode) and up to three additional numbers of digits (e.g., 2 ... 10, 12, 16, 26)
 - Reading reliability: the set value specifies how many times a label must be read and decoded with the same result before the result is accepted as valid.
 - Activation of the code reconstruction technology (CRT, in the webConfig tool only)
 - Additional code type specific settings (in the webConfig tool only)
 - Check digit method used for decoding as well as the type of check digit transmission for the output
 of the read result. The two possibilities for the latter are Standard (corresponds to the standard for
 the selected code type/symbology) and not Standard.
- ♦ Define at least one code type with the desired settings.

In the webConfig tool: Configuration -> Decoder

Or alternatively in the display: Parameter -> Decoder table

Data processing via the webConfig tool

In the Data and Output submenus of the Configuration main menu, the webConfig tool provides extensive data processing options to adapt the functionality of the device to the specific reading task:

- Data filtering and segmentation in the Data submenu:
 - Data filtering according to characteristics for handling identical bar code information
 - · Data segmentation for differentiating between identifier and content of the read data
 - Data filtering according to content and/or identifier in order to suppress the output of bar codes with specific content/identifiers
 - Completeness inspection of the read data
- Sorting and formatting the output data in the Output submenu:
 - Configuration of up to 3 different sorting criteria. Sorting by physical data and content of the read bar codes.
 - Formatting of the data output for the HOST.
 - Formatting of the data output for the display.

10.4.2 Control of the decoding

In general, decoding is controlled via one or more of the configurable switching inputs/outputs. For this purpose, the respective connection to the SW IN/OUT and POWER interfaces must be configured as a switching input.

Via a switching input, you can:

- · Start decoding
- Stop decoding
- Start decoding and then stop decoding after a configurable time period
- · Read a reference code
- Start the automatic code type configuration (AutoConfig)

- Connect the required control devices (photoelectric sensor, proximity switch, etc.) to the device (see chapter 7).
- Configure the connected switching inputs according to your requirements. To do this, first set the I/O mode to Input and then configure the switching behavior.

In webConfig: Configuration -> Device -> Switching inputs/outputs

Or alternatively in the display: Parameter -> Digital SWIO -> Switching input/output 1-4

NOTE

Alternatively, one can also activate decoding via the online command + and deactivate it via the online command '-'. For further information on the online commands, see chapter 11 "Online commands".

Advanced decoder control in the webConfig tool

The webConfig tool provides advanced functions, in particular for deactivating decoding. These may be accessed via the Control submenu of the Configuration main menu. You can:

- · Activate decoding automatically (delayed)
- Stop decoding after a maximum reading gate time
- · Stop decoding via the completeness mode, if:
 - · the maximum number of bar codes to be decoded has been decoded
 - A positive reference code comparison has taken place.

10.4.3 Control of the switching outputs

By using the switching inputs/outputs of the device, external event-controlled functions can be implemented without assistance from the superior process control. For this purpose, the respective connection at the SW IN/OUT and POWER interfaces must be configured as a switching output.

A switching output can be activated:

- · At the start/end of the reading gate
- Depending on the read result:
 - Reference code comparison positive/negative
 - Read result valid/invalid
- Depending on the state of the device:
 - Ready/not ready
 - · Data transmission active/not active
 - Active/standby
 - Error/no error

• etc.

b Connect the required switching outputs (see chapter 7).

Configure the connected switching outputs according to your requirements. To do this, first set the I/O mode to Output and then configure the switching behavior.

In webConfig: Configuration -> Device -> Switching inputs/outputs

Or alternatively in the display: Parameter -> Digital SWIO -> Switching input/output 1-4

10.5 Transmitting configuration data

Instead of going through the tedious task of configuring every parameter of the device individually, you can also conveniently transfer configuration data.

In general, there are two possibilities for transferring configuration data between two bar code readers:

- · Storage in a file and transfer using the webConfig tool
- Using the external parameter memory

10.5.1 Via the webConfig tool

With the webConfig tool, you can store entire configurations of the device on data carriers and transfer them from these to the device.

This storage of configuration data is especially useful if you want to store basic configurations which will require only minor changes.

Starting up the device - Configuration

In the webConfig tool, you store the configuration data via the buttons in the upper part of the middle window of all submenus of the Configuration main menu.

10.5.2 With the external parameter memory

The use of the external parameter memory permits the easy replacement of a defective device on site. This requires an external parameter memory to be installed permanently to the USB connection of the device.

The device stores a copy of the current configuration in the external parameter memory. This copy is immediately updated when the configuration is changed via the display or by a superior host system (PC/PLC) via online commands.

Leuze

11 Online commands

11.1 Overview of commands and parameters

Online commands can be used to send commands directly to the device for control and configuration. For this purpose, the device must be connected to a host- or service computer via the interface. The commands described can be sent either via the host or the service interface.

Online commands

With the commands, you can:

- · control/decode.
- read/write/copy parameters.
- · carry out an automatic configuration.
- teach-in/set reference codes.
- call up error messages.
- call up statistical device information.
- carry out a software reset in order to reinitialize the device.

Syntax

Online commands consist of one or two ASCII characters followed by command parameters.

No separation characters may be entered between the command and the command parameter(s). Both small and capitalized letters can be used.

Example:

Command 'CA':	autoConfig function
Parameter '+':	Activation
Transmitted is:	'CA+'

Notation

Commands, command parameters and returned data are enclosed between single quotation marks '' in the text of this manual.

Most "online" commands are acknowledged by the device and any requested data returned. For commands that are not acknowledged, command execution can be observed or monitored directly on the device.

11.1.1 General online commands

Software version number

Command	'V'	
Description	Requests device version information	
Parameters	No	
Acknowledgment	'BCL 500i SM 100 V 1.3.8 2008-02-15' The first line contains the device type, followed by the device version number and version date. (The data which is actually displayed may vary from the values given here.)	
number This cor connect	nmand returns the major release number of the software packet. This major release also appears on the display during start-up. nmand can be used to check whether the connected host or service computer is properly ed and configured. If you do not receive an acknowledgment, please check interface ions, protocol and service switches.	

Software reset

Command	Ϋ́Η'
	Carries out a software reset. The device is restarted and reinitialized, leaving it in the same state as when the supply voltage is switched on.
Parameters	No
Acknowledgment	'S' (start character)



Code recognition

Command		'CC'		
Description		Detects an unknown bar code and outputs number of digits, code type, and code information to the interface, without storing the bar code in the parameter memory.		
Parameters	No			
Acknowledgment	'xx yy	zzzzz'		
	XX:	Numb	er of digits of the read code	
	уу:	Code	type of the read code	
		'01'	2/5 Interleaved	
		'02'	Code 39	
		'03'	Code 32	
		'06'	UPC (A, E)	
		'07'	EAN	
		'08'	Code 128, EAN 128	
		'10'	EAN Addendum	
		'11'	Codabar	
		'12'	Code 93	
		'13'	GS1 Databar Omnidirectional	
		'14'	GS1 Databar Limited	
		'15'	GS1 Databar Expanded	
	<u>zzzzz</u>	2	Contents of the decoded label. A – appears if the label was not correctly read.	

autoConfig

Command		'CA'		
Description			activates the 'autoConfig' function. Certain label reading parameters are programmed automat- up by the labels which the device reads while the autoConfig function is active.	
Parameters	'+'	Activat	es 'autoConfig'	
	' <i>1</i> '	Rejects	s the last code read	
	' <u>-</u> '	Deactiv	vates 'autoConfig' and stores the decoded data in the current parameter set	
Acknowledgment	'CSx'			
	x	Status		
		'0'	Valid 'CA' command	
		'1'	Invalid command	
		'2'	autoConfig could not be activated	
		'3'	autoConfig could not be deactivated	
		'4'	Result could not be deleted	
Description	'xx yy	<u>777777</u> '		
	xx	Numbe	er of digits of the read code	
	уу	Code t	ype of the read code	
		' 01'	2/5 Interleaved	
		'02'	Code 39	
		'03'	Code 32	
		'06'	UPC (A, E)	
		'07'	EAN	
		'08'	Code 128, EAN 128	
		'10'	EAN Addendum	
		'11'	Codabar	
		'12'	Code 93	
		'13'	GS1 Databar Omnidirectional	
		'14'	GS1 Databar Limited	
		'15'	GS1 Databar Expanded	
	<u> </u>	:	Contents of the decoded label. A – appears if the label was not correctly read.	



Alignment mode

Command	'JP'	
Description	This command simplifies mounting and alignment of the device. After activating the function with JP+ , the device continuously supplies status information to the serial interfaces. With this online command, the scanner is set to terminate the decoding after 100 successfully decoded labels and output the status information. Subsequently, the read process is reactivated automatically. In addition to the output of the status information, the laser beam is used to display the reading quality. Depending on how many read results could be extracted, the duration of the laser's "OFF" time increases. If the reading quality is high, the laser beam flashes in brief, regular intervals. The worse the decoder decodes, the longer the pauses become during which the laser is switched off. The flashing intervals become more and more irregular because the laser may, in total, be active for longer to extract more labels. The duration of the pauses has been stepped in such a way that they can be distinguished by the eye.	
Parameters	'+': Starts the adjustment mode.	
	'-': Ends the adjustment mode.	
Acknowledgment	'yyy_zzzzzz'	
	yyy : Read quality in %. A high process availability is ensured at read qualities > 75 %.	
	zzzzz: Bar code information.	

Manual definition of the reference code

Command			'RS'
Description	This command can be used to define a new reference code in the device by means of direct input via the serial interface. The data is saved in the parameter set according to your input under reference code 1 through 2 and stored in the working buffer for direct further processing.		
Parameters	'RSyvx	XZZZZZZ	zz'
	y, v, x	and z ar	e placeholders (variables) for the actual input.
	у	Defined	reference code no.
		'1'	(code 1)
		'2'	(code 2)
	v	Storage	e location for reference code:
		'0'	RAM+EEPROM,
		'3'	RAM only
	xx	Defined	d code type (see command 'CA')
	z	Defined	d code information (1 63 characters)
Acknowledgment	'RSx'		
	x	Status	
		'0'	Valid 'Rx' command
		'1'	Invalid command
		'2'	Insufficient memory for reference code
		'3'	Reference code has not been saved
		'4'	Reference code invalid
Example	Entry =	= 'RS130	678654331' (Code 1 (1), RAM only (3), UPC (06), code information)

Reference code teach-in

Command		'RT'		
Description	This c	ommar	nd enables a reference code to be defined quickly by reading an example label.	
Parameters	'RTy'	γ'		
	у	Func	tion	
		'1'	Defines reference code 1	
		'2'	Defines reference code 2	
		'+'	Activates the definition of reference code 1 up to the value of Parameter no_of_labels	
		<u>י-</u> י	Ends the teach event	

Command	'RT'	
Acknowledgment		ice first responds with the command 'RS' and corresponding status (see command RS). After a bar s been read, it sends the result in the following format:
	'RCyvx	77777'
	y , v , x a	nd z are placeholders (variables) for the actual input.
	у	Defined reference code no.
		'1' (code 1)
		'2' (code 2)
	v	Storage location for reference code
		'0' RAM+EEPROM,
		'3' RAM only
	xx	Defined code type (see command 'CA')
	z	Defined code information (1 63 characters)
NOTE		

NOTE

i

With this function, only code types are recognized that are identified using the 'autoConfig' function or which were set in the set-up.

After each reading via an 'RTy' command, explicitly switch off the function again since failure to do so will interfere with other commands as well as prevent execution of a new 'RTx' command.

Reading a reference code

Command	'RR'		
Description	The command reads out the reference code defined in the device. If no parameters are specified, all defined codes are output.		
Parameters	<reference code="" number=""> '1' '2' value range of reference codes 1 to 2</reference>		
Acknowledgment	If no reference codes are defined, the device responds with the ' RS ' command and corresponding status (see command RS). For valid codes, the output corresponds to the following format:		
	RCyvxxzzzzz		
	\mathbf{y} , \mathbf{v} , \mathbf{x} and \mathbf{z} are placeholders (variables) for the actual input.		
	y Defined reference code no.		
	' 1 ' (code 1)		
	'2' (code 2)		
	v Storage location for reference code		
	'0' RAM+EEPROM,		
	'3' RAM only		
	xx Defined code type (see command 'CA')		
	z Defined code information (1 63 characters)		

11.1.2 Online commands for system control

Activating sensor input

Command	'+'
Description	 The command activates decoding. This command is used to activate the reading gate. It remains active until it is deactivated by one of the following criteria: Deactivation by a manual command Deactivation by a switching input Deactivation upon reaching the specified read quality (equal scans) Deactivation by timeout Deactivation upon reaching a preset number of scans without information.
Parameters	No
Acknowledgment	None



Deactivating sensor input

Command	2 · · · · · · · · · · · · · · · · · · ·
	The command activates decoding. This command can be used to deactivate the reading gate. Following deac- tivation, the read result is output. Because the reading gate was manually deactivated and, thus, no GoodRead criterion was met, a NoRead is output.
Parameters	No
Acknowledgment	None

System boot-up

Command	'SON'		
•	System boot-up: changes the device from standby mode back to operating mode. The polygon wheel motor is started, the device works as usual.		
Parameters	No		
Acknowledgment	'S' (start character)		

System standby

Command	'SOS'
	System standby: puts the device in standby mode. The device cannot be triggered, and the polygon wheel motor is stopped.
Parameters	No
Acknowledgment	None

11.1.3 Online commands for configuring the switching inputs/outputs

Activate switching output

Command	'AA'			
Description	The switching outputs 1 - 4 can be activated with this command. The respective port must have been configured as a switching output. The logic state is output, i.e., an inverted logic is taken into account (e.g., inverted logic and a state of High corresponds to a voltage of 0V at the switching output).			
Parameters	'OA <a>'			
	<a> Selected switching output [14], unit [dimensionless]			
Acknowledgment	None			

Query the state of the switching outputs

Command	'OA'				
Description	switch	This command may be used to query the states of the switching inputs and outputs that are configured as a switching output and that have been set via commands. The logic state is output, i.e., an inverted logic is taken into account (e.g., inverted logic and a state of High corresponds to a voltage of 0V at the switching output).			
Parameters	'OA?'	'OA?'			
Acknowledgment	'OA S	'OA S1= <a>;S2=<a>[;S3=<a>][;S4=<a>]'			
	<a>	State of the switching outputs			
		' 0' Low			
		'1' High			
		'l' Configuration as switching input			
		'P'	Passive configuration		

Set the state of the switching outputs

Command	'OA'		
Description	This command is used to set the states of the switching inputs/outputs that are configured as a switching output. The logic state is specified, i.e., an inverted logic is taken into account (e.g., inverted logic and a state of High corresponds to a voltage of 0V at the switching output). The values of the switching inputs/outputs that are not configured as switching outputs are ignored. You may also use only a selection of the existing switching inputs/outputs as long as these are listed in ascending order.		
Parameters	'OA [S1= <a>][;S2=<a>][;S3=<a>][;S4=<a>]'		
	<a> State of the switching output		
	'0' Low		
	'1' High		
Acknowledgment	'OA= <aa>'</aa>		

Leuze

Command	'OA'		
	<aa></aa>		acknowledgment, imensionless]
		'00'	Ok
		' 01'	Syntax error
		'02'	Parameter error
		'03'	Other error

Deactivate switching output

Command	'OD'				
Description	The switching outputs 1 - 4 can be deactivated with this command. The respective port must have been con- figured as a switching output. The logic state is output, i.e., an inverted logic is taken into account (e.g., inverted logic and a state of High corresponds to a voltage of 0V at the switching output).				
Parameters	'OD <a>'				
	Selected switching output [14], unit [dimensionless]				
Acknowledgment	None				

Query the configuration of the switching inputs/outputs

Command		'OF'			
Description	This co	This command is used to query the configuration of the switching inputs/outputs 1 to 4.			
Parameters	'OF?'	'OF?'			
Acknowledgment	'OF S1	'OF S1= <a>;S2=<a>[;S3=<a>][;S4=<a>]'			
	<a>	<a> Function of the switching input/ output, unit [dimensionless]			
		'I Switching input			
		'O'	Switching output		
		'P'	Passive		

Configure the switching inputs/outputs

Command		'OF'		
Description		This command is used to configure the function of the switching inputs/outputs 1 to 4. You may also use only a selection of the existing switching inputs/outputs as long as these are listed in ascending order.		
Parameters	'OF [S	'OF [S1= <a>][;S2=<a>][;S3=<a>][;S4=<a>]'		
	<a>		ion of the switching input/ output, imensionless]	
		ïľ	Switching input	
		'O'	Switching output	
		'P'	Passive	
Acknowledgment	'0F=<	'OF= <bb>'</bb>		
	<bb></bb>	> Status acknowledgment		
		'00'	Ok	
		'01'	Syntax error	
		'02'	Parameter error	
		'03'	Other error	

11.1.4 Online commands for the parameter set operations

Copying parameter set

Command		'PC'		
Description	three paramete	This command can only be used to copy parameter sets in their entirety. This can be used to replicate the three parameter sets default , permanent and operating parameters on the basis of one another. In addition, this command also be used to restore the factory settings.		
Parameters	'PC <source type=""/> <target type="">'</target>			
	<source type=""/>	Parameter data set that is to be copied, unit [dimensionless]		
	'0'	Parameter data set in permanent memory		
	'2'	Default or factory parameter set		

Leuze

Command		'PC'		
		'3'	Operating parameter data set in volatile memory	
	<targe< th=""><th>t type></th><th>Parameter set into which the data is to be copied, unit [dimensionless]</th></targe<>	t type>	Parameter set into which the data is to be copied, unit [dimensionless]	
		'0'	Parameter data set in permanent memory	
		'3'	Operating parameter data set in volatile memory	
	Permiss	sible cor	nbinations here include:	
	'03'	Copyin	g the data set from the permanent memory to the operating parameter data set	
	'30'	Copyin	g the operating parameter data set to the permanent parameter set memory	
	'20'	Copyin	g the default parameters to the permanent memory and to the main memory	
Acknowledgment	'PS= <a< th=""><th>a>'</th><th></th></a<>	a>'		
	<aa></aa>	<aa> Status acknowledgment, unit [dimensionless]</aa>		
		'00'	Ok	
		'01'	Syntax error	
		'02'	Impermissible command length	
		'03'	Reserved	
		'04'	Reserved	
		'05'	Reserved	
		'06'	Impermissible combination, source type - target type	

Requesting parameter data set from device

Command	'PR'		
Description	The parameters of the device are grouped together in a parameter set and permanently stored in memory. There is one parameter set in permanent memory and one operating parameter set in volatile memory; in addition, there is a default parameter set (factory parameter set) for initialization. This command can be used to edit the first two parameter sets (in permanent and volatile memory). A check sum can be used for reliable parameter transfer.		
Parameters	'PR <bcc th="" type<=""><td><ps type=""><address><data length="">[<bcc>]'</bcc></data></address></ps></td></bcc>	<ps type=""><address><data length="">[<bcc>]'</bcc></data></address></ps>	
	<bcc type=""></bcc>	Check-digit function during transmission, unit [dimensionless]	
	'0'	Not used	
	'3'	BCC mode 3	
	<ps type=""></ps>	Memory from which the values are to be read, unit [dimensionless]	
	'0'	Parameter values stored in the flash memory	
	'1'	Reserved	
	'2'	Default values	
	'3'	Operating values in RAM	
	<address></address>	Relative address of the data within the data set	
	'aaaa'	Four-digit, unit [dimensionless]	
	<data length=""></data>	Length of the parameter data to be transferred	
	'bbbb'	Four-digit, unit [length in bytes]	
	<bcc></bcc>	Check sum calculated as specified under BCC type	

Command	'PR'		
Acknowledgment	PT <bc< td=""><td>C type></td><td><ps type=""><status><start></start></status></ps></td></bc<>	C type>	<ps type=""><status><start></start></status></ps>
positive	<address parameter="" value=""><address+1 parameter="" value=""> [;<address><address parameter="" value="">][<bcc>]</bcc></address></address></address+1></address>		
	<bcc (<="" td=""><td>type></td><td>Check-digit function during transmission, unit [dimensionless]</td></bcc>	type>	Check-digit function during transmission, unit [dimensionless]
		'0'	Not used
		'3'	BCC mode 3
	<ps td="" ty<=""><td>pe></td><td>Memory from which the values are to be read, unit [dimensionless]</td></ps>	pe>	Memory from which the values are to be read, unit [dimensionless]
		'0'	Parameter values stored in the flash memory
		'2'	Default values
		'3'	Operating values in RAM
	<status< td=""><td>3></td><td>Mode of parameter processing, unit [dimensionless]</td></status<>	3>	Mode of parameter processing, unit [dimensionless]
		'0'	No further parameters
		'1'	Additional parameters follow
	<start></start>		Relative address of the data within the data set,
		'aaaa'	Four-digit, unit [dimensionless]
	<p.valu< td=""><td>le A.></td><td>Parameter value of the parameter stored at this address; the parameter set data 'bb' is converted from HEX format to a 2-byte ASCII-format for transfer.</td></p.valu<>	le A.>	Parameter value of the parameter stored at this address; the parameter set data 'bb' is converted from HEX format to a 2-byte ASCII-format for transfer.
	<bcc></bcc>	•	Check sum calculated as specified under BCC type
Acknowledgment	'PS= <a< td=""><td>ia>'</td><td></td></a<>	ia>'	
negative	Parame	eter repl	у:
	<aa></aa>		acknowledgment, mensionless]
		'01'	Syntax error
		'02'	Impermissible command length
		'03'	Impermissible value for checksum type
		'04'	Invalid check sum received
		'05'	Impermissible number of data requested
		'06'	Requested data does not (any longer) fit in the transmission buffer
		'07'	Impermissible address value
		'08'	Read access after end of data set
		'09'	Impermissible QPF data set type



Determining parameter set difference to default parameters

Command			'PD'
Description			This command outputs the difference between the default parameter set and the operating parameter set or the difference between the default parameter set and the permanent parameter set.
			Comment: The reply supplied by this command can e.g. be directly used for programming a device with factory settings, whereby this device receives the same configuration as the device on which the PD-sequence was executed.
Parameters	'PD <p.< td=""><td>set1><f< td=""><td>).set2>'</td></f<></td></p.<>	set1> <f< td=""><td>).set2>'</td></f<>).set2>'
	<p.set< td=""><td>1></td><td>Parameter data set that is to be copied, unit [dimensionless]</td></p.set<>	1>	Parameter data set that is to be copied, unit [dimensionless]
		'0'	Parameter data set in permanent memory
		'2'	Default or factory parameter set
	<p.set< td=""><td>2></td><td>Parameter set into which the data is to be copied, unit [dimensionless]</td></p.set<>	2>	Parameter set into which the data is to be copied, unit [dimensionless]
		'0'	Parameter data set in permanent memory
		'3'	Operating parameter data set in volatile memory
	Permis	sible co	mbinations here include:
		'20'	Output of the parameter differences between the default and the permanently saved parameter set
		'23'	Output of the parameter differences between the default parameter set and the operating parameter set saved in volatile memory
		'03'	Output of the parameter differences between the permanent parameter set and the operating parameter set saved in volatile memory
Acknowledgment positive		> <p.valı< td=""><td>type><status><adr.><p.value adr.=""><p.valueadr.+1>… .e adr.>]</p.valueadr.+1></p.value></adr.></status></td></p.valı<>	type> <status><adr.><p.value adr.=""><p.valueadr.+1>… .e adr.>]</p.valueadr.+1></p.value></adr.></status>
		'0'	No check digits
		'3'	BCC mode 3
	<ps td="" ty<=""><td>-</td><td></td></ps>	-	
	1.0.0	'0'	Values stored in flash memory
		'3'	Operating values stored in RAM
	<statu:< td=""><td>-</td><td></td></statu:<>	-	
		·0'	No further parameters
		·1'	Additional parameters follow
	<addr.< td=""><td>></td><td>Relative address of the data within the data set</td></addr.<>	>	Relative address of the data within the data set
		'aaaa'	Four-digit, unit [dimensionless]
	<p.valu< td=""><td></td><td>Four-digit, unit [dimensionless] Parameter value of the -bb- parameter stored at this address. The parameter set data is con- verted from HEX format to a 2-byte-ASCII format for transfer.</td></p.valu<>		Four-digit, unit [dimensionless] Parameter value of the -bb- parameter stored at this address. The parameter set data is con- verted from HEX format to a 2-byte-ASCII format for transfer.
Acknowledgment	<p.valu< td=""><td>ie></td><td>unit [dimensionless] Parameter value of the -bb- parameter stored at this address. The parameter set data is con-</td></p.valu<>	ie>	unit [dimensionless] Parameter value of the -bb- parameter stored at this address. The parameter set data is con-
Acknowledgment negative		Je> Ia>' Status	unit [dimensionless] Parameter value of the -bb- parameter stored at this address. The parameter set data is con-
-	'PS= <a< td=""><td>Je> Ia>' Status</td><td>unit [dimensionless] Parameter value of the -bb- parameter stored at this address. The parameter set data is con- verted from HEX format to a 2-byte-ASCII format for transfer.</td></a<>	Je> Ia>' Status	unit [dimensionless] Parameter value of the -bb- parameter stored at this address. The parameter set data is con- verted from HEX format to a 2-byte-ASCII format for transfer.
-	'PS= <a< td=""><td>ue> na>' Status unit [di</td><td>unit [dimensionless] Parameter value of the -bb- parameter stored at this address. The parameter set data is con- verted from HEX format to a 2-byte-ASCII format for transfer. acknowledgment, mensionless]</td></a<>	ue> na>' Status unit [di	unit [dimensionless] Parameter value of the -bb- parameter stored at this address. The parameter set data is con- verted from HEX format to a 2-byte-ASCII format for transfer. acknowledgment, mensionless]
-	'PS= <a< td=""><td>ue> Status unit [dii '0'</td><td>unit [dimensionless] Parameter value of the -bb- parameter stored at this address. The parameter set data is con- verted from HEX format to a 2-byte-ASCII format for transfer. acknowledgment, mensionless] No difference</td></a<>	ue> Status unit [dii '0'	unit [dimensionless] Parameter value of the -bb- parameter stored at this address. The parameter set data is con- verted from HEX format to a 2-byte-ASCII format for transfer. acknowledgment, mensionless] No difference
-	'PS= <a< td=""><td>ue> Status unit [dii '0' '1'</td><td>unit [dimensionless] Parameter value of the -bb- parameter stored at this address. The parameter set data is con- verted from HEX format to a 2-byte-ASCII format for transfer. acknowledgment, mensionless] No difference Syntax error</td></a<>	ue> Status unit [dii '0' '1'	unit [dimensionless] Parameter value of the -bb- parameter stored at this address. The parameter set data is con- verted from HEX format to a 2-byte-ASCII format for transfer. acknowledgment, mensionless] No difference Syntax error



Writing parameter set

Command	'PT'		
Description	The parameters of the device are grouped together in a parameter set and permanently stored in memory. There is one parameter set in permanent memory and one operating parameter set in volatile memory; in add tion, there is a default parameter set (factory parameter set) for initialization. This command can be used to edit the first two parameter sets (in permanent and volatile memory). A check sum can be used for reliable parameter transfer.		
Parameters		> <ps type=""><status><addr.><p. addr.="" value=""> <p. addr+1="" value=""> alue addr.>][<bcc>]</bcc></p.></p.></addr.></status></ps>	
	<bcc type=""></bcc>	Check-digit function during transmission, unit [dimensionless]	
	'0'	No check digits	
	'3'	BCC mode 3	
	<ps type=""></ps>	Memory from which the values are to be read, unit [dimensionless]	
	'0'	Parameter values stored in the flash memory	
	'3'	Operating values stored in RAM	
	<status></status>	Mode of parameter processing, without function here, unit [dimensionless]	
	'0'	No reset after parameter change, no further parameters	
	'1'	No reset after parameter change, additional parameters follow	
	'2'	With reset after parameter change, no further parameters	
	'6'	Set parameters to factory setting, no further parameters	
	'7'	Set parameters to factory settings, lock all code types; the code-type setting must follow in the command!	
	<addr.></addr.>	Relative address of the data within the data set,	
	'aaaa'	Four-digit, unit [dimensionless]	
	<p.value></p.value>	Parameter value of the -bb- parameter stored at this address. The parameter set data is con- verted from HEX format to a 2-byte-ASCII format for transfer.	
	<bcc></bcc>	Check sum calculated as specified under BCC type	
Acknowledgment	'PS= <aa>'</aa>		
	Parameter rep	ly:	
	<aa> Status</aa>	acknowledgment, unit [dimensionless]	
	'01'	Syntax error	
	'02'	Impermissible command length	
	'03'	Impermissible value for checksum type	
	'04'	Invalid check sum received	
	'05'	Impermissible data length	
	'06'	Invalid data (parameter limits violated)	
	'07'	Invalid start address	
	'08'	Invalid parameter set	
	'09'	Invalid parameter type	

12 Care, maintenance and disposal

Usually, the bar code reader does not require any maintenance by the operator.

12.1 Cleaning

In the event of dust build-up, clean the device with a soft cloth; use a cleaning agent (commercially available glass cleaner) if necessary.

NOTE

Do not use aggressive cleaning agents such as thinner or acetone for cleaning the device. Use of improper cleaning agents can damage the optical window.

12.2 Repairs, servicing

i

Repairs to the device must only be carried out by the manufacturer.

Scontact your Leuze distributor or service organization should repairs be required. The addresses can be found in Chapter 14.

NOTE

When sending devices to Leuze electronic for repair, please provide an accurate description of the error.

12.3 Disposing

ĭ

♦ For disposal observe the applicable national regulations regarding electronic components.

13 Diagnostics and troubleshooting

13.1 General causes of errors

Error	Possible error cause	Measures		
Status LED PWR	Status LED PWR			
Off	 No supply voltage connected to the device 	Check supply voltage		
	Hardware error	 Send device to customer service 		
Orange, continuous light	Device in service mode	Reset service mode with webConfig tool or display		
Red, flashing	Warning	 Query diagnostic data and carry out the resulting measures 		
Red, continuous light	Error: no function possible	 Internal device error, send in device 		
Status LED NET	Status LED NET			
Off	 No supply voltage connected to the device 	Check supply voltage		
	Hardware error	 Send device to customer service 		
Orange, flashing	Topology error detectedDeviating target/actual topology	Check interface		
Red, flashing	Communication error	Check interface		
Red, continuous light	 Communication error on the Ethernet: No communication established to the host (no data exchange) No communication 	Check interface		

13.2 Interface errors

Table 13.2: Interface error

Error	Possible error cause	Measures
No communication via	Incorrect interconnection cable	Check interconnection cable
USB service interface	 Connected device is not recognized 	Install USB driver
No communication via	Incorrect wiring	Check wiring
Ethernet interface	Different protocol settings	Check protocol settings
	Protocol not released	Activate TCP/IP or UDP
Sporadic errors at the Ethernet interface	Incorrect wiring	Check wiringIn particular, check wire shieldingCheck the cable used
	Effects due to EMC	 Check shielding (shield covering in place up to the clamping point) Check grounding concept and connection to functional earth (FE) Avoid EMC coupling caused by power cables laid parallel to device lines.
	Overall network expansion exceeded	Check max. network expansion as a function of the max. cable lengths



14 Support

Service hotline

You can find the contact information for the hotline in your country on our website www.leuze.com under **Contact & Support**.

Repair service and returns

Defective devices are repaired in our service centers competently and quickly. We offer you an extensive service packet to keep any system downtimes to a minimum. Our service center requires the following information:

- · Your customer number
- Product description or part description
- · Serial number or batch number
- · Reason for requesting support together with a description

Please register the merchandise concerned. Simply register return of the merchandise on our website www.leuze.com under **Contact & Support > Repair Service & Returns**.

To ensure quick and easy processing of your request, we will send you a returns order with the returns address in digital form.

What to do should servicing be required?

NOTE

ĭ

Please use this chapter as a master copy should servicing be required.

Enter the contact information and fax this form together with your service order to the fax number given below.

Customer data (please complete)

Device type:	
Serial number:	
Firmware:	
Display messages:	
Status of LEDs:	
Error description	
Company:	
Contact person/department:	
Phone (direct dial):	
Fax:	
Street / no.:	
ZIP code / City:	
Country:	

Leuze Service fax number:

+49 7021 573 - 199

15 Technical data

15.1 General specifications of the bar code readers

15.1.1 Line scanner

 Table 15.1:
 Technical data of the BCL 508/line scanners without heating

Туре	BCL 508/ Ethernet	
Design	Line scanner without heating	
Optical data		
Light source	Laser diode λ = 655nm (red light)	
Beam exit	At the front	
Max. output power (peak)	2 mW	
Pulse duration	<150 µs	
Scanning rate	1000 scans/s (adjustable in the range 800 1200 scans/s)	
Beam deflection	Via rotating polygon wheel	
Useful opening angle	Max. 60°	
Optics models / resolu- tion	High Density (N): 0.25 0.5mm Medium Density (M): 0.35 0.8 mm Low Density (F): 0.5 1.0 mm Ultra Low Density (L): 0.7 1.0 mm	
Reading distance	See reading field curves	
Laser class	1 acc. to IEC 60825-1:2014 / EN 60825-1:2014+A11:2021 and U.S. 21 CFR 1040.10 with Laser Notice No. 56	
Bar code data		
Code types	2/5 Interleaved, Code 39, Code 128, EAN 128, EAN / UPC, Codabar, Code 93, GS1 DataBar Omnidirectional	
Bar code contrast (PCS)	>= 60%	
Ambient light tolerance	2000 lx (on the bar code)	
Number of bar codes per scan	6	



Туре	BCL 508/ Ethernet	
Design	Line scanner without heating	
Electrical data		
Interface type	2x Ethernet on 2x M12 (D)	
Protocols	Ethernet TCP/IP (client/server) / UDP	
Baud rate	10/100MBaud	
Data formats		
Service interface	USB 1.1 compatible, A-coded	
Switching input / switching output	 4 switching inputs/outputs, freely programmable functions Switching input: 10 30 V DC depending on supply voltage, I max. = 8 mA Switching output: 10 30VDC depending on supply voltage, I max. = 60mA (short-circuit proof) Switching inputs/outputs protected against polarity reversal! 	
Operating voltage	10 30 V DC (Class II, protection class III)	
Power consumption	Max. 10 W	
Operating and display ele	ements	
Display	Monochromatic graphical display, 128 x 64 pixel, with background lighting	
Keyboard	4 buttons	
LEDs	2 LEDs for power (PWR) and bus state (BUS), two-colored (red/green)	
Mechanical data		
Degree of protection	IP 65 (with screwed-on M12 connectors or mounted caps)	
Weight	1.1 kg	
Dimensions (H x W x D)	63 x 123.5 x 106.5 mm	
Housing	Diecast aluminum	
Environmental data		
Operating temperature range	0 °C40 °C	
Storage temperature range	-20°C +70°C	
Air humidity	Max. 90% rel. humidity, non-condensing	
Vibration	IEC 60068-2-6, test Fc	
Shock	IEC 60068-2-27, test Ea	
Continuous shock	IEC 60068-2-29, test Eb	
Electromagnetic com- patibility	EN 55022; IEC 61000-6-2 (contains IEC 61000-4-2, -3, -4, -5 and -6) ^{a)}	

a) This is a Class A product. In a domestic environment this product may cause radio interference, in which case the operator may be required to take adequate measures.

▲ CAUTION!

For UL applications, use is only permitted in Class 2 circuits in accordance with the NEC (National Electric Code). The bar code readers are designed in accordance with protection class III for supply by PELV (protective extra-low voltage with reliable disconnection).

'['

15.1.2 Oscillating-mirror scanner

Technical data same as for line scanner without heating, however with the following differences:

Туре	BCL 508/ Ethernet
Design	Oscillating-mirror scanner without heating
Optical data	
Beam exit	Lateral zero position at an angle of 90°
Beam deflection	Via rotating polygon wheel (horizontal) and stepping motor with mirror (vertical)
Oscillation frequency	0 … 10 Hz (adjustable, max. frequency is dependent on set swivel angle)
Max. swivel angle	±20° (adjustable)
Reading field height	See reading field curves
Electrical data	
Power consumption	Max. 14 W
Mechanical data	
Weight	1.5 kg
Dimensions (H x W x D)	84 x 173 x 147 mm

Table 15.2:Technical data of the BCL 508/ oscillating-mirror scanners with heating

15.2 Heating models of the bar code readers

The bar code readers of the BCL 500/series are optionally available as models with integrated heating. In this case, heating is permanently installed ex works. Self-installation on-site by the user is not possible!

Features

- Integrated heating (permanently installed)
- Extends the application range of the device to -35 °C
- Supply voltage 24VDC ±20%
- Enabling the device through an internal temperature switch (switch-on delay about 30 min for 24 V DC and minimum ambient temperature of -35 °C)
- Necessary conductor cross-section for the voltage supply: at least 0.75 mm²; the use of preassembled cables is, thus, not possible

Structure

The heating consists of two parts:

- · The front cover heater
- · The housing heater

Function

When the 24 V DC supply voltage is applied to the device, a temperature switch initially only connects the heating to electrical power (front cover heater and housing heater). During the heating phase (around 30 min), when the inside temperature rises above 15 °C, the temperature switch connects the device to the supply voltage. This is followed by the self test and the changeover to read operation. The "PWR" LED lights up showing overall readiness for operation.

When the inside temperature reaches approx. 18 °C, another temperature switch turns the housing heater off and, if necessary, back on again (if the inside temperature drops below 15 °C). This does not interrupt the read operation. The front cover heater remains activated until an inside temperature of 25 °C is reached. At temperatures above this, the front cover heater switches off and, with a switching hysteresis of 3 °C, back on again at an inside temperature below 22 °C.



Mounting location

NOTE



The mounting location is to be selected such that it does not expose the device with heating directly to a cold air stream. To achieve an optimal heating effect, the device should be mounted so that it is thermally isolated.

Electrical connection

The required wire cross section of the connection cable for the voltage supply must be at least 0.75 mm².

▲ CAUTION!

The voltage supply must not be looped through from one device to the next.

Power consumption

The energy requirement depends on the model:

- the line scanner with heating typically consumes 40 W and a maximum of 50 W power.
- the line scanner with oscillating mirror and heating typically consumes 60 W and a maximum of 75 W.

These values are based on operation with unconnected switching outputs.

15.2.1 Line scanner with heater

Technical data same as for line scanner without heating, however with the following differences:

Туре	BCL 508/ Ethernet		
Design	Line scanner with heater		
Electrical data	Electrical data		
Operating voltage	24VDC ±20%		
Power consumption	Max. 50 W		
Structure of the heating	Housing heating and separate heating of the optics glass		
Warmup time	Min. 30 min at +24 V DC and an ambient temperature of -35 °C		
Min. conductor cross section	Conductor cross section of at least 0.75 mm ² for the supply-voltage line. Wiring through of the voltage supply to multiple heating devices is not permissible. Standard, M12 preassembled cable not usable (insufficient cable cross-section)		
Environmental data			
Operating temperature range	-35°C +40°C		
Storage temperature range	-20°C +70°C		

Table 15.3: Technical data of the BCL 508/line scanners with heating



15.2.2 Oscillating-mirror scanner with heating


Technical data same as for line scanner without heating, however with the following differences:


Туре	BCL 508/ Ethernet
Design	Oscillating-mirror scanner with heating
Optical data	
Useful opening angle	Max. 50°
Max. swivel angle	±12° (adjustable)
Electrical data	
Operating voltage	24VDC ±20%
Power consumption	Max. 75 W
Structure of the heating	Housing heating and separate heating of the optics glass
Warmup time	Min. 30 min at +24 V DC and an ambient temperature of -35 °C
Min. conductor cross section	Conductor cross section of at least 0.75 mm ² for the supply-voltage line. Wiring through of the voltage supply to multiple heating devices is not permissible. Standard, M12 preassembled cable not usable (insufficient cable cross-section)
Environmental data	
Operating temperature range	-35°C +40°C
Storage temperature range	-20°C +70°C


 Table 15.4:
 Technical data of the BCL 508/oscillating-mirror scanners with heating


15.3 Dimensioned drawings


15.3.1 Line scanner with / without heating

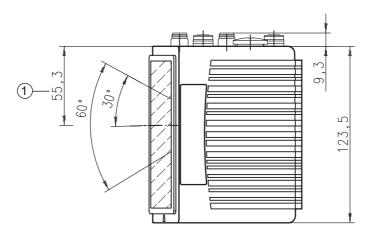

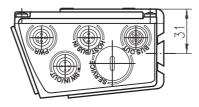

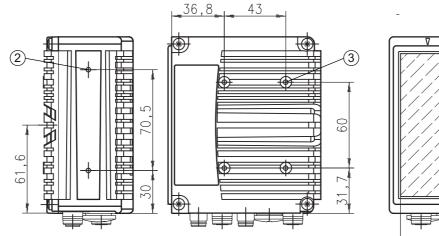

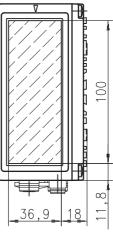

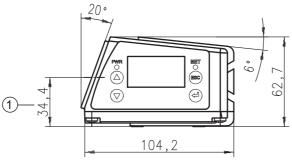

- 1 Optical axis
- 2 M4, 7 mm deep
- 3 M4, 6 mm deep

Figure 15.1: Dimensioned drawing - line scanner

15.3.2 Oscillating-mirror scanner with/without heating


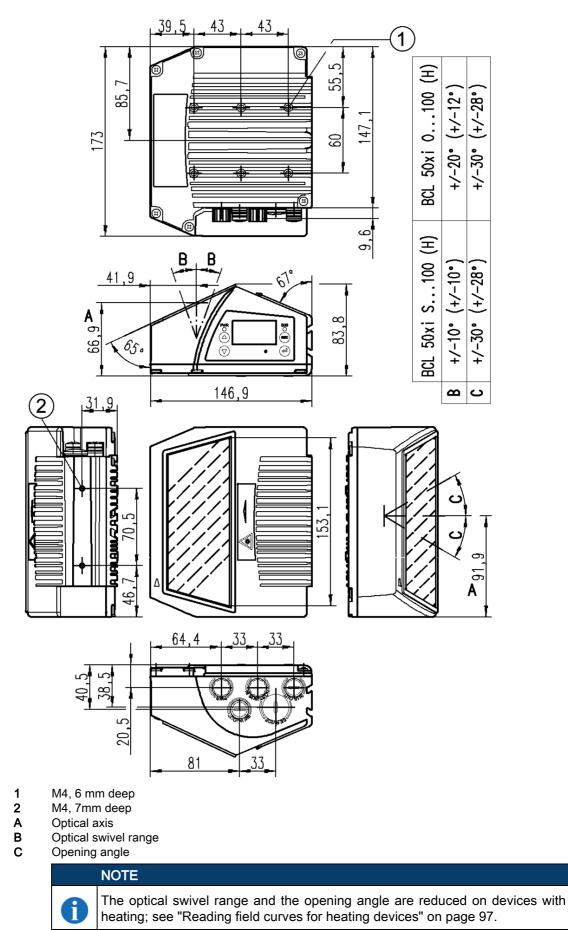


Figure 15.2: Dimensioned drawing of oscillating-mirror scanner


15.4 Dimensioned drawings: Accessories

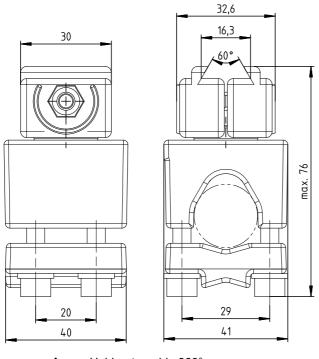

A Holder, turnable 360°

B Rods, Ø 16 ... 20 mm

Figure 15.3: BT 56 mounting device

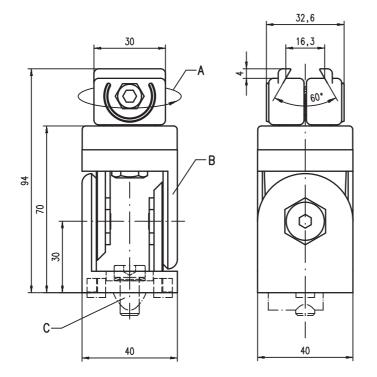

A Holder, turnable 360°

- **B** ITEM joint, adjustable ± 90°
- C M8x16 screwable cylinder, M8 serrated washer, M8 sliding block, connectors for ITEM profile (2x)

Figure 15.4: BT 59 mounting device



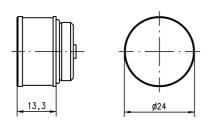


Figure 15.5: External parameter memory

Reading field curves / optical data 15.5

Bar code characteristics

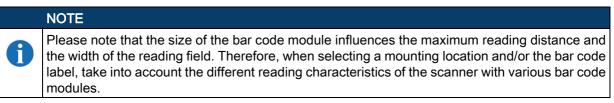

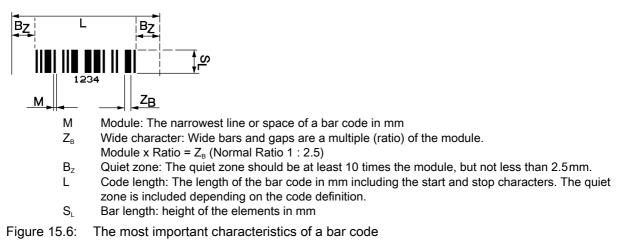

The range in which the bar code can be read by the device (the so-called reading field) depends on the quality of the printed bar code and its dimensions.

Therefore, above all, the module of a bar code is decisive for the size of the reading field.

NOTE Ĭ

A rule of thumb: The smaller the module of the bar code is, the smaller the maximum reading distance and reading field width will be.



15.6 Reading field curves

NOTE

Please notice that the real reading fields are also influenced by factors such as labeling material, printing quality, reading angle, printing contrast etc., and may thus deviate from the reading fields specified here.

The zero position of the reading distance always refers to the front edge of the housing of the beam exit and is shown in Figure 15.7 for the two housing types of the device.


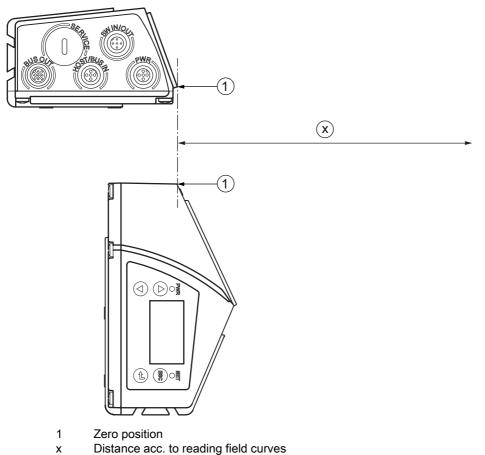



Figure 15.7: Zero position of the reading distance

Reading conditions for the reading field curves

Bar code type 2/5 Interleaved			
Ratio	1:2.5		
ANSI specification	Class A		
Reading rate	> 75%		


Table 15.5: Reading conditions

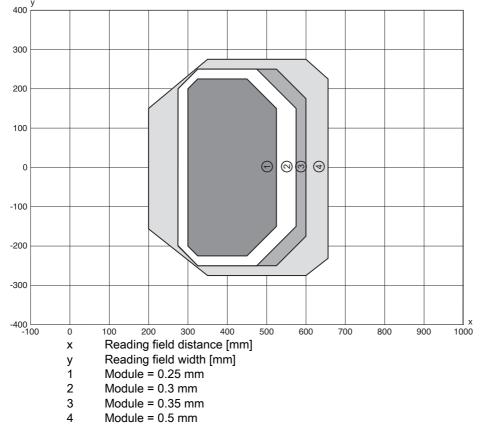

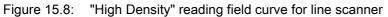


The reading field curve applies for the reading conditions stated in Table 15.5.


Leuze

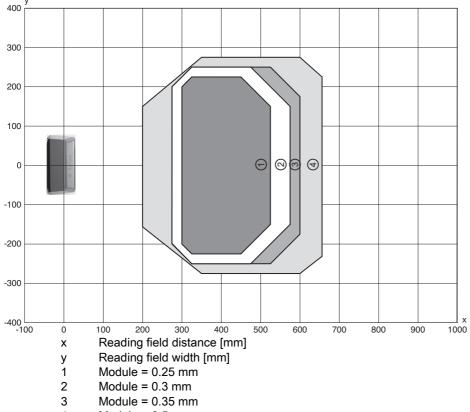

4 Module = 0.5 mm



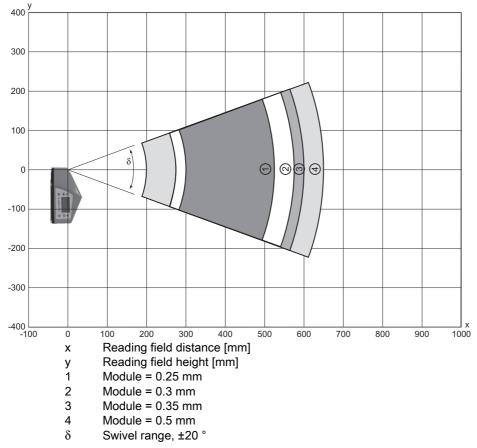

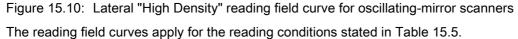

Leuze

15.6.3 Medium Density (M) - optics: BCL 508/SM 102

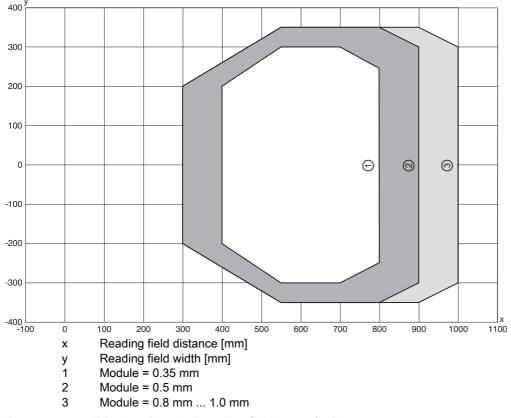


Figure 15.11: "Medium Density" reading field curve for line scanner

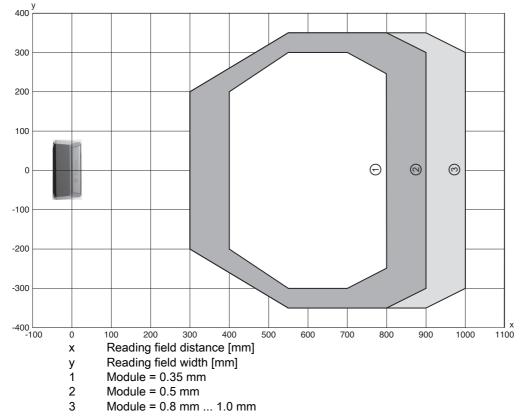
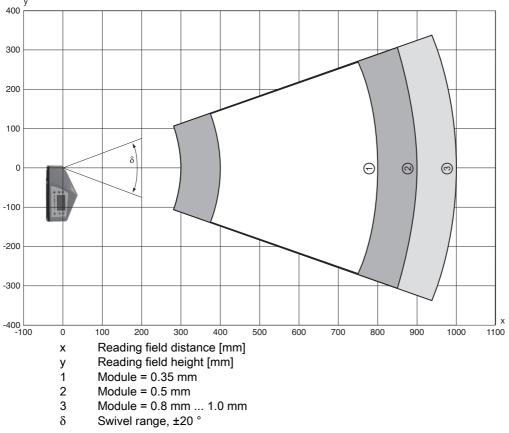
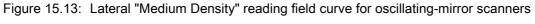
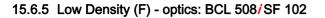


Figure 15.12: "Medium Density" reading field curve for oscillating-mirror scanners









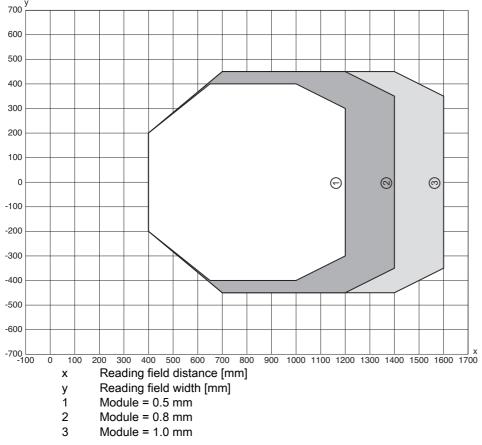



Figure 15.14: "Low Density" reading field curve for line scanner

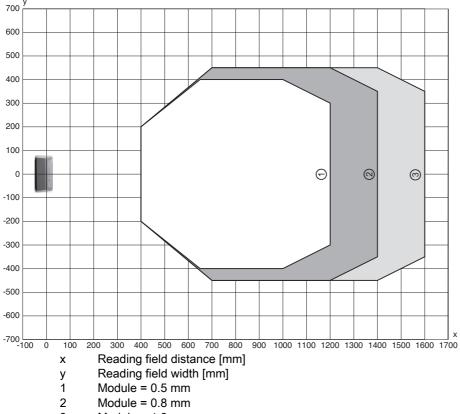

3 Module = 1.0 mm

Figure 15.15: "Low Density" reading field curve for oscillating-mirror scanners

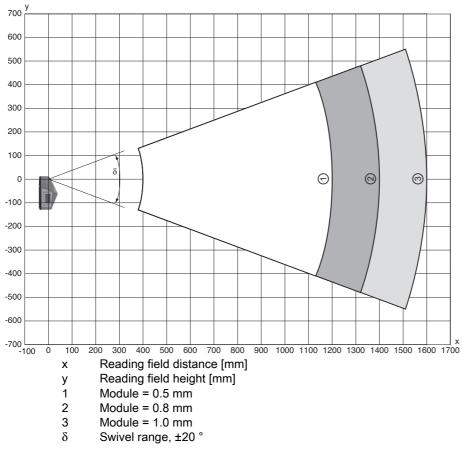


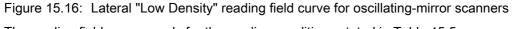

The reading field curves apply for the reading conditions stated in Table 15.5.

Leuze

15.6.7 Ultra Low Density (L) - optics: BCL 508/SL 102

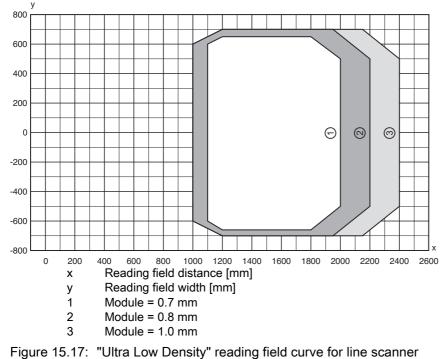



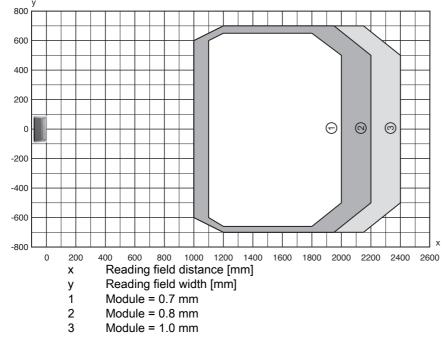


Figure 15.18: "Ultra Low Density" reading field curve for oscillating-mirror scanners



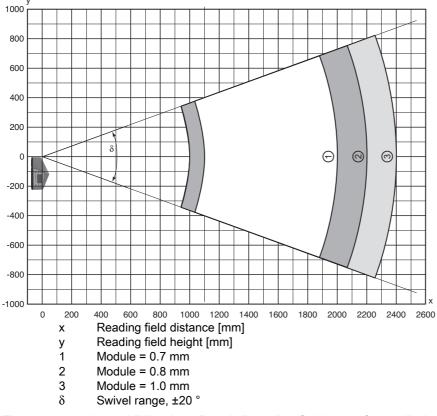

Leuze

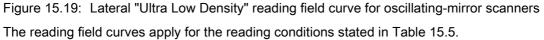


15.7 Reading field curves for heating devices


The reading field curves of the heating devices differ to some extent from the normal reading curves due to the optics heating and are somewhat reduced in the reading field width as well as in the reading field height!

- The maximum opening angle for all oscillating mirror devices of the BCL 500/series is reduced to ±28° (without heating = ±30°).
- In addition, the maximum swivel range for all oscillating mirror devices of the BCL 500/series is reduced to ±12° (without heating = ±20°).
- The reading field curves and opening angles are unchanged for all line scanners with heating of the BCL 500/series.

For details, please refer to the following reading field curves for the heating devices.

15.7.1 High Density (N) - optics: BCL 508/SN 102 H

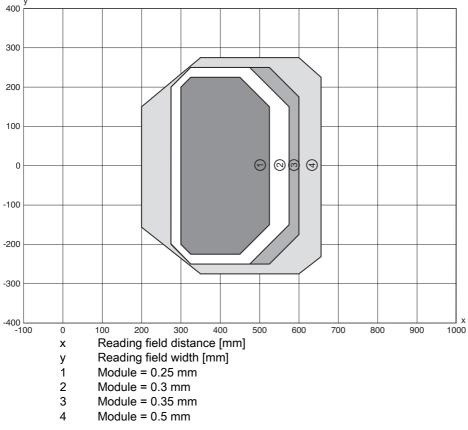

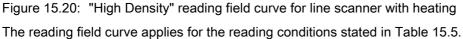

15.7.2 High Density (N) - optics: BCL 508/ON 100 H



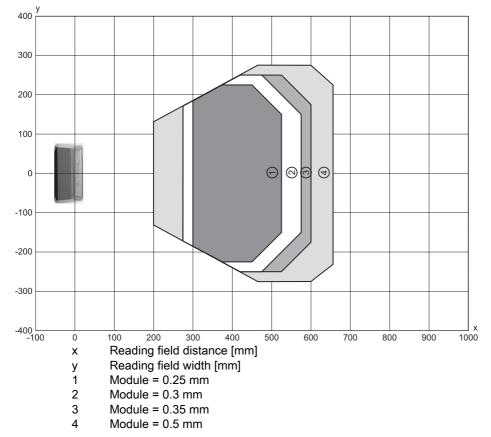


Figure 15.21: "High Density" reading field curve for oscillating-mirror scanners with heating

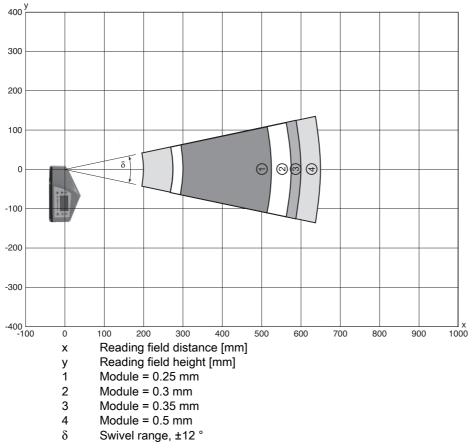

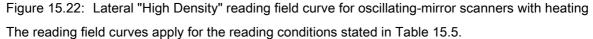

15.7.3 Medium Density (M) - optics: BCL 508/SM 102 H

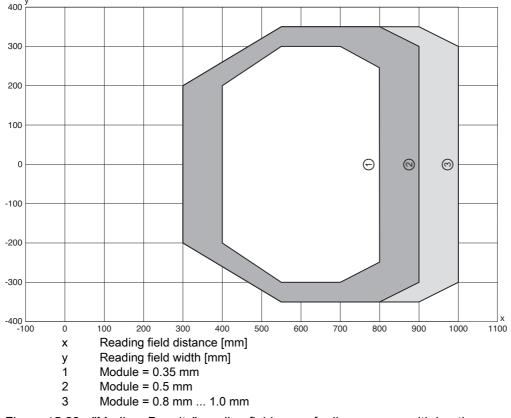


Figure 15.23: "Medium Density" reading field curve for line scanner with heating The reading field curves apply for the reading conditions stated in Table 15.5.



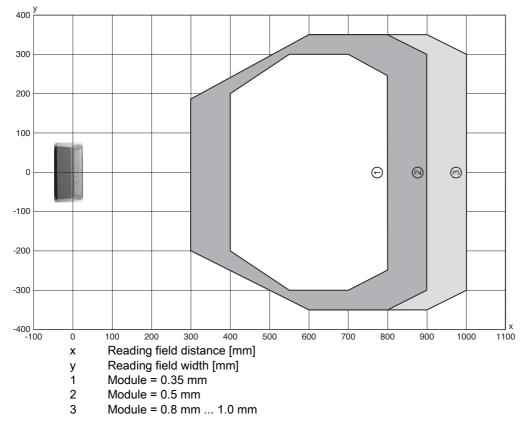


Figure 15.24: "Medium Density" reading field curve for oscillating-mirror scanners with heating

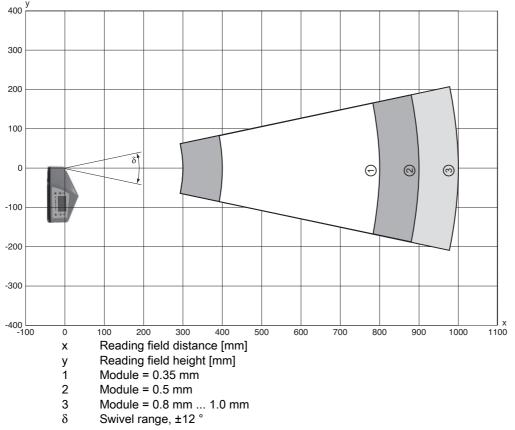

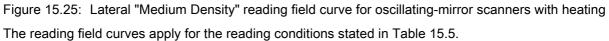

BCL 508/

Leuze

15.7.5 Low Density (F) - optics: BCL 508/SF 102 H

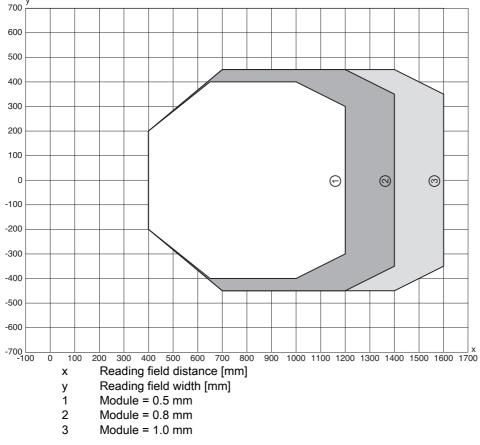


Figure 15.26: "Low Density" reading field curve for line scanner with heating The reading field curves apply for the reading conditions stated in Table 15.5.

Leuze

15.7.6 Low Density (F) - optics: BCL 508/OF 100 H




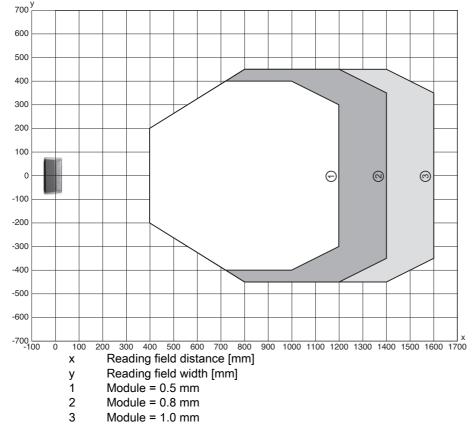



Figure 15.27: "Low Density" reading field curve for oscillating-mirror scanners with heating

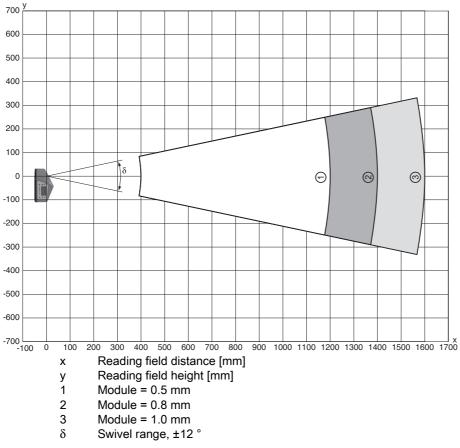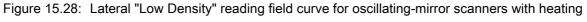

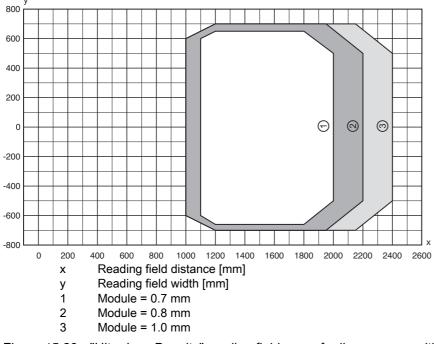

15.7.7 Ultra Low Density (L) - optics: BCL 508/SL 102 H



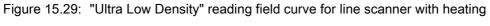



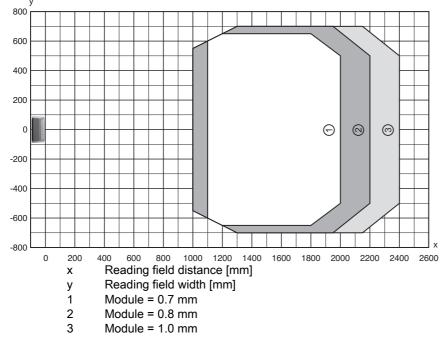


Figure 15.30: "Ultra Low Density" reading field curve for oscillating-mirror scanners with heating

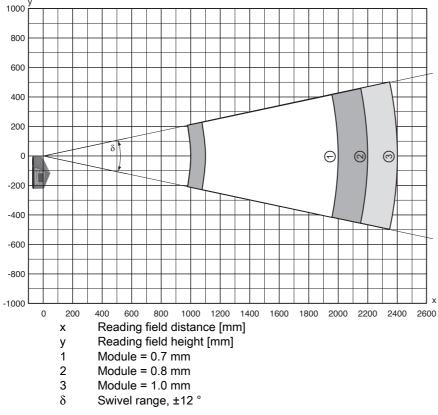

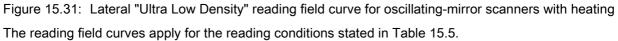

Leuze

16 Order guide and accessories

16.1 Part number code

Table 1	6.1:	Part nu	umber code		
BCL 5	00 <i>i</i> 0	M 100	н		
- 1			Heating option	H =	With heating
- 1			Beam exit	0	Lateral
- 1				2	At the front
- 1			Optics	Ν	High Density (close)
- 1				Μ	Medium Density (medium distance)
- 1				F	Low Density (large distance)
- 1				L	Ultra Low Density (very large distances)
- 1			Scanning principle	S	Line scanner (single line)
- 1		_		0	Oscillating-mirror scanner
				<i>i</i> =	integrated fieldbus technology
			Interface	00	RS 232/RS 422/RS 485 (multiNet master)
- 1				01	RS 485 (multiNet slave)
- 1				04	PROFIBUS DP
- 1				08	ETHERNET TCP/IP, UDP
- 1				48	PROFINET-IO RT
- 1				58	Ethernet/IP
					Series: BCL5xx/
				BCL	Bar code reader

16.2 Overview of BCL 508/types

2x Ethernet to 2x M12 D-coded

Table 16.2:	Overview of BCL	508/types
-------------	-----------------	-----------

Type designation	Description	Part no.
High Density optics (m -	= 0.25 … 0.5mm)	
BCL 508/SN 102	BCL 508/SN 102 Line scanner, front beam exit	
BCL 508/ON 100	Oscillating-mirror scanner	501 05509
BCL 508/SN 102 H	Line scanner, front beam exit, with heating	501 05511
BCL 508/ON 100 H	Oscillating-mirror scanner with heating	501 05512
Medium Density optics	(m = 0.35 1.0mm)	
BCL 508/SM 102	Line scanner, front beam exit	501 05514
BCL 508/OM 100	Oscillating-mirror scanner	501 05515
BCL 508/SM 102 H	501 05517	
BCL 508/OM 100 H Oscillating-mirror scanner with heating		501 05518
Low Density optics (m =	= 0.5 1.0mm)	
BCL 508/SF 102	Line scanner, front beam exit	501 05520
BCL 508/OF 100	Oscillating-mirror scanner	501 05521
BCL 508/SF 102 H	Line scanner, front beam exit, with heating	501 05523
BCL 508/OF 100 H	Oscillating-mirror scanner with heating	501 05524
Ultra Low Density optics	s (m = 0.7 1.0mm)	
BCL 508/SL 102	Line scanner, front beam exit	501 09905
BCL 508/OL 100	Oscillating-mirror scanner	501 09906
BCL 508/SL 102 H	Line scanner, front beam exit, with heating	501 09908
BCL 508/OL 100 H	501 09909	



16.3 Accessories

Table 16.3: Accessories – Connect	ors
-----------------------------------	-----

Type designation	Description Part no.		
KD 095-5A	M12 socket for voltage supply 50020501		
KS 095-4A	M12 connector for SW IN/OUT	50040155	
D-ET1 RJ45 connector for user-configuration 50108991		50108991	
KDS ET M12 / RJ 45 W - 4P	Converter from M12, D-coded, to RJ 45 socket	50109832	
S-M12A-ET Ethernet connector, M12 axial. Connector, 4-pin, D-coded 50112155		50112155	

Table 16.4: Accessories – Cables

Type designation	Description	Part no.
KB USB-Service	USB service cable	50107726

Table 16.5: Accessories – External parameter memory

Type designation	Description	Part no.
USB Memory Set	External USB parameter memory	50108833

Table 16.6: Mounting device accessories

Type designation	Description	Part no.
BT 56	Mounting device for rod	50027375
BT 59	Mounting device for ITEM	50111224

Table 16.7: Accessory - Reflector for AutoReflAct

Type designation	Description	Part no.
	Reflective tape as reflector for AutoReflAct operation	50106119
100 x 100 mm		

17 Appendix

17.1 ASCII character set

ASCII	Dec.	Hex.	Oct.	Designation	Meaning
NUL	0	00	0	ZERO	Zero
SOH	1	01	1	START OF HEADING	Start of heading
STX	2	02	2	START OF TEXT	Start of text characters
ETX	3	03	3	END OF TEXT	Last character of text
EOT	4	04	4	END OF TRANSMISS.	End of transmission
ENQ	5	05	5	ENQUIRY	Request for data trans.
ACK	6	06	6	ACKNOWLEDGE	Positive acknowledgment
BEL	7	07	7	BELL	Bell signal
BS	8	08	10	BACKSPACE	Backspace
HT	9	09	11	HORIZ. TABULATOR	Horizontal tabulator
LF	10	0A	12	LINE FEED	Line feed
VT	11	0B	13	VERT. TABULATOR	Vertical tabulator
FF	12	0C	14	FORM FEED	Form feed
CR	13	0D	15	CARRIAGE RETURN	Carriage return
SO	14	0E	16	SHIFT OUT	Shift out
SI	15	0F	17	SHIFT IN	Shift in
DLE	16	10	20	DATA LINK ESCAPE	Data link escape
DC1	17	11	21	DEVICE CONTROL 1	Device control character 1
DC2	18	12	22	DEVICE CONTROL 2	Device control character 2
DC3	19	13	23	DEVICE CONTROL 3	Device control character 3
DC4	20	14	24	DEVICE CONTROL 4	Device control character 4
NAK	21	15	25	NEG. ACKNOWLEDGE	Negative acknowledge
SYN	22	16	26	SYNCHRONOUS IDLE	Synchronization
ETB	23	17	27	EOF TRANSM. BLOCK	End of data transmission block
CAN	24	18	30	CANCEL	Invalid
EM	25	19	31	END OF MEDIUM	End of medium
SUB	26	1A	32	SUBSTITUTE	Substitution
ESC	27	1B	33	ESCAPE	Escape
FS	28	1C	34	FILE SEPARATOR	File separator
GS	29	1D	35	GROUP SEPARATOR	Group separator
RS	30	1E	36	RECORD SEPARATOR	Record separator
US	31	1F	37	UNIT SEPARATOR	Unit separator
SP	32	20	40	SPACE	Space character
!	33	21	41	EXCLAMATION POINT	Exclamation point
"	34	22	42	QUOTATION MARK	Quotation mark
#	35	23	43	NUMBER SIGN	Number sign
\$	36	24	44	DOLLAR SIGN	Dollar sign
%	37	25	45	PERCENT SIGN	Percent sign
&	38	26	46	AMPERSAND	Ampersand
,	39	27	47	APOSTROPHE	Apostrophe
(40	28	50	OPEN. PARENTHESIS	Open parenthesis
)	41	29	51	CLOS. PARENTHESIS	Closed parenthesis
*	42	2A	52	ASTERISK	Asterisk
+	43	2B	53	PLUS	Plus sign
,	44	2C	54	COMMA	Comma
-	45	2D	55	HYPHEN (MINUS)	Hyphen
<u> </u>	46	2E	56	PERIOD (DECIMAL)	Period (decimal)
/	47	2F	57	SLANT	Slant
0	48	30	60	0	Number
1	49	31	61	1	Number
2	50	32	62	2	Number

ASCII	Dec.	Hex.	Oct.	Designation	Meaning
3	51	33	63	3	Number
4	52	34	64	4	Number
5	53	35	65	5	Number
6	54	36	66	6	Number
7	55	37	67	7	Number
8	56	38	70	8	Number
9	57	39	71	9	Number
:	58	3A	72	COLON	Colon
;	59	3B	73	SEMICOLON	Semicolon
<	60	3C	74	LESS THAN	Less than
=	61	3D	75	EQUALS	Equals
>	62	3E	76	GREATER THAN	Greater than
?	63	3F	77	QUESTION MARK	Question mark
@	64	40	100	COMMERCIAL AT	Commercial AT
Α	65	41	101	A	Capital letter
В	66	42	102	В	Capital letter
С	67	43	103	С	Capital letter
D	68	44	104	D	Capital letter
Е	69	45	105	E	Capital letter
F	70	46	106	F	Capital letter
G	71	47	107	G	Capital letter
Н	72	48	110	Н	Capital letter
I	73	49	111	I	Capital letter
J	74	4A	112	J	Capital letter
К	75	4B	113	К	Capital letter
L	76	4C	114	L	Capital letter
М	77	4D	115	М	Capital letter
Ν	78	4E	116	Ν	Capital letter
0	79	4F	117	0	Capital letter
Р	80	50	120	Р	Capital letter
Q	81	51	121	Q	Capital letter
R	82	52	122	R	Capital letter
S	83	53	123	S	Capital letter
Т	84	54	124	Т	Capital letter
U	85	55	125	U	Capital letter
V	86	56	126	V	Capital letter
W	87	57	127	W	Capital letter
Х	88	58	130	X	Capital letter
Y	89	59	131	Y	Capital letter
Z	90	5A	132		Capital letter
	91	5B	133	OPENING BRACKET	Opening bracket
\	92	5C	134	REVERSE SLANT	Reverse slant
]	93	5D	135	CLOSING BRACKET	Closing bracket
^	94	5E	136	CIRCUMFLEX	Circumflex
	95	5F	137		Underscore
-	96	60	140	GRAVE ACCENT	Grave accent
a h	97	61	141	a	Lower case letter
b	98	62	142	b	Lower case letter
C	99	63	143	C	Lower case letter
d	100	64	144	d	Lower case letter
e	101	65	145	e	Lower case letter
f	102	66	146	f	Lower case letter
g	103	67	147	g	Lower case letter
h i	104	68 60	150	h i	Lower case letter
i	105	69	151	1	Lower case letter

ASCII	Dec.	Hex.	Oct.	Designation	Meaning			
j	106	6A	152	j	Lower case letter			
k	107	6B	153	k	Lower case letter			
Ι	108	6C	154	I	Lower case letter			
m	109	6D	155	m	Lower case letter			
n	110	6E	156	n	Lower case letter			
0	111	6F	157	0	Lower case letter			
р	112	70	160	р	Lower case letter			
q	113	71	161	q	Lower case letter			
r	114	72	162	r	Lower case letter			
S	115	73	163	s	Lower case letter			
t	116	74	164	t	Lower case letter			
u	117	75	165	u	Lower case letter			
v	118	76	166	v	Lower case letter			
w	119	77	167	w	Lower case letter			
x	120	78	170	x	Lower case letter			
У	121	79	171	У	Lower case letter			
z	122	7A	172	z	Lower case letter			
{	123	7B	173	OPENING BRACE	Opening brace			
Ι	124	7C	174	VERTICAL LINE	Vertical line			
}	125	7D	175	CLOSING BRACE	Closing brace			
~	126	7E	176	TILDE	Tilde			
DEL	127	7F	177	DELETE (RUBOUT)	Delete			

17.2 Bar code samples

17.2.1 Module 0.3



Figure 17.1: Code type 01: Interleaved 2 of 5



Figure 17.2: Code type 02: Code 39



Figure 17.3: Code type 06: UPC-A



Figure 17.4: Code type 07: EAN 8



Figure 17.5: Code type 08: EAN 128



Figure 17.6: Code type 10: EAN 13 Add-on



Figure 17.7: Code type 11: Codabar



Figure 17.8: Code 128

Leuze

17.2.2 Module 0.5



Figure 17.9: Code type 01: Interleaved 2 of 5



135AC

Figure 17.10: Code type 02: Code 39



Figure 17.11: Code type 06: UPC-A



Figure 17.12: Code type 07: EAN 8



Figure 17.13: Code type 08: EAN 128



Figure 17.14: Code type 10: EAN 13 Add-on



Figure 17.15: Code type 11: Codabar



abcd1234

Figure 17.16: Code 128

Menu structure BCL 508/

Level 1		Level 2	Level 3		Level 4		Level 5	Selection/configuration option
▲ : Selection		▲ : Selection	▲ : Selection		Selection		▲ : Selection	Selection
		📾 : Back	🐵 : Back		📾 : Back		💿 : Back	🕢 : Activate 💿 : Back
Device informatio								
Bar code reading window								
Parameter		Parameter	Parameter enable					OFF/ON
		handling	Parameters to default					All parameters are reset to their factory settings
		Decoder table	Max. no. of labels					Set the number of labels to be decoded (0 to 64)
			Decoder 1-4	¢	Symbology			Code type: no code / Code 2/5 Interleaved / Code 39 / Code 32 Code 128 / EAN Addendum / Codabar / Code 93 / RSS 14 / RS
				ł	Number of digits	(L)	Interval mode	OFF / ON for specification of a range of the number of digits
						÷	Number of digits 1-5	0 64 characters
				ł	Reading reliability			2 100
				ł	Check digit method			When decoding used check digit methods
				ł	Check digit transm.			Check digit transmission standard-compliant / non standard-co
		Digital SWIO	Switching input / output	 Image: A start of the start of	I/O mode			Input / Output / Passive
		0	1-4		Switching input	Ð	Inverted	OFF / ON
						æ	Debounce time	0 1000ms
						÷	Switch-on delay	0 65535ms
						æ	Pulse duration	0 65535ms
						÷	Switch-off delay	0 65535ms
						÷	Function	Function executed when the switching input is activated
				ł	Switching output	Ŧ	Inverted	OFF / ON
						÷	Signal delay	0 65535ms
						(J	Pulse duration	0 65535ms
						•	Activation function 1-4	Specifies which event activates the switching output
						(L)	Deactivation function 1-4	Specifies which event deactivates the switching output
		Ethernet	Ethernet interface	ł	IP address			Address of the BCL 508/
				ł	Gateway			Gateway for the BCL 508/
				ł	Net mask			Net mask for the subnet of the BCL 508/
				÷	DHCP activated			Off/On
			Host communication	ł	TcpIP		Activated	Off/On
						•	Mode	Server/client mode of TCP/IP communication of the BCL 508/
						 Image: A set of the set of the	TcpIP client	Further host settings: IP addr., port number, timeout, repetition
						æ	TcpIP server	Port number of the BCL 508/ for TCP/IP queries
				ł	UDP		Activated	Off/On
							IP address	of the host to which data is to be sent
						Ð	Port number	of the host to which data is to be sent
Language selec- tion	¢							Deutsch / English / Español / Français / Italiano / Chinese
Service	£	Diagnosis						Number of readings, reading gates, reading rate / non-reading
		Status messages						Only for use by Leuze personnel for service purposes
Actions		Start decoding	Stop decoding					Performs a single read operation
		Start alignment	Stop alignment					Alignment aid (alignment mode)
	-	Start auto setup	Stop auto setup					Automatic determination of code type and number of digits
		Start teach-in	Stop teach-in					Teach-in one reference code

Leuze

	1
	Detailed informa-
	tion on
	see page 45
	see page 20
	see page 46
32 / Code UPC / Code EAN / RSS Limited / RSS Expanded	see page 46
ompliant	
	see page 48
	see page 50
1	
n time	
	see page 51
g rate etc.	see page 52
	see page 52